


# CLUTCH PEDAL SUB-ASSY (RHD)


## REPLACEMENT

1. REMOVE INSTRUMENT CLUSTER FINISH PANEL  
(See page 71-10)
2. REMOVE COMBINATION METER ASSEMBLY (See page 71-19)
3. REMOVE INSTRUMENT PANEL FINISH LOWER PANEL RH  
(See page 71-10)
4. REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS W/HOLE PIN
  - (a) Remove the clip and hole pin.

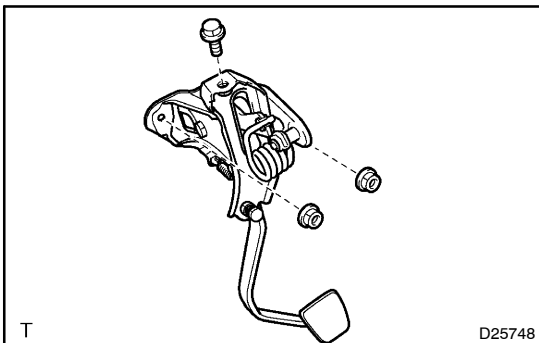


### 5. REMOVE CLUTCH PEDAL SUPPORT SUB-ASSY

- (a) Remove the bolt, 2 nuts and clutch pedal support.

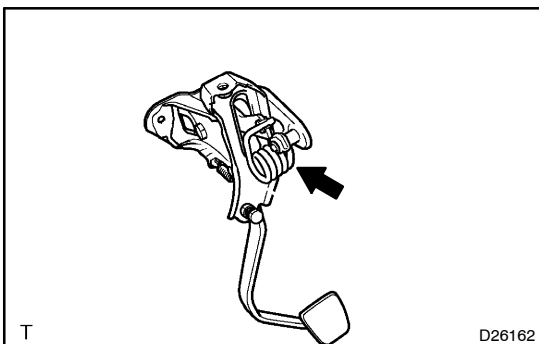

### 6. REMOVE TURN OVER SPRING SEAT COMPRESSION SPRING

- (a) Remove the turn over spring.

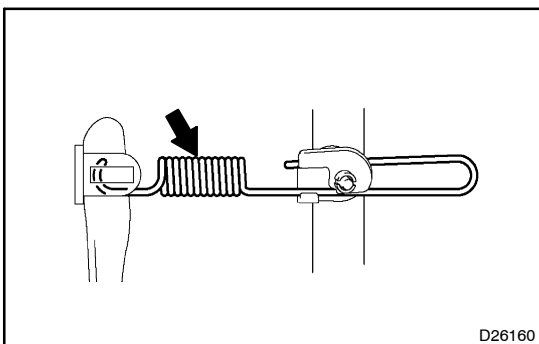

### 7. REMOVE CLUTCH PEDAL SPRING (1CD-FTV ENGINE TYPE)


- (a) Remove the clutch pedal spring.

### 8. REMOVE CLUTCH PEDAL SUB-ASSY


- (a) Mount the clutch pedal in a soft jaw vise.
- (b) Remove the bolt, nut and washer.
- (c) Remove the clutch pedal from the clutch pedal support.

**9. REMOVE CLUTCH PEDAL BUSH**

- (a) Remove the 2 bushes from the clutch pedal.

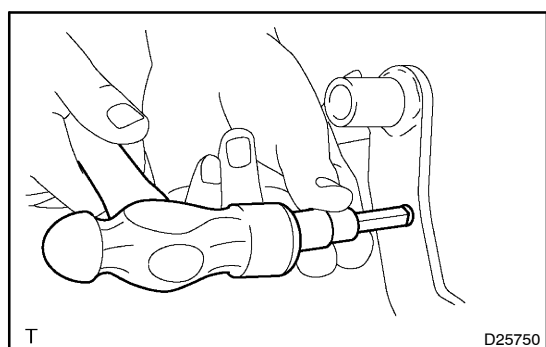
**10. REMOVE CLUTCH PEDAL SHAFT COLLAR****11. REMOVE CLUTCH PEDAL TURNOVER BUSH****12. REMOVE CLUTCH PEDAL PAD****13. REMOVE PEDAL SPRING HOOK(1CD-FTV ENGINE TYPE)****14. REMOVE CLUTCH PEDAL NO.1 CUSHION****15. REMOVE CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH**

- (a) Using a 8 mm hexagon wrench and hammer, remove the bush from the clutch pedal.

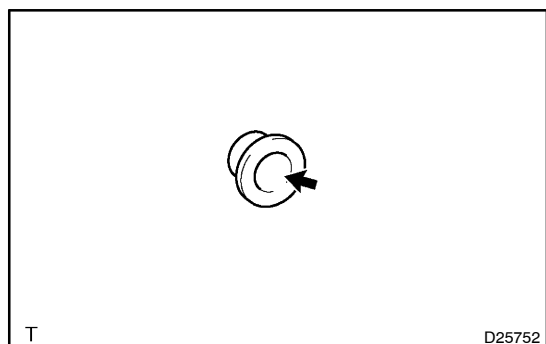**16. INSTALL CLUTCH MASTER CYLINDER PUSH ROD CLEVIS BUSH**


- (a) Apply MP grease to inside of a new bush.  
(b) Install the bush to the clutch pedal.

**17. INSTALL CLUTCH PEDAL NO.1 CUSHION****18. INSTALL PEDAL SPRING HOOK(1CD-FTV ENGINE TYPE)****19. INSTALL CLUTCH PEDAL PAD**

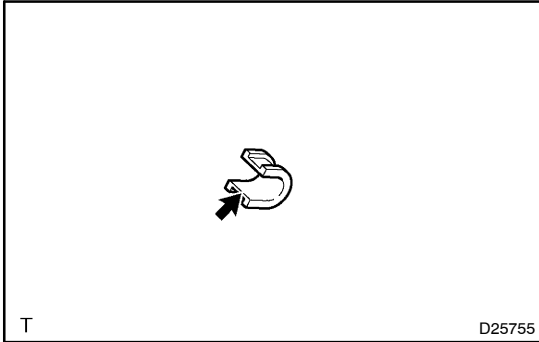


## 20. INSTALL CLUTCH PEDAL TURNOVER BUSH

- (a) Apply MP grease to inside of a new bush.
- (b) Install the bush to the clutch pedal.

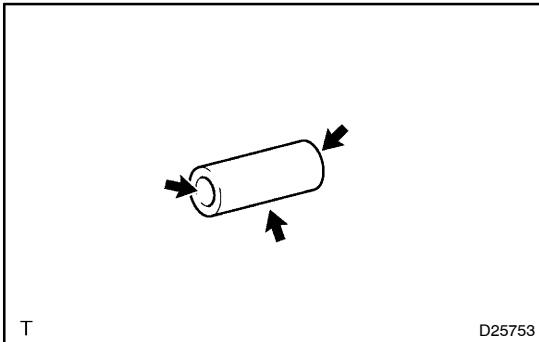

## 21. INSTALL CLUTCH PEDAL SHAFT COLLAR

- (a) Apply MP grease to inside and outside of collar.
- (b) Install the collar to the clutch pedal.

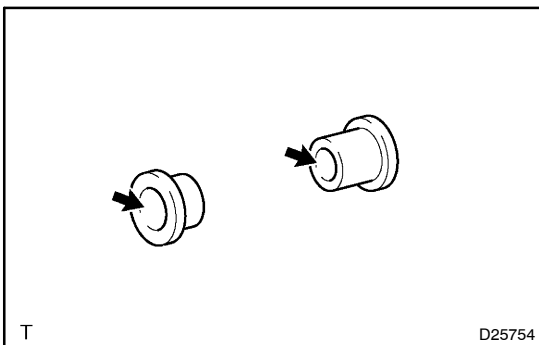

## 22. INSTALL CLUTCH PEDAL BUSH

- (a) Apply MP grease to both side of 2 new bushes.
- (b) Install the 2 new bushes to the clutch pedal.


## 23. INSTALL CLUTCH PEDAL SUB-ASSY

- (a) Install the clutch pedal to the clutch pedal support with the bolt, washer and nut.

**Torque: 25.5 N·m (260 kgf·cm, 18 ft·lbf)**


**HINT:**

Install the bolt from the left side of the vehicle.

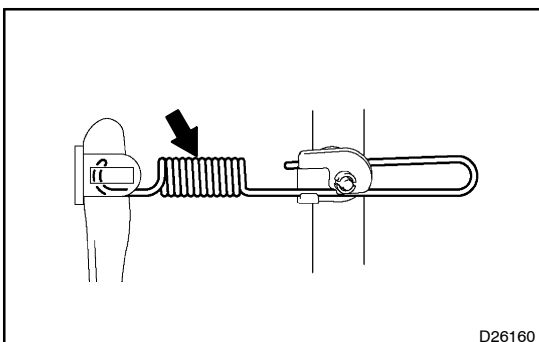


## 24. INSTALL CLUTCH PEDAL SPRING(1CD-FTV ENGINE TYPE)

- (a) Install the clutch pedal spring.

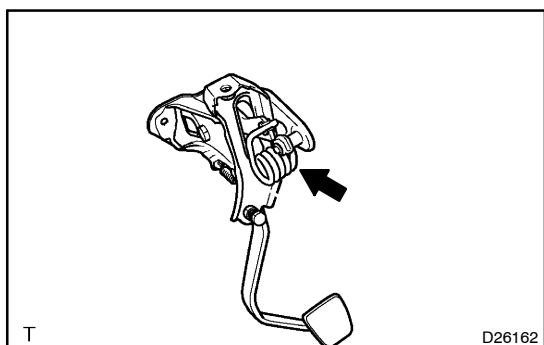

## 25. INSTALL TURN OVER SPRING SEAT COMPRESSION SPRING

- Apply MP grease to the contact surface of the push rod and spring.
- Install the turn over spring to the clutch pedal and clutch pedal support.

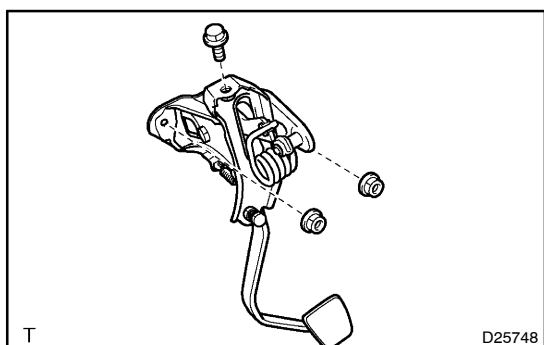

## 26. INSTALL CLUTCH PEDAL SUPPORT SUB-ASSY

- Install the clutch pedal support to the vehicle with the 2 nuts and bolt.

### Torque:

**Bolt: 19 N·m (194 kgf·cm, 14 ft·lbf)**

**Nut: 11.8 N·m (120 kgf·cm, 9 ft·lbf)**

## 27. INSTALL CLUTCH MASTER CYLINDER PUSH ROD CLEVIS W/HOLE PIN

- Apply MP grease to the contact surface of the push rod clevis and bush.
- Connect the clevis to the clutch pedal with the hole pin.

### HINT:

Install the hole pin from the left side of the vehicle.

- Install the clip to the hole pin.

## 28. INSPECT AND ADJUST CLUTCH PEDAL SUB-ASSY

(See page 42-2)