

INSTALLATION


Installation is in the reverse order of removal

(See page [AC-101](#)).

1. AFTER INSTALLATION, CHECK HEATER CONTROL LEVER OPERATION

Move the control lever left and right check for stiffness and binding the full range of the lever.

If there is stiffness or binding, proceed next step.

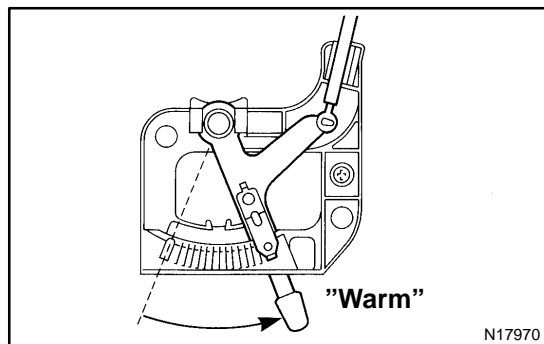

2. ADJUST HEATER CONTROL CABLE

- Set damper control lever to "WARM" position.
- Set the rear heater control lever to "WARM" position, install the control cable and lock the clamp.

HINT:

Lock the clamp during lightly pushing the outer cable in the direction, as shown in the illustration by an arrow.