

## INSTALLATION


### 1. INSTALL WASHER NOZZLE

### 2. INSTALL REAR WIPER MOTOR ASSEMBLY

- (a) Install the rear wiper motor assembly with the 3 wiper motor set bolts.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

- (b) Connect the connector.

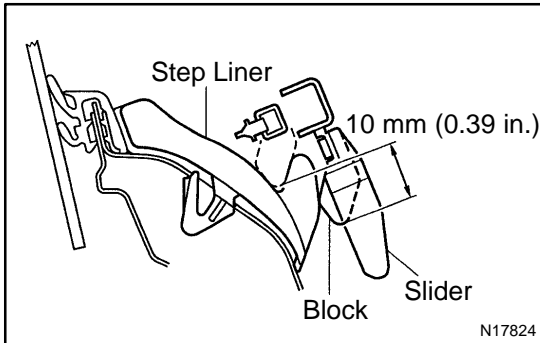

### 3. INSTALL REAR WIPER ARM

- (a) Install the washer with packing.
- (b) Operate the wiper once and turn the wiper switch OFF and install the wiper arm.
- (c) When assembling the rear wiper arm, slide the slider 10 mm (0.39 in.) to the lower side, and tighten the wiper arm set nut with the step liner on the block, as shown in the illustration.

**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**

### 4. INSTALL BACK DOOR GLASS

### 5. INSTALL OUTER WEATHERSTRIP

### 6. INSTALL BACK DOOR GLASS RUN

### 7. INSTALL PLATE

### 8. INSTALL BACK DOOR TRIM