


Rear Wiper Limit Switch Circuit

CIRCUIT DESCRIPTION

Rear wiper limit switch is built-in the rear wiper motor. LMT1 switch is ON when the rear wiper arm is in the between stopping and reversing position and OFF when the rear wiper arm is in the except between stopping and reversing position. LMT2 switch is ON when the rear wiper arm is in the except storing position and OFF when the rear wiper arm is in the storing position.

WIRING DIAGRAM

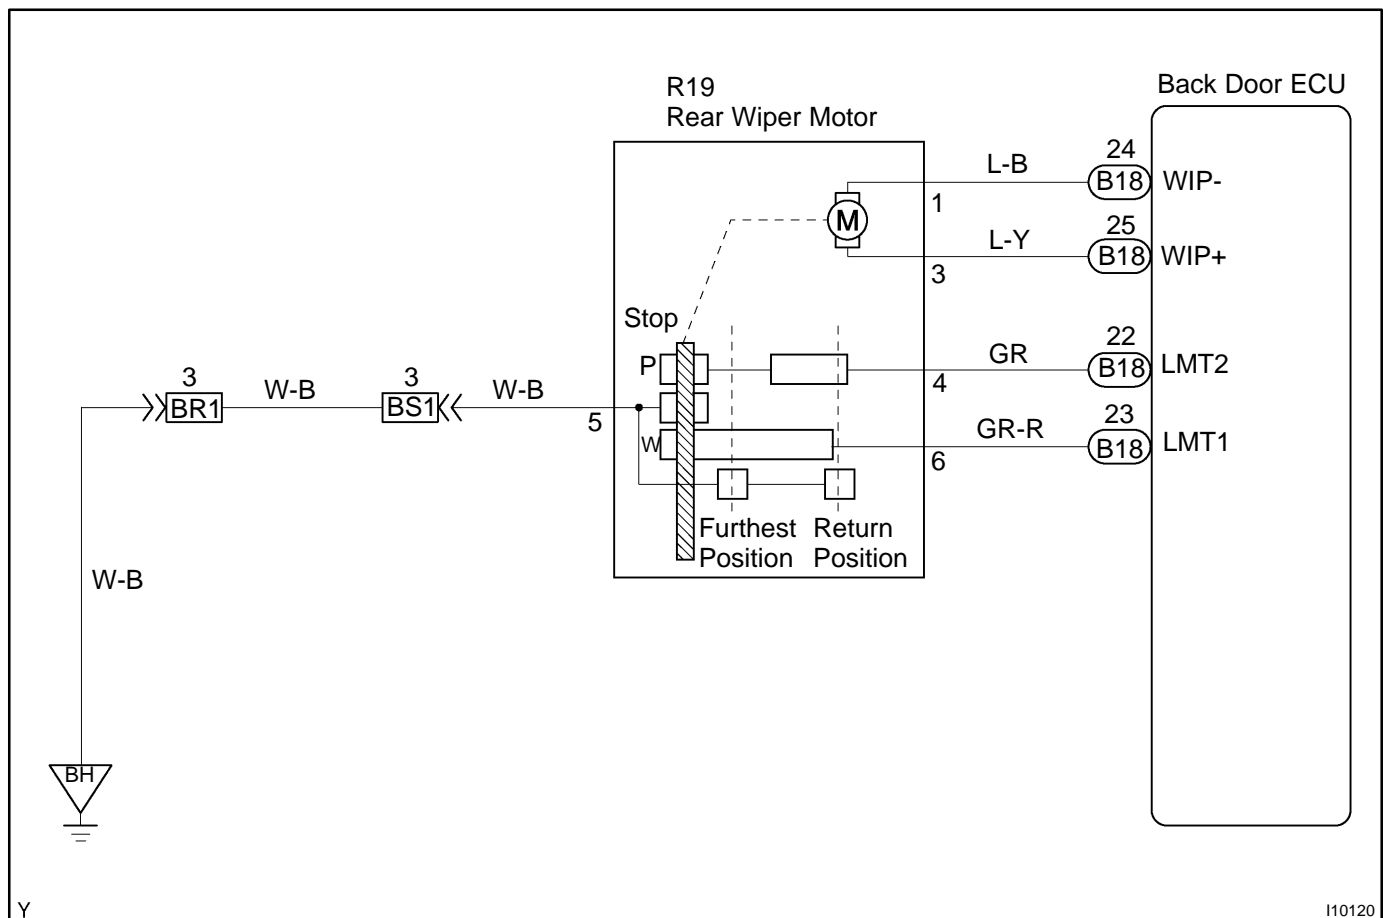

Y

I10120

INSPECTION PROCEDURE

1	Check rear wiper motor continuity (See page BE-65).
---	--

NG	Replace rear wiper motor.
----	---------------------------

OK

2	Check harness and connector between rear wiper motor and back door ECU (See page IN-28).
---	---

NG	Repair or replace harness or connector.
----	---

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-556](#)).