

FUEL CUT RPM INSPECTION

SF08X-03


1. WARM UP ENGINE

Allow the engine to warm up to normal operating temperature.

2. CONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL (See page SF-7)

3. INSPECT FUEL CUT OFF RPM

(a) Increase the engine speed to at least 3,500 rpm.

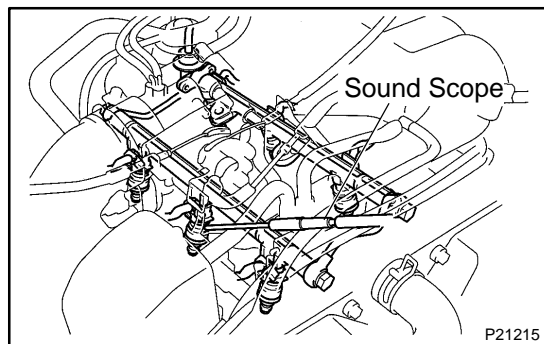

(b) Use a sound scope to check for injector operating noise.

(c) Check that when the throttle lever is released, injector operation noise stops momentarily and then resumes.

HINT:

Measure with the A/C OFF.

Fuel return rpm: 1,500 rpm

(Vehicle speed less than 25 km/h (16 mph), with brake OFF)

4. DISCONNECT TOYOTA HAND-HELD TESTER OR OBDII SCAN TOOL