



Luggage Compartment Door Opener

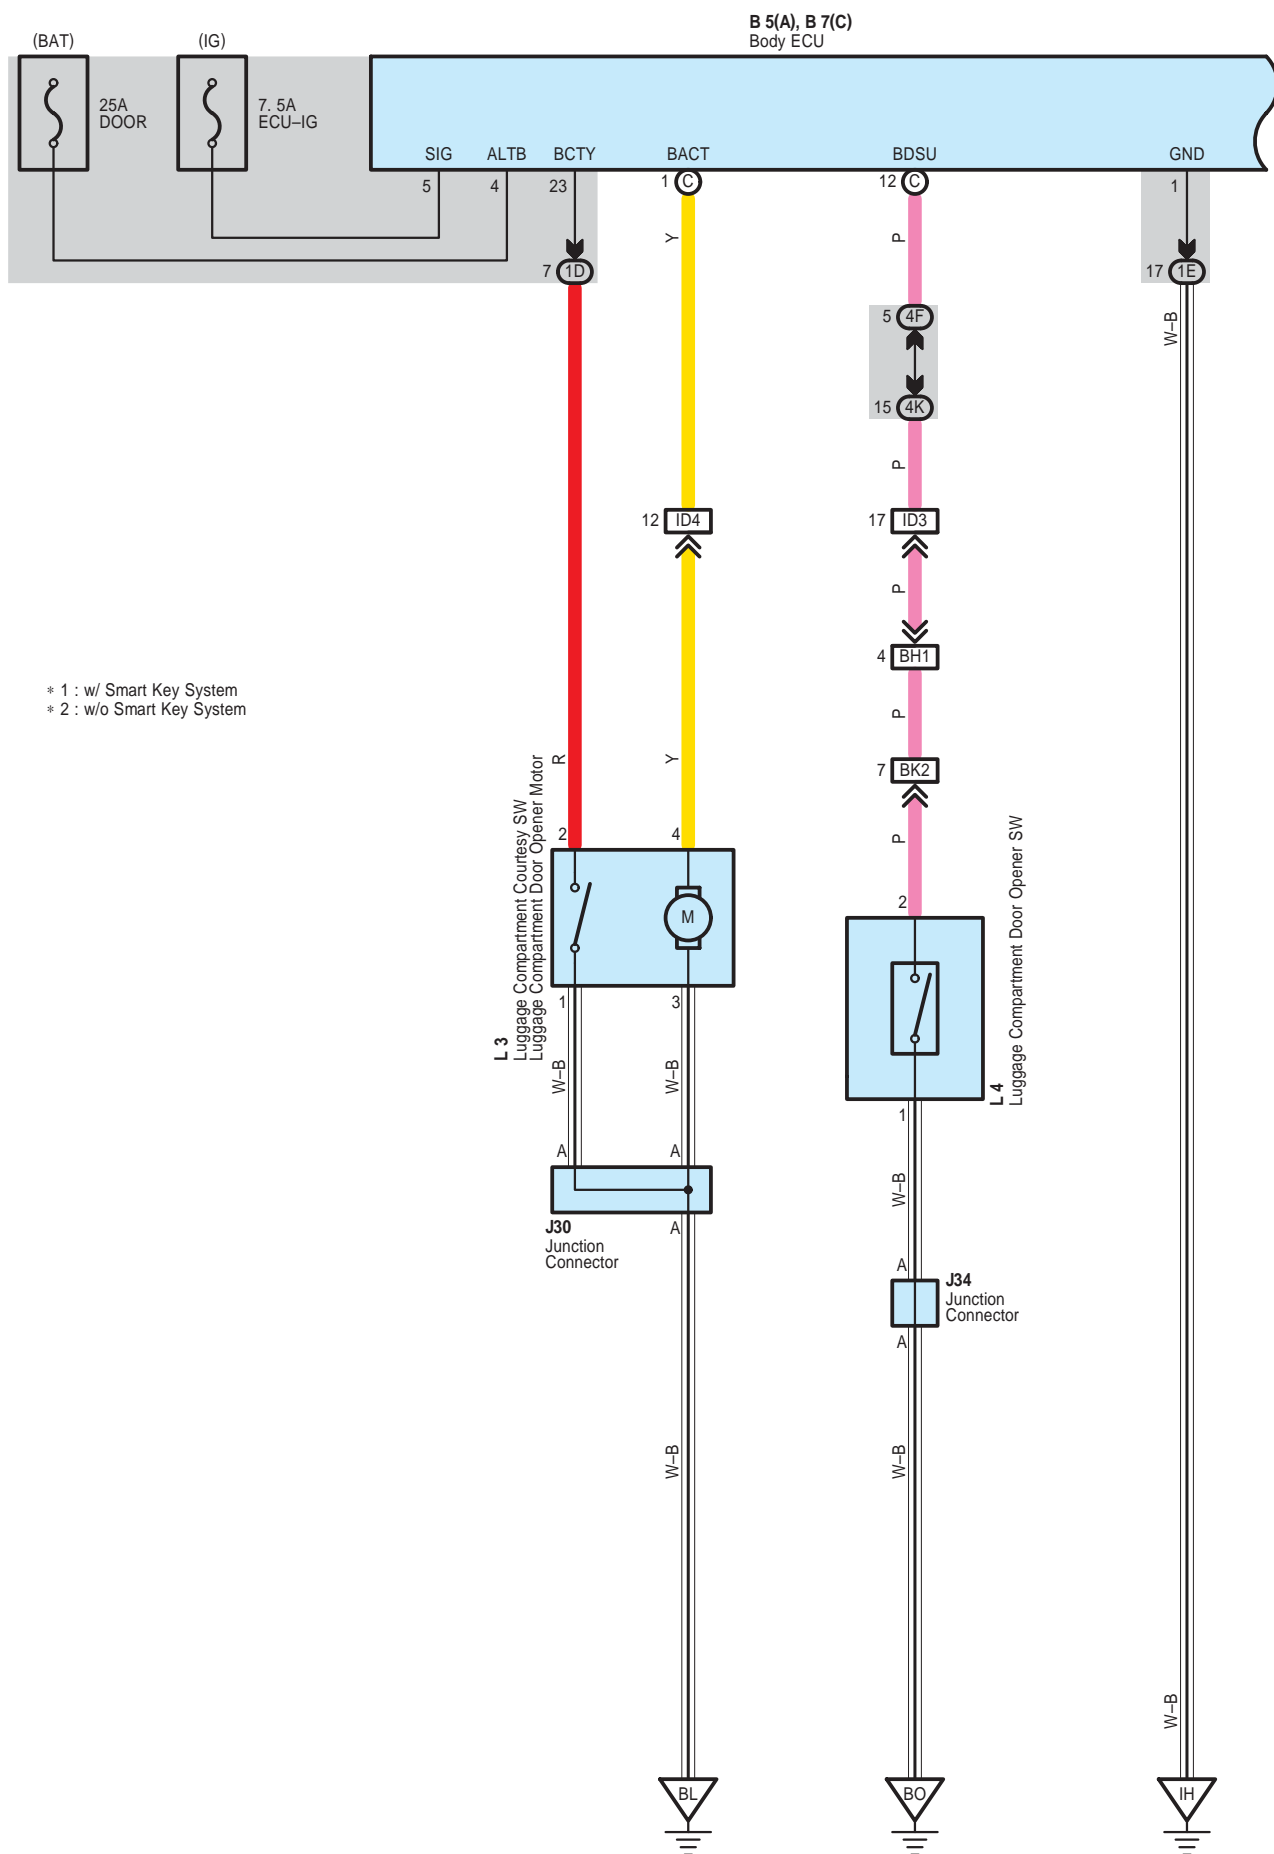

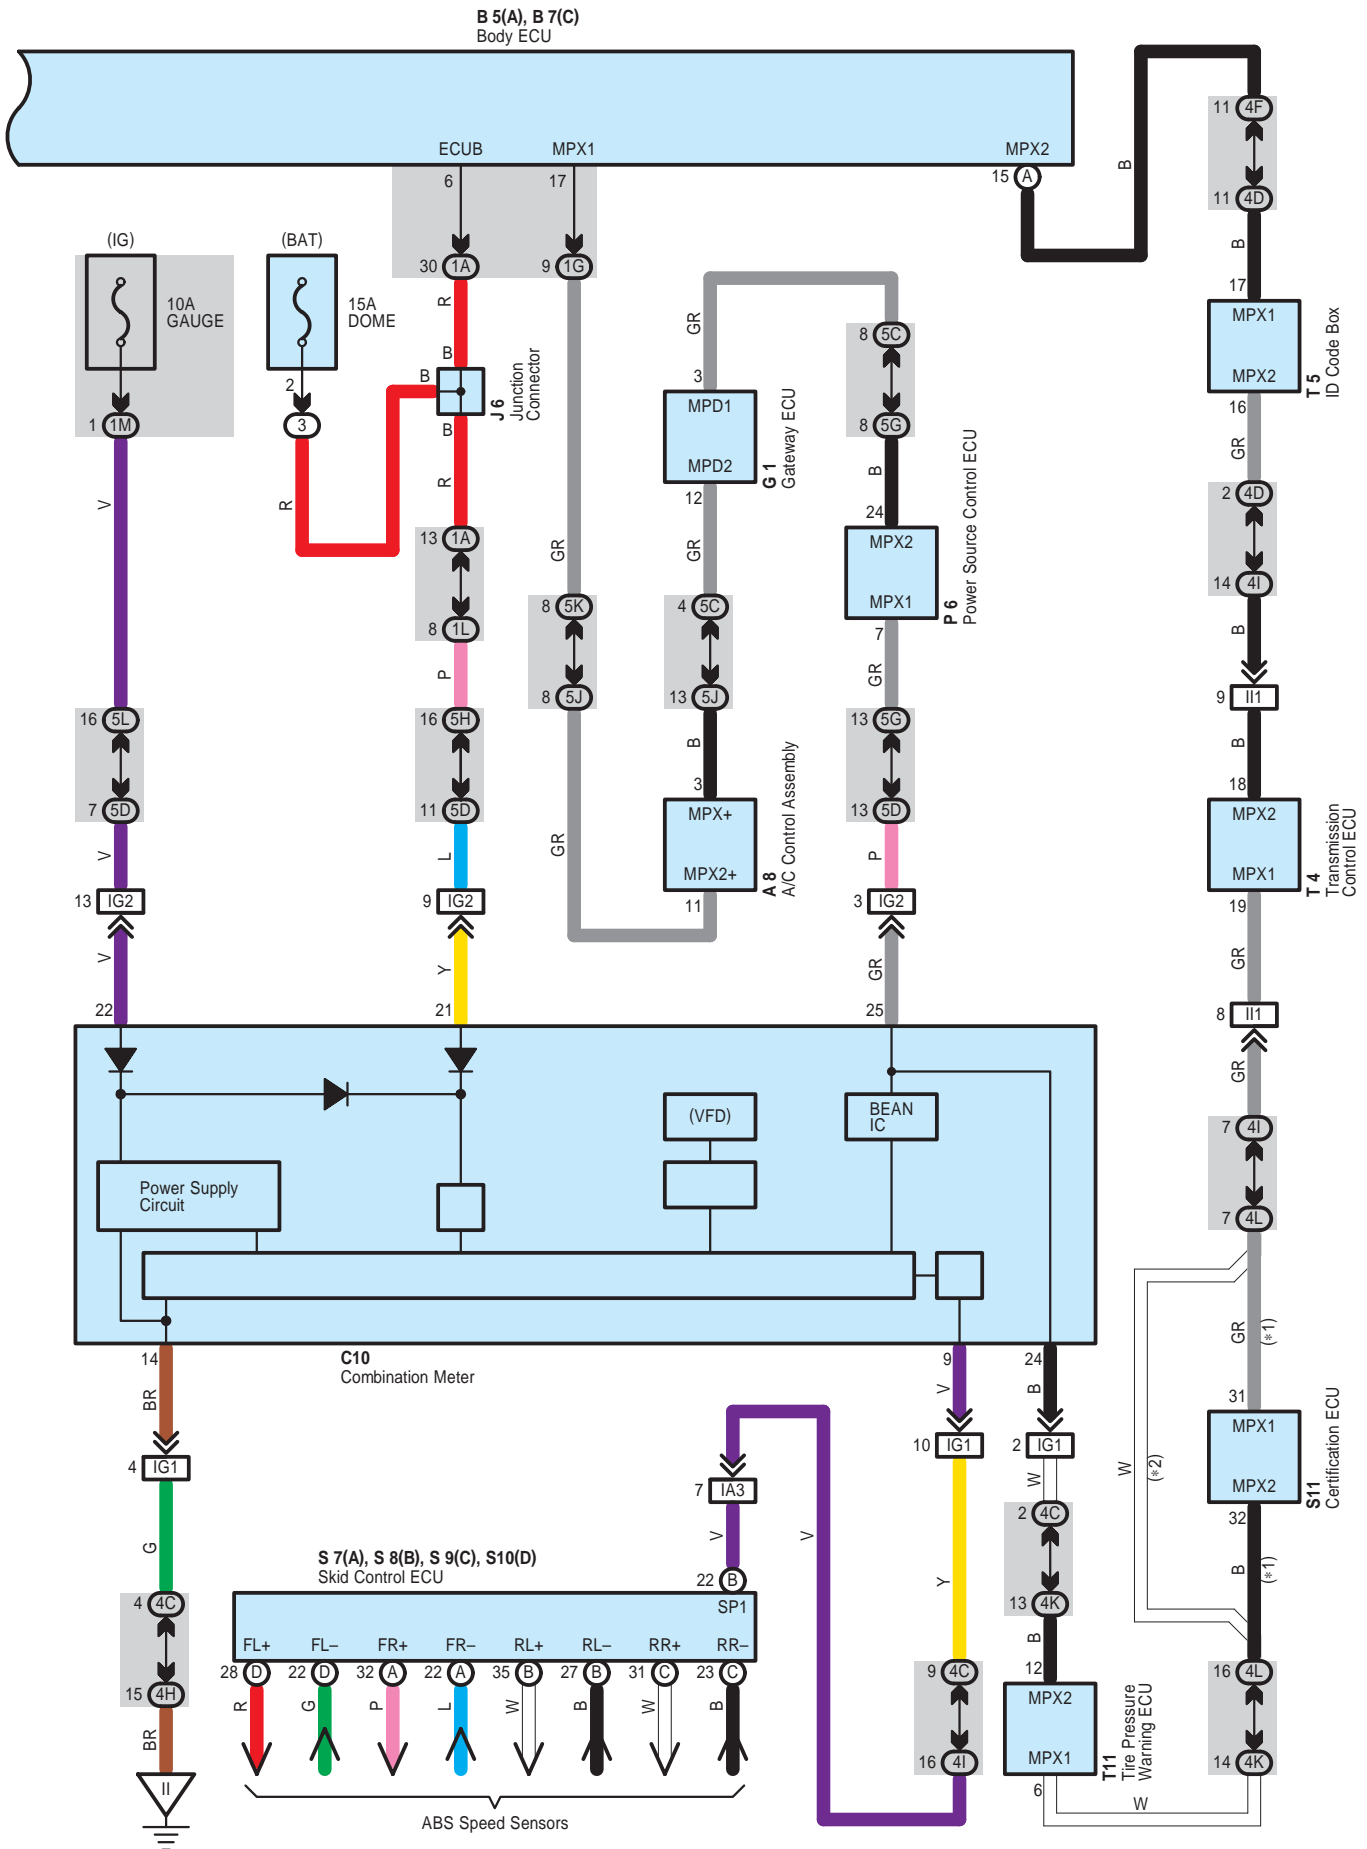

Luggage Compartment Door Opener

System Outline

If the vehicle is stationary (Slower than 5 km/h) and luggage compartment door is unlocked, the luggage compartment door opener motor activates with control of body ECU when luggage compartment door opener SW is pushed. It results in releasing latch of luggage compartment door to open luggage compartment door.

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A8	48	J34	53	S10	D 51
B5	A 48	L3	53	S11	51
B7	C 48	L4	53	T4	51
C10	49	P6	51	T5	51
G1	49	S7	A 51	T11	51
J6	50	S8	B 51		
J30	53	S9	C 51		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1D	30	Floor Wire and Driver Side J/B (Lower Finish Panel)
1E	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1G		
1L		
1M	31	
4C	38	Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H		
4I		
4K		
4L		
5C	42	Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5D		
5G		
5H		
5J		
5K		
5L		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA3	58	Engine Room Main Wire and Instrument Panel Wire (Upper Parts of Front Body Pillar LH)
ID3	58	Instrument Panel Wire and Floor Wire (Left Kick Panel)
ID4		
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	59	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
BH1	61	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK2	61	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)



: **Ground Points**

Code	See Page	Ground Points Location
IH	58	Cowl Side Panel LH
II	58	Instrument Panel Brace LH
BL	60	Rear Side of Left Quarter Panel
BO	60	Center of the Back Door Panel