


Rear Window Defogger and Mirror Heater

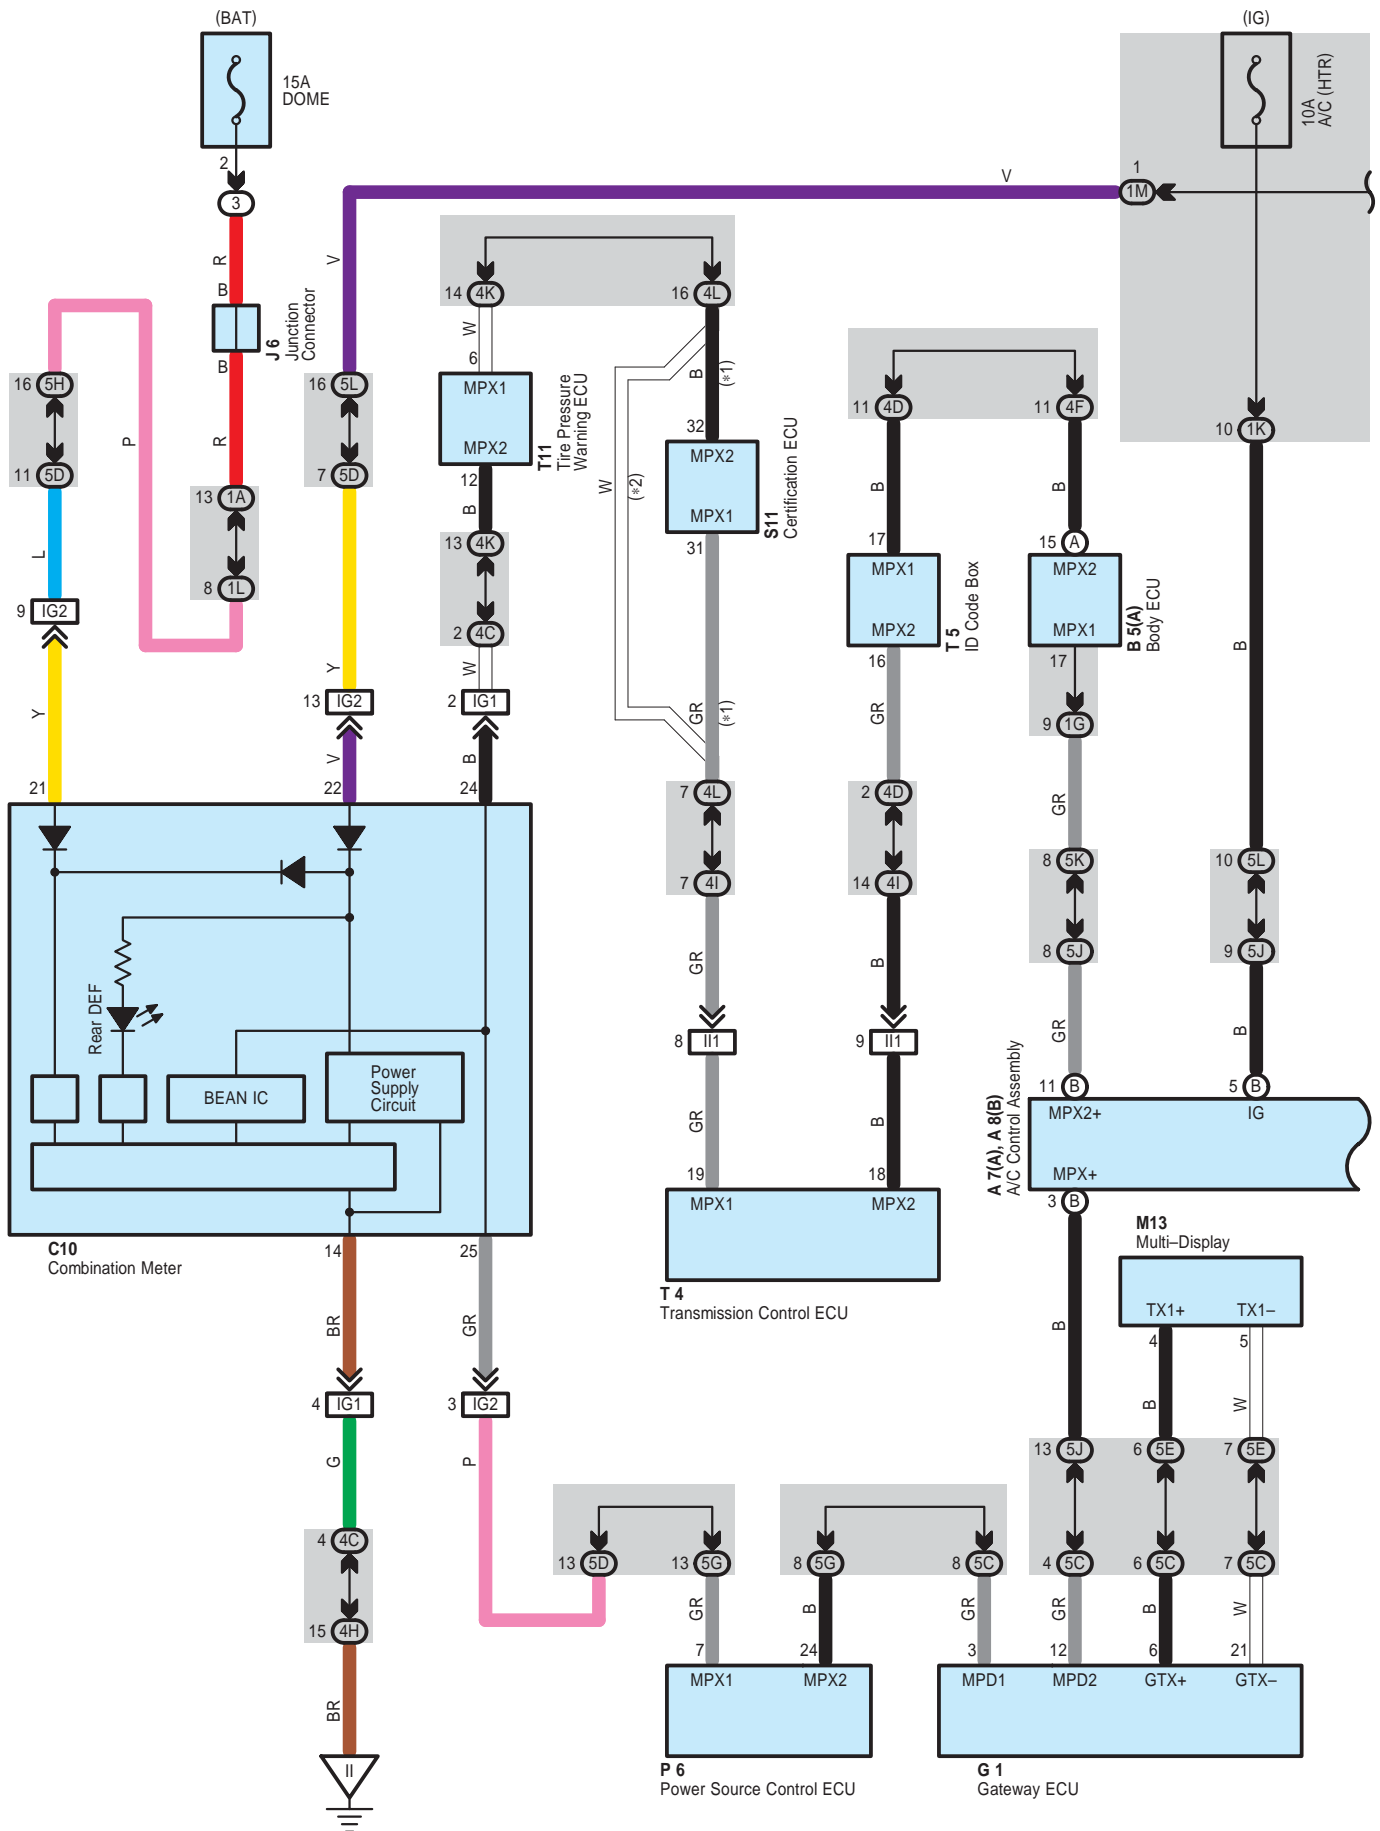

Rear Window Defogger and Mirror Heater

System Outline

When power SW is at IG ON position, turning ON rear DEF SW on the steering wheel sends signal to A/C control assembly. Then A/C control assembly flows electricity in TERMINAL Rr DEF, which activates DEF relay and mirror heater relay. As a result, rear DEF SW and mirror heater is turned on.

Turning ON rear DEF SW of multi-display sends signal to A/C control assembly. Then the same action follows as above.

During rear window defogger and mirror heater in operation, signal is input in combination meter, lighting rear DEF indicator in combination meter.

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A7	A	48	J25		50	R15	A	54
A8	B	48	J26		53	R16	B	54
B5	A	48	J27		53	R19		54
C10		49	M12		50	R20		54
C12		49	M13		50	S11		51
G1		49	N7		54	T4		51
J6		50	P6		51	T5		51
J19		50	R13	A	54	T11		51
J24		50	R14	B	54			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
3	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	30	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
1G	30	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
1J		
1K		
1L	31	
1M		
1N		
4C		Instrument Panel Wire and Center Connector No.1 (Behind the Combination Meter)
4D		
4F		
4H	38	
4I		
4K		
4L		Instrument Panel Wire and Center Connector No.2 (Instrument Panel Brace RH)
5B		
5C		
5D		
5E		
5G	42	
5H		
5J		
5K		
5L		
5N		

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID1	58	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE1	58	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IE2		
IG1	59	Instrument Panel Wire and Instrument Panel No.2 Wire (Behind the Combination Meter)
IG2		
II1	59	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL1	59	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL2		
BH2	61	Back Door No.1 Wire and Floor Wire (Rear Side of Roof Panel)
BK1	61	Back Door No.1 Wire and Back Door No.2 Wire (Rear Side of Roof Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
IH	58	Cowl Side Panel LH
II	58	Instrument Panel Brace LH
IJ	58	Instrument Panel Brace RH
BL	60	Rear Side of Left Quarter Panel
BO	60	Center of the Back Door Panel