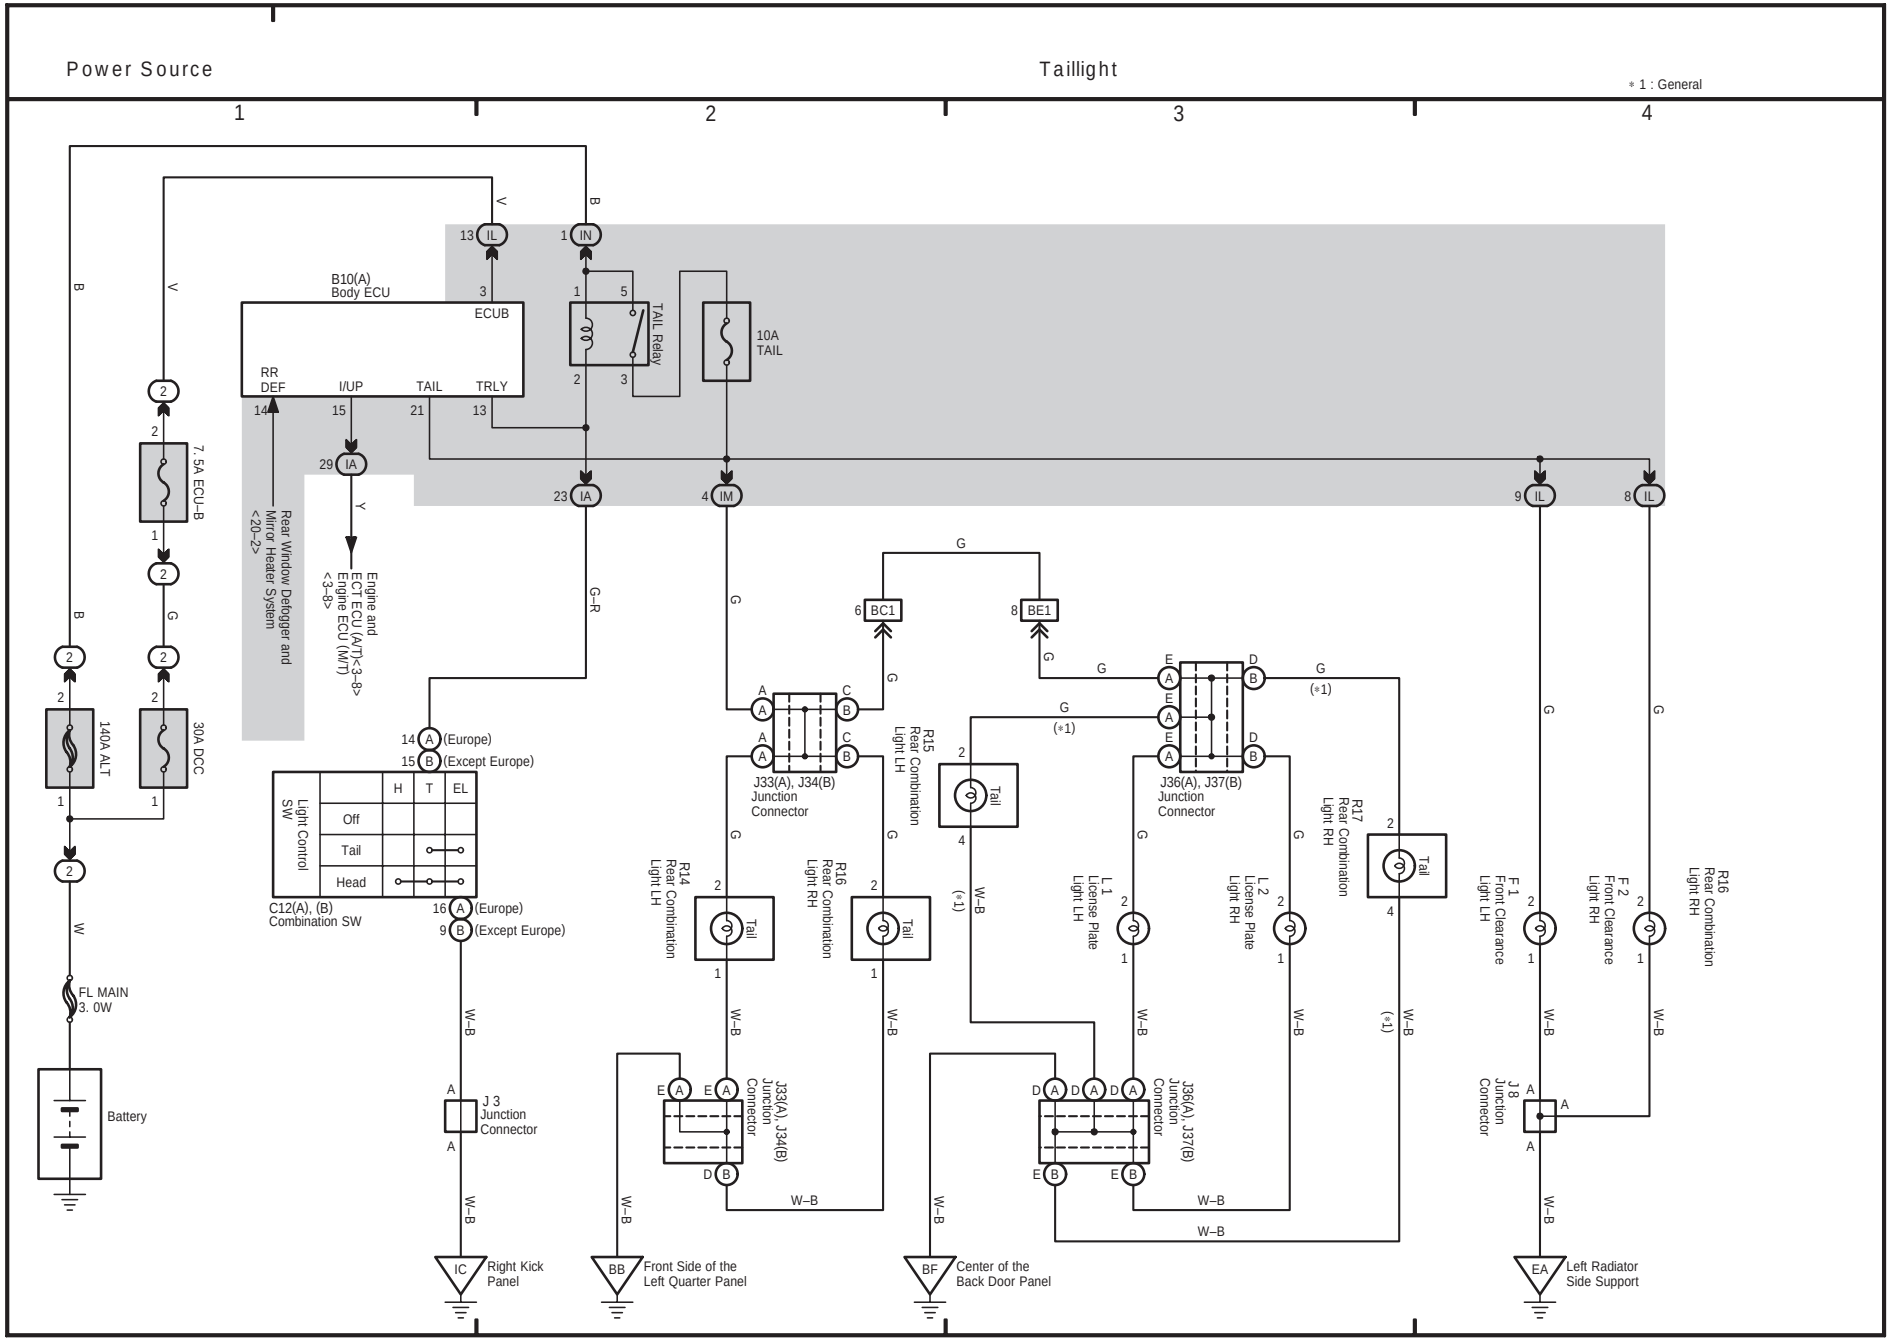
Power Source
Taillight
* 1 : General
1
2
3
4
B10(A)
Body ECU
ECUB
RR DEF
I/UP
TAIL
TRLY
TAIL Relay
10A TAIL
7. 5A ECU–B
140A ALT
30A DCC
FL MAIN 3. 0W
Battery
Rear Window Defogger and Mirror Heater System <20–2>
Engine and ECT ECU (A/T) <3–8> Engine ECU (M/T)
C12(A), (B) Combination SW
Light Control SW
Off
Tail
Head
H
T
EL
(Europe)
(Except Europe)
J 3 Junction Connector
Right Kick Panel
Front Side of the Left Quarter Panel
Center of the Back Door Panel
Left Radiator Side Support
J33(A), J34(B) Junction Connector
J36(A), J37(B) Junction Connector
R14 Rear Combination Light LH
R15 Rear Combination Light LH
R16 Rear Combination Light RH
R17 Rear Combination Light RH
L 1 License Plate Light LH
L 2 License Plate Light RH
F 1 Front Clearance Light LH
F 2 Front Clearance Light RH
J 8 Junction Connector
Tail
W–B
G–R
G
B
V
Y
W