| | | |
|---|---|---|
| **Last Modified:** 03-12-2013 | 6.4 F | **Doc ID:** NM1000000005IJ0 |
| **Model Year:** 2013 | **Model:** RAV4 | **Prod Date Range:** [12/2012 - ] |
| **Title:** CRUISE CONTROL: LANE DEPARTURE ALERT SYSTEM: COMBINATION METER; 2013 MY RAV4 [12/2012 - ] | | |

# COMBINATION METER

## 1. CONSTRUCTION

(a) The combination meter assembly illuminates or blinks the LDA indicator lights, and sounds a skid control buzzer assembly in accordance with the respective condition.

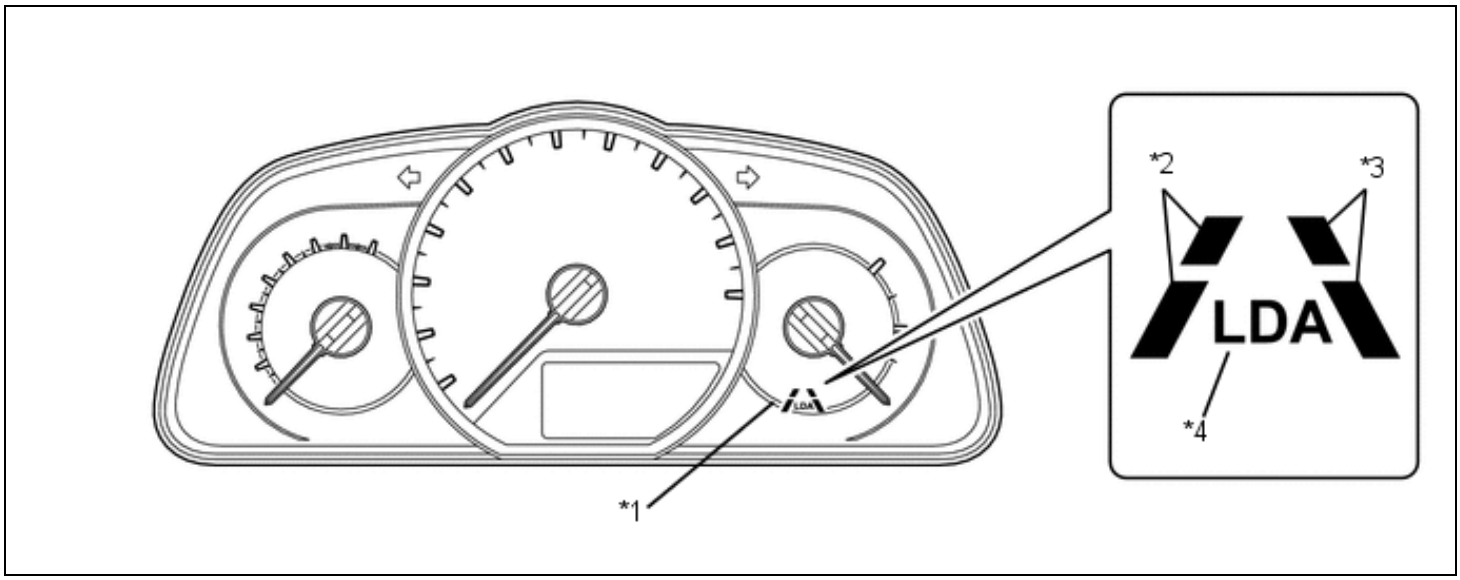


| | | | |
|---|---|---|---|
| *1 | LDA Main Indicator Light | *2 | Lane Marker Indicator (LH) |
| *3 | Lane Marker Indicator (RH) | *4 | LDA Indicator |

| CONDITION | LDA MAIN INDICATOR LIGHT | | | SKID CONTROL BUZZER ASSEMBLY |
|---|---|---|---|---|
| | LANE MARKER INDICATOR (LH) | LDA INDICATOR | LANE MARKER INDICATOR (RH) | |
| Function in Operation | | LDA | | - |
| | Illuminates (Green) | Illuminates (Green) | Illuminates (Green) | |
| Function in Operation (RH Side) | | LDA | | - |
| | Off | Illuminates (Green) | Illuminates (Green) | |
| | | | | |

| | | | | |
|---|---|---|---|---|
| Function in Operation (LH Side) | | LDA | | - |
| | Illuminates (Green) | Illuminates (Green) | Off | |
| Warning Operation (RH Side) | | LDA | | Sounds |
| | Off | Illuminates (Green) | Blinks (Yellow) | |
| Warning Operation (LH Side) | | LDA | | Sounds |
| | Blinks (Yellow) | Illuminates (Green) | Off | |
| No Lane Markers are Detected | | LDA | | - |
| | Off | Illuminates (Green) | Off | |
| Temperature of lane departure warning camera assembly is abnormal | | LDA | | - |
| | Off | Illuminates (Yellow) | Off | |
| Malfunction Occurred | | LDA | | - |
| | Illuminates (Yellow) | Illuminates (Yellow) | Illuminates (Yellow) | |