



QUARTER PANEL (CUT) REPLACEMENT

1. REMOVE QUARTER PANEL


- Cut and join the parts at the locations as shown below.
- Replace the fuel filler opening lid at the same time.

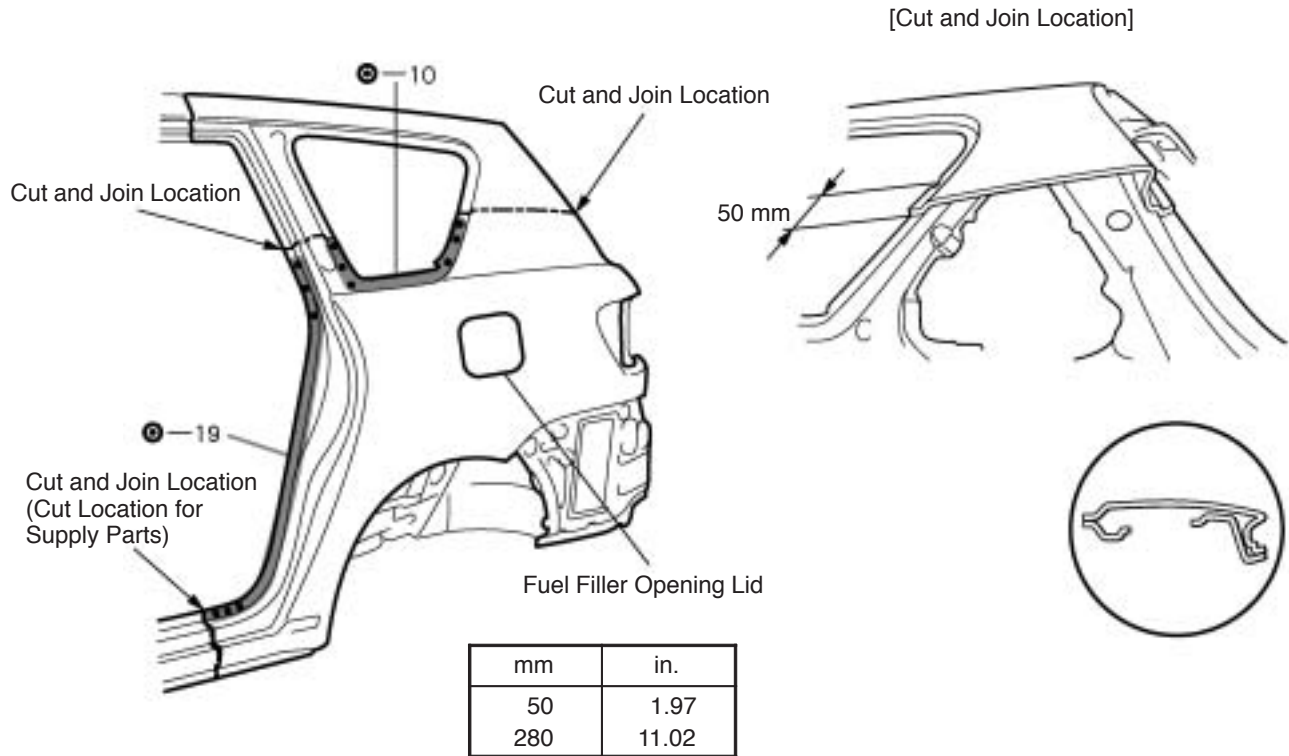


[Cut and Join Location]

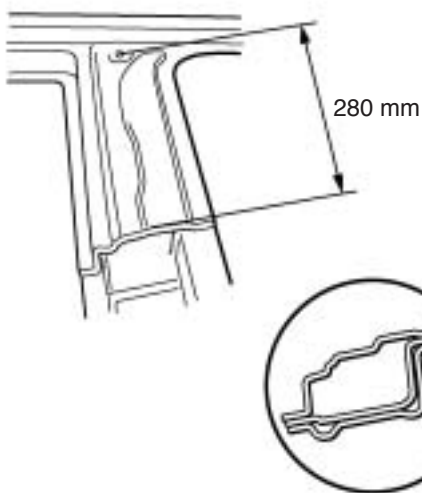

[Cut and Join Location]

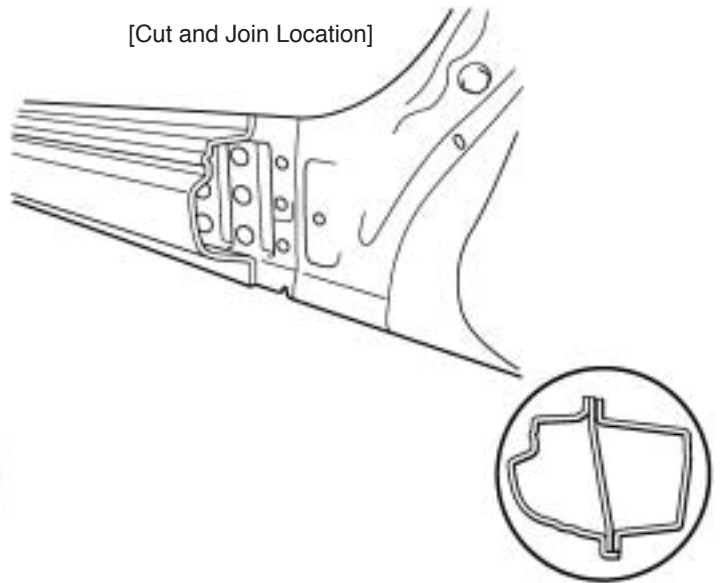

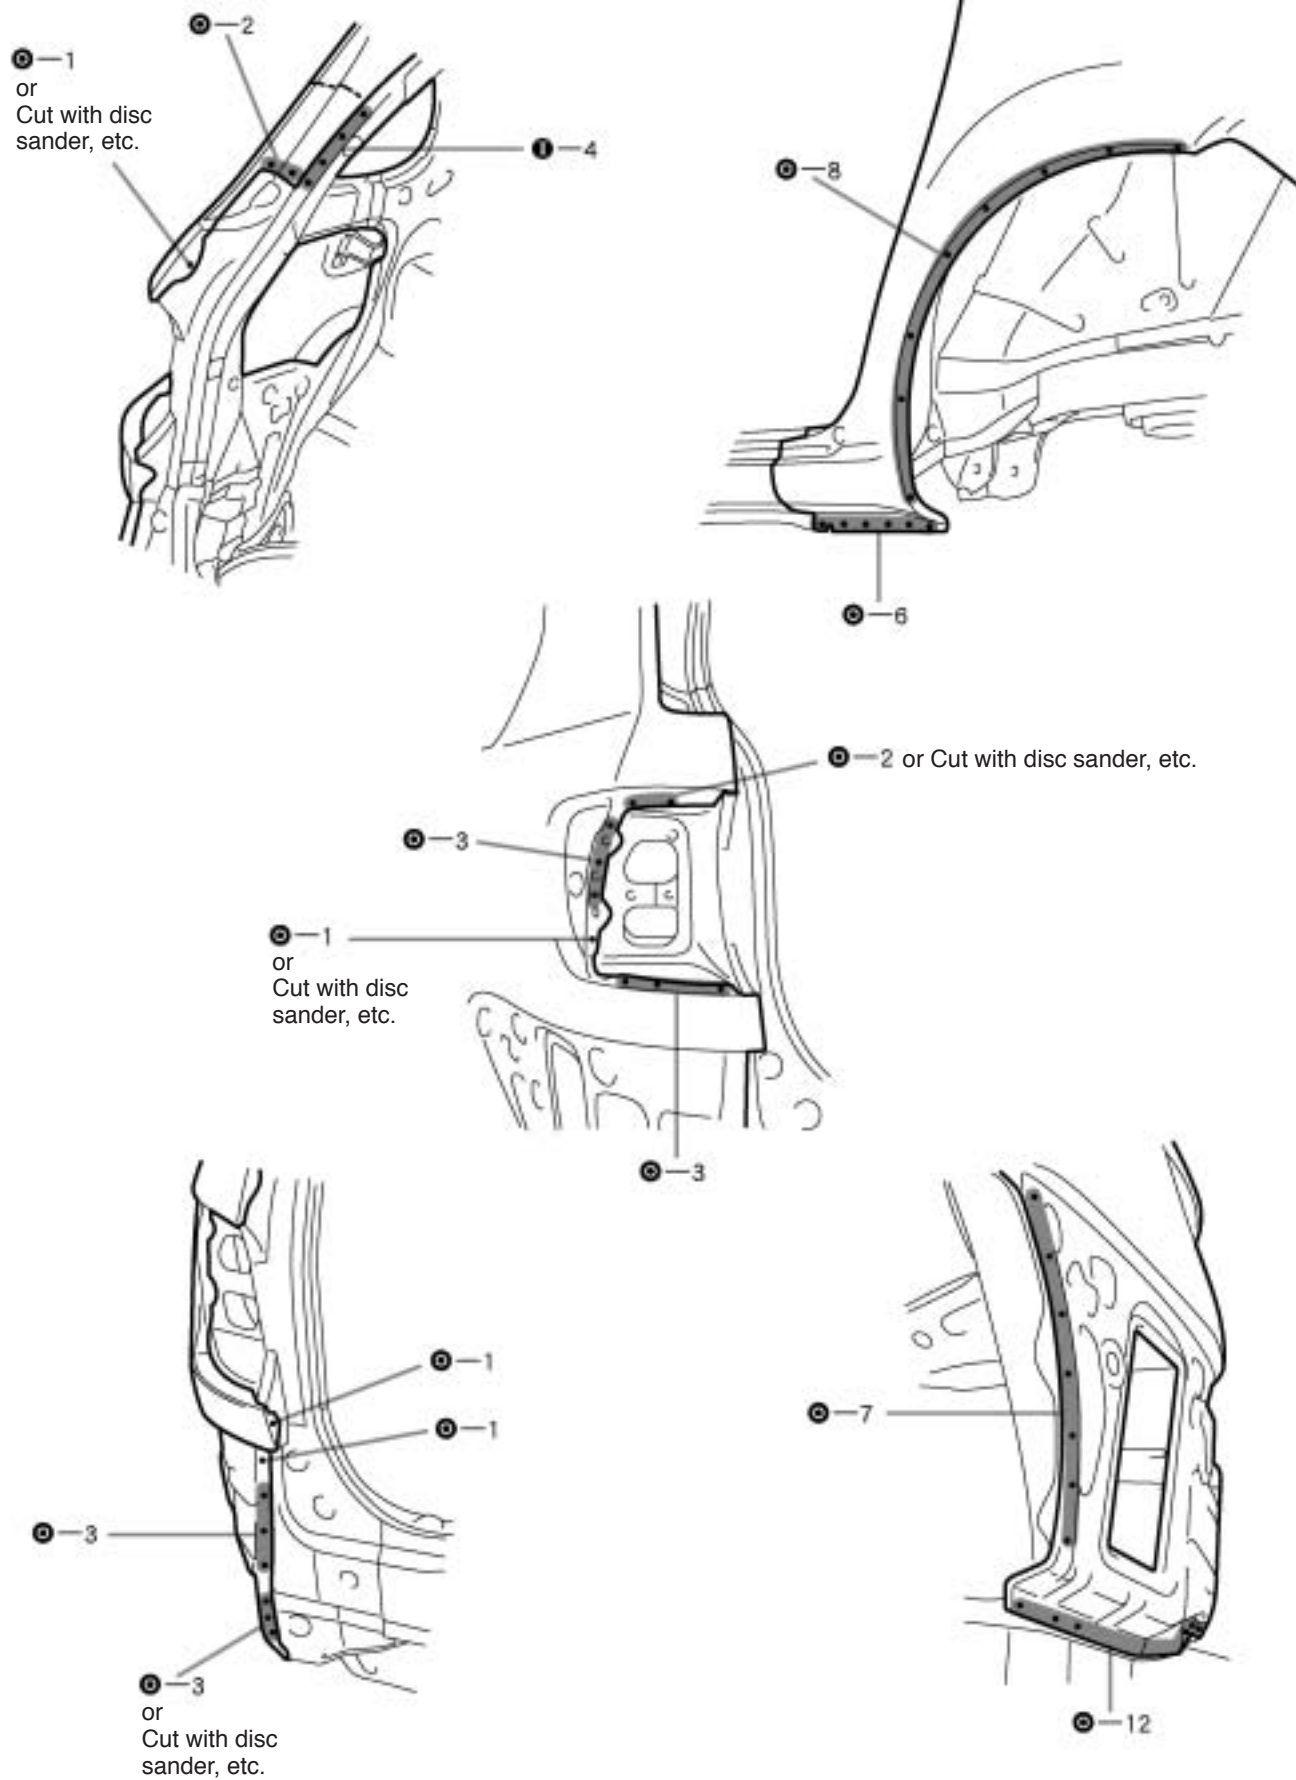

2. INSTALL QUARTER PANEL

HINT:

Inspect the fitting of the rear door, luggage compartment door and rear combination light, etc., before welding, since this affects the appearance of the finish.

- (a) Before temporarily installing the new parts, apply body sealer to the wheel arch.


HINT:


- Apply body sealer about 5 mm (0.20 in.) from the flange, avoiding any oozing.
- Apply sealer evenly, about 3 – 4 mm (0.12 – 0.16 in.) in diameter.
- For other sealing points, refer to section PC.

- (b) Use waterproof rivets for the fuel filler opening lid installation.

HINT:

Apply the body sealer before installing the fuel filler opening lid.

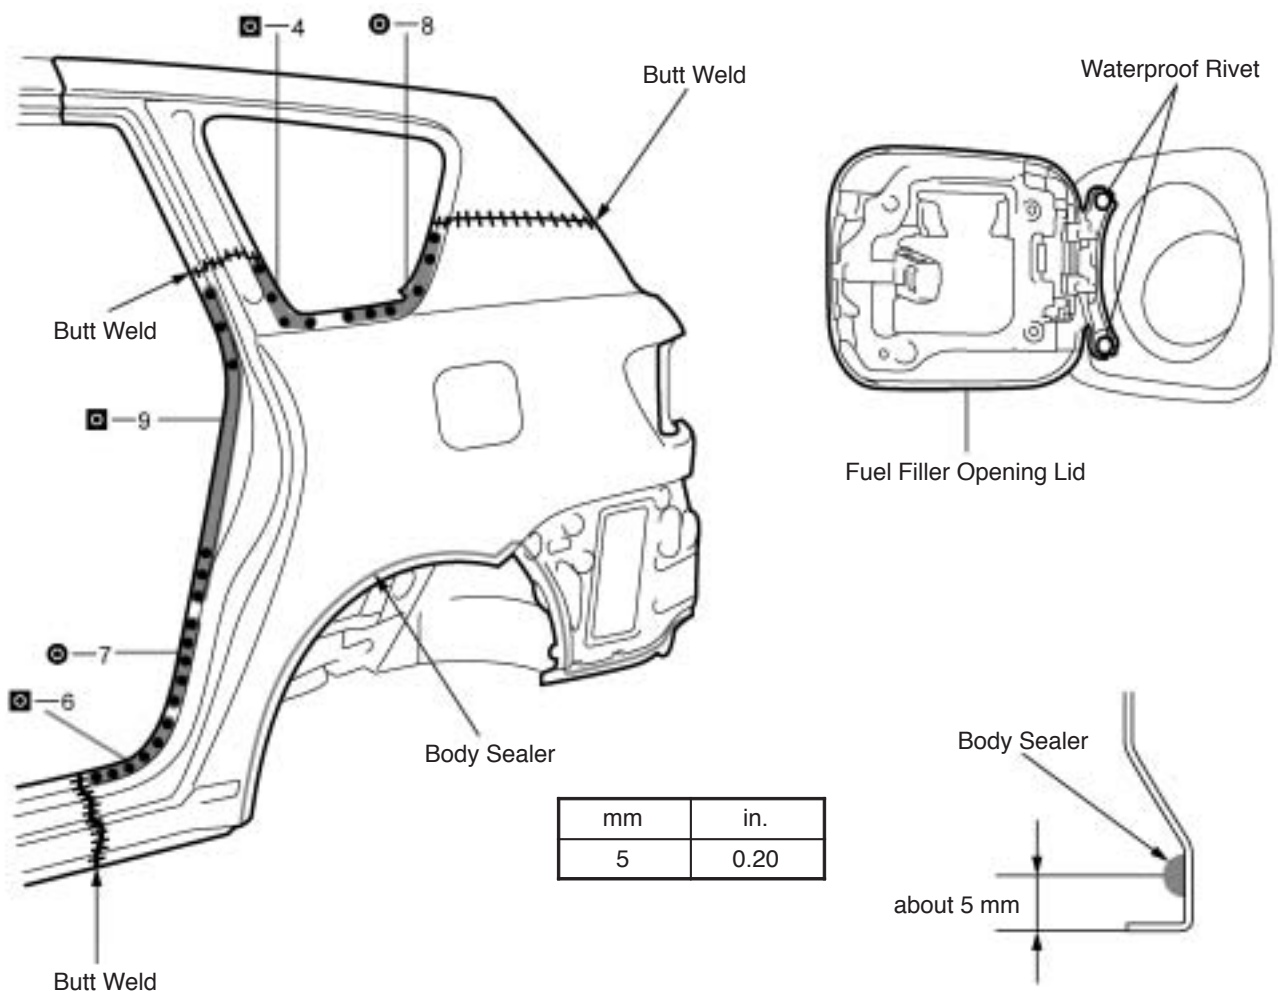

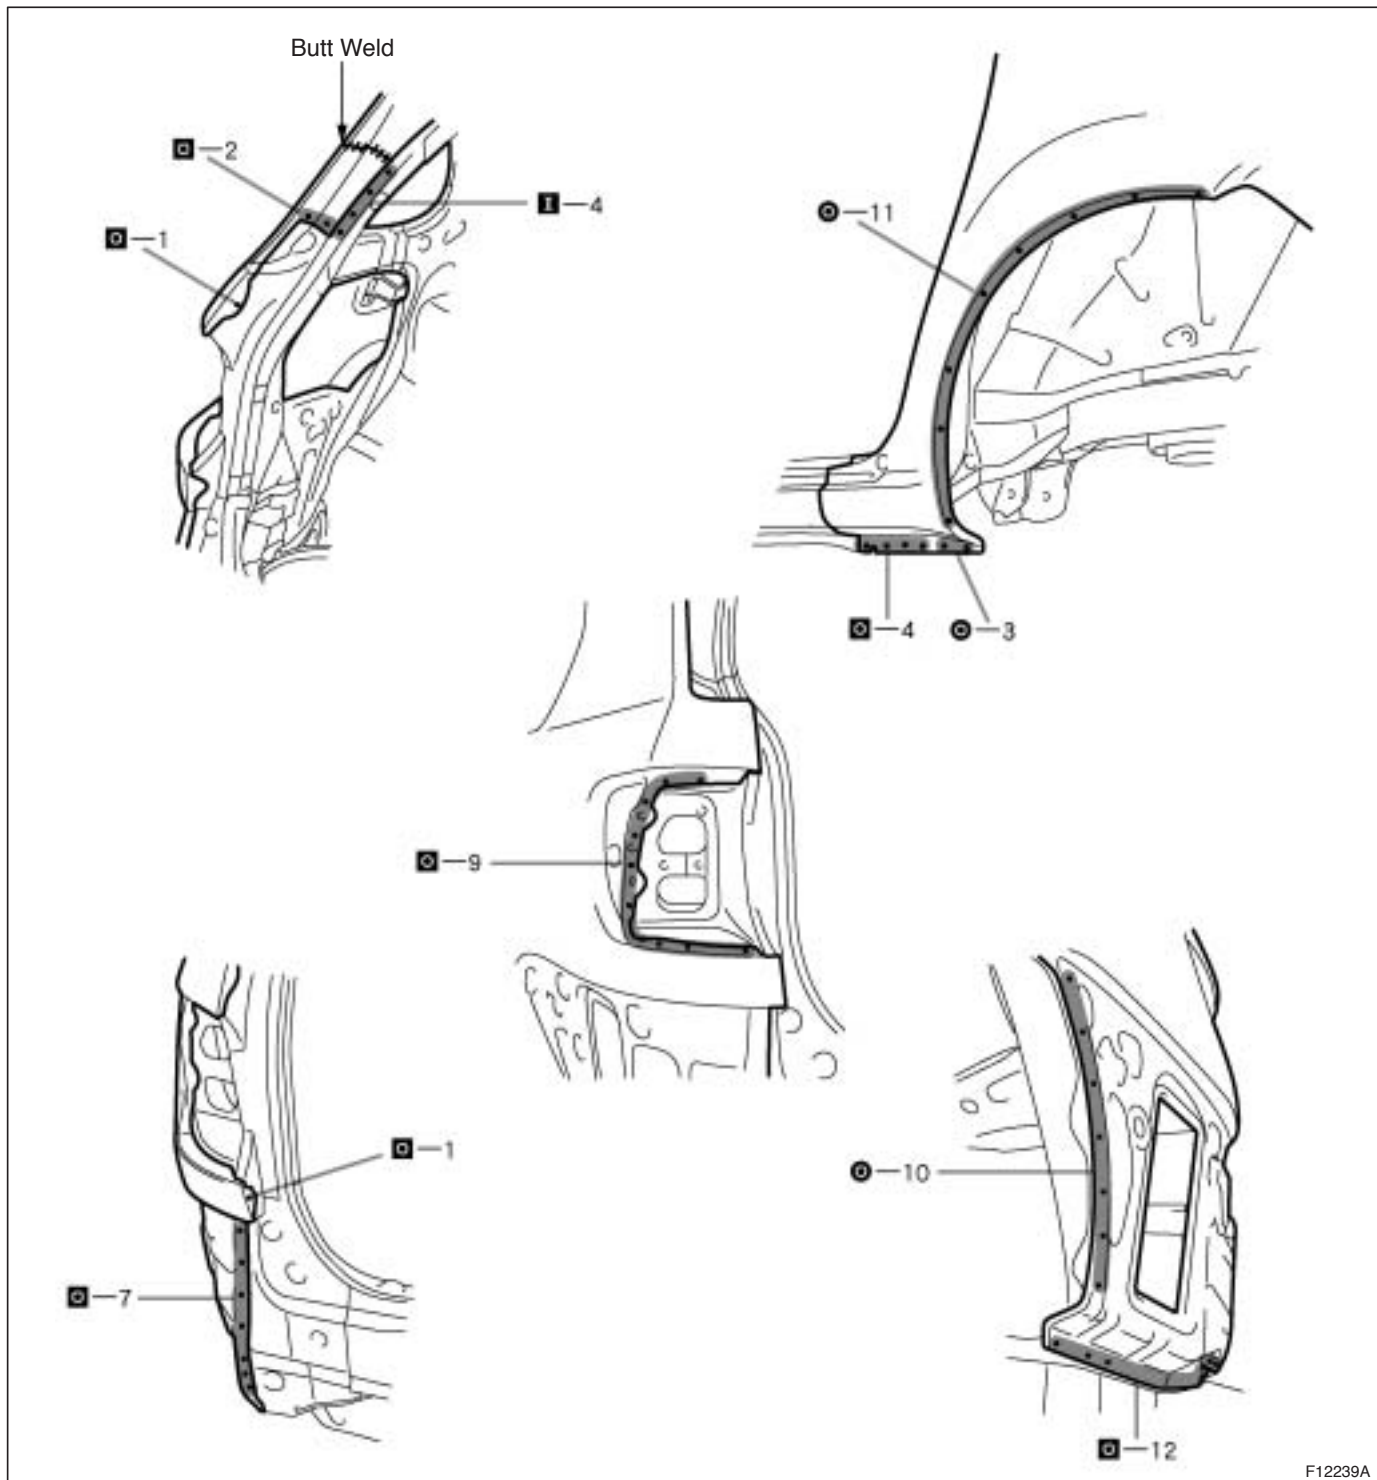

3. MEASURING OPENING PORTION DIMENSIONS ([See page BP-94](#))
4. APPLYING SEALER TO THE ENGINE COMPARTMENT ([See page PC-1](#))
4. APPLYING SEALER TO THE INSIDE OF THE VEHICLE ([See page PC-1](#))
5. APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT ([See page PC-1](#))
6. APPLYING UNDER COATING ([See page PC-6](#))
7. CHARGING THE POLYURTHANE FOAM ([See page PC-8](#))
8. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.