

DTC	P0717/37	TURBINE SPEED SENSOR CIRCUIT NO SIGNAL
------------	-----------------	---


CIRCUIT DESCRIPTION

This sensor detects the rotation speed of the input turbine. By comparing the input turbine speed signal (NT) with the counter gear speed sensor signal (NC), the ECM detects the shift timing of the gears and appropriately controls the engine torque and hydraulic pressure according to various conditions. Thus, providing smooth gear shift.

DTC No.	DTC Detection Condition	Trouble Area
P0717/37	ECM detects conditions (a), (b) and (c) continuity for 5 sec. or more: (1-trip* or 2-trip detection logic) (a) Vehicle speed: 50 km/h (31 mph) or more (b) Park/neutral position switch (NSW, R and L) is OFF (c) Speed sensor (NT): less than 300 rpm	<ul style="list-style-type: none"> • Open or short in transmission revolution sensor NT (speed sensor NT) circuit • Transmission revolution sensor NT (speed sensor NT) • ECM

HINT:

* : Europe spec

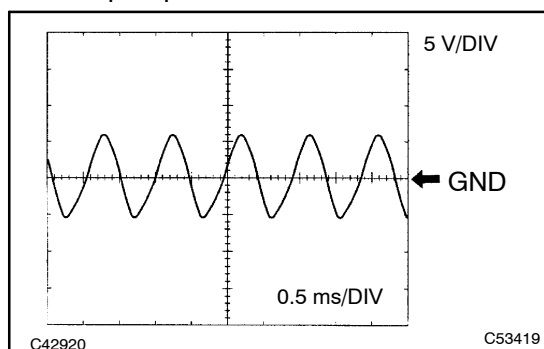

Reference (Using an oscilloscope):

Check the waveform between the terminals NT+ and NT- of the ECM connector.

Standard: Refer to the illustration.

Terminal	NT+ – NT-
Tool setting	5V/DIV, 0.5ms/DIV
Vehicle condition	Vehicle speed 20 km/h (12 mph)

MONITOR DESCRIPTION


The NT terminal of the ECM detects a revolution signal from the speed sensor (NT) (input RPM). The ECM calculates a gearshift comparing the speed sensor (NT) with the speed sensor (NC).

While the vehicle is operating in 2nd, 3rd or O/D gear in the shift position of D, if the input shaft revolution is less than 300 rpm*1 although the output shaft revolution is more than 1,000 rpm*2, the ECM detects the trouble, illuminates the MIL and stores the DTC.

*1: Pulse is not output or is irregularly output.


*2: The vehicle speed is 50 km/h (31 mph) or more.

WIRING DIAGRAM

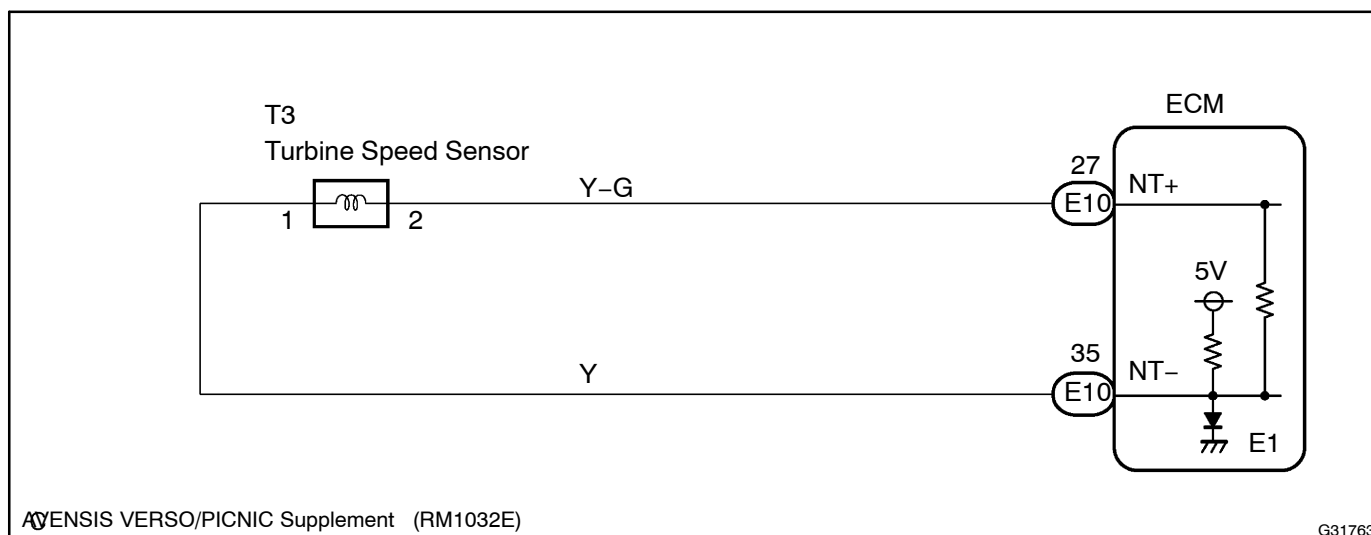

INSPECTION PROCEDURE

1 INSPECT SPEED SENSOR INSTALLATION

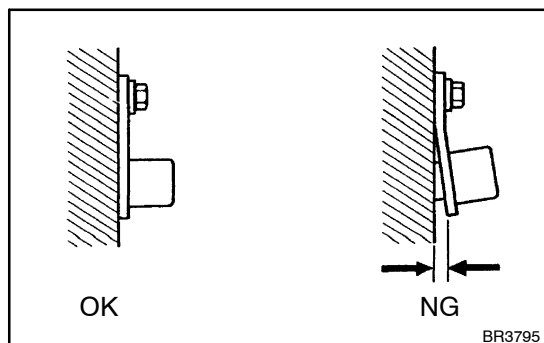

- (a) Check the speed sensor installation.

OK:

The installation bolt is tightened properly and there is no clearance between the sensor and transaxle case.

NG


REPLACE SPEED SENSOR(NT)

OK

2 INSPECT SPEED SENSOR(NT)

Sensor Side:

(Connector Front View):

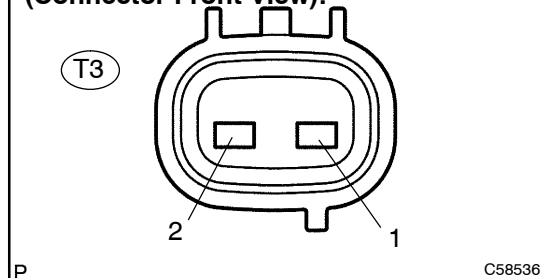

- (a) Disconnect the speed sensor connector from the trans-axle.
(b) Measure the resistance according to the value(s) in the table below.

Standard:


Tester Connection	Specified Condition 20 °C (68 °F)
1 – 2	560 to 680 Ω

NG

REPLACE SPEED SENSOR(NT)

OK

3 CHECK HARNESS AND CONNECTOR (SPEED SENSOR – ECM)

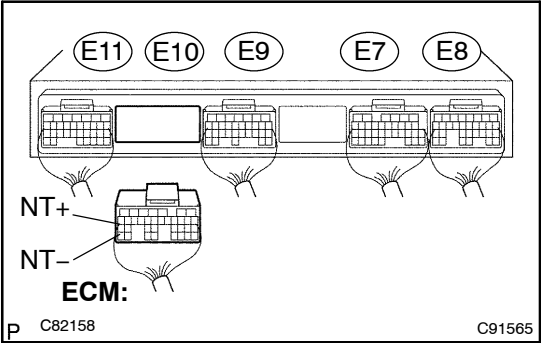

- (a) Connect the speed sensor connector.
- (b) Disconnect the ECM connector.
- (c) Measure the resistance according to the value(s) in the table below.

Standard:
TOYOTA made:

Tester Connection	Specified Condition 20°C (68°F)
E10 – [27 (NT+) – E10 – [35 (NT–)	500 to 820 Ω

Standard:
AI SIN made:

Tester Connection	Specified Condition 20°C (68°F)
E10 – [27 (NT+) – E10 – [35 (NT–)	560 to 680 Ω

- (d) Measure the resistance according to the value(s) in the table below.

Standard (Check for short):

Tester Connection	Specified Condition
E10 – [27 (NT+) – [Body ground	10 kΩ or higher
E10 – [35 (NT–) – [Body ground	↑

NG

**REPAIR OR REPLACE HARNESS OR
CONNECTOR (SEE PAGE 01-32)**

OK

REPLACE ECM (SEE PAGE 10-30)