


## INSPECTION

### 1. INSPECT SEAT HEATER SWITCH CONTINUITY

Tester connection	Switch position	Specified condition
2 - 3	ON	Continuity
3 - 6		Continuity
-	OFF	No continuity


If the continuity is not as specified, replace the switch.

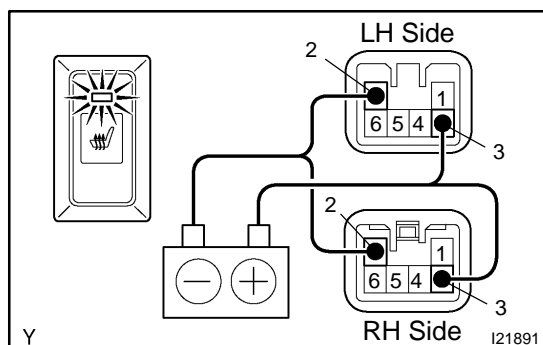

### 2. INSPECT SEAT HEATER INDICATOR LIGHT OPERATION

- Connect the positive (+) lead from the battery to terminal 3 and the negative (-) lead to terminal 2.
- Push the seat heater switch right or left side and check that the indicator light lights up.

If the operation is not as specified, replace the switch.

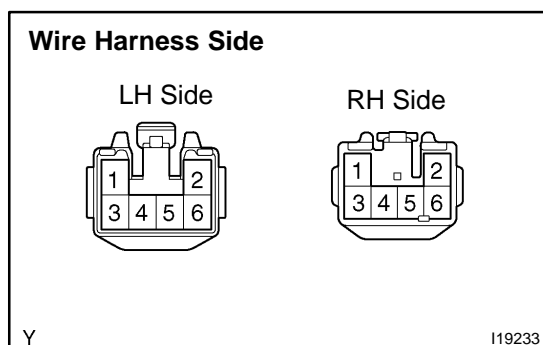


### 3. INSPECT SEAT HEATER SWITCH CIRCUIT

Disconnect the switch connector and inspect the connector on the wire harness side.

Tester connection	Condition	Specified condition
2 - Ground	Constant	Continuity
3 - Ground	Ignition switch ON	Battery positive voltage
6 - Ground	Constant	Continuity

If the circuit is not as specified, inspect the circuits connected to other parts.

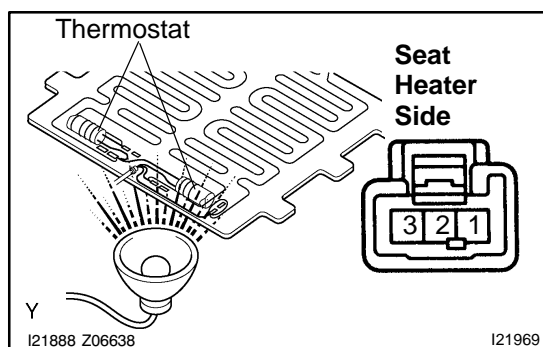

### 4. INSPECT SEAT CUSHION HEATER CONTINUITY

- Heat the thermostats with a light.
- Inspect the seat cushion heater continuity between the terminals.

Tester connection	Thermostat temp.	Specified condition
1 - 2	Below 30°C (86°F)	Continuity
1 - 3		
1 - 2	Below 40°C (104°F)	No continuity
1 - 3	Above 50°C (122°F)	No continuity

If the continuity is not as specified, replace the seat cushion heater.

Seat Heater Side



e-3-2

Z06638

5. INSPECT SEAT BACK HEATER CONTINUITY

Inspect the seat back heater continuity between the terminals.

Tester connection	Condition	Specified condition
1 - 2	Constant	Continuity
1 - 3	Constant	Continuity

If the continuity is not as specified, replace the seat back heater.