



**Kawasaki**

**KLE500**



# **Motorcycle Service Manual**

# Quick Reference Guide

<b>General Information</b>	<b>1</b>
<b>Periodic Maintenance</b>	<b>2</b>
<b>Fuel System</b>	<b>3</b>
<b>Cooling System</b>	<b>4</b>
<b>Engine Top End</b>	<b>5</b>
<b>Clutch</b>	<b>6</b>
<b>Engine Lubrication System</b>	<b>7</b>
<b>Engine Removal/Installation</b>	<b>8</b>
<b>Crankshaft/Transmission</b>	<b>9</b>
<b>Wheels/Tires</b>	<b>10</b>
<b>Final Drive</b>	<b>11</b>
<b>Brakes</b>	<b>12</b>
<b>Suspension</b>	<b>13</b>
<b>Steering</b>	<b>14</b>
<b>Frame</b>	<b>15</b>
<b>Electrical System</b>	<b>16</b>
<b>Appendix</b>	<b>17</b>

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.









**KLE500**

# Motorcycle Service Manual

---

All rights reserved. No parts of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Quality Division/Consumer Products & Machinery Company/Kawasaki Heavy Industries, Ltd., Japan.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

The right is reserved to make changes at any time without prior notice and without incurring an obligation to make such changes to products manufactured previously. See your Motorcycle dealer for the latest information on product improvements incorporated after this publication.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations and photographs in this publication are intended for reference use only and may not depict actual model component parts.

## LIST OF ABBREVIATIONS

A	ampere(s)	lb	pound(s)
ABDC	after bottom dead center	m	meter(s)
AC	alternating current	min	minute(s)
ATDC	after top dead center	N	newton(s)
BBDC	before bottom dead center	Pa	pascal(s)
BDC	bottom dead center	PS	horsepower
BTDC	before top dead center	psi	pound(s) per square inch
°C	degree(s) Celsius	r	revolution
DC	direct current	rpm	revolution(s) per minute
F	farad(s)	TDC	top dead center
°F	degree(s) Fahrenheit	TIR	total indicator reading
ft	foot, feet	V	volt(s)
g	gram(s)	W	watt(s)
h	hour(s)	Ω	ohm(s)
L	liter(s)		

**Read OWNER'S MANUAL before operating.**

# Foreword

This manual is designed primarily for use by trained mechanics in a properly equipped shop. However, it contains enough detail and basic information to make it useful to the owner who desires to perform his own basic maintenance and repair work. A basic knowledge of mechanics, the proper use of tools, and workshop procedures must be understood in order to carry out maintenance and repair satisfactorily. Whenever the owner has insufficient experience or doubts his ability to do the work, all adjustments, maintenance, and repair should be carried out only by qualified mechanics.

In order to perform the work efficiently and to avoid costly mistakes, read the text, thoroughly familiarize yourself with the procedures before starting work, and then do the work carefully in a clean area. Whenever special tools or equipment are specified, do not use makeshift tools or equipment. Precision measurements can only be made if the proper instruments are used, and the use of substitute tools may adversely affect safe operation.

**For the duration of the warranty period,** we recommend that all repairs and scheduled maintenance be performed in accordance with this service manual. Any owner maintenance or repair procedure not performed in accordance with this manual may void the warranty.

To get the longest life out of your vehicle:

- Follow the Periodic Maintenance Chart in the Service Manual.
- Be alert for problems and non-scheduled maintenance.
- Use proper tools and genuine Kawasaki Motorcycle parts. Special tools, gauges, and testers that are necessary when servicing Kawasaki motorcycles are introduced by the Special Tool Catalog or Manual. Genuine parts provided as spare parts are listed in the Parts Catalog.
- Follow the procedures in this manual carefully. Don't take shortcuts.
- Remember to keep complete records of maintenance and repair with dates and any new parts installed.

---

## How to Use This Manual

---

In this manual, the product is divided into its major systems and these systems make up the manual's chapters.

The Quick Reference Guide shows you all of the product's system and assists in locating their chapters. Each chapter in turn has its own comprehensive Table of Contents.

For example, if you want ignition coil information, use the Quick Reference Guide to locate the Electrical System chapter. Then, use the Table of Contents on the first page of the chapter to find the ignition coil section.

Whenever you see these WARNING and CAUTION symbols, heed their instructions! Always follow safe operating and maintenance practices.

### **⚠ WARNING**

**This warning symbol identifies special instructions or procedures which, if not correctly followed, could result in personal injury, or loss of life.**

### **CAUTION**

**This caution symbol identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of equipment.**

This manual contains four more symbols (in addition to WARNING and CAUTION) which will help you distinguish different types of information.

### **NOTE**

○ *This note symbol indicates points of particular interest for more efficient and convenient operation.*

- Indicates a procedural step or work to be done.
- Indicates a procedural sub-step or how to do the work of the procedural step it follows. It also precedes the text of a NOTE.
- ★ Indicates a conditional step or what action to take based on the results of the test or inspection in the procedural step or sub-step it follows.

In most chapters an exploded view illustration of the system components follows the Table of Contents. In these illustrations you will find the instructions indicating which parts require specified tightening torque, oil, grease or a locking agent during assembly.



# General Information



## Table of Contents

Before Servicing .....	1-2
Model Identification.....	1-7
General Specifications.....	1-8
Unit Conversion Table .....	1-11

## 1-2 GENERAL INFORMATION


### Before Servicing

Before starting to perform an inspection service or carry out a disassembly and reassembly operation on a motorcycle, read the precautions given below. To facilitate actual operations, notes, illustrations, photographs, cautions, and detailed descriptions have been included in each chapter wherever necessary. This section explains the items that require particular attention during the removal and reinstallation or disassembly and reassembly of general parts.

Especially note the following:


#### *Battery Ground*

Before completing any service on the motorcycle, disconnect the battery wires from the battery to prevent the engine from accidentally turning over. Disconnect the negative (-) first and then the positive (+). When completed with the service, first connect the positive (+) wire to the positive (+) terminal of the battery then the negative (-) wire to the negative terminal.

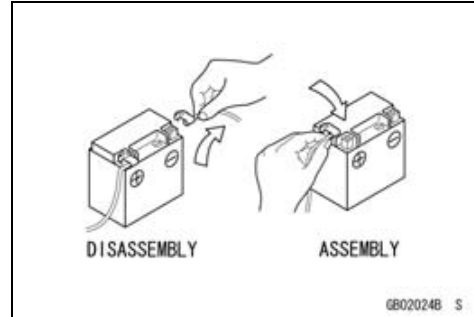


#### *Edges of Parts*

Lift large or heavy parts wearing gloves to prevent injury from possible sharp edges on the parts.

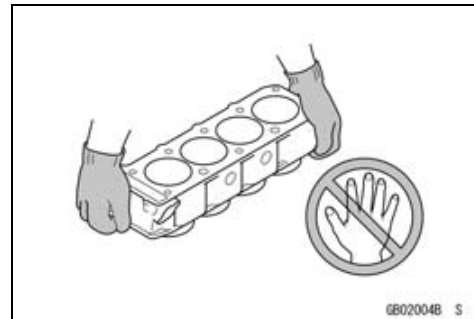


#### *Solvent*

Use a high flash point solvent when cleaning parts. High flash point solvent should be used according to directions of the solvent manufacturer.

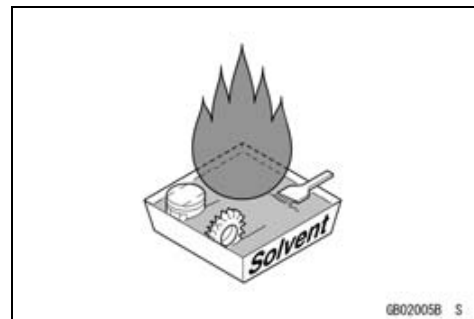

#### *Cleaning vehicle before disassembly*


Clean the vehicle thoroughly before disassembly. Dirt or other foreign materials entering into sealed areas during vehicle disassembly can cause excessive wear and decrease performance of the vehicle.

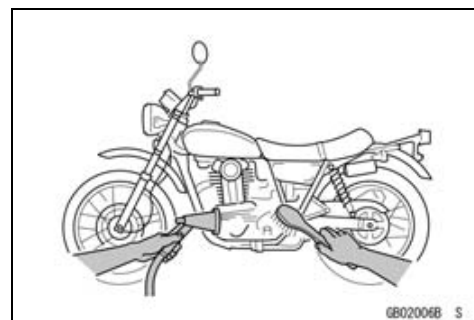

## Before Servicing


### Arrangement and Cleaning of Removed Parts

Disassembled parts are easy to confuse. Arrange the parts according to the order the parts were disassembled and clean the parts in order prior to assembly.

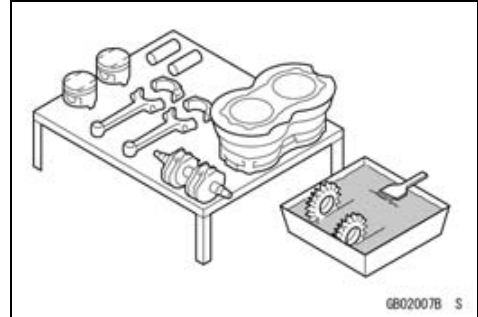


### Storage of Removed Parts

After all the parts including subassembly parts have been cleaned, store the parts in a clean area. Put a clean cloth or plastic sheet over the parts to protect from any foreign materials that may collect before re-assembly.

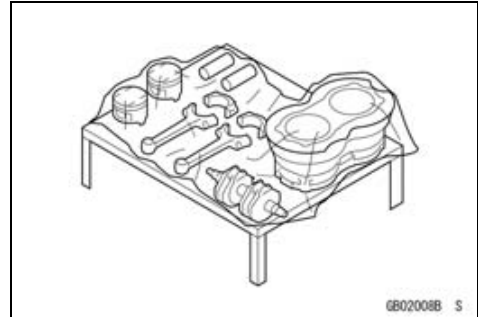


### Inspection

Reuse of worn or damaged parts may lead to serious accident. Visually inspect removed parts for corrosion, discoloration, or other damage. Refer to the appropriate sections of this manual for service limits on individual parts. Replace the parts if any damage has been found or if the part is beyond its service limit.

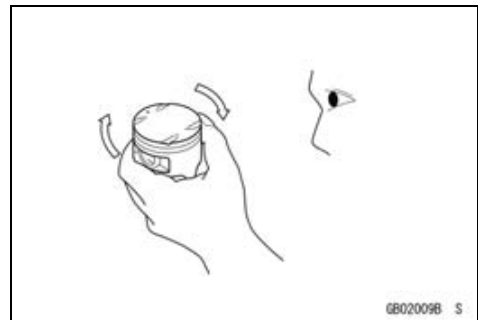


### Replacement Parts

Replacement Parts must be KAWASAKI genuine or recommended by KAWASAKI. Gaskets, O-rings, Oil seals, Grease seals, circlips or cotter pins must be replaced with new ones whenever disassembled.

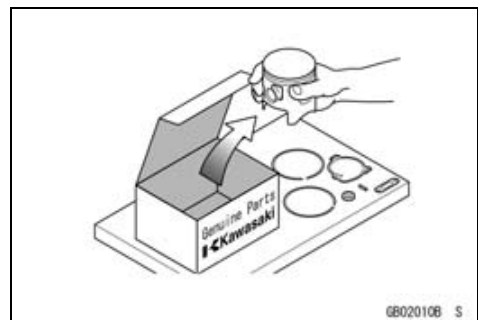

### Assembly Order

In most cases assembly order is the reverse of disassembly, however, if assembly order is provided in this Service Manual, follow the procedures given.

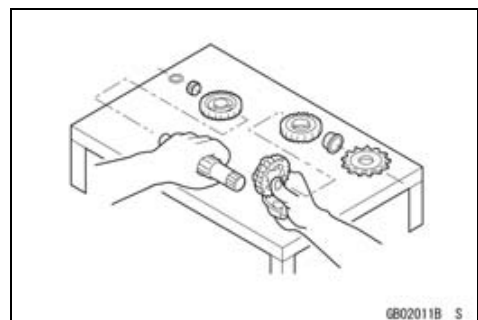


# 1-4 GENERAL INFORMATION

## Before Servicing


### *Tightening Sequence*

Generally, when installing a part with several bolts, nuts, or screws, start them all in their holes and tighten them to a snug fit. Then tighten them according to the specified sequence to prevent case warpage or deformation which can lead to malfunction. Conversely when loosening the bolts, nuts, or screws, first loosen all of them by about a quarter turn and then remove them. If the specified tightening sequence is not indicated, tighten the fasteners alternating diagonally.

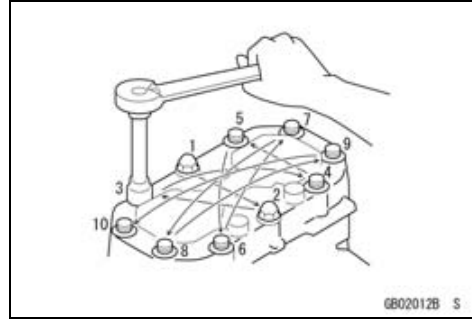


### *Tightening Torque*

Incorrect torque applied to a bolt, nut, or screw may lead to serious damage. Tighten fasteners to the specified torque using a good quality torque wrench.

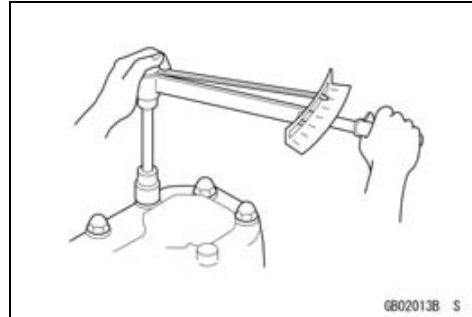


### *Force*

Use common sense during disassembly and assembly, excessive force can cause expensive or hard to repair damage. When necessary, remove screws that have a non-permanent locking agent applied using an impact driver. Use a plastic-faced mallet whenever tapping is necessary.

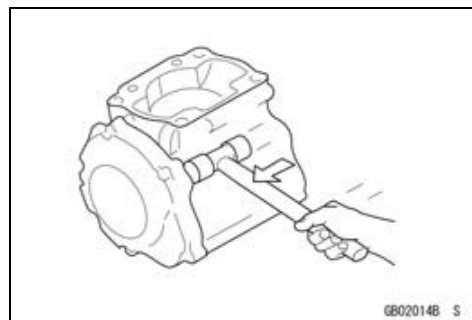


### *Gasket, O-ring*

Hardening, shrinkage, or damage of both gaskets and O-rings after disassembly can reduce sealing performance. Remove old gaskets and clean the sealing surfaces thoroughly so that no gasket material or other material remains. Install new gaskets and replace used O-rings when re-assembling.

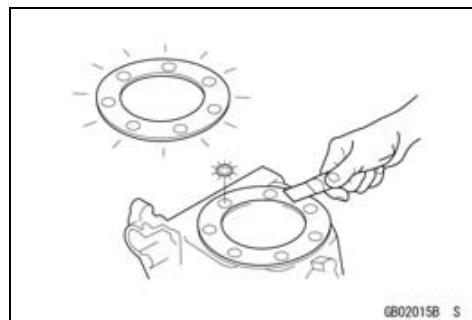

### *Liquid Gasket, Locking Agent*

For applications that require Liquid Gasket or a Locking agent, clean the surfaces so that no oil residue remains before applying liquid gasket or locking agent. Do not apply them excessively. Excessive application can clog oil passages and cause serious damage.

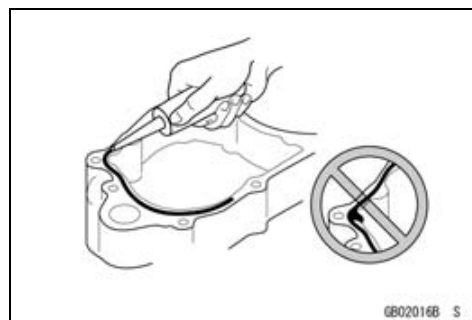




**Before Servicing**

*Press*


For items such as bearings or oil seals that must be pressed into place, apply small amount of oil to the contact area. Be sure to maintain proper alignment and use smooth movements when installing.

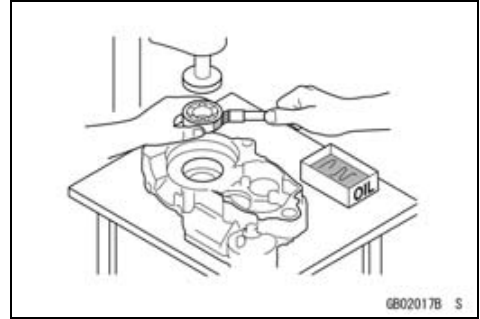

*Ball Bearing and Needle Bearing*


Do not remove pressed ball or needle unless removal is absolutely necessary. Replace with new ones whenever removed. Press bearings with the manufacturer and size marks facing out. Press the bearing into place by putting pressure on the correct bearing race as shown.

Pressing the incorrect race can cause pressure between the inner and outer race and result in bearing damage.

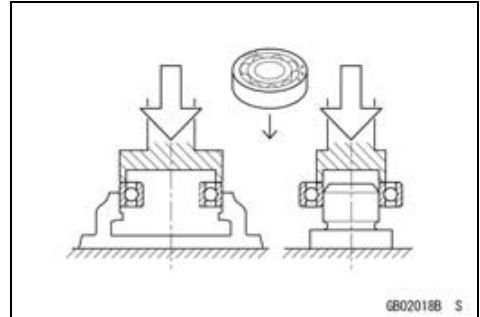


*Oil Seal, Grease Seal*

Do not remove pressed oil or grease seals unless removal is necessary. Replace with new ones whenever removed. Press new oil seals with manufacture and size marks facing out. Make sure the seal is aligned properly when installing.

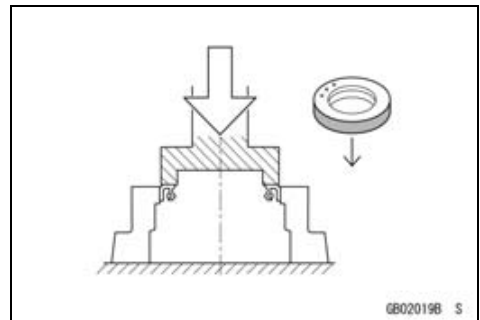


Apply specified grease to lip of seal before installing the seal.

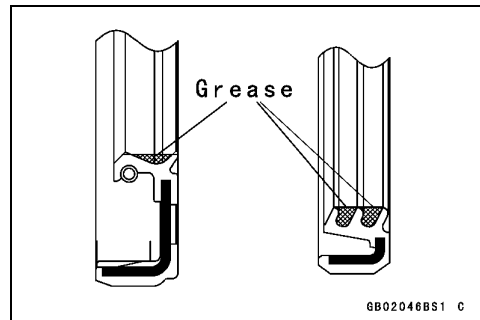

*Circlips, Cotter Pins*

Replace circlips or cotter pins that were removed with new ones. Take care not to open the clip excessively when installing to prevent deformation.

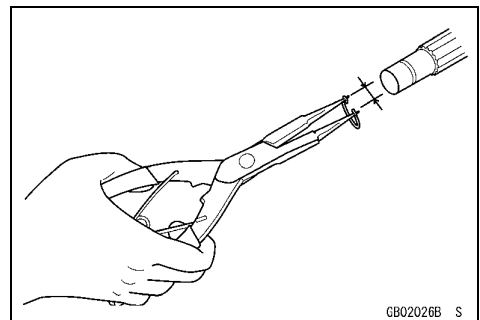

## 1-6 GENERAL INFORMATION

### Before Servicing


#### *Lubrication*

It is important to lubricate rotating or sliding parts during assembly to minimize wear during initial operation. Lubrication points are called out throughout this manual, apply the specific oil or grease as specified.




#### *Direction of Engine Rotation*

When rotating the crankshaft by hand, the free play amount of rotating direction will affect the adjustment. Rotate the crankshaft to positive direction (clockwise viewed from output side).

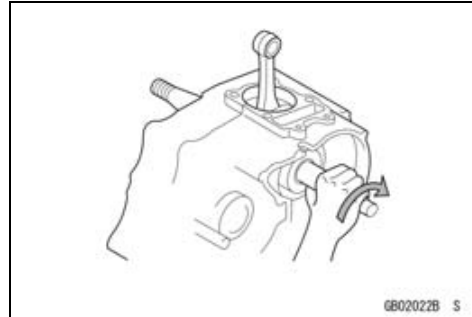

#### *Electrical Wires*

A two-color wire is identified first by the primary color and then the stripe color. Unless instructed otherwise, electrical wires must be connected to those of the same color.

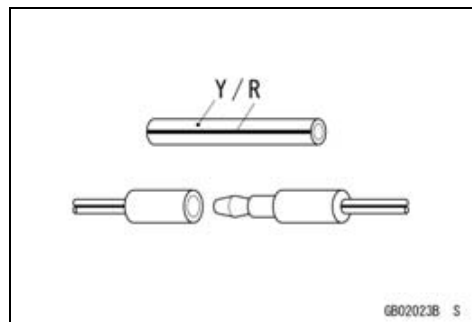

Model Identification

KLE500-B1 Left Side View



KLE500-B1 Right Side View



# 1-8 GENERAL INFORMATION

## General Specifications

Items	KLE500-B1
<b>Dimensions</b> Overall Length Overall Width Overall Height Wheelbase Road Clearance Seat Height Dry Weight Curb Weight: Front Rear Fuel tank Capacity	2 215 mm (87.2 in.) 880 mm (34.6 in.) 1 270 mm (50.0 in.) 1 500 mm (59.0 in.) 180 mm (7.09 in.) 850 mm (33.5 in.) 181 kg (399 lb.) 95 kg (209 lb.) 105 kg (232 lb.) 15 L (4.0 US gal.)
<b>Performance</b> Minimum Turning Radius	2.4 m (7.9 ft.)
<b>Engine</b> Type Cooling System Bore and Stroke Displacement Compression Ratio Maximum Horsepower Maximum Torque Carburetion System Starting System Ignition System Timing Advance Ignition Timing  Spark Plugs Cylinder Numbering Method Firing Order Valve Timing: Inlet Open Close Duration Exhaust Open Close Duration Lubrication System	4-stroke, DOHC, 2-cylinder Liquid-cooled 74.0 × 58.0 mm (2.91 × 2.28 in.) 498 mL (30.39 cu in.) 9.8:1 33 kW (44.9 PS) @8 300 r/min (rpm) 41 N·m (4.2 kgf·m, 30 ft·lb) @7 500 r/min (rpm) Carburetors, Keihin CVK34 × 2 Electric starter Battery and coil (transistorized) Electronically Advanced (digital) From 10° BTDC @1 300 r/min (rpm) to 35° BTDC @5 000 r/min (rpm) NGK DR9EA or ND X27ESR-U Left to right, 1-2 1-2  27° BTDC 47° ABDC 254° 52° BBDC 22° ATDC 254° Forced lubrication

**General Specifications**

Items	KLE500-B1
Engine Oil: Grade Viscosity Capacity	API SE, SF, SG or API SH or SJ with JASO MA SAE10W-40 3.4 L (3.6 US qt)
<b>Drive Train</b> Primary Reduction System: Type Reduction Ratio Clutch Type Transmission: Type Gear Ratios: 1st 2nd 3rd 4th 5th 6th Final Drive System: Type Reduction Ratio Overall Drive Ratio	Chain 2.652 (61/23) Wet multi disc 6-speed constant mesh, return shift 2.571 (36/14) 1.722 (31/18) 1.333 (28/21) 1.125 (27/24) 0.961 (25/26) 0.851 (23/27) Chain drive 2.588 (44/17) 5.847 @Top gear
<b>Frame</b> Type Caster (rake angle) Trail Front Tire: Type Size Rear Tire: Type Size Front Suspension: Type Wheel Travel Rear Suspension: Type Wheel Travel Brake Type: Front Rear	Tubular, double cradle 27° 105 mm (4.13 in.) Tubeless 90/90-21 M/C 54S Tubeless 130/80-17 M/C 65S Telescopic fork 220 mm (8.66 in.) Swingarm 200 mm (7.87 in.) Single disc Single disc

## 1-10 GENERAL INFORMATION

### General Specifications

Items	KLE500-B1
<b>Electrical Equipment</b>	
Battery	12 V 10 Ah
Headlight:	
Type	Semi-sealed beam
Bulb	12 V 55/55 W (quartz-halogen)
Tail/brake Light	12 V 5/21 W
Alternator:	
Type	Three-phase AC
Rated output	17 A × 14 V @6 000 r/min (rpm)

Specifications subject to change without notice, and may not apply to every country.

**Unit Conversion Table**

**Prefixes for Units:**

Prefix	Symbol	Power
mega	M	× 1 000 000
kilo	k	× 1 000
centi	c	× 0.01
milli	m	× 0.001
micro	μ	× 0.000001

**Units of Mass:**

kg	×	2.205	=	lb
g	×	0.03527	=	oz

**Units of Volume:**

L	×	0.2642	=	gal (US)
L	×	0.2200	=	gal (imp)
L	×	1.057	=	qt (US)
L	×	0.8799	=	qt (imp)
L	×	2.113	=	pint (US)
L	×	1.816	=	pint (imp)
mL	×	0.03381	=	oz (US)
mL	×	0.02816	=	oz (imp)
mL	×	0.06102	=	cu in

**Units of Force:**

N	×	0.1020	=	kg
N	×	0.2248	=	lb

---

kg	×	9.807	=	N
kg	×	2.205	=	lb

**Units of Length:**

km	×	0.6214	=	mile
m	×	3.281	=	ft
mm	×	0.03937	=	in

**Units of Torque:**

N·m	×	0.1020	=	kgf·m
N·m	×	0.7376	=	ft·lb
N·m	×	8.851	=	in·lb

---

kgf·m	×	9.807	=	N·m
kgf·m	×	7.233	=	ft·lb
kgf·m	×	86.80	=	in·lb

**Units of Pressure:**

kPa	×	0.01020	=	kgf/cm <sup>2</sup>
kPa	×	0.1450	=	psi
kPa	×	0.7501	=	cm Hg

---

kgf/cm <sup>2</sup>	×	98.07	=	kPa
kgf/cm <sup>2</sup>	×	14.22	=	psi
cm Hg	×	1.333	=	kPa

**Units of Speed:**

km/h	×	0.6214	=	mph
------	---	--------	---	-----


**Units of Power:**

kW	×	1.360	=	PS
kW	×	1.341	=	HP

---

PS	×	0.7355	=	kW
PS	×	0.9863	=	HP

**Units of Temperature:**

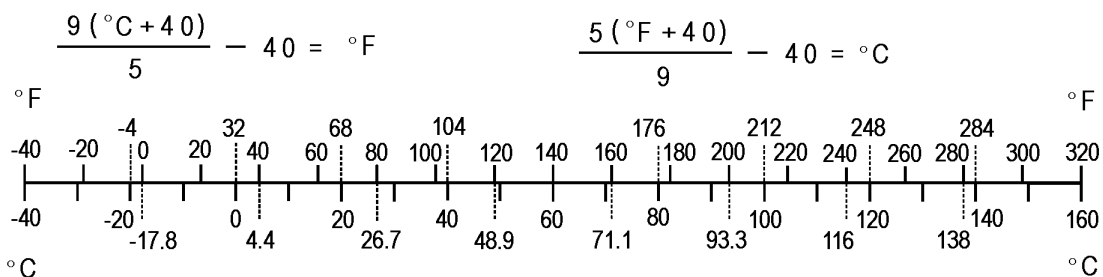





# Periodic Maintenance

## Table of Contents

Periodic Maintenance Chart .....	2-3
Torque and Locking Agent.....	2-6
Specifications .....	2-11
Special Tools .....	2-13
Maintenance Procedure .....	2-14
Fuel System.....	2-14
Throttle Cable Inspection .....	2-14
Idle Speed Inspection .....	2-15
Carburetor Synchronization Inspection.....	2-16
Coolant Filter Cleaning .....	2-17
Fuel Hoses and Connections Check.....	2-17
Air Cleaner Element Cleaning and Inspection .....	2-17
Cooling System.....	2-18
Coolant Level Inspection.....	2-18
Radiator Hoses and Connections Inspection.....	2-19
Engine Top End .....	2-19
Air Suction Valve Inspection .....	2-19
Valve Clearance Inspection .....	2-19
Clutch.....	2-21
Clutch Operation Inspection.....	2-21
Wheels/Tires .....	2-22
Air Pressure Inspection/Adjustment.....	2-22
Tire Tread Wear Inspection.....	2-22
Wheel/Tire Damage Inspection.....	2-23
Wheel Bearing Damage Inspection .....	2-24
Spoke Tightness and Rim Runout Inspection .....	2-24
Final Drive.....	2-25
Drive Chain Slack Inspection .....	2-25
Drive Chain Wear Inspection .....	2-26
Drive Chain Lubrication.....	2-27
Brakes.....	2-27
Brake Fluid Leak (Brake Hose and Pipe) Inspection .....	2-27
Brake Hose Damage and Installation Condition Inspection.....	2-28
Brake Operation Inspection .....	2-28
Brake Fluid Level Inspection.....	2-28
Brake Pad Wear Inspection .....	2-29
Brake Light Switch Operation Inspection .....	2-30
Suspension.....	2-30
Front Forks/Rear Shock Absorber Operation Inspection .....	2-30
Front Fork Oil Leak Inspection.....	2-31
Rear Shock Absorber Oil Leak Inspection .....	2-31
Rocker Arm Operation Inspection.....	2-31
Rocker Arm Bearings and Sleeves Lubrication .....	2-31
Tie-rod Operation Inspection .....	2-32
Swingarm Needle Bearing Lubrication.....	2-32
Steering .....	2-32

## 2-2 PERIODIC MAINTENANCE

---

Steering Play Inspection .....	2-32
Steering Stem Bearing Lubrication .....	2-33
Electrical System .....	2-34
Spark Plug Gap Inspection .....	2-34
Lights and Switches Operation Inspection.....	2-34
Headlight Aiming Inspection .....	2-36
Side Stand Switch Operation Inspection.....	2-37
Engine Stop Switch Operation Inspection.....	2-38
Others .....	2-38
Chassis Parts Lubrication .....	2-38
Bolts, Nuts and Fastener Tightness Inspection .....	2-39
Replacement Parts .....	2-40
Fuel Hose Replacement .....	2-40
Air Cleaner Element Replacement.....	2-41
Coolant Change .....	2-41
Radiator Hoses and O-ring Replacement.....	2-44
Engine Oil Change.....	2-44
Oil Filter Replacement .....	2-45
Brake Hose Replacement .....	2-45
Brake Fluid Change .....	2-46
Bleeding the Brake Line.....	2-47
Caliper Rubber Parts Replacement .....	2-48
Master Cylinder Rubber Parts Replacement .....	2-48
Spark Plug Replacement .....	2-49

## PERIODIC MAINTENANCE 2-3

### Periodic Maintenance Chart

The scheduled maintenance must be done in accordance with this chart to keep the motorcycle in good running condition. **The initial maintenance is vitally important and must not be neglected.**

OPERATION	FREQUENCY	* ODOMETER READING × 1000 km (× 1000 mile)							See Page
	Whichever comes first ↓ Every	1 (0.6)	6 (4)	12 (7.5)	18 (12)	24 (15)	30 (20)	36 (24)	
<b>Fuel System</b>									
Throttle cable-inspect	year	•		•		•		•	2-14
Idle speed-inspect		•		•		•		•	2-15
Carburetor synchronization-inspect				•		•		•	2-16
Coolant filter-clean	year								2-17
Air cleaner element-clean #				•		•		•	2-17
Fuel hoses and connections-inspect	year	•		•		•		•	2-17
<b>Cooling System</b>									
Coolant level-inspect		•		•		•		•	2-18
Radiator hose and connection-inspect	year	•		•		•		•	2-19
<b>Engine Top End</b>									
Air suction valve-inspect				•		•		•	2-19
Valve clearance-inspect						•			2-19
<b>Clutch</b>									
Clutch operation (play, disengagement, engagement)-inspect		•		•		•		•	2-21
<b>Wheels and Tires</b>									
Tire air pressure-inspect			•	•	•	•	•	•	2-22
Tire tread wear-inspect				•		•		•	2-22
Wheel/tire damage-inspect				•		•		•	2-23
Wheel bearing damage-inspect	year			•		•		•	2-24
Spoke tightness and rim runout-inspect		•	•	•	•	•	•	•	2-24
<b>Final Drive</b>									
Drive chain slack-inspect #		Every 1 000 km (600 mile)							2-25
Drive chain wear-inspect #		Every 6 000 km (4 000 mile)							2-26
Drive chain lubrication condition-inspect #		Every 600 km (400 mile)							2-27
Drive chain guide wear-inspect		Every 12 000 km (7 500 mile)							–
<b>Brake System</b>									
Brake fluid leak (brake hose and pipe)-inspect	year	•	•	•	•	•	•	•	2-27
Brake hose damage-inspect	year	•	•	•	•	•	•	•	2-28
Brake hose installation condition-inspect	year	•	•	•	•	•	•	•	2-28
Brake operation (effectiveness, play, no drag)-inspect	year	•	•	•	•	•	•	•	2-28
Brake fluid level-inspect	6 months	•	•	•	•	•	•	•	2-28
Brake pad wear-inspect #			•	•	•	•	•	•	2-29
Brake light switch operation-inspect		•	•	•	•	•	•	•	2-30

## 2-4 PERIODIC MAINTENANCE

### Periodic Maintenance Chart

OPERATION	FREQUENCY ↓ Every	* ODOMETER READING × 1000 km (× 1000 mile)							See Page
		1 (0.6)	6 (4)	12 (7.5)	18 (12)	24 (15)	30 (20)	36 (24)	
<b>Suspensions</b>									
Front forks/rear shock absorber operation (damping and smooth stroke)-inspect				•		•		•	2-30
Front forks/rear shock absorber oil leak-inspect	year			•		•		•	2-31
Rocker arm operation-inspect				•		•		•	2-31
Rocker arm bearings and sleeves -lubricate						•			2-31
Tie-rods operation-inspect				•		•		•	2-32
Swingarm pivot-lubricate						•			2-32
<b>Steering System</b>									
Steering play-inspect	year	•		•		•		•	2-32
Steering stem bearings-lubricate	2 years					•			2-33
<b>Electrical System</b>									
Spark plug condition-inspect				•		•		•	2-34
Lights and switches operation-inspect	year			•		•		•	2-34
Headlight aiming-inspect	year			•		•		•	2-36
Side stand switch operation-inspect	year			•		•		•	2-37
Engine stop switch operation-inspect	year			•		•		•	2-38
<b>Others</b>									
Chassis parts-lubricate	year			•		•		•	2-38
Bolts, nuts and fasteners tightness-inspect		•		•		•		•	2-39

#: Service more frequently when operating in severe conditions; dusty, wet, muddy, high speed or frequent starting/stopping.

\*: For higher odometer readings, repeat at the frequency interval established here.

## PERIODIC MAINTENANCE 2-5

### Periodic Maintenance Chart

#### Periodic Replacement Parts

CHANGE/REPLACEMENT	FREQUENCY	Whichever come first ↓	* ODOMETER READING × 1000 km (× 1000 mile)						See Page
			1 (0.6)	12 (7.5)	18 (12)	24 (15)	36 (24)	48 (30)	
Fuel hose	4 years						•	2-40	
Air cleaner element	2 years							2-40	
Coolant	3 years					•		2-40	
Radiator hose and O-ring	3 years					•		2-43	
Engine oil #	year	•	•		•	•	•	2-43	
Oil filter	year	•	•		•	•	•	2-44	
Brake hose	4 years						•	2-44	
Brake fluid	2 years				•		•	2-45	
Master Cylinder/Caliper Rubber Parts	4 years						•	2-47	

#: Service more frequently when operating in severe conditions; dusty, wet, muddy, high speed or frequent starting/stopping.

\*: For higher odometer readings, repeat at the frequency interval established here.

## 2-6 PERIODIC MAINTENANCE

### Torque and Locking Agent

Tighten all bolts and nuts to the proper torque using an accurate torque wrench. An insufficiently tightened bolt or nut may become damaged or fall off, possibly resulting in damage to the motorcycle and injury to the rider. A bolt or nut which is overtightened may become damaged, strip an internal thread, or break and then fall out. The following table lists the tightening torque for the major bolts and nuts, and the parts requiring use of a non-permanent locking agent or liquid gasket.

When checking the tightening torque of the bolts and nuts, first loosen the bolt or nut by half a turn and then tighten it to the specified torque.

Letters used in the "Remarks" column mean:

EO: Apply engine oil to the threads and seating surface.

L: Apply a non-permanent locking agent to the threads.

LG: Apply liquid gasket to the threads.

Lh: Left-hand threads.

M: Apply molybdenum disulfide grease.

MO: Apply molybdenum disulfide oil (mixture of the engine oil and molybdenum disulfide grease in a weight ratio 10 : 1)

R: Replacement parts.

S: Tighten the fasteners following the specified sequence.

SS: Apply silicone sealant to the threads.

St: Stake the fasteners to prevent loosening.

Fastener	Torque			Remarks
	N·m	kgf·m	ft·lb	
<b>Fuel System</b>				
Fuel Tap Cover Screws	0.8	0.08	7 in·lb	
Fuel Tap Mounting Bolts	5.0	0.51	44 in·lb	
Air Cut Valve Cover Screws	1.0	0.10	9 in·lb	
<b>Cooling System</b>				
Radiator Hose Clamp Screws	2.5	0.25	22 in·lb	
Radiator Fan Switch	18	1.8	13	
Thermostat Housing Bolts	11	1.1	95 in·lb	
Water Temperature Sensor	7.8	0.8	69 in·lb	SS
Water Pump Cover Bolts	11	1.1	95 in·lb	
Water Pump Shaft	25	2.5	18	Lh
Water Pump Impeller	9.8	1.0	87 in·lb	Lh
Water Pipe Bolts	9.8	1.0	87 in·lb	L
Cylinder Head Jacket Plug	9.8	1.0	87 in·lb	L
Radiator Cap Holder Mounting Bolts	11	1.1	95 in·lb	
Coolant Drain Plug	11	1.1	95 in·lb	
<b>Engine Top End</b>				
Air Suction Valve Cover Bolts	11	1.1	95 in·lb	
Cylinder Head Cover Bolts	9.8	1.0	87 in·lb	S
Camshaft Cap Bolts	12	1.2	104 in·lb	S
Rocker Shafts	39	4.0	29	EO
Valve Adjuster Locknuts	25	2.5	18	
Camshaft Sprocket Bolts	15	1.5	11	L
Cylinder Head Bolts (10 mm)	51	5.2	38	S
Cylinder Head Bolts (6 mm)	9.8	1.0	87 in·lb	S
Camshaft Chain Tensioner Mounting Bolts	11	1.1	95 in·lb	
Camshaft Chain Tensioner Cap Bolt	13	1.3	9.5	

**Torque and Locking Agent**

Fastener	Torque			Remarks
	N-m	kgf-m	ft-lb	
Main Oil Pipe Upper Banjo Bolts M8	12	1.2	104 in-lb	
Main Oil Pipe Lower Banjo Bolt M10	20	2.0	14.5	
Water Jacket Plug	9.8	1.0	87 in-lb	L
Oil Pipe Bolts (in the cylinder head)	11	1.1	95 in-lb	
Main Oil Pipe Mounting Bolt	11	1.1	95 in-lb	
<b>Clutch</b>				
Oil Filler Plug	1.5	0.15	13 in-lb	
Clutch Hub Nut	132	13.5	98	
Clutch Spring Bolts	9.3	0.95	82 in-lb	
Clutch Cable Holder Bolt	11	1.1	95 in-lb	
Clutch Cover Bolts	11	1.1	95 in-lb	
<b>Engine Lubrication System</b>				
Oil Filler Plug	1.5	0.15	13 in-lb	
Oil Passage Plug	18	1.8	13	
Oil Filter Mounting Stud	25	2.5	18	L (Planted side)
Oil Filter (Cartridge Type)	17	1.7	12.5	
Oil Pipe for Balancer Shaft Banjo Bolt	20	2.0	14.5	
Oil Pipe for Drive Shaft Upper Banjo Bolt M6	7.8	0.8	69 in-lb	
Oil Pipe for Drive Shaft Lower Banjo Bolt M8	12	1.2	104 in-lb	
Oil Pipe for Output Shaft Upper Banjo Bolt M6	7.8	0.8	69 in-lb	
Oil Pipe for Output Shaft Lower Banjo Bolt M8	12	1.2	104 in-lb	
Oil Pipe for Output Shaft Mounting Bolt	11	1.1	95 in-lb	L
Oil Pump Outer Oil Pipe Bolts	11	1.1	95 in-lb	L
Relief Valve	15	1.5	11	L
Oil Pressure Switch Terminal Bolt	1.5	0.15	13 in-lb	
Oil Pressure Switch	15	1.5	11	SS
Main Oil Pipe Mounting Bolt	11	1.1	95 in-lb	
Main Oil Pipe Upper Banjo Bolts	12	1.2	104 in-lb	
Main Oil Pipe Lower Banjo Bolt	20	2.0	14.5	
Rocker Shafts	39	4.0	29	
Engine Oil Drain Plug	29	3.0	22	
Oil Pan Mounting Bolts	11	1.1	95 in-lb	
Oil Pump Mounting Bolts	11	1.1	95 in-lb	
<b>Engine Removal/Installation</b>				
Downtube Bolts	44	4.5	33	
Engine Mounting Bolts and Nuts	44	4.5	33	
Engine Mounting Bracket Bolts	25	2.5	18	
<b>Crankshaft/Transmission</b>				
Breather Body Bolt	5.9	0.6	52 in-lb	
Crankcase Bolts (8 mm)	27	2.8	20	S
Crankcase Bolts (6 mm)	12	1.2	104 in-lb	S

## 2-8 PERIODIC MAINTENANCE

### Torque and Locking Agent

Fastener	Torque			Remarks
	N·m	kgf·m	ft·lb	
Upper Primary Chain Guide Mounting Bolt	11	1.1	95 in·lb	L
Lower Primary Chain Guide Mounting Bolt	11	1.1	95 in·lb	L
Connecting Rod Big End Nuts	36	3.7	27	
Return Spring Pin	20	2.0	14.5	L
Gear Positioning Lever Pivot Stud	–	–	–	L (planted side)
Gear Positioning Lever Nut	11	1.1	95 in·lb	
Shift Pedal Link Lever Mounting Bolt	12	1.2	104 in·lb	
Shift Drum Bearing Holder Bolts	11	1.1	95 in·lb	L
Shift Drum Cam Pin Plate Screw	–	–	–	L
Engine Sprocket Nut	127	13	94	EO
External Shift Mechanism Cover Bolts	11	1.1	95 in·lb	
Neutral Switch	15	1.5	11	
<b>Wheels/Tires</b>				
Spoke Nipple	2.0 ~ 3.9	0.2 ~ 0.4	17 ~ 35 in·lb	
Front Axle Nut	88	9.0	65	
Rear Sprocket Nut	33	3.4	24	
Rear Axle Nut	108	11	80	
<b>Final Drive</b>				
Engine Sprocket Nut	127	13	94	EO
Rear Sprocket Nuts	33	3.4	24	
Rear Coupling Studs	–	–	–	L (planted side)
Rear Axle Nut	108	11	80	
Drive Chain Guide Bolts	11	1.1	95 in·lb	
<b>Brakes</b>				
Brake Hose Banjo Bolts	34	3.5	25	
Front Reservoir Cap Screws	1.5	0.15	13 in·lb	
Brake Lever Pivot Bolt	1.0	0.10	9 in·lb	
Brake Lever Pivot Locknut	5.9	0.60	52 in·lb	
Front Master Cylinder Clamp Bolts	11	1.1	95 in·lb	S
Front Brake Light Switch Mounting Screw	1.2	0.12	10 in·lb	
Front Caliper Mounting Bolts	34	3.5	25	
Rear Caliper Mounting Bolts	25	2.5	18	
Caliper Bleed Valves	7.8	0.8	69 in·lb	
Brake Disc Mounting Bolts	23	2.3	16.5	L
Brake Pedal Bolt	25	2.5	18	
Rear Reservoir Mounting Bolt	5.9	0.60	52 in·lb	
Rear Master Cylinder Mounting Bolts	25	2.5	18	
<b>Suspension</b>				
Front Fork Upper Clamp Allen Bolts	25	2.5	18	S
Front Fork Lower Clamp Bolts	23	2.3	16.5	S



**Torque and Locking Agent**

Fastener	Torque			Remarks
	N-m	kgf-m	ft-lb	
Front Fork Top Bolts	30	3.1	22	
Front Fork Bottom Allen Bolt	30	3.1	22	L
Rear Shock Absorber Upper Mounting Nut	59	6.0	43	
Rear Shock Absorber Lower Mounting Nut	98	10	72	
Swingarm Pivot Nut	118	12	87	
Rocker Arm Pivot Nut	98	10	72	
Tie-Rod Mounting Nuts	98	10	72	
<b>Steering</b>				
Handlebar Clamp Bolts	25	2.5	18	S
Handlebar Weight Allen Bolts	–	–	–	L
Front Fork Upper Clamp Allen Bolts	25	2.5	18	S
Front Fork Lower Clamp Bolts	23	2.3	16.5	S
Steering Stem Head Nut	39	4.0	29	
Steering Stem Locknut	Hand -Tighten (about 4.9)	Hand -Tighten (about 0.5)	Hand -Tighten (about 43 in-lb)	
<b>Frame</b>				
Tail Grip Bolts	25	2.5	18	
Front Footpeg Bracket Bolts	34	3.5	25	
Sidestand Bolt and Nut	44	4.5	33	
Rear Footpeg Bracket Bolts	25	2.5	18	
Carrier Stay Mounting Bolts	25	2.5	18	
<b>Electrical System</b>				
Crankshaft Sensor Mounting Screws	8.3	0.85	74 in-lb	L
Timing Inspection Plug	2.5	0.25	22 in-lb	
Alternator Rotor Bolt Plug	1.5	0.15	13 in-lb	
Alternator Cover Bolts	11	1.1	95 in-lb	
Alternator Lead Clamp Screws	2.9	0.30	26 in-lb	
Spark Plug	14	1.4	10	
Alternator Stator Allen Bolts	12	1.2	104 in-lb	
Alternator Rotor Bolt	69	7.0	51	Lh
Starter Motor Mounting Bolts	11	1.1	95 in-lb	
Starter Chain Guide Bolts	4.9	0.5	43 in-lb	L
Starter Motor Through Bolts	6.9	0.7	65 in-lb	
Starter Motor Terminal Nut	4.9	0.5	43 in-lb	
Starter Motor Lead Clamp Nut	4.9	0.5	43 in-lb	
Starter Clutch Allen Bolts	34	3.5	25	L
Sidestand Switch Mounting Screw	3.9	0.4	35 in-lb	L
Sidestand Bolt and Nut	44	4.5	33	
Radiator Fan Switch	18	1.8	13	
Water Temperature Switch	7.8	0.80	69 in-lb	SS
Oil Pressure Switch Terminal Bolt	1.5	0.15	13 in-lb	

## 2-10 PERIODIC MAINTENANCE

### Torque and Locking Agent

Fastener	Torque			Remarks
	N·m	kgf·m	ft·lb	
Oil Pressure Switch	15	1.5	11	SS
Neutral Switch	15	1.5	11	
Tail Light Mounting Nut	5.9	0.6	52 in·lb	

The table relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

### Basic Torque for General Fasteners

Threads dia. (mm)	Torque		
	N·m	kgf·m	ft·lb
5	3.4 ~ 4.9	0.35 ~ 0.50	30 ~ 43 in·lb
6	5.9 ~ 7.8	0.60 ~ 0.80	52 ~ 69 in·lb
8	14 ~ 19	1.4 ~ 1.9	10.0 ~ 13.5
10	25 ~ 34	2.6 ~ 3.5	19.0 ~ 25
12	44 ~ 61	4.5 ~ 6.2	33 ~ 45
14	73 ~ 98	7.4 ~ 10.0	54 ~ 72
16	115 ~ 155	11.5 ~ 16.0	83 ~ 115
18	165 ~ 225	17.0 ~ 23.0	125 ~ 165
20	225 ~ 325	23 ~ 33	165 ~ 240

## PERIODIC MAINTENANCE 2-11

### Specifications

Item	Standard	Service Limit
<b>Fuel System</b>		
Throttle Grip Free Play	2 ~ 3 mm (0.08 ~ 0.12 in.)	- - -
Idle Speed	1 200 ±50 r/min (rpm)	- - -
<b>Engine Top End</b>		
Valve Clearance		
Inlet	0.13 ~ 0.18 mm (0.0051 ~ 0.0071 in.)	- - -
Exhaust	0.18 ~ 0.23 mm (0.0070 ~ 0.0090 in.)	- - -
<b>Clutch</b>		
Clutch Lever Free Play	2 ~ 3 mm (0.08 ~ 0.12 in.)	- - -
<b>Wheels/Tires</b>		
Air Pressure		
Front	150 kPa (1.5 kgf/cm <sup>2</sup> , 21 psi)	- - -
Rear	225 kPa (2.25 kgf/cm <sup>2</sup> , 32 psi)	- - -
Tread Depth		
Front		
Dunlop	6.9 mm (0.27 in.)	1 mm (0.04 in.)
Bridgestone	6.0 mm (0.24 in.)	
Rear		
Dunlop	8.8 mm (0.35 in.)	2 mm (0.08 in.) (Up to 130 km/h (80 mph))
Bridgestone	8.5 mm (0.33 in.)	
Rim Runout		
Axial	0.5 mm (0.02 in.)	1.5 mm (0.06 in.)
Radial	0.8 mm (0.03 in.)	1.5 mm (0.06 in.)
<b>Final Drive</b>		
Drive Chain Slack	2 ~ 12 mm (0.08 ~ 0.47 in.)	- - -
Drive Chain Wear (20-link length)	317.5 ~ 318.2 mm (12.50 ~ 12.53 in.)	323 mm (12.7 in.)
<b>Brakes</b>		
Brake Fluid Grade	DOT4	- - -
Pad Lining Thickness	5.5 mm (0.203 in.)	1 mm (0.04 in.)
Brake Light Timing		
Front	ON after 10 mm (0.39 in.) lever travel	- - -
Rear	ON after 15 mm (0.59 in.) pedal travel	- - -
<b>Electrical System</b>		
Spark Plug Gap	0.6 ~ 0.7 mm (0.024 ~ 0.028 in.)	- - -
<b>Replacement Parts</b>		
Coolant Capacity	1.7 L (1.8 US qt)	- - -
Engine Oil		
Grade	API SE, SF, SG or API SH or SJ with JASO MA	- - -
Viscosity	SAE10W-40	- - -


## 2-12 PERIODIC MAINTENANCE

### Specifications


Item	Standard	Service Limit
Capacity		
when filter is not removed	2.8 L (3.0 US qt)	- - -
when filter is removed	3.0 L (3.2 US qt)	- - -
when engine is completely dry	3.4 L (3.6 US qt)	- - -

**Special Tools**


**Steering Stem Nut Wrench:**  
57001-1100

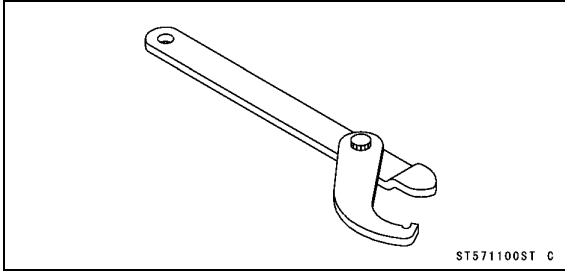


**Oil Filter Wrench:**  
57001-1249

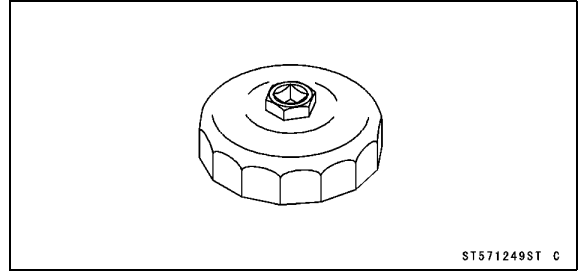


**Jack:**  
57001-1238

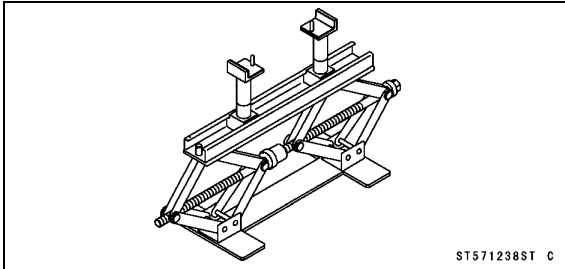


**Vacuum Gauge:**  
57001-1369

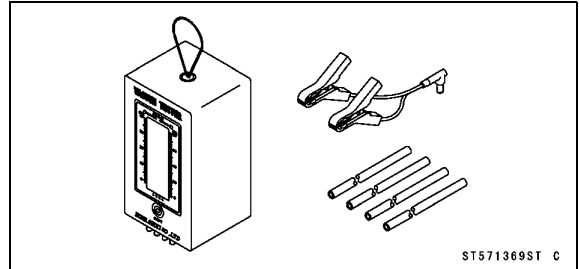

**Pilot Screw Adjuster, A:**  
57001-1239

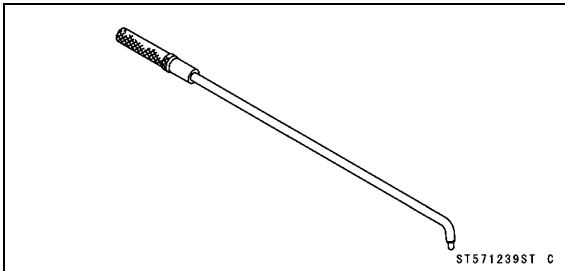

**Filler Cap Driver:**  
57001-1454

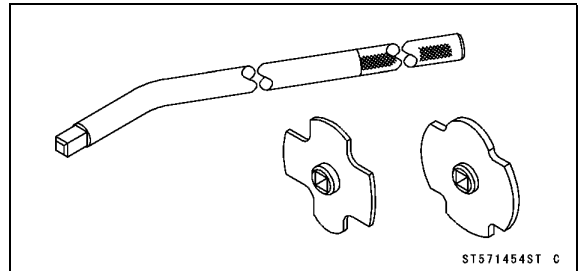

## 2-14 PERIODIC MAINTENANCE

### Maintenance Procedure

#### Fuel System

##### Throttle Cable Inspection

##### Throttle Grip Free Play Inspection

- Check throttle grip play [A] by lightly turning the throttle grip back and forth.
- ★ If the free play is improper, adjust the throttle cable.

##### Throttle Grip Free Play




**Standard:** 2 ~ 3 mm (0.08 ~ 0.12 in.)

- Check that the throttle grip moves smoothly from full open to close, and the throttle closes quickly and completely in all steering positions by the return spring.
- ★ If the throttle grip does not return properly, check the throttle cable routing, grip free play, and cable damage. Then lubricate the throttle cable.
- Run the engine at the idle speed, and turn the handlebar all the way to the right and left to ensure that the idle speed does not change.
- ★ If the idle speed increase, check the throttle cable free play and the cable routing.

##### Throttle Grip Free Play Adjustment



- ★ If the free play is incorrect, loosen the locknut [A] and turn the adjuster [B] of the accelerator cable until the 2 ~ 3 mm (0.08 ~ 0.12 in.) of throttle grip play is obtained.
- Tighten the locknut against the adjuster securely.

- Check that the throttle pulley [A] stops against the idle adjusting screw [B] with the throttle grip closed.

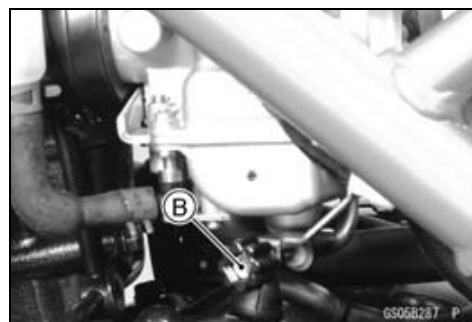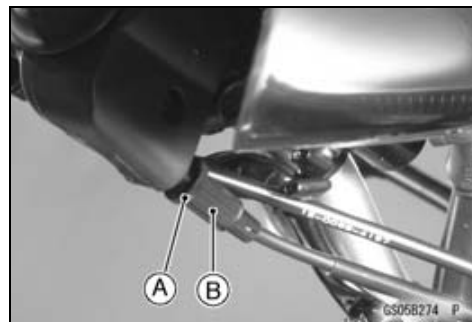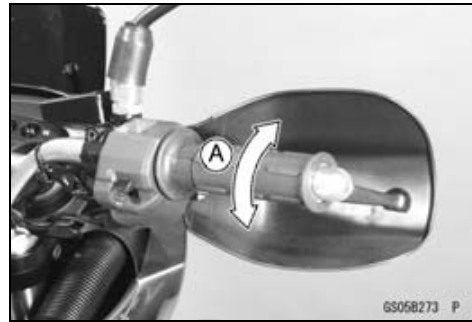

## Maintenance Procedure

- ★ If the play can not be adjusted by using the adjuster at the throttle grip, use the adjuster [A] of the decelerator cable under the fuel tank.
  - Screw in the adjuster fully at the throttle grip and tighten the locknut.
  - Remove the fuel tank (see Fuel Tank Removal in the Fuel System chapter).
  - Make the necessary free play adjustment at the lower cable end.
- 
- Check that the throttle pulley stops [A] against the idle adjusting screw [B], with the throttle grip released and stops against the carburetor stopper with the throttle grip opened.
  - Turn the handlebar from side to side while idling the engine.
  - ★ If idle speed varies, the cable may be poorly routed or damaged.

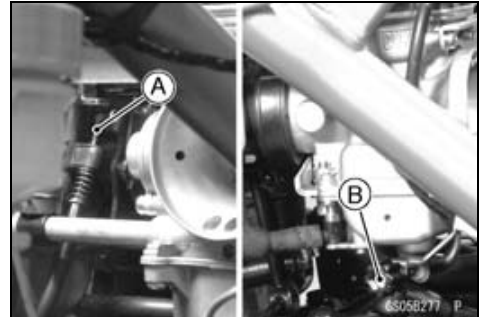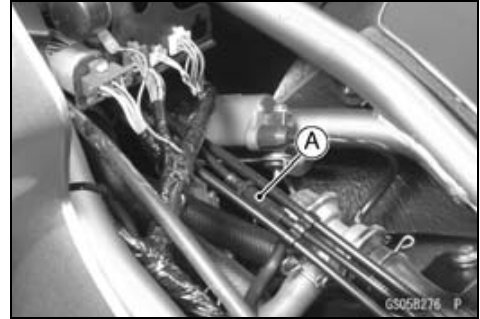


### **⚠ WARNING**

**Operation with an improperly adjusted, incorrectly routed, or damaged cable could result in an unsafe riding condition.**

### Throttle Cable Inspection

- Remove both ends of the throttle cables.
- With the throttle cable disconnected at both ends, the cable should move freely [A] within the cable housing.
- If cable movement is not free after lubricating, if the cable is frayed [B], or if the cable housing is kinked [C], replace the cable.

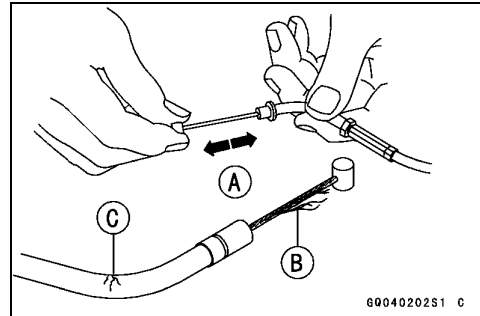

### Idle Speed Inspection

#### Idle Speed Inspection

- Start the engine and warm it up thoroughly.
- With the engine idling, turn the handlebar to both sides.
- ★ If handlebar movement changes the idle speed, the throttle cable may be improperly adjusted or incorrectly routed, or it may be damaged. Be sure to correct any of these conditions before riding.

### **⚠ WARNING**

**Operation with improperly adjusted, incorrectly routed, or damaged cables could result in an unsafe riding condition.**

- Check idle speed.
- ★ If the idle speed is out of the specified range, adjust it.

#### Idle Speed


**1 200 ±50 r/min (rpm)**

## 2-16 PERIODIC MAINTENANCE

### Maintenance Procedure

#### Idle Speed Adjustment

- Start the engine and warm it up thoroughly.
- Turn the adjusting screw [A] until idle speed is correct.
- Open and close the throttle a few times to make sure that the idle speed is within the specified range. Readjust if necessary.

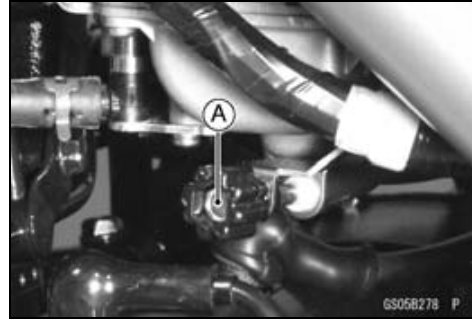


#### Carburetor Synchronization Inspection

##### Synchronization Inspection

- Situate the motorcycle so that it is perpendicular to the ground.
- Remove the fuel tank and connect the auxiliary fuel tank to supply the fuel.
- Warm up the engine.
- Check idle speed and adjust if necessary.
- Pull the vacuum hoses off, and attach vacuum gauge [A] to the vacuum hose fittings on the carburetors.


**Special Tool - Vacuum Gauge: 57001-1369**

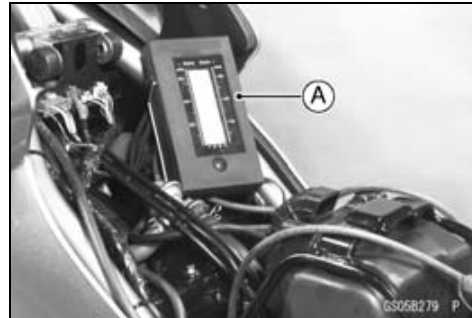

##### Synchronization Adjustment

- The pilot screw is set at the factory and should not be removed. But if necessary, check the pilot screw opening as follows.
- Turn in the pilot screw and count the number of turns until it seats fully but not tightly, and then remove the screw. This is to set the screw to its original (correct) position when assembling.

**Special Tool - Pilot Screw Adjuster, C [A]: 57001-1239**

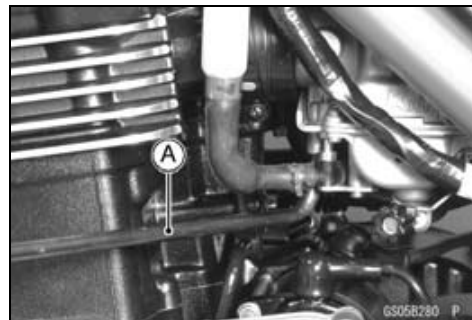

#### NOTE


- Each carburetor has different opening of the pilot screw. When setting the pilot screw, do not refer to the specifications which show mean opening of the pilot screws.



## Maintenance Procedure


### Coolant Filter Cleaning

- Before winter season starts, clean the coolant filter [A] in the carburetor system.
- Drain the coolant (see Coolant Draining).
- Remove the coolant filter from the cooling hoses in the carburetor system.
- Blow dirt and sediment off the filter with compressed air.

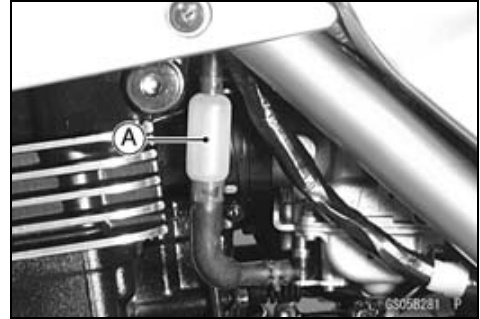

### Fuel Hoses and Connections Check

- The fuel hoses are designed to be used throughout the motorcycle's life without any maintenance, however, if the motorcycle is not properly handled, the high pressure inside the fuel line can cause fuel to leak [A] or the hose to burst.
- Remove the fuel tank (see Fuel Tank Removal in the Fuel System chapter) and check the fuel hose.
- ★ Replace the fuel hose if any fraying, cracks [B] or bulges [C] are noticed.
- Check that the hoses are securely connected and clamps are tightened correctly.
- When installing, route the hoses according to Cable, Wire, and Hose Routing section in the General Information chapter.
- When installing the fuel hoses, avoid sharp bending, kinking, flattening or twisting, and route the fuel hoses with a minimum of bending so that the fuel flow will not be obstructed.
- ★ Replace the hose if it has been sharply bent or kinked.

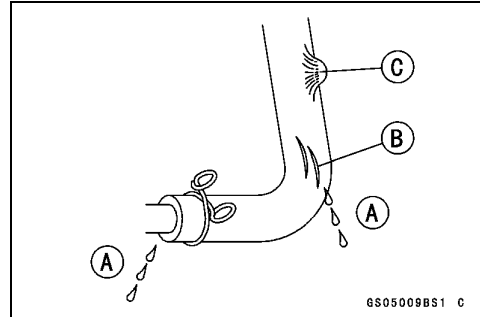

### Air Cleaner Element Cleaning and Inspection

#### NOTE

- In dusty areas, the element should be cleaned more frequently than the recommended interval.
- After riding through rain or on muddy roads, the element should be cleaned immediately.


#### **⚠ WARNING**

Clean the element in a well-ventilated area, and make sure that there are no sparks or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or a low-flash point solvent to clean the element.


## 2-18 PERIODIC MAINTENANCE

### Maintenance Procedure

- Remove the element assembly from the air cleaner housing (see Air Cleaner Element Removal in the Fuel System chapter).
- Separate the element [A] from the element holders [B].
- Clean the element in a bath of high-flash point solvent, and then dry it with compressed air or by shaking it.
- Visually check the element for tear or breaks.
- ★ If any of the parts of the element are damaged, replace them with a new one.

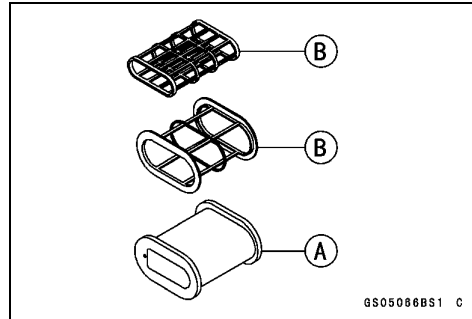

- After cleaning of the element, saturate it with high quality form air filter oil and squeeze out excess oil.
- Wrap the element [A] in a clean rag [B] and squeeze it as dry as possible.
- Assemble the element with the holders, and install them into the air cleaner housing.

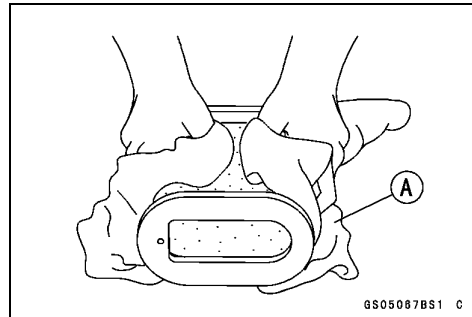


### Cooling System

#### Coolant Level Inspection

- Situate the motorcycle so that it is perpendicular to the ground.
- Check the level through the coolant level gauge on the reservoir tank [C]. The coolant level should be between the "H" (High) [A] and the "L" (Low) [B] level lines.

#### NOTE

○ Check the level when the engine is cold (room or ambient temperature).

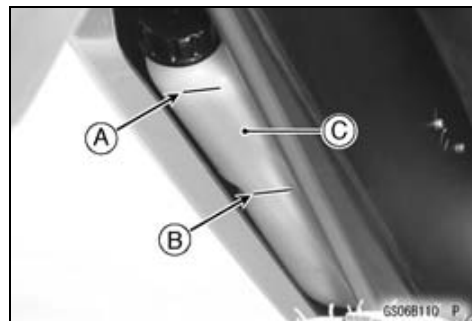

- ★ If the coolant level is lower than the "L" (Low) level line, add coolant to the "F" (Full) level line.

#### CAUTION

For refilling, add the specified mixture of coolant and soft water. Adding water alone dilutes the coolant and degrades its anticorrosion properties. The diluted coolant can attack the aluminum engine parts. In an emergency, soft water alone can be added. But the diluted coolant must be returned to the correct mixture ratio within a few days. If coolant must be added often, or the reserve tank has run completely dry, there is probably leakage in the cooling system. Check the system for leaks (see Visual Leak Inspection, and Cooling System Pressure Testing).


## Maintenance Procedure

### Radiator Hoses and Connections Inspection

○The high pressure inside the radiator hose can cause coolant to leak [A] or the hose to burst if the line is not properly maintained. Visually inspect the hoses for signs of deterioration. Squeeze the hoses. A hose should not be hard and brittle, nor should it be soft or swollen.

- ★Replace the hose if any fraying, cracks [B] or bulges [C] are noticed.
- Check that the hoses are securely connected and clamps are tightened correctly.

**Torque - Radiator Hose Clamp Screws: 2.5 N·m (0.25 kgf·m, 22 in·lb)**

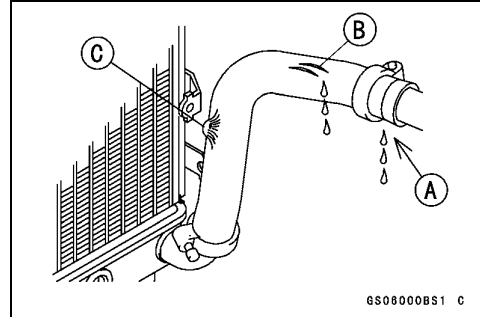


## Engine Top End

### Air Suction Valve Inspection

The air suction valve is essentially a check valve which allows fresh air to flow from the air cleaner into the exhaust port. Any air that has passed the air suction valve is prevented from returning to the air cleaner.

- Remove the air suction valves.
- Visually inspect the reeds [A] for cracks, folds, warps, heat damage, or other damage.
- ★If there is any doubt as to the condition of the reed, replace the air suction valve as an assembly.
- Check the reed contact areas [B] of the valve holder for grooves, scratches, any signs of separation from the holder, or heat damage.
- ★If there is any doubt as to the condition of the reed contact areas, replace the air suction valve as an assembly.
- If any carbon or other foreign particles have accumulated between the reed and the reed contact area, wash the valve assembly clean with a high flash-point solvent.

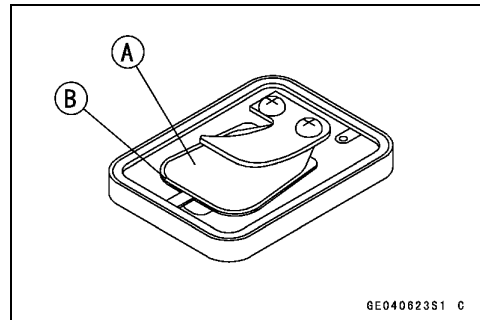

### CAUTION

**Do not scrape off the deposits with a scraper as this could damage the rubber, requiring replacement of the suction valve assembly.**

### Valve Clearance Inspection

#### Valve Clearance Inspection

#### NOTE

○Valve clearance must be checked and adjusted when the engine is cold (room temperature).


- Remove the cylinder head cover (see Cylinder Head Cover Removal in the Engine Top End chapter).
- Remove the cylinder head oil pipes (see Cylinder Head Oil Pipe Removal in the Engine Top End chapter).

## 2-20 PERIODIC MAINTENANCE


### Maintenance Procedure

- Unscrew the upper [A] and lower [B] caps on the alternator cover.

**Special Tool - Filler Cap Driver: 57001-1454**

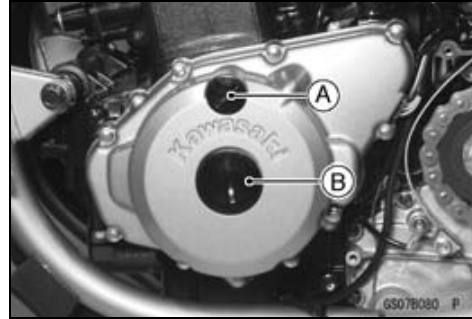

- Check the valve clearance when the pistons are at TDC.
- The pistons are numbered beginning with the engine left side.
- Using a wrench on the crankshaft rotation bolt [A], turn the crankshaft clockwise [B] until the "C" mark [C] on the rotor is aligned with the notch [D] in the edge of the upper hole in the alternator cover for #2 piston and "T" mark for #1 piston.

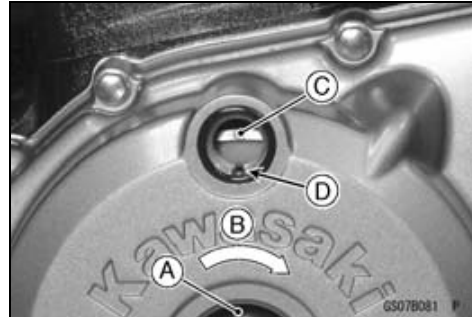


- Measure the valve clearance of the valves for which the cam lobe is pointing away from the rocker arm.
- Each piston has two inlet and two exhaust valves. Measure these two inlet or exhaust valves at the same crankshaft position.

#### Valve Clearance Measuring Position

**#2 Piston TDC at End of Compression Stroke →**

**Inlet valve clearances of #2 piston, and  
Exhaust valve clearances of #2 piston**

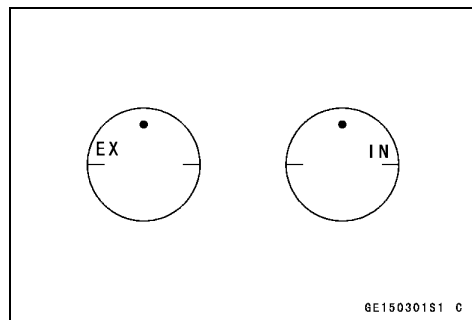


#### NOTE

- Check the valve clearance using this method only. Checking the clearance at any other cam position may result in improper valve clearance.

#### Valve Clearance Measuring Position

**#1 Piston TDC at End of Compression Stroke →**

**Inlet valve clearances of #1 piston, and  
Exhaust valve clearances of #1 piston**

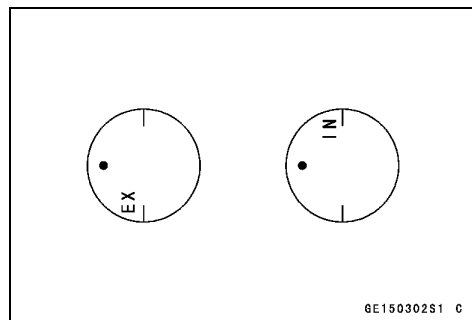

## Maintenance Procedure



- Measure the clearance of each valve by inserting a thickness gauge [A] between the adjusting screw [B] and the valve stem.

### Valve Clearance (when cold)

Inlet	0.13 ~ 0.18 mm (0.0051 ~ 0.0071 in.)
Exhaust	0.18 ~ 0.23 mm (0.0070 ~ 0.0090 in.)

### Valve Clearance Adjustment

- ★ If the valve clearance is incorrect, loosen the locknut [A] and turn the adjusting screw [B] until the correct clearance is obtained.
- Tighten the locknut.
  - Torque - Valve Adjuster Locknuts: 25 N·m (2.5 kgf·m, 18 ft·lb)
- Install the two caps on the alternator cover.

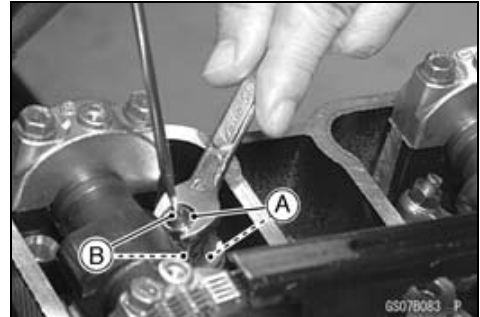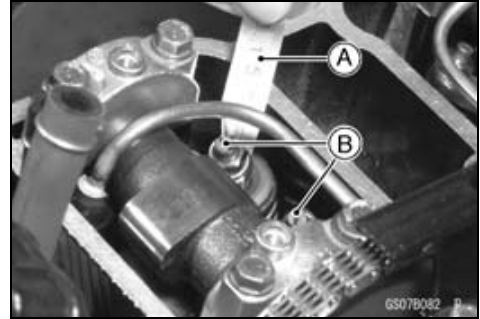

## Clutch


### ⚠ WARNING

To avoid a serious burn, never touch the engine or exhaust pipe during clutch adjustment.

### Clutch Operation Inspection

#### Clutch Operation Inspection

- With the engine idling, make sure that there is no noise or abnormally heavy feeling when pulling [A] in the clutch lever fully. Also, make sure that the shift lever operates smoothly.
- When moving off the motorcycle by releasing the clutch lever gradually, make sure that the clutch does not slip and that the clutch engages smoothly.
- ★ If the clutch operation is insufficiency, inspect the clutch system.

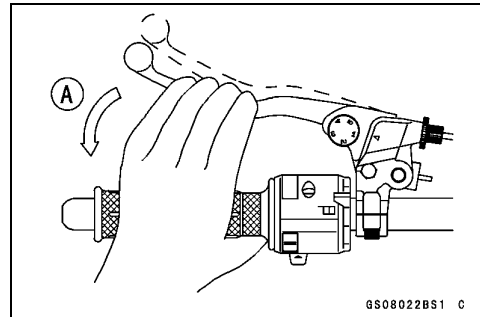

### ⚠ WARNING


When inspecting by running the vehicle, note a surrounding traffic situation enough in the place of safety.

### Clutch Lever Free Play Inspection

- Pull the clutch lever just enough to take up the free play [A].
- Measure the gap between the lever and the lever holder.
- ★ If the gap is too wide, the clutch may not release fully. If the gap is too narrow, the clutch may not engage fully. In either case, adjust the clutch.

#### Clutch Lever Free Play

Standard: 2 ~ 3 mm (0.08 ~ 0.12 in.)

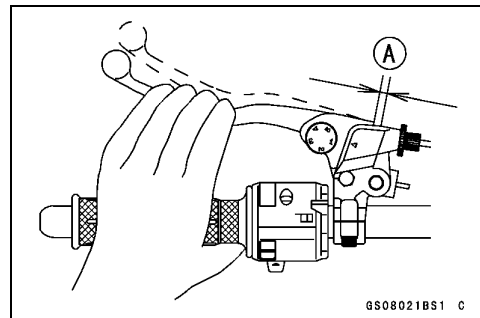


## 2-22 PERIODIC MAINTENANCE

### Maintenance Procedure

#### Clutch Lever Free Play Adjustment


- Slide back the dust cover [A].
- Loosen both adjuster nuts [B] at the right hand crankcase as far as they will go.

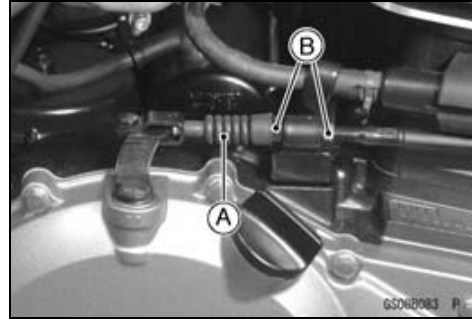

- Loosen the knurled locknut [A] at the clutch lever.
- Turn the adjuster [B] so that 5 ~ 6 mm (0.20 ~ 0.24 in.) [C] of threads are visible.

#### **⚠ WARNING**

Be sure that the outer cable end at the clutch lever is fully seated in the adjuster at the clutch lever, or it could slip into the place later, creating enough cable play to prevent clutch disengagement.

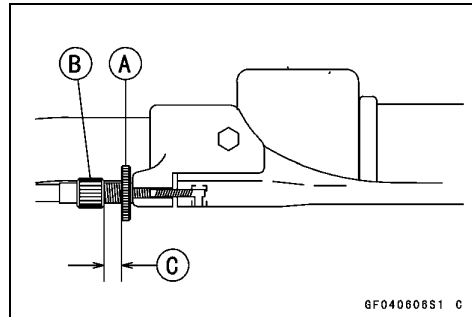

- After the adjustment is made, start the engine and check that the clutch does not slip and that it releases properly.

#### Wheels/Tires

##### *Air Pressure Inspection/Adjustment*

- Measure the tire air pressure with an air pressure gauge [A] when the tires are cold (that is, when the motorcycle has not been ridden more than a mile during the past 3 hours).
- ★ Adjust the tire air pressure according to the specifications if necessary.




##### **Air Pressure (when cold)**

Front	150 kPa (1.5 kgf/cm <sup>2</sup> , 21 psi)
Rear	225 kPa (2.25 kgf/cm <sup>2</sup> , 32 psi)

##### *Tire Tread Wear Inspection*

As the tire tread wears down, the tire becomes more susceptible to puncture and failure. An accepted estimate is that 90% of all tire failures occur during the last 10% of tread life (90% worn). So it is false economy and unsafe to use the tires until they are bald.


- Measure the tread depth at the center of the tread with a depth gauge [A]. Since the tire may wear unevenly, take measurement at several places.

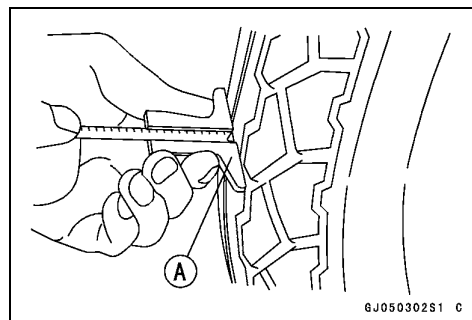



**Maintenance Procedure**

Wear Indicator [A]  
 Wear Indicator Position Mark [B]

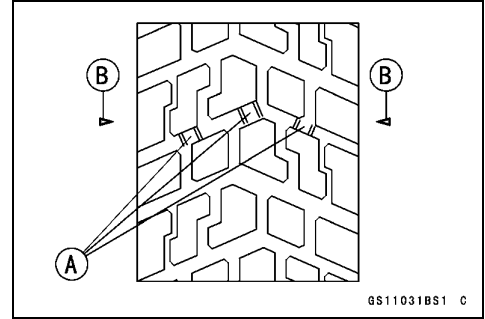

★ If any measurement is less than the service limit, replace the tire.

**Tread Depth**

Front	DUNLOP	BRIDGESTONE
Standard	6.9 mm (0.27 in.)	6.0 mm (0.24 in.)
Service Limit	1 mm (0.04 in.)	
Rear	DUNLOP	BRIDGESTONE
Standard	8.8 mm (0.35 in.)	8.5 mm (0.33 in.)
Service Limit	2 mm (0.08 in.)(Up to 130 km/h (80 mph)) 3 mm (0.12 in.)(Over 130 km/h (80 mph))	

**⚠ WARNING**


To ensure safe handling and stability, use only the recommended standard tires for replacement, inflated to the standard pressure. Use the same manufacturer's tires on both front and rear wheels.

**NOTE**

○ Check and balance the wheel when a tire is replaced with a new one.

**Wheel/Tire Damage Inspection**

- Remove any imbedded stones [D], nail [C] or other foreign particles from the tread.  
Wear Indicator [E]
  - Visually inspect the tire for cracks [A] and cuts [B], and replace the tire if necessary. Swelling or high spots indicate internal damage, requiring tire replacement.
  - Visually inspect the wheel for cracks, cuts and dents damage.
- ★ If any damage is found, replace the wheel if necessary.

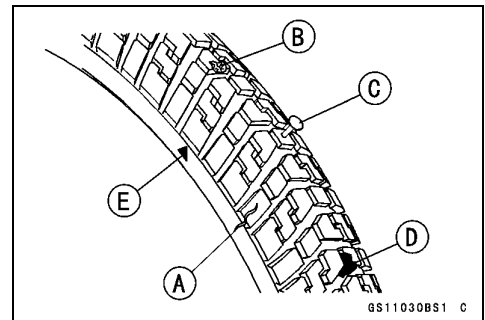


## 2-24 PERIODIC MAINTENANCE

### Maintenance Procedure

#### Wheel Bearing Damage Inspection

- Using a jack and attachment, raise the front wheel off the ground (see Wheels/Tires chapter).
- Turn the handlebar all the way to the right or left.
- Inspect the roughness of the front wheel bearing by pushing and pulling [A] the wheel.
- Spin [B] the front wheel lightly, and check for smoothly turn, roughness, binding or noise.
- ★ If roughness, binding or noise is found, remove the front wheel and inspect the wheel bearing (see Hub Bearing Inspection in the Wheels/Tires chapter).

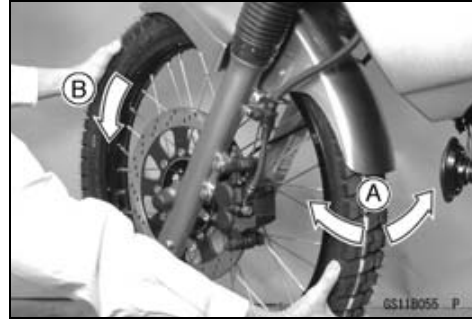

#### Spoke Tightness and Rim Runout Inspection

##### Spoke Tightness Inspection

- Check whether all the spokes are uniformly tightened.
- ★ Uniformly tighten the spokes if any spoke is loose or unevenly tightened.

**Torque - Spoke Nipple: 3.0 N·m (0.3 kgf·m, 26 in·lb)**  
(On and after EJ650-A3/C3): 5.1 N·m (0.52 kgf·m, 45 in·lb)

- Inspect the rims.

#### **⚠ WARNING**

**If any spoke breaks, it should be replaced immediately. A missing spoke places an additional load on the other spokes, which will eventually cause other spokes to break.**

##### Rim Runout Inspection

- Raise the front/rear wheel of the ground.
- Special Tool - Jack: 57001-1238**
- Check the rim for damage or warpage.
- ★ If there is any damage to the rim, replace the rim.
- Measure the radial [A] and axial [B] rim runout by placing a dial gauge against the sides and the outer circumference of the rim, and slowly rotating the wheel.

##### Rim Runout (with tire installed)


###### Standard:

<b>Axial Runout</b>	<b>0.5 mm (0.02 in.)</b>
<b>Radial Runout</b>	<b>0.8 mm (0.03 in.)</b>

###### Service Limit:

<b>Axial Runout</b>	<b>1.5 mm (0.06 in.)</b>
<b>Radial Runout</b>	<b>1.5 mm (0.06 in.)</b>

- ★ If rim runout exceeds the service limit, inspect the hub bearings. If the problem is not due to the bearings, retighten the spokes.

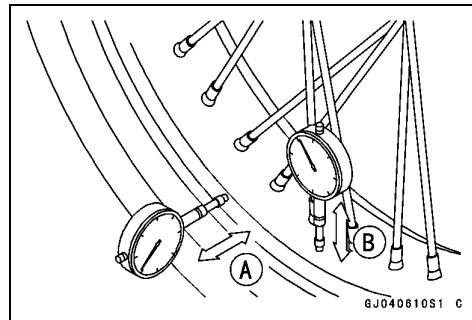

#### **⚠ WARNING**

**Never attempt to repair a damaged wheel part. If the wheel part is damaged, it must be replaced with a new part.**



**Maintenance Procedure**

**Final Drive**

*Drive Chain Slack Inspection*


**Drive Chain Slack Inspection**

**NOTE**

- Check the slack with the motorcycle setting on its side stand.
- Clean the chain if it is dirty, and lubricate it if it appears dry.
- Check the wheel alignment (see Wheel Alignment Inspection/Adjustment).
- Rotate the rear wheel to find the position where the chain is tightest.
- Measure the vertical movement (chain slack) [A] midway between the sprockets.
- ★ If the chain slack exceeds the standard, adjust it.



**Chain Slack**

**Standard:** 35 ~ 45 mm (1.4 ~ 1.8 in.)

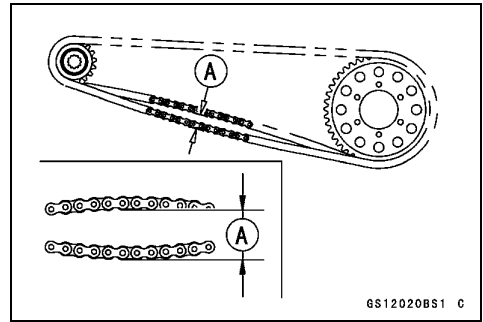

**Drive Chain Slack Adjustment**

- Remove:
  - Cotter Pin [A]
- Loosen:
  - Axle Nut [B]
  - Chain Adjuster Locknuts [F] (both sides)
- Turn the chain adjusting nuts [C] forward or rearward until the drive chain has the correct amount of chain slack. To keep the chain and wheel properly aligned, the left adjuster mark [D] position should align with the same graduation that the right adjuster mark [E] position aligns with.

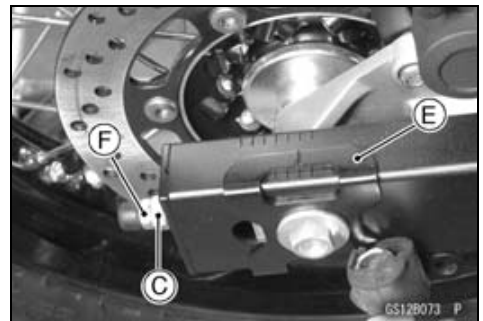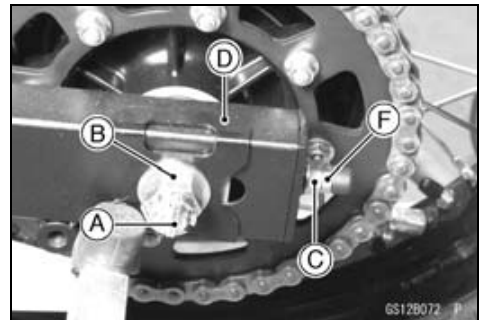

**⚠ WARNING**

**Misalignment of the wheel will result in abnormal wear and may result in an unsafe riding condition.**


- Tighten both chain adjuster locknuts securely.
- Tighten the axle nut (see Front/Rear Wheel Installation in the Wheels/Tires chapter).

**Torque - Rear Axle Nut: 108 N·m (11 kgf·m, 80 ft·lb)**

- Insert a the new cotter pin [A].

**NOTE**


- When inserting the cotter pin, if the slots in the nut do not align with the cotter pin hole in the axle shaft, tighten the nut clockwise [A] up to next alignment.
- It should be within 30 degree.
- Loosen once and tighten again when the slot goes past the nearest hole.

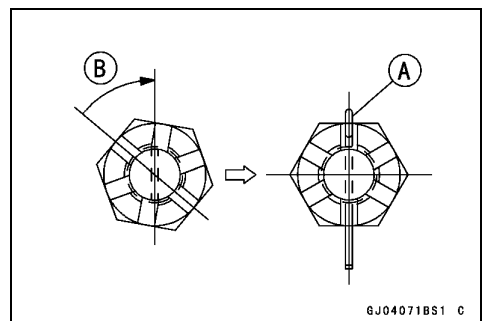

## 2-26 PERIODIC MAINTENANCE

### Maintenance Procedure

- Bend the cotter pin [A] over the nut.

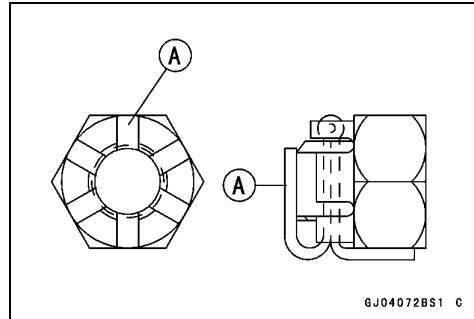


- Turn the wheel, measure the chain slack again at the tightest position, and readjust if necessary.
- Check the rear brake.

#### Wheel Alignment Inspection/Adjustment

- Check that the left adjuster mark [A] position should align with the same graduation [B] that the right adjuster mark position aligns with.
- ★ If they do not, adjust the chain slack and align the wheel alignment.

#### NOTE

○ Wheel alignment can also be checked using the straightedge or string method.

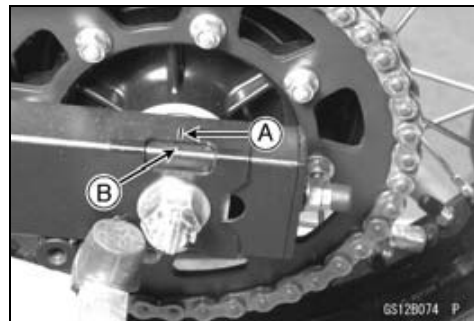

#### ⚠ WARNING


**Misalignment of the wheel will result in abnormal wear, and may result in an unsafe riding condition.**

#### Drive Chain Wear Inspection

- Remove:
  - Chain Cover
- Rotate the rear wheel to inspect the drive chain for damaged rollers, loose pins and links.
- ★ If there is any irregularity, replace the drive chain.
- ★ Lubricate the drive chain if it appears dry.
- Stretch the chain taut by hanging a 98 N (10 kg, 20 lb) weight [A] on the chain.
- Measure the length of 20 links [B] on the straight part [C] of the chain from the pin center of the 1st pin to the pin center of the 21st pin. Since the chain may wear unevenly, take measurements at several places.
- ★ If any measurements exceed the service limit, replace the chain. Also, replace the front and rear sprockets when the drive chain is replaced.

#### Drive Chain 20-link Length

**Standard:** 317.5 ~ 318.2 mm (12.50 ~ 12.53 in.)  
**Service Limit:** 323 mm (12.7 in.)

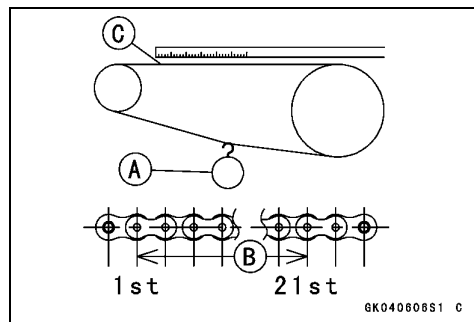


**Maintenance Procedure**

**⚠ WARNING**

If the drive chain wear exceeds the service limit, replace the chain or an unsafe riding condition may result. A chain that breaks or jumps off the sprockets could snag on the engine sprocket or lock the rear wheel, severely damaging the motorcycle and causing it to go out of control. For safety, use only the standard chain. It is an endless type and should not be cut for installation.

*Drive Chain Lubrication*

- If a special lubricant is not available, a heavy oil such as SAE 90 is preferred to a lighter oil because it will stay on the chain longer and provide better lubrication.
- If the chain appears especially dirty, clean it before lubrication.
  - [A] Apply oil

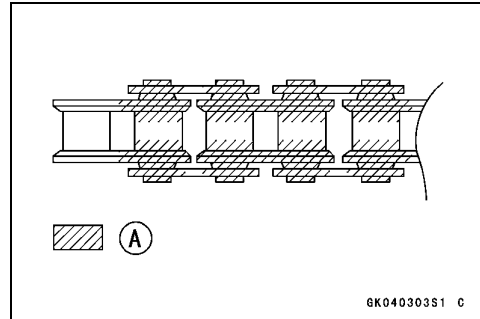

**CAUTION**


The O-rings between the side plates seal in the lubricant between the pin and the bushing. To avoid damaging the O-rings and resultant loss of lubricant, observe the following rules:  
 Use only kerosene or diesel oil for cleaning an O-ring drive chain.  
 Any other cleaning solution such as gasoline or trichloroethylene will cause deterioration and swelling of the O-ring.  
 Blow the chain dry with compressed air immediately after cleaning.  
 Complete cleaning and drying the chain within 10 minutes.

- Apply oil to the sides of the rollers so that oil will penetrate to the rollers and bushings. Apply the oil to the O-rings so that the O-rings will be coated with oil.
- Wipe off any excess oil.

**Brakes**

*Brake Fluid Leak (Brake Hose and Pipe) Inspection*

- Apply the brake lever or pedal and inspect the brake fluid leak from the brake hoses [A] and fittings.
- ★ If the brake fluid leaked from any position, inspect or replace the problem part.

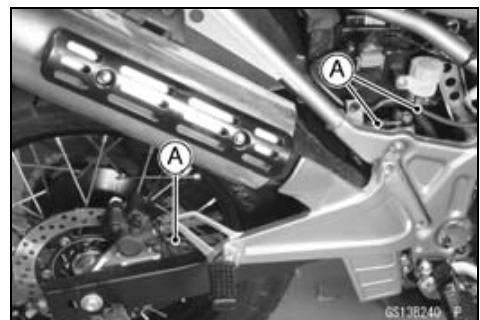

## 2-28 PERIODIC MAINTENANCE

### Maintenance Procedure

#### Brake Hose Damage and Installation Condition Inspection

- Inspect the brake hose and fittings for deterioration, cracks and signs of leakage.
- The high pressure inside the brake line can cause fluid to leak [A] or the hose to burst if the line is not properly maintained. Bend and twist the rubber hose while examining it.
- ★ Replace the hose if any cracks [B] or bulges [C] are noticed.
- ★ Tighten any loose fittings and any banjo bolts.

**Torque - Brake Hose Banjo Bolts: 34 N·m (3.5 kgf·m, 25 ft·lb)**

- Inspect the brake hose routing.
- ★ If any brake hose routing is incorrect, route the brake hose according to Cable, Wire and Hose Routing Section in the Appendix chapter.

#### Brake Operation Inspection

- Inspect the operation of the front and rear brake by running the vehicle on the dry road.
- ★ If the brake operation is insufficiency, inspect the brake system.

#### **⚠ WARNING**

**When inspecting by running the vehicle, note a surrounding traffic situation enough in the place of safety.**

#### Brake Fluid Level Inspection





- Check that the brake fluid level in the front/rear brake reservoirs [A] is above the lower level line [B].

#### **NOTE**

○ Hold the reservoirs horizontal by raising the motorcycle perpendicular to the ground when checking brake fluid level.

**Special Tool - Jack: 57001-1238**

- Remove the right side cover.

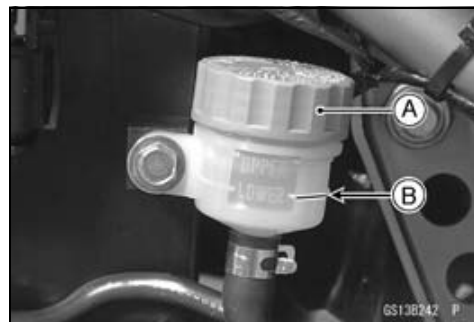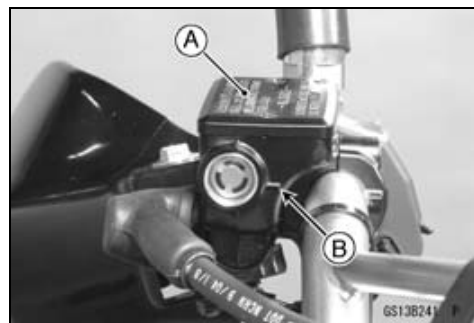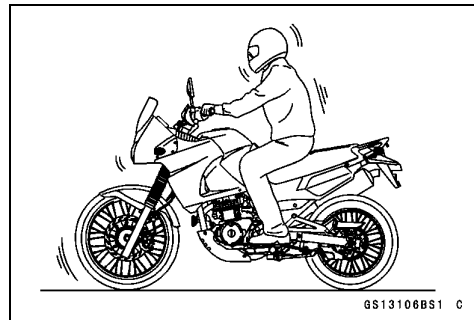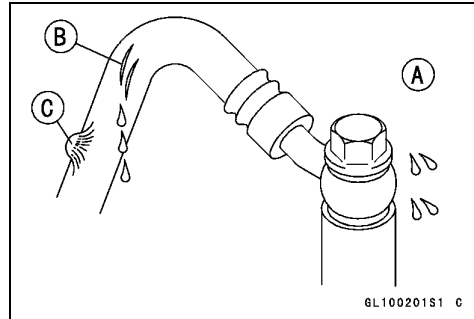



**Maintenance Procedure**

★ If the fluid level is lower than the lower level line, fill the reservoir to the upper level line [A] in the reservoir [B].


**⚠ WARNING**

**Change the brake fluid in the brake line completely if the brake fluid must be refilled but the type and brand of the brake fluid that is already in the reservoir are unidentified. After changing the fluid, use only the same type and brand of fluid thereafter.**

**Recommended Disc Brake Fluid**  
**Grade: DOT4**

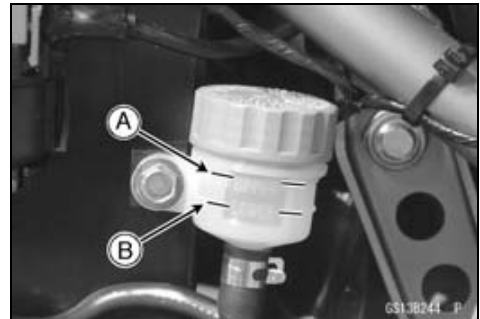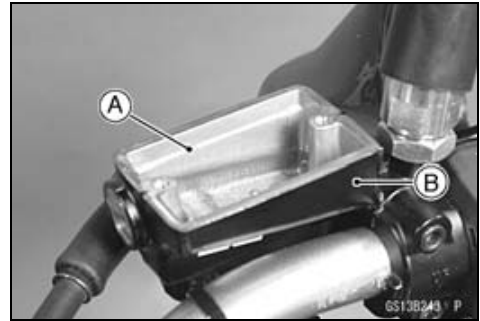

★ If the rear brake reservoir cap is open to fill the brake fluid, follow the procedure below to install the cap correctly.  
 ○ First, tighten the brake fluid reservoir cap [B] clockwise [C] by hand until the resistance is felt fully; then, tighten the cap an additional 1/6 turn [D] while holding the brake fluid reservoir [A] body.

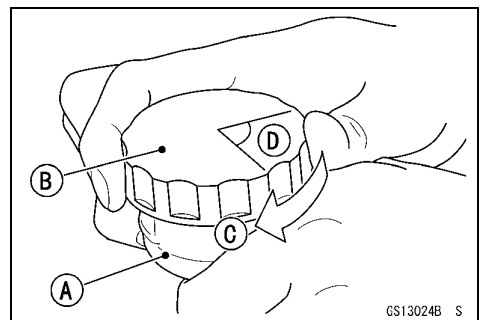


**Brake Pad Wear Inspection**

In accordance with the Periodic Maintenance Chart, inspect the brake pads for wear.

- Remove the pads.
- Check the lining thickness [A] of the pads in the caliper.
- ★ If the lining thickness of either pad is less than the service limit [B], replace both pads in the caliper as a set. Stepped Portion [C]

**Pad Lining Thickness**  
**Standard: 5.15 mm (0.203 in.)**  
**Service Limit: 1 mm (0.04 in.)**

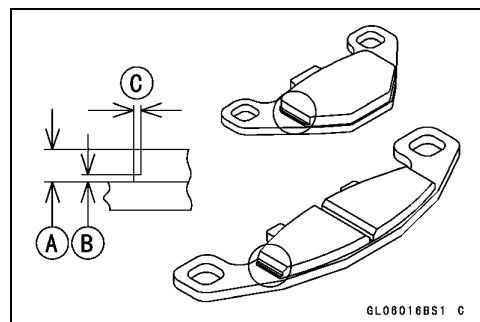

## 2-30 PERIODIC MAINTENANCE

### Maintenance Procedure

#### *Brake Light Switch Operation Inspection*

##### **Front Brake Light Timing Inspection**

- Turn on the ignition switch.
- The brake light should go on when the brake lever is applied or after the tip of brake lever moves about 10 mm (0.39 in.) [A].



##### **Rear Brake Light Timing Inspection**

- Turn on the ignition switch.
  - Check the operation of the rear brake light switch by depressing the brake pedal. The brake light should go on as specified.
- ★ If it does not, adjust the brake light timing.

##### **Brake Light Timing**


**Standard:** On after about 15 mm (0.59 in.) pedal travel [A]



##### **Rear Brake Light Timing Adjustment**

Brake light timing is adjusted by changing the position of the rear brake light switch [A].

- Adjust the position of the switch so that the brake light goes on after the specified pedal travel by turning the adjusting nut [B].
- [C] Lights sooner.  
[D] Lights later.

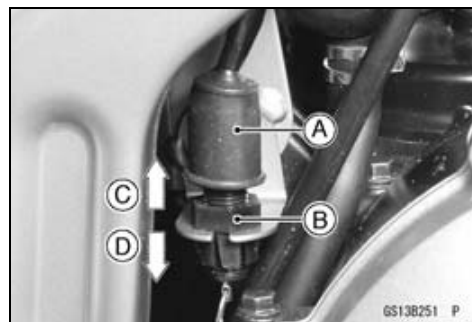

#### **CAUTION**

To avoid damaging the electrical connections inside the switch, be sure that the switch body does not turn during adjustment.

### **Suspension**

#### *Front Forks/Rear Shock Absorber Operation Inspection*

- Pump the forks down and up [A] 4 or 5 times, and inspect the smooth stroke.
- ★ If the forks do not smoothly or noise is found, inspect the fork oil level or fork clamps (see Front Fork Oil Change in the Suspension chapter).





**Maintenance Procedure**

- Pump the seat down and up [A] 4 or 5 times, and inspect the smooth stroke.
- ★ If the shock absorber does not smoothly stroke or noise is found, inspect the oil leak (see Rear Shock Absorber Oil Leak Inspection) or shock absorber clamps.




*Front Fork Oil Leak Inspection*

- Visually inspect the front forks for oil leakage [A].
- ★ If the oil leakage is found on it, replace or repair any defective parts.




*Rear Shock Absorber Oil Leak Inspection*

- Visually inspect the shock absorber for oil leakage [A].
- ★ If the oil leakage is found on it, replace the shock absorber with a new one.

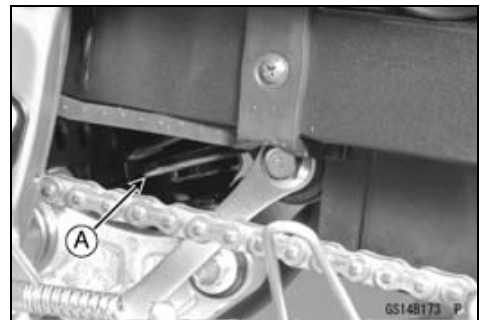


*Rocker Arm Operation Inspection*

- Remove the lower fairings (see Fairing Removal in the Frame chapter).
- Pump the seat down and up 4 or 5 times, and inspect the smooth stroke.
- ★ If the rocker arm [A] does not smoothly stroke or noise is found, inspect the fasteners and bearings (see Rocker Arm Bearing, Sleeve Inspection in the Suspension chapter).

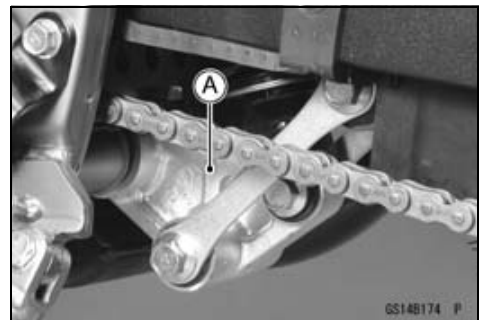

*Rocker Arm Bearings and Sleeves Lubrication*

- Remove the rocker arm (see Rocker Arm Removal in the Suspension chapter).
- Using a high flash-point solvent, wash the sleeves and bearings, and dry them.
- Apply molybdenum disulfide grease to the inner surface of the needle bearings and outer circumference of the sleeves.
- Apply a thin coat of grease to the lips of the grease seal [A].

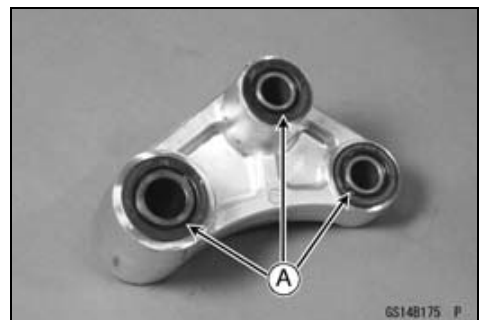


## 2-32 PERIODIC MAINTENANCE

### Maintenance Procedure


#### *Tie-rod Operation Inspection*

- Remove the lower fairings (see Fairing Removal in the Frame chapter).
- Pump the seat down and up 4 or 5 times, and inspect the smooth stroke.
- ★ If the tie-rods [A] do not smoothly stroke or noise is found, inspect the fasteners and rocker arm bearings (see Rocker Arm Bearing and Sleeve Inspection in the Suspension chapter).

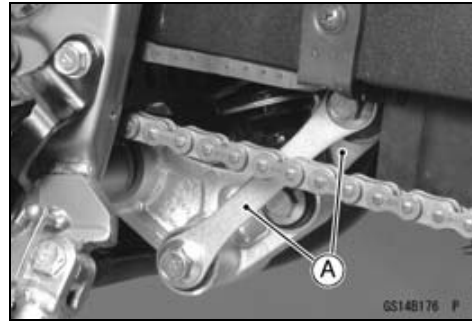

#### *Swingarm Needle Bearing Lubrication*

- Remove the swingarm (see Swingarm Removal in the Suspension chapter).
- Apply a thin coat of the grease to the inner surfaces [A] of the needle bearings.

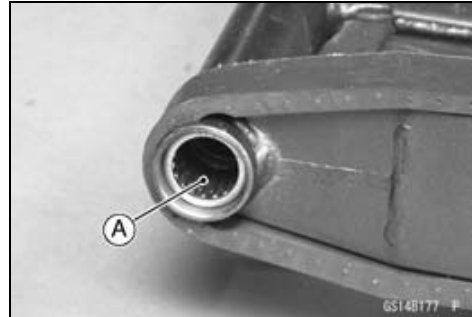

## Steering

### *Steering Play Inspection*

#### **Steering Play Inspection**


- Check the steering.
- Lift the front wheel off the ground using the jack.
  - Special Tool - Jack: 57001-1238**
- With the front wheel pointing straight ahead, alternately tap each end of the handlebar. The front wheel should swing fully left and right from the force of gravity until the fork hits the stop.
- ★ If the wheel binds or catches before the stop, the steering is too tight.
- Stand in front of the motorcycle and grasp the lower ends of fork near the axle.
- Feel for steering looseness by pushing [A] and pulling [B] the forks.
- ★ If you feel looseness, the steering is too loose.

#### **NOTE**

- *The cables and wiring will have some effect on the motion of the fork which must be taken into account. Be sure the wires and cables are properly routed.*
- *The bearings must be in good condition and properly lubricated in order for any test to be valid.*

#### **Steering Play Adjustment**


- ★ Adjust the steering if necessary.
- Remove:
  - Handlebar (see Handlebar Removal in the Steering chapter)
  - Side Cover (see Side Cover Removal in the Frame chapter)
  - Seat (see Seat Removal in the Frame chapter)
  - Fuel Tank (see Fuel Tank Removal in the Fuel System chapter)

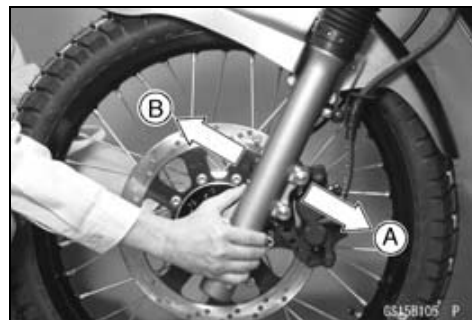



**Maintenance Procedure**

- Loosen:  
Both Fork Lower Clamp Bolts [A].  
Steering Stem Head Nut [B].

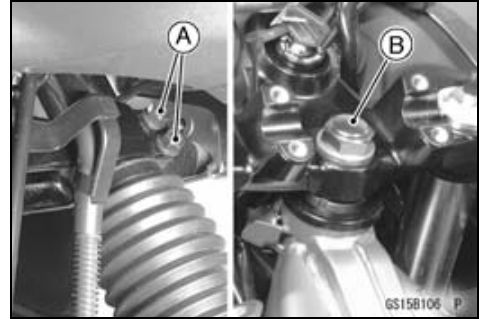


- Adjust the steering.
- ★ If the steering is too tight, loosen the stem nut [A] a fraction of a turn.
- ★ If the steering is too loose, tighten the stem nut a fraction of a turn.

**Special Tool - Steering Stem Nut Wrench: 57001-1100 [B].**

**NOTE**

○ Turn the stem nut 1/8 turn at a time maximum.


**Torque - Steering Stem Nut: 4.9 N·m (0.50 kgf·m, 43 in·lb, for reference)**

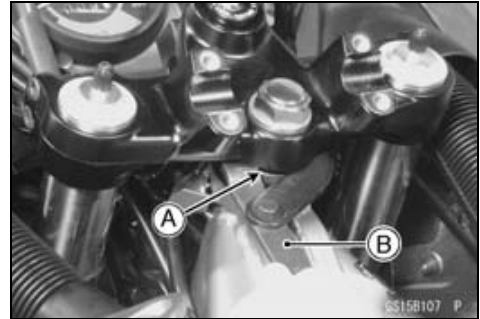

- Tighten the steering stem head nut [B] and fork lower clamp bolts [A].

**Torque - Steering Stem Head Nut: 39 N·m (4.0 kgf·m, 29 ft·lb)**

**Fork Lower Clamp Bolts: 23 N·m (2.3 kgf·m, 17 ft·lb)**

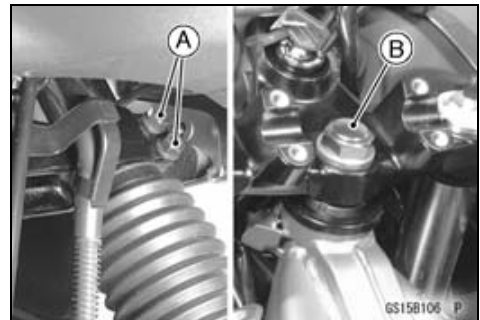

- Check the steering again.
- ★ If the steering is still too tight or too loose, repeat the adjustment.


**Steering Stem Bearing Lubrication**

- Remove the steering stem (see Steering Stem Removal in the Steering chapter).
- Using a high-flash-point solvent, wash the upper and lower tapered rollers in the cages, and wipe the upper and lower outer races, which are press-fitted into the frame head pipe, clean off grease and dirt.
- Visually check the outer races and the rollers.
- ★ Replace the bearing assemblies if they show wear or damage.

## 2-34 PERIODIC MAINTENANCE

### Maintenance Procedure

- Pack the upper and lower tapered roller bearings [A] in the cages with grease, and apply a light coat of grease to the upper and lower outer races.
- Install the steering stem, and adjust the steering (see Steering Play Inspection).

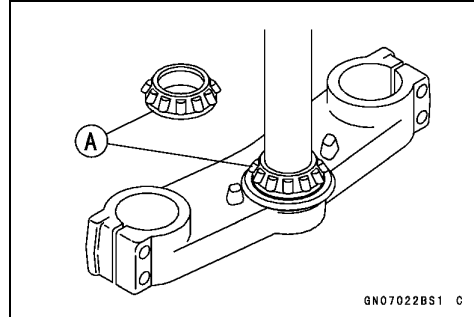


### Electrical System

#### Spark Plug Gap Inspection

- Measure the gap [A] with a wire-type thickness gauge.
- If the gap is incorrect, carefully bend the side electrode [B] with a suitable tool to obtain the correct gap.

#### Spark Plug Gap

0.6 ~ 0.7 mm (0.024 ~ 0.028 in.)

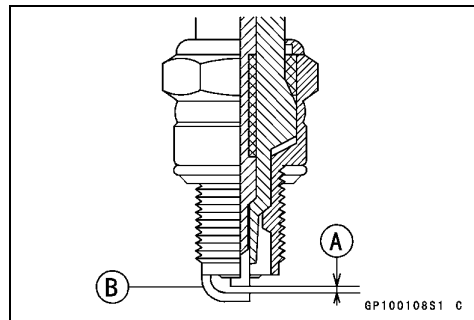

#### Lights and Switches Operation Inspection

##### First Step

- Turn on the ignition switch.
- The following lights should go on according to below table.

City Light [A]	goes on
Taillight [B]	goes on
Neutral Indicator LED [C]	goes on
Oil Pressure Warning Indicator LED [D]	goes on
Water Temperature Warning Indicator LED [E]	goes on



- ★ If the light does not go on, inspect or replace the following item.

Battery (see Battery Activation in the Electrical System chapter)

Applicable Bulb (see Lighting System in the Electrical System chapter)


Meter Unit for Meter Panel Light (see Meter Unit in the Electrical System chapter)

Meter Unit for Neutral Indicator Light (see Motor Unit in the Electrical System chapter)

Meter Unit for Oil Pressure Warning Indicator Light (see Meter Unit in the Electrical System chapter)

Meter Unit for Water Temperature Warning Indicator Light (see Meter Unit in the Electrical System chapter)

Main Fuse 30 A and Taillight Fuse 10 A (see Fuses in the Electrical System chapter)

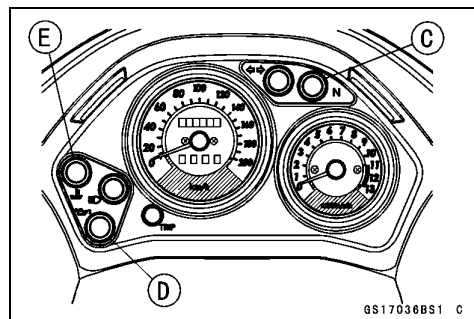

## Maintenance Procedure

Ignition Switch (see Switch Inspection in the Electrical System chapter)

Harness (see Wiring Inspection in the Electrical System chapter)

- Turn off the ignition switch.
- The all lights should go off (see Switch Inspection in the Electrical System chapter).
- ★ If the light does not go off, replace the ignition switch.

### Second Step

- Turn the ignition switch to P (Park) position.
- The city light and taillight should go on.
- ★ If the light does not go on, inspect or replace the following item.
  - Ignition Switch (see Switch Inspection in the Electrical System chapter)

### Third Step

- Turn on the turn signal switch [A] (left or right position).
- The left or right turn signal lights [B] (front and rear) according to the switch position should flash.
- The turn signal indicator LED [C] in the meter unit should flash.

- ★ If the each light does not flash, inspect or replace the following item.

Turn Signal Light Bulb (see Lighting System in the Electrical System chapter)

Meter Unit for Turn Signal Light Indicator LED (see Meter Unit in the Electrical System chapter)

Turn Signal Relay Fuse 10 A (see Fuses in the Electrical System chapter)

Turn Signal Switch (see Lighting System in the Electrical System chapter)



Turn Signal Relay (see Lighting System in the Electrical System chapter)

Harness (see Wiring Inspection in Electrical System chapter)

- Push the turn signal switch.
- The turn signal lights and indicator LED should go off.
- ★ If the light does not go off, inspect or replace the following item.

Turn Signal Switch (see Lighting System in the Electrical System chapter)

Turn Signal Relay (see Lighting System in the Electrical System chapter)

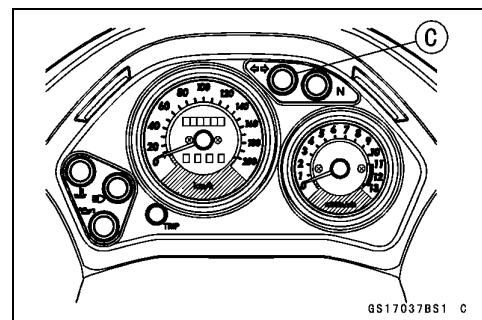
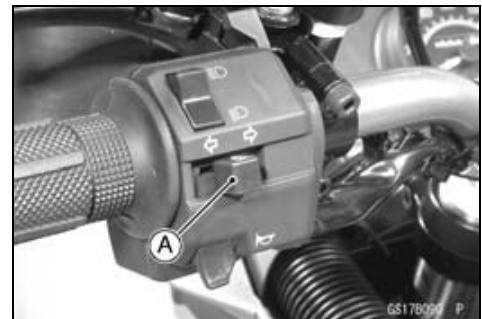


## 2-36 PERIODIC MAINTENANCE

### Maintenance Procedure

#### Fourth Step

- Set the dimmer switch [A] to low beam position.
- Start the engine.
- The low beam headlight and license plate light should go on.
- ★ If the low beam headlight and license plate light do not go on, inspect or replace the following item.
  - Headlight Low Beam Bulb (see Lighting System in the Electrical System chapter)
  - License Plate Light Bulb
  - Headlight Fuse 10 A (see Fuses in the Electrical System chapter)
  - Dimmer Switch (see Switch Inspection in the Electrical System chapter)
  - Harness (see Wiring Inspection in the Electrical System chapter)
- Set the dimmer switch to high beam position.
- The low beam [A] and high beam [B] headlights, and license plate light [C] should go on.
- The high beam indicator LED [D] should go on.
- ★ If the high beam headlight and/or high beam indicator LED, and license plate light do not go on, inspect or replace the following item.
  - Headlight High Beam Bulb (see Lighting System in the Electrical System chapter)
  - License Plate Light Bulb
  - Dimmer Switch (see Switch Inspection Electrical System chapter)
- Turn off the engine stop switch.
- The low beam and high beam headlights, and license plate light should stay going on.
- ★ If the headlights, license plate light and high beam indicator LED go off, inspect or replace the following item.
  - Headlights or Indicator Light (see Lighting System in the Electrical System chapter)
  - License Plate Light Bulb
- Turn off the ignition switch.
- The headlights, license plate light and high beam indicator LED should go off.

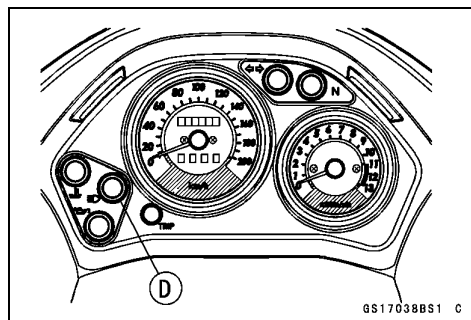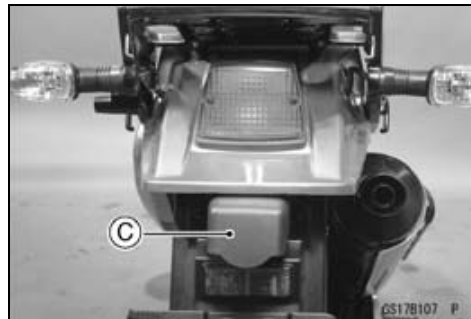

#### Headlight Aiming Inspection

- Inspect the headlight beam for aiming.
- ★ If the headlight beam points to one side rather than straight ahead, adjust the horizontal beam.


**Maintenance Procedure**

**Headlight Beam Horizontal Adjustment**

- Insert the conventional screwdriver into the adjuster from underside of the headlight, turn the horizontal adjuster [A] on the headlight housing in or out until the beam points straight ahead. Turning the adjuster clockwise moves the headlight beam to the left.

**Headlight Beam Vertical Adjustment**

- Insert the conventional screwdriver into the adjuster from the slit of the meter cover, turn the vertical adjuster [B] on the headlight housing in or out to adjust the headlight vertically.

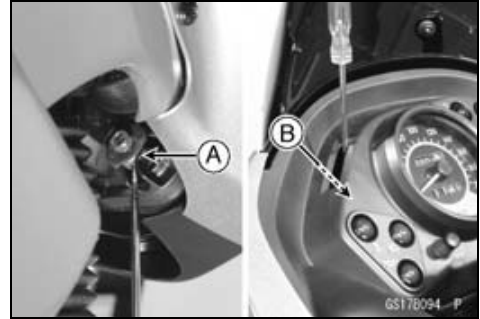

**NOTE**

○ On high beam, the brightest point should be slightly below horizontal with the motorcycle on its wheels and rider seated. Adjust the headlight to the proper angle according to local regulations.

**Side Stand Switch Operation Inspection**

- Inspect the side stand switch [A] operation in accordance to below table.

**Sidestand Switch Operation**

Side Stand	Gear Position	Clutch Lever	Engine Start	Engine Run
Up	Neutral	Released	Starts	Continue running
Up	Neutral	Pulled in	Starts	Continue running
Up	In Gear	Released	Doesn't start	Continue running
Up	In Gear	Pulled in	Starts	Continue running
Down	Neutral	Released	Starts	Continue running
Down	Neutral	Pulled in	Starts	Continue running
Down	In Gear	Released	Doesn't start	Stops
Down	In Gear	Pulled in	Doesn't start	Stops



★ If the side stand switch operation does not work, inspect or replace the following item.

Battery (see Battery Activation in the Electrical System chapter)

Main Fuse 30 A (see Fuses in the Electrical System chapter)

Ignition Fuse 10 A (see Fuses in the Electrical System chapter)

Ignition Switch (see Switch Inspection in the Electrical System chapter)

Side Stand Switch (see Switch Inspection in the Electrical System chapter)



## 2-38 PERIODIC MAINTENANCE

### Maintenance Procedure

Engine Stop Switch (see Switch Inspection in the Electrical System chapter)

Starter Button (see Switch Inspection in the Electrical System chapter)

Starter Relay (see Starter Relay Inspection in the Electrical System chapter)

Junction Box (see Junction Box Inspection in the Electrical System chapter)


Harness (see Wiring Inspection in Electrical System chapter)

★ If the all parts are good condition, replace the IC igniter.

#### Engine Stop Switch Operation Inspection

##### First Step

- Turn on the ignition switch.
  - Set the neutral position.
  - Turn the engine stop switch to stop position [A].
  - Push the starter button.
  - The engine does not start.
- ★ If the engine starts, inspect or replace the following item.
- Engine Stop Switch (see Switch Inspection in the Electrical System chapter)

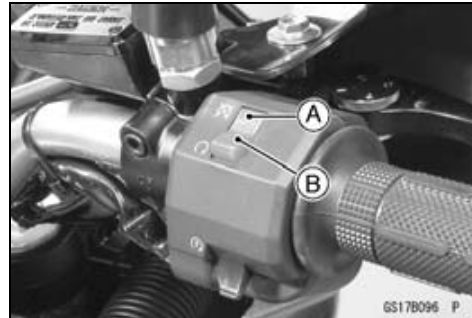

##### Second Step

- Turn on the ignition switch.
  - Set the neutral position.
  - Turn the engine stop switch to run position [B].
  - Push the starter button and run the engine.
  - Turn the engine stop switch to stop position.
  - Immediately the engine should be stop.
- ★ If the engine does not stop, inspect or replace the following item.
- Engine Stop Switch (see Switch Inspection in the Electrical System chapter)
- ★ If the engine stop switch is good condition, replace the IC Igniter.

### Others

#### Chassis Parts Lubrication

- Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.
- Lubricate the points listed below with indicated lubricant.

#### NOTE

○ Whenever the vehicle has been operated under wet or rainy conditions, or especially after using a high-pressure water spray, perform the general lubrication.


#### Pivots: Lubricate with Motor Oil.

Rear Brake Rod Joint

**Maintenance Procedure**

**Points: Lubricate with Grease.**


- Clutch Inner Cable Upper and Lower Ends [A]
- Throttle Inner Cable Upper and Lower Ends
- Fast Idle Inner Cable Upper and Lower end
- Clutch Lever Pivot (Apply silicone grease)
- Brake Lever Pivot (Apply silicone grease)
- Brake Pedal Pivot
- Side Stand
- Tie-Rod Pivot
- Rocker Arm Pivot
- Speedometer Gear Housing

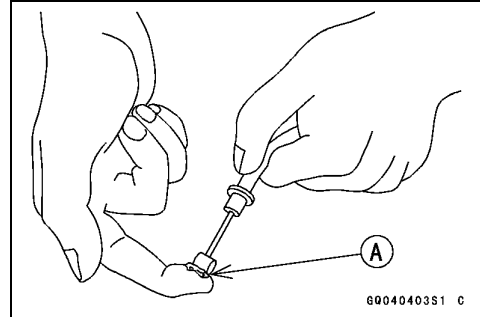


**Cables: Lubricate with Cable Lubricant.**

- Fast Idle Cable
- Throttle Cables
- Clutch Cable

- Lubricate the cables by seeping the oil between the cable and housing.
- The cable may be lubricated by using a commercially available pressure cable lubricator with an aerosol cable lubricant.

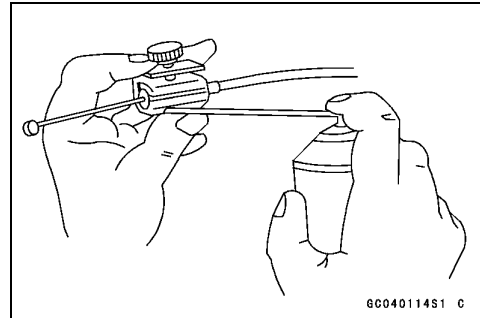

- With the cable disconnected at both ends, the cable should move freely [A] within the cable housing.
- ★ If cable movement is not free after lubricating, if the cable is frayed [B], or if the cable housing is kinked [C], replace the cable.

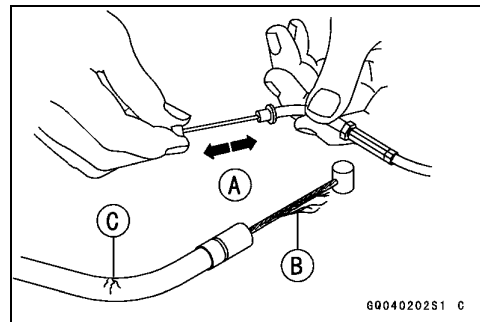

**Bolts, Nuts and Fastener Tightness Inspection**

- Check the tightness of the bolts and nuts listed here. Also, check to see that each cotter pin is in place and in good condition.

**NOTE**

○ For the engine fasteners, check the tightness of them when the engine is cold (at room temperature).

- ★ If there are loose fasteners, retorque them to the specified torque following the specified tightening sequence. Refer to the appropriate chapter for torque specifications. If torque specifications are not in the appropriate chapter, see the Standard Torque Table. For each fastener, first loosen it by 1/2 turn, then tighten it.
- ★ If cotter pins are damaged, replace them with new ones.

## 2-40 PERIODIC MAINTENANCE

---

### Maintenance Procedure

---

#### Nut, Bolt and Fastener to be checked

##### Wheels:

- Front Axle Nut
- Front Axle Clamp Bolt
- Rear Axle Nut
- Rear Axle Nut Clip

##### Brakes:

- Master Cylinder Clamp Bolts
- Brake Lever Pivot Nut
- Caliper Mounting Bolts
- Brake Pedal Lever Clamp Bolt
- Cam Lever Clamp Bolt
- Brake Rod Joint Cotter Pin
- Torque Link Nuts
- Torque Link Nut Clips

##### Suspension:

- Front Fork Clamp Allen Bolts
- Front Fender Mounting Bolts
- Rear Shock Absorber Mounting Bolts
- Swingarm Pivot Shaft Nut

##### Steering:

- Stem Head Nut
- Handlebar Mounting Nuts

##### Engine:

- Engine Mounting Bolts and Nuts
- Shift Pedal Bolt
- Muffler Mounting Bolts and Nuts
- Exhaust Pipe Holder Nuts
- Muffler Connecting Clamp Bolt
- Clutch Lever Holder Clamp Bolt
- Clutch Lever Pivot Nut

##### Others:

- Side Stand Pivot Nut
- Front Footpeg Bracket Mounting Bolts
- Rear Frame Mounting Bolts

### Replacement Parts

#### *Fuel Hose Replacement*

- Remove the fuel tank (see Fuel Tank Removal in the Fuel System).
- Slide the clamps of both hose end of fuel tame and carburetor.
- Replace the fuel hose with a new one.
- Clamp the hose securely with clamps.



**Maintenance Procedure**

*Air Cleaner Element Replacement*

**NOTE**

○ Since repeated cleaning opens the pores of the foam element, replace it with a new one periodically. Also, if there is a brake in the element material or any other damage to the element, replace the element with a new one.

**⚠ WARNING**

If dirt or dust is allowed to pass through into the throttle assy, the throttle may become stuck, possibly causing an accident.

**CAUTION**

If dirt gets through into the engine, excessive engine wear and possibly engine damage will occur.

*Coolant Change*

**Coolant Draining**

The coolant should be changed periodically to ensure long engine life.


**CAUTION**

Use coolant containing corrosion inhibitors made specifically for aluminum engines and radiators in accordance with the instructions of the manufacturers (see Coolant Filling).

**⚠ WARNING**

To avoid burns do not remove the radiator cap or try to change the coolant when the engine is still hot. Wait until it cools down.  
Coolant on tires will make them slippery and can cause an accident and injury. Immediately wipe up or wash away any coolant that spills on the frame, engine, or other painted parts.  
Since coolant is harmful to the human body, do not use for drinking.

- Situate the motorcycle so that it is perpendicular to the ground.
- Remove the engine guard (see engine Guard Removal in the Frame chapter).
- Place a container under the water pump [A].
- Remove the drain plug [B], and drain the coolant.
- Remove the left lower fairing (see Lower Fairing Removal in the Frame chapter).

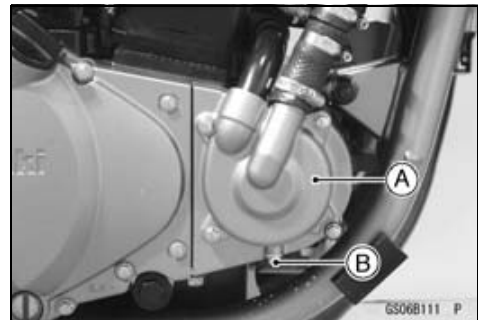


## 2-42 PERIODIC MAINTENANCE

### Maintenance Procedure

- Remove the radiator cap [A] in two steps. First turn the cap counterclockwise to the first stop and wait there for a few seconds. Then push down and turn it further in the same direction and remove the cap.
- The coolant will drain from the radiator and engine.




- Remove the left side cover (see Side Covers Removal in the Frame chapter).
- Pull off the air vent hose [A], unscrew the bolts [B] and remove the reserve tank [C] with the lower hose attached.
- Unscrew the cap [D] and pour the coolant into a container.
- Inspect the old coolant for color and smell (mentioned above).

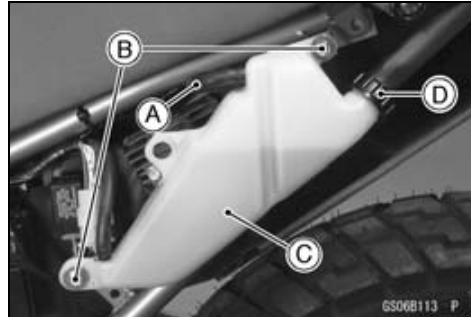

### Coolant Filling


- Install the drain plug [A]. Always replace the gasket with a new one.
- Tighten the drain plug.  
**Torque - Coolant Drain Plug: 11 N·m (1.1 kgf·m, 95 in·lb)**

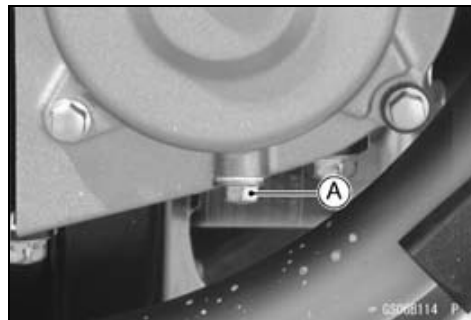

- Fill [A] the radiator up to the bottom of the radiator filler neck [B] with coolant [C], and install the cap turning it clockwise about 1/4 turn.

### NOTE

- Pour in the coolant slowly so that it can expel the air from the engine and radiator.
- The radiator cap must be installed in two steps. First turn the cap clockwise to the first stop. Then push down on it and turn it the rest of the way.

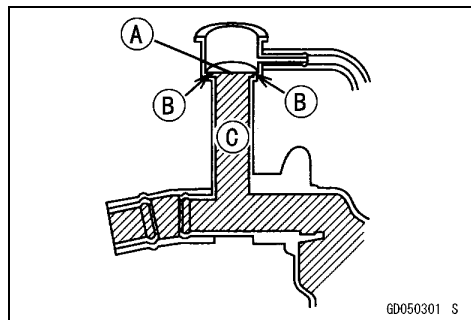

### CAUTION

**Soft or distilled water must be used with the antifreeze (see Specifications) in the cooling system. If hard water is used in the system, it causes scales accumulation in the water passages, and considerably reduces the efficiency of the cooling system.**

**Maintenance Procedure**

**Water and Coolant Mixture Ratio (when shipping)**

Soft Water	50%
Coolant	50%
Freezing Point	-35°C (-31°F)
Total Amount	1.7 L (1.8 US qt)


**NOTE**

○ Choose a suitable mixture ratio by referring to the coolant manufacturer's directions.

- Bleed the air from the cooling system while the engine is running.
- Start the engine with the radiator cap removed and run it until no more air bubbles [A] can be seen in the coolant.
- Tap the radiator hoses to force any air bubbles caught inside.
- Stop the engine and add coolant up to the radiator filler neck.
- Install the radiator cap.



- Remove the reserve tank cap.
- Fill the reserve tank up to the H level [A] with coolant and install the cap.

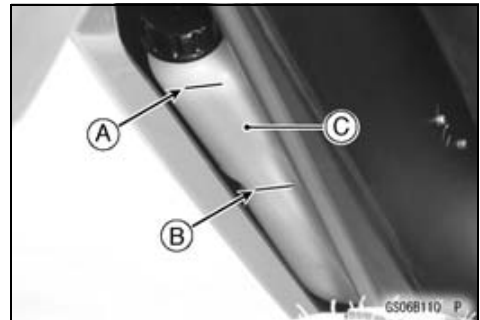

**CAUTION**

**Do not add more coolant above the F level.**


- Install:
  - Engine Guard
  - Left Side Cover
  - Left Lower Fairing

## 2-44 PERIODIC MAINTENANCE

### Maintenance Procedure

#### Radiator Hoses and O-ring Replacement


- Drain the coolant (see Coolant Draining).
- Remove:
  - Lower Fairings (see Lower Fairing Removal in the Frame chapter)
  - Spark Plug Caps
  - Thermostat Housing Cover [A]
  - Pipe [B]
  - Hoses [C]
  - O-rings [D]
  - To Cylinder Head [E]
  - To Carburetor [F]
  - To Cylinder [G]
- Apply grease to the new O-rings and install them.
- Install the hoses and tighten the clamps securely.
- Fill the coolant (see Coolant Filling).
- Check the cooling system for leaks.

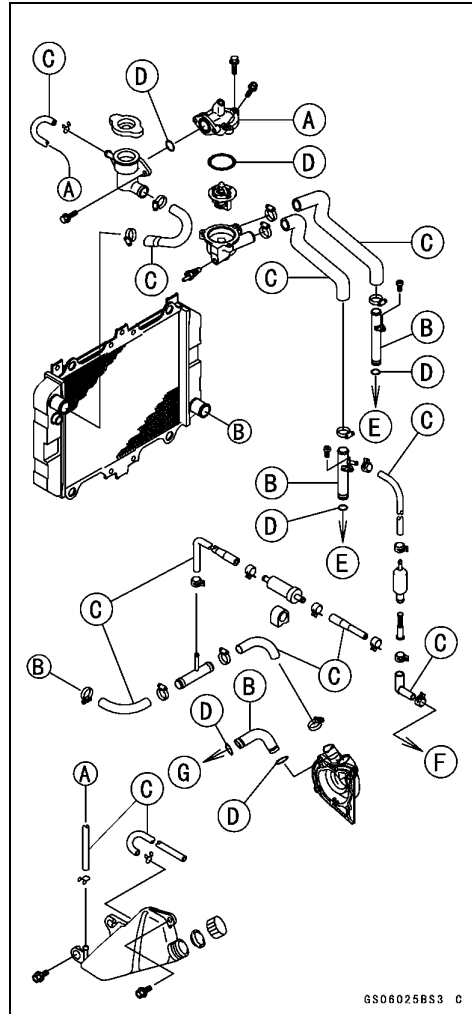

#### Engine Oil Change

- Warm up the engine so that the oil will pick up any sediment and drain easily. Then stop the engine.
- Support the motorcycle perpendicular to the ground, and place an oil pan beneath the engine.
- Remove the engine oil drain plug [A], and let the oil drain completely.
- If the oil filter is to be changed, replace it with a new one.
- Check the gasket at the drain plug for damage.
- ★ Replace the gasket with a new one if it is damaged.
- After the oil has completely drained out, install the drain plug with the gasket, and tighten it.

**Torque - Engine Oil Drain Plug: 29 N·m (3.0 kgf·m, 22 ft·lb)**

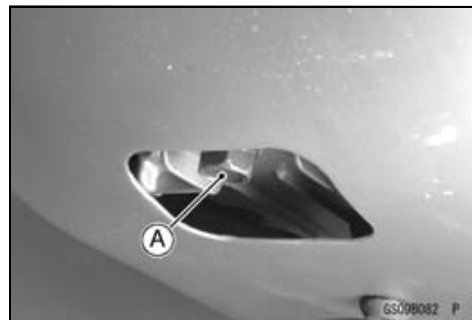

**Maintenance Procedure**

- Fill the engine with a good quality motor oil specified in the table.

**Torque - Oil Filler Plug: 1.5 N·m (0.15 kgf·m, 13 in·lb)**


- Check the oil level.

**Engine Oil**

**Grade:** API SE, SF, SG or  
API SH or SJ with JASO MA

**Viscosity:** SAE 10W40

**Capacity:** 2.8 L (When filter is not removed)  
3.0 L (When filter is removed)  
3.4 L (When engine is completely dry)

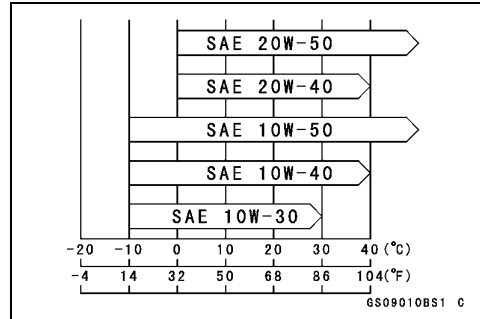

**NOTE**

○Although 10W-40 engine oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions in your riding area.

*Oil Filter Replacement*


- Support the motorcycle perpendicular to the ground.
- Remove the engine guard.
- Drain the engine oil (see Engine Oil Change).
- Using an oil filter wrench [A] on the oil filter [B], unscrew it.

**Special Tool - Oil Filter Wrench: 57001-1249**

- Replace the oil filter with a new one.
- Apply engine oil to the gasket before screwing on.
- Tighten the oil filter with an oil filter wrench or tighten it with hands about 3/4 turns after gasket touches the mounting surface of the engine.

**Torque - Oil Filter: 17 N·m (1.7 kgf·m, 12.5 ft·lb)**

- Pour in the specified type and amount of oil (see Engine Oil Change).
- Thoroughly warm up the engine and check for oil leakage.

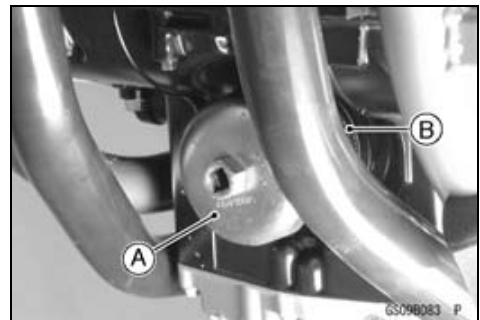

*Brake Hose Replacement*

<b>CAUTION</b>
<b>Brake fluid quickly ruins painted or plastic surfaces; any spilled fluid should be completely wiped up immediately with wet cloth.</b>

- When removing the brake hose, take care not to spill the brake fluid on the painted or plastic parts.
- When removing the brake hose, temporarily secure the end of the brake hose to some high place to keep fluid loss to a minimum.
- There are washers on each side of the brake hose fitting. Replace them with new ones when installing.

## 2-46 PERIODIC MAINTENANCE

### Maintenance Procedure


- When installing the hose, avoid sharp bending, kinking, flattening or twisting, and route the hose according to Cable, Wire and Hose Routing in the Appendix chapter.
- Tighten the banjo bolts to the specified torque.

**Torque - Brake Hose Banjo bolts: 34 N·m (3.5 kgf·m, 25 ft·lb)**

- Bleed the brake line after installing the brake hose.

#### Brake Fluid Change

- Level the brake fluid reservoir.
- Remove the reservoir cap.
- Remove the rubber cap from the bleed valve [A] on the caliper.
- Attach a clear plastic hose [B] to the bleed valve, and run the other end of the hose into a container.
- Fill the reservoir with fresh specified brake fluid.

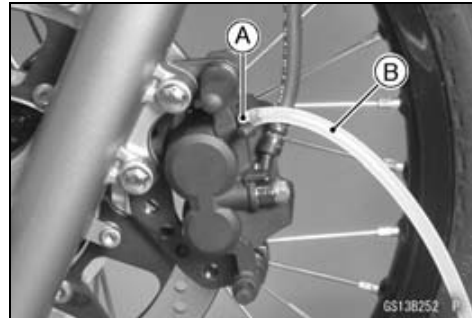

- Change the brake fluid as follows:
- Repeat this operation until fresh brake fluid comes out from the plastic hose or the color of the fluid changes.


#### NOTE

○ The fluid level must be checked often during the changing operation and replenished with fresh brake fluid. If the fluid in the reservoir runs out any time during the changing operation, the brakes will need to be bled since air will have entered the brake line.


1. Open the bleed valve [A].
2. Apply the brake and hold it [B].
3. Close the bleed valve [C].
4. Release the brake [D].

- Remove the clear plastic hose.
- Tighten the bleed valve to the specified torque, and install the rubber cap.

**Torque - Caliper Bleed Valve: 7.8 N·m (0.8 kgf·m, 69 in·lb)**

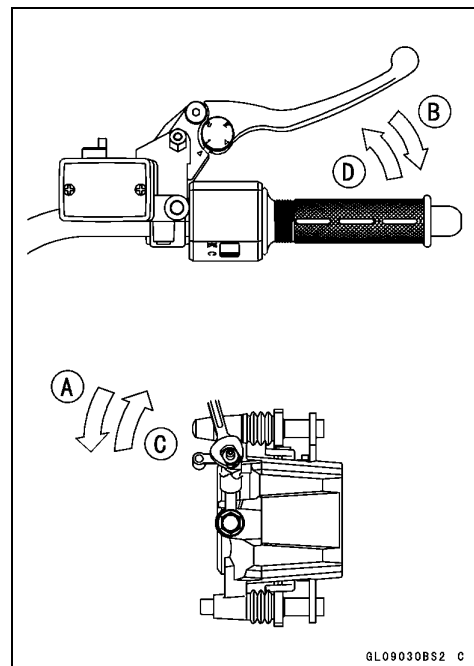

- Follow the procedure below to install the brake fluid reservoir cap correctly.
- First, tighten the brake fluid reservoir cap [B] clockwise [C] by hand until the resistance is felt fully; then, tighten the cap an additional 1/6 turn [D] while holding the brake fluid reservoir [A] body.
- After changing the fluid, check the brake for good braking power, no brake drag, and no fluid leakage.
- ★ If necessary, bleed the air from the lines.

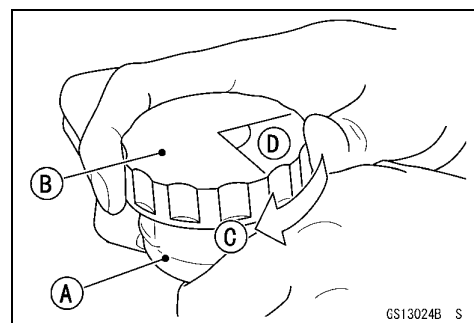

---

## Maintenance Procedure

---

### *Bleeding the Brake Line*

The brake fluid has a very low compression coefficient so that almost all the movement of the brake lever is transmitted directly to the caliper for braking action. Air, however, is easily compressed. When air enters the brake line, brake lever movement will be partially used in compressing the air. This will make the lever feel spongy, and it will be a loss in braking power.

#### **⚠ WARNING**

**Be sure to bleed the air from the brake line whenever brake lever action feels soft or spongy, after the brake fluid is changed, or whenever a brake line fitting has been loosened for any reason.**

- Remove the reservoir cap, and fill the reservoir with fresh brake fluid to the upper level line in the reservoir.
- With the reservoir cap off, slowly pump the brake lever several times until no air bubbles can be seen rising up through the fluid from the holes at the bottom of the reservoir.
- Bleed the air completely from the master cylinder by this operation.

#### **NOTE**

- *The fluid level must be checked often during the bleeding operation and replenished with fresh brake fluid as necessary. If the fluid in the reservoir runs almost out any time during bleeding operation, the bleeding operation must be done over again from the beginning since air will have entered the line.*
- *Tap the brake hose lightly from the caliper to the reservoir for easier bleeding.*



## 2-48 PERIODIC MAINTENANCE

### Maintenance Procedure



- Install the reservoir cap.
  - Remove the rubber cap from the bleed valve on the caliper.
  - Attach a clear plastic hose to the bleed valve on the caliper, and run the other end of the hose into a container.
  - Bleed the air from the caliper as follows:
    - Repeat this operation until no more air can be seen coming out into the plastic hose.
      1. Pump the brake lever until it becomes hard, and apply the brake and hold it [A].
      2. Quickly open and close [B] the bleed valve while holding the brake applied.
      3. Release the brake [C].
  - Detach the clear plastic hose from the bleed valve.
  - Tighten the bleed valve to the specified torque, and install the rubber cap.
- Torque - Caliper Bleed Valve: 7.8 N·m (0.80 kgf·m, 69 in·lb)**
- Check the fluid level.
  - After bleeding is done, check the brake for good braking power, no brake drag, and no fluid leakage.

#### Caliper Rubber Parts Replacement

- Disassembly the calipers (see Brakes chapter).
- Replace the fluid seal [A] under any of the following conditions.
  - Fluid leakage around the pad.
  - Brakes overheat.
  - There is a large difference in left and right pad wear.
  - The seal is stuck to the piston.
- ★ If the fluid seal is replaced, replace the dust seal as well.
- After finishing the replacement, check the brake effectiveness.
- Replace the dust seal [B] when it is cracked, worm, swollen and otherwise damaged.

#### Master Cylinder Rubber Parts Replacement

- Remove the master cylinders (see Master Cylinder Removal in the Brakes chapter).
- Disassemble the master cylinder (see Master Cylinder Disassembly in the Brake System).
- Replace the piston assembly to renew the primary and secondary cups.
- After finishing the replacement, check the brake effectiveness.

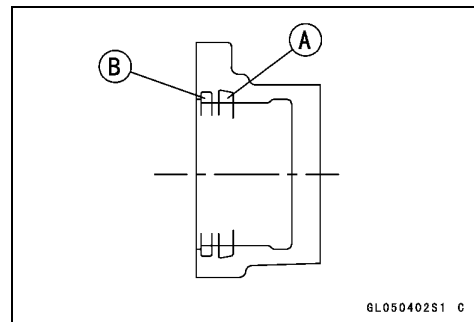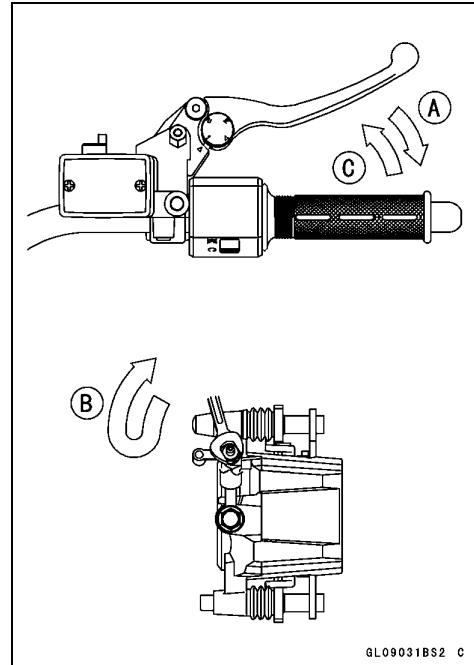




### Maintenance Procedure

#### *Spark Plug Replacement*

- Remove:
    - Lower Fairings (see Lower Fairings Removal in the Fuel chapter)
  - Carefully pull the spark plug caps from the spark plugs and unscrew the spark plug using an owner's tool [A].
- 
- Replace the spark plugs and tighten them with specified torque.  
**Torque - Spark Plugs: 14 N·m (1.4 kgf·m, 10 ft·lb)**
  - Fit the plug caps securely.

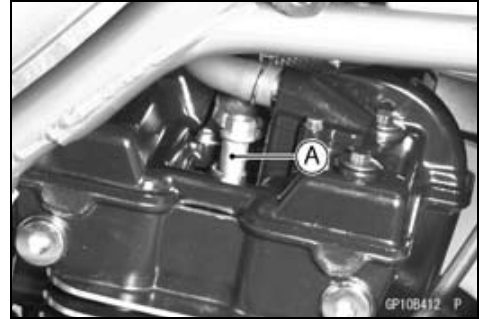




# Fuel System

## Table of Contents

Exploded View .....	3-2
Specifications .....	3-6
Special Tools .....	3-7
Throttle Grip and Cables .....	3-8
Throttle Cable Inspection .....	3-8
Throttle Cable Lubrication .....	3-8
Throttle Cable Removal .....	3-8
Throttle Cable Installation .....	3-8
Choke Cable .....	3-9
Choke Cable Free Play Inspection .....	3-9
Choke Cable Free Play Adjustment .....	3-9
Choke Cable Installation .....	3-9
Choke Cable Lubrication .....	3-9
Carburetors .....	3-10
Carburetor Removal .....	3-10
Carburetor Installation .....	3-10
Service Fuel Level Inspection .....	3-11
Service Fuel Level Adjustment .....	3-12
Fuel System Cleanliness Inspection .....	3-13
Carburetor Disassembly/Assembly .....	3-14
Carburetor Separation/Assembly .....	3-15
Carburetor Cleaning .....	3-17
Carburetor Inspection .....	3-18
Coolant Filter Cleaning .....	3-18
Air Cleaner .....	3-19
Air Cleaner Element Removal .....	3-19
Air Cleaner Element Installation .....	3-19
Air Cleaner Element Cleaning and Inspection .....	3-19
Air Cleaner Housing Removal .....	3-19
Air Cleaner Housing Installation .....	3-20
Air Cleaner Draining .....	3-20
Fuel Tank .....	3-21
Fuel Tank Removal .....	3-21
Fuel Tank Installation .....	3-22
Fuel Tap Removal .....	3-22
Fuel Tap Installation .....	3-22
Fuel Tank and Tap Cleaning .....	3-22
Fuel Tap Inspection .....	3-23
Fuel Tank and Cap Inspection .....	3-23
Fuel Hose .....	3-24
Fuel Hose and Connection Inspection .....	3-24

# 3-2 FUEL SYSTEM

## Exploded View

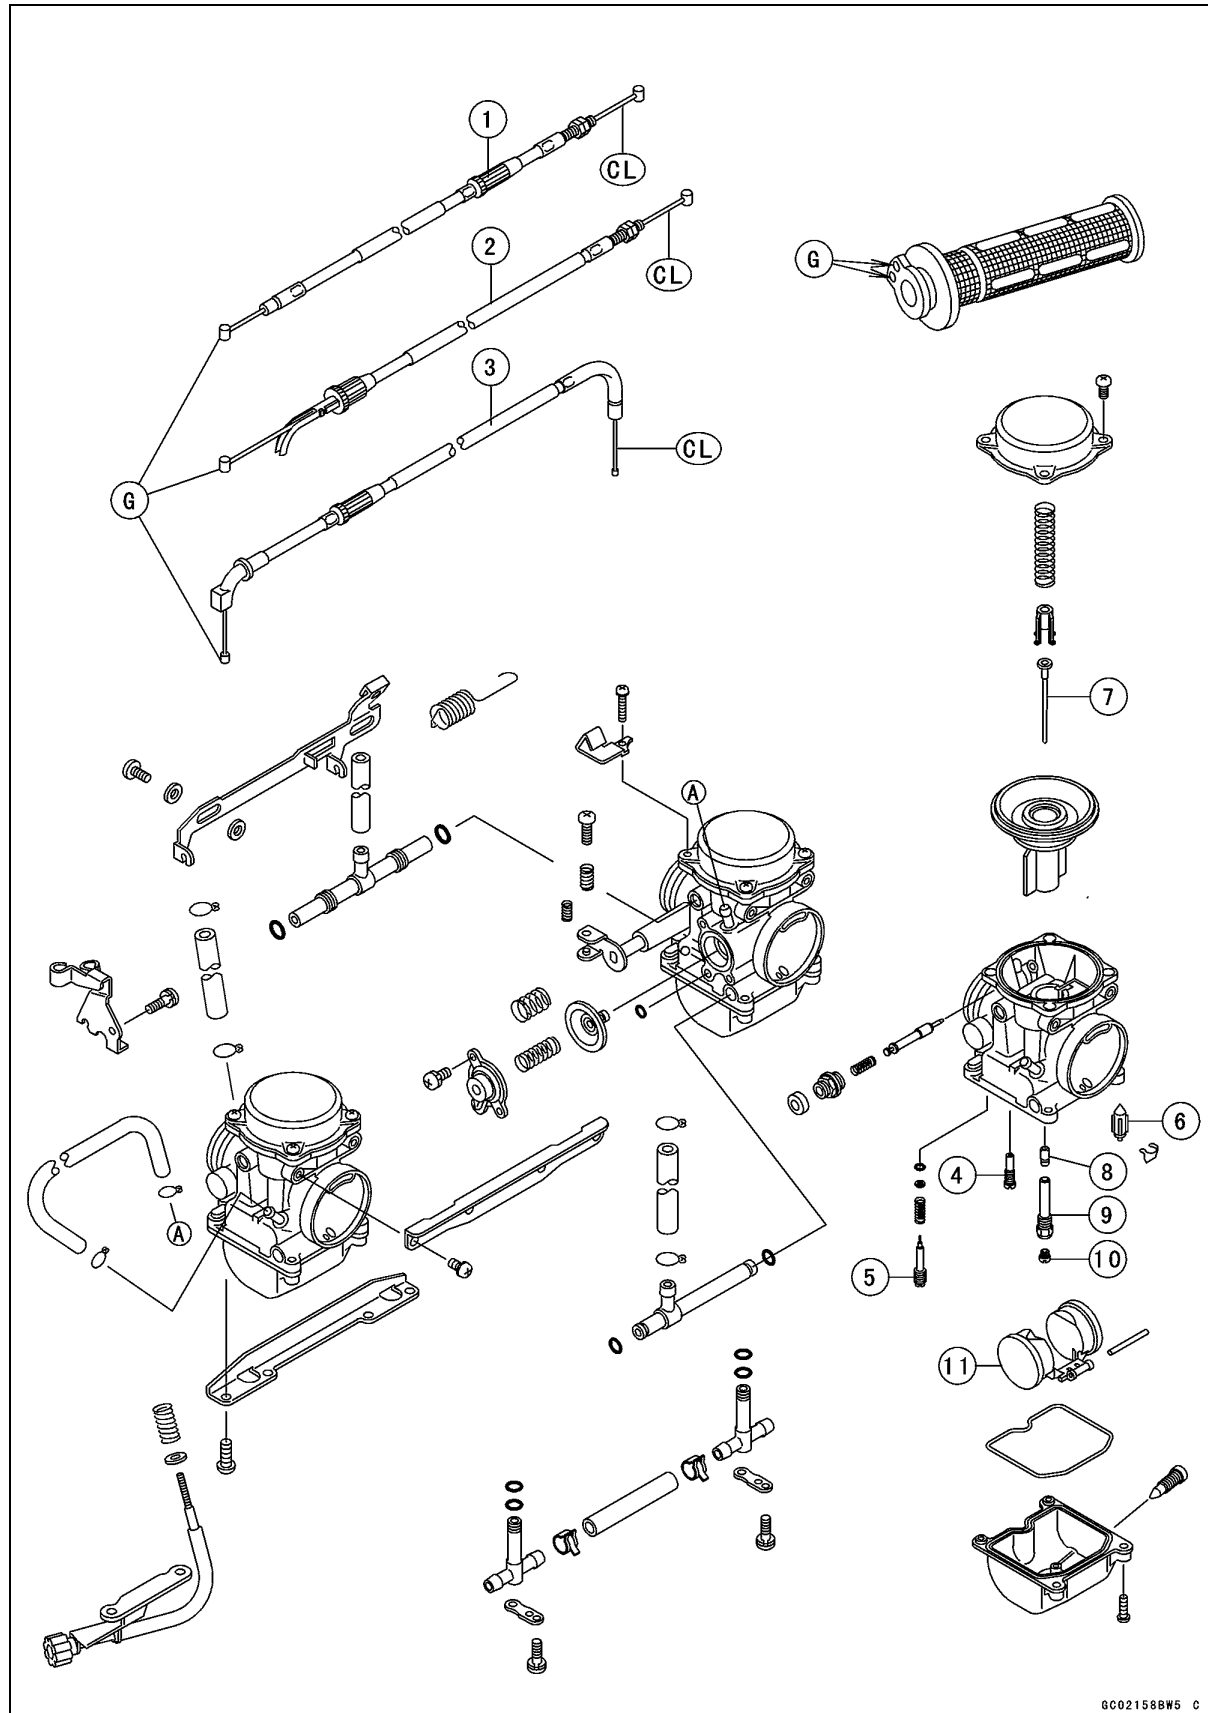

GC02158BW5 C

---


**Exploded View**

---

1. Throttle Cable (Accelerator)
  2. Throttle Cable (Decelerator)
  3. Choke Cable
  4. Pilot (Slow) Jet
  5. Pilot (Slow) Air Screw
  6. Float Valve
  7. Jet Needle
  8. Needle Jet
  9. Needle Jet Holder
  10. Main Jet
  11. Float
- CL: Apply cable lubricant.  
G: Apply grease.

# 3-4 FUEL SYSTEM

## Exploded View

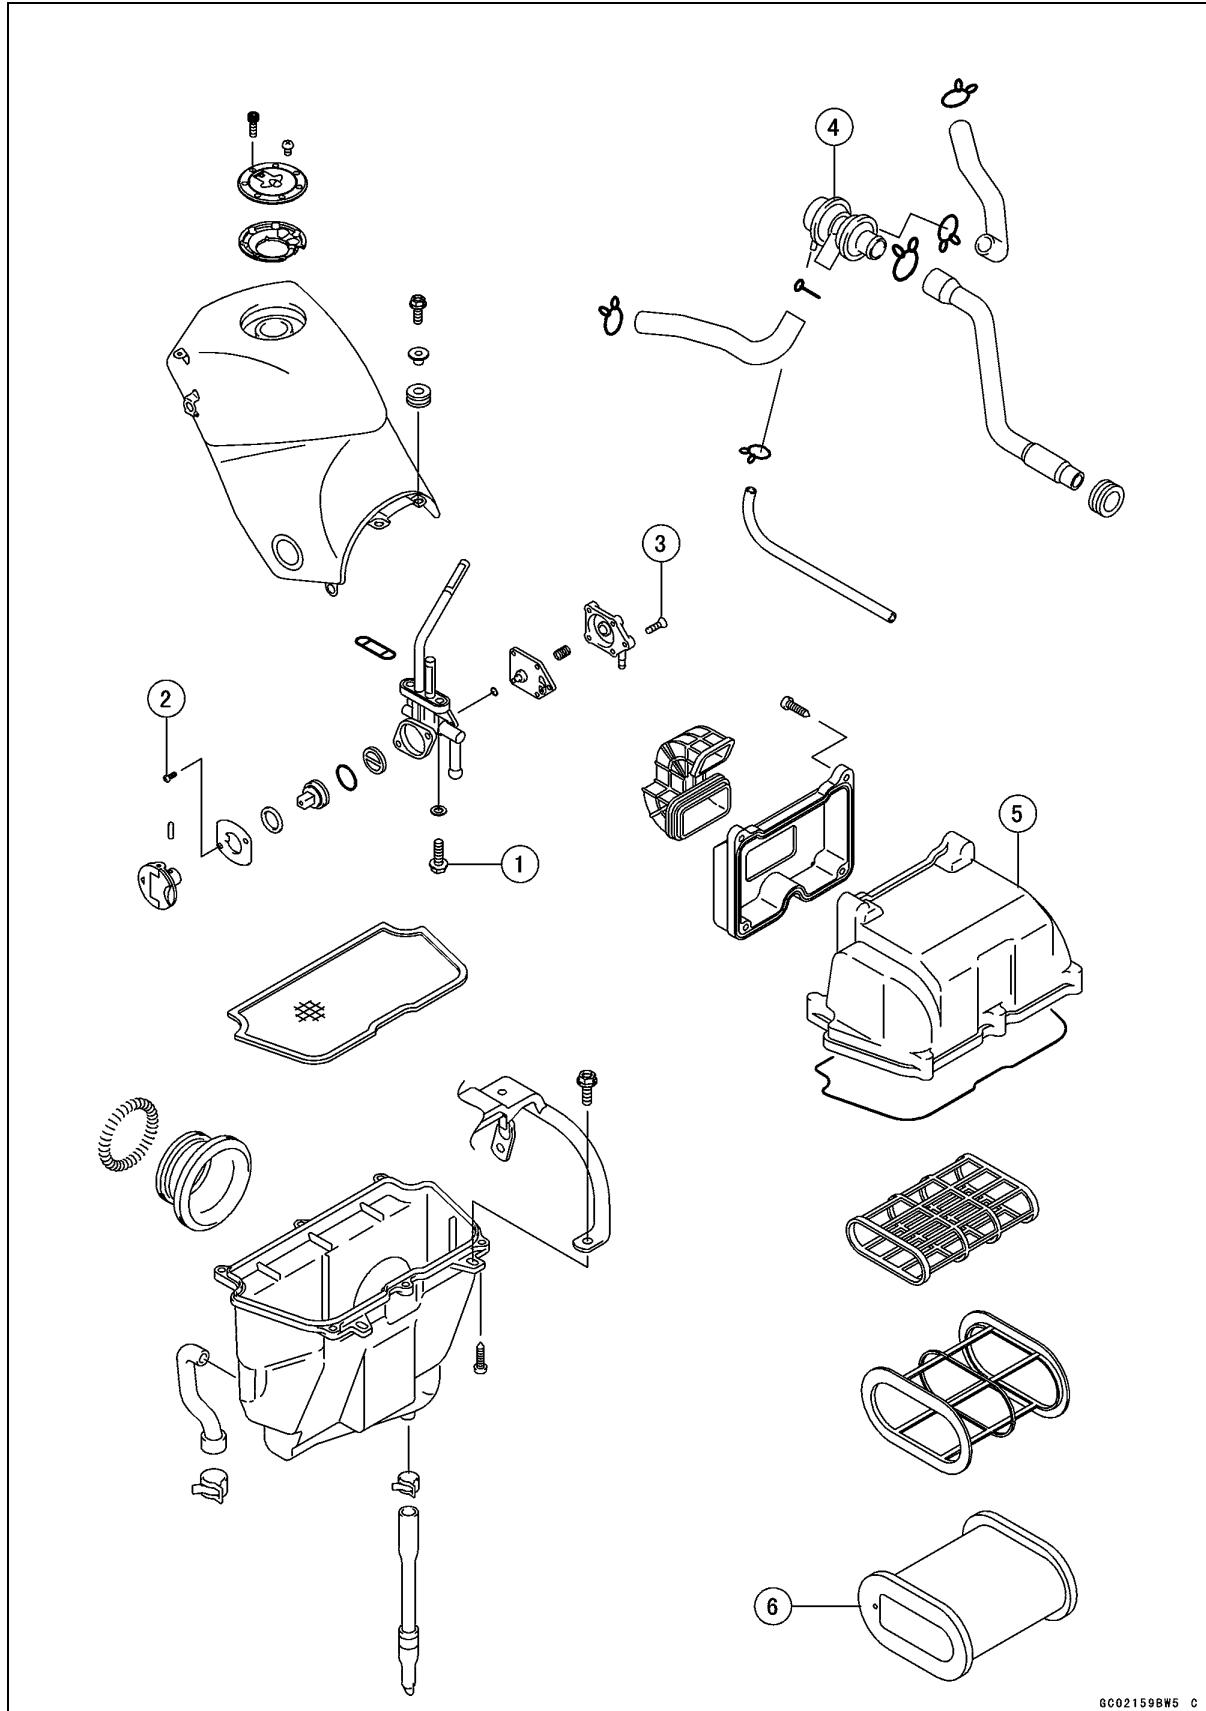

GC02159BW5 C

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Fuel Tap Mounting Bolts	5.0	0.51	44 in·lb	
2	Fuel Tap Cover Screws	0.8	0.08	7 in·lb	
3	Air Cut Valve Cover Screws	1.0	0.10	9 in·lb	


- 4. Vacuum Switch Valve
- 5. Air Cleaner Housing
- 6. Air Cleaner Element

## 3-6 FUEL SYSTEM

### Specifications

Item	Standard
<b>Throttle Grip Free Play</b>	2 ~ 3 mm (0.08 ~ 0.12 in.)
<b>Choke Cable Free Play</b>	2 ~ 3 mm (0.08 ~ 0.12 in.)
<b>Carburetors</b>	
Mark, Type	KEIHIN CVK34
Idle Speed	1 200 ±50 r/min (rpm)
Pilot Screw (Turns Out)	1 3/4 ±1/4
Synchronization Vacuum	2.7 kPa (2 cmHg) or less difference between two carburetors
Service Fuel Level	0.5 mm (0.02 in.) below ~ 1.5 mm (0.06 in.) above the float bowl mating surface
Float Height	17 ±2 mm (0.67 ±0.08 in.)
Main Jet	Left: #95 Right: #92
Main Air Jet	#100
Needle Jet	—
Needle Jet Holder	—
Jet Needle Mark	Left: N60D, Right: N96L
Pilot Jet (Slow Jet)	#35
Pilot Air Jet (Slow Air Jet)	#80
Starter Jet	#52
Throttle Valve Angle	11°


Pilot Screw [A]  
 Pilot Jet [B]  
 Jet Needle [C]  
 Needle Jet [D]  
 Pilot Air Jet [E]  
 Main Air Jet [F]  
 Valve Seat [G]  
 Float Valve [H]  
 Needle Jet Holder [I]  
 Main Jet [J]

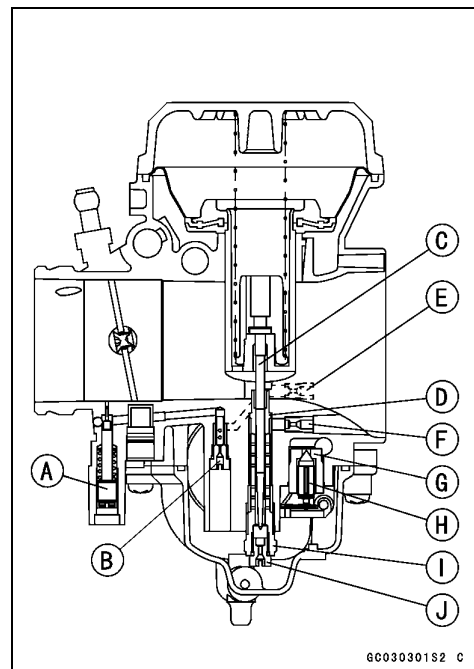




**Special Tools**

**Fuel Level Gauge:  
57001-1017**

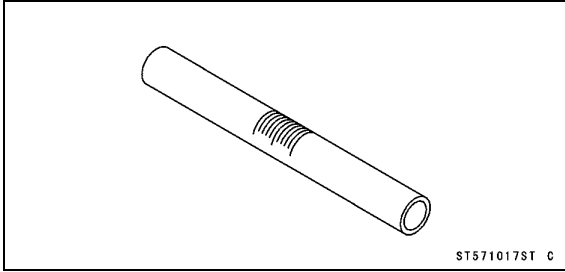

**Carburetor Drain Plug Wrench, Hex 3:  
57001-1269**

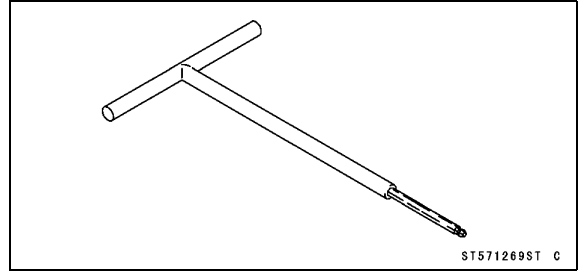

## 3-8 FUEL SYSTEM

### Throttle Grip and Cables

#### *Throttle Cable Inspection*

#### **Throttle Grip Free Play Inspection**

- Refer to the Throttle Cable Inspection in the Periodic Maintenance chapter.

#### **Throttle Grip Free Play Adjustment**

- Refer to the Throttle Cable Inspection in the Periodic Maintenance chapter.


#### **Throttle Cable Inspection**

- Refer to the Throttle Cable Inspection in the Periodic Maintenance chapter.


#### *Throttle Cable Lubrication*

Whenever the throttle cables are removed, lubricate the throttle cables as follows:

- Apply a thin coating of grease to the throttle cable lower ends [A].

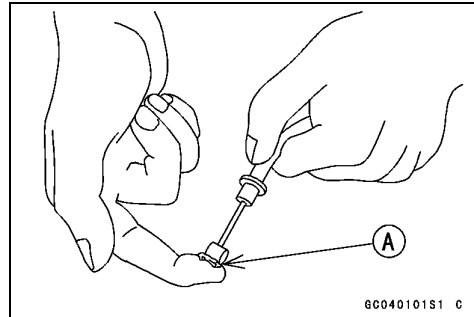


- Lubricate the throttle cable with a penetrating rust inhibitor.

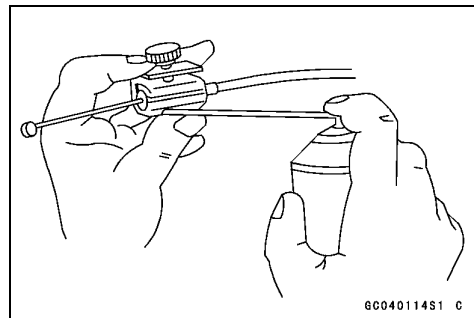


#### *Throttle Cable Removal*

- Remove the handlebar cover mounting bolt and nut.
- Remove the right switch housing screws [A], and split the switch housing [B].
- Remove the throttle cable.

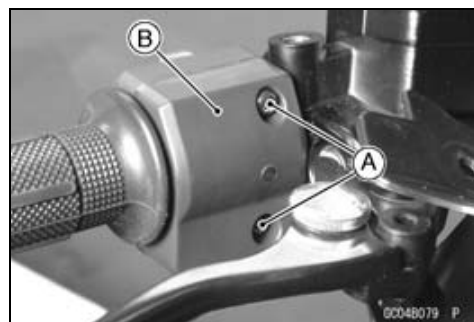

#### *Throttle Cable Installation*

- Fit the throttle cables into the right switch housing, assemble the switch housing.
- Install the switch housing cap aligning the projection [A] with the hole on the handlebar [B].

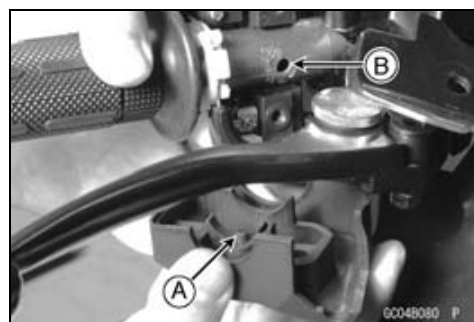



## Choke Cable

### Choke Cable Free Play Inspection

- Push the choke lever [A] all the way to the front.
- Check the choke cable free play [B].
- Determine the amount of choke cable play at the choke lever. Pull the choke lever until the starter plunger lever [C] at the carburetor touches the starter plunger [D]; the amount of choke lever lower end travel is the amount of choke cable play.
- ★ If the free play is incorrect, adjust the choke cable.


### Choke Cable Free Play

Standard: 2 ~ 3 mm (0.08 ~ 0.12 in.)

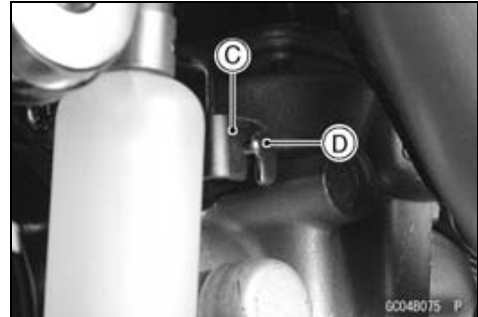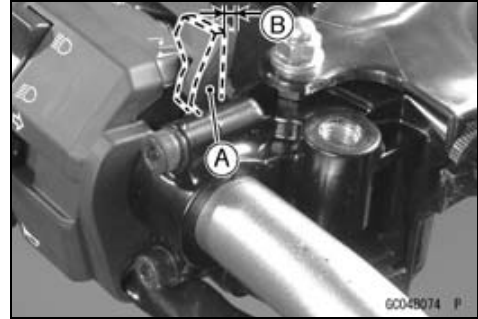

### Choke Cable Free Play Adjustment

- Loosen the locknut [A], and turn the adjuster [B] until the cable has the proper amount of free play.
- Tighten the locknut securely.

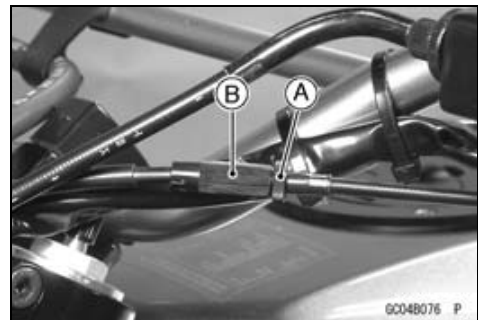

### Choke Cable Installation

- Install the choke cable in accordance with Cable, Wire, and Hose Routing in the Appendix chapter.
- After installation, adjust the cable free play properly.


### **⚠ WARNING**

**Operation with an incorrectly routed or improperly adjusted cable could result in an unsafe riding condition.**

### Choke Cable Lubrication

Whenever the choke cable is removed, lubricate the choke cable as follows:

- Apply a thin coating of grease to the cable upper end.
- Lubricate the cable with a penetrating rust inhibitor.
- Check that the choke inner cable slides smoothly by moving the choke lever to the front and rear.
- ★ If there is any irregularity, check the choke cable and routing.

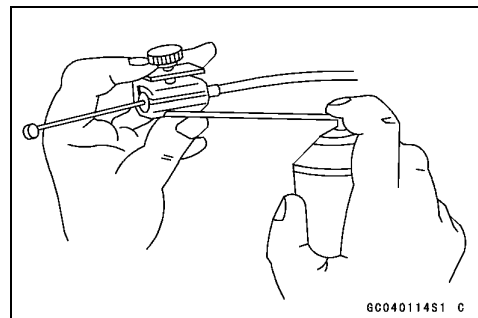

## 3-10 FUEL SYSTEM




### Carburetors

#### Carburetor Removal

#### **⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

- Remove:
  - Side Covers (see Side Cover Removal in the Frame chapter)
  - Seat (see Seat Removal in the Frame chapter)
  - Fuel Tank (see Fuel Tank Removal)
  - Throttle Cable Lower Ends [A]
  - Choke Cable Lower End [B]
  - Air Cleaner Housing (see Air Cleaner Housing Removal)
- Loosen:
  - Carburetor Clamp Screws [A]
- Slide up the clamp and pull up the vacuum hose [B].
- Slide the clamps [A] and remove the left and right coolant hoses [B].
- Move back the carburetor [C], and remove the carburetor.

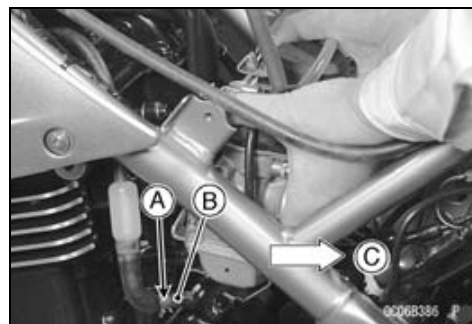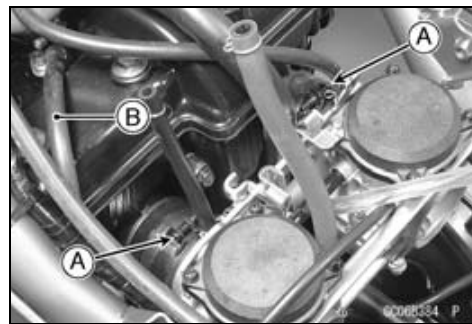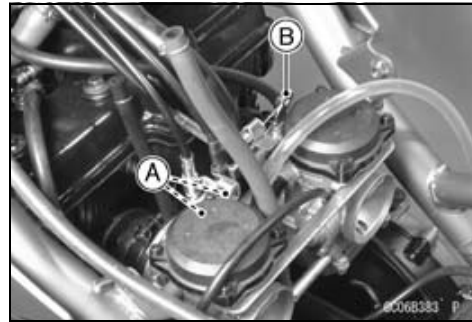

#### Carburetor Installation

- Installation is the reverse of removal.
- Tighten the carburetor holders clamps after inserting the carburetor into the holders enoughly.


## Carburetors

- Install the holder clamps [A] as shown being careful of the screw position and the screw head [B] direction.

### **⚠ WARNING**

**Install the clamp screws horizontally as shown. Otherwise the screws could come in contact with the vacuum adjusting screws, resulting in an unsafe riding condition.**

- [C] Top
- [D] Bottom

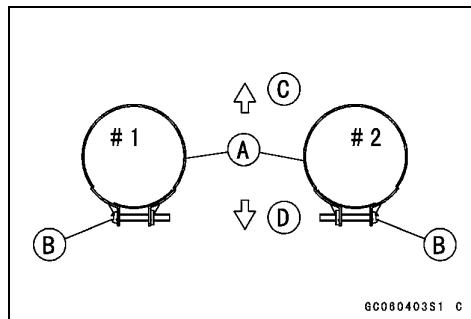

- Check fuel leakage from the carburetors.

### **⚠ WARNING**

**Fuel spilled from the carburetors is hazardous.**

- Adjust the following items if necessary.
  - Idle Speed
  - Vacuum Synchronization
  - Throttle Cables

### *Service Fuel Level Inspection*

### **⚠ WARNING**

**Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light**

- Situate the motorcycle so that it is perpendicular to the ground.
- Connect a suitable rubber hose (5 mm inside diameter and about 300 mm long) to the fitting at the bottom of each carburetor float bowl.


## 3-12 FUEL SYSTEM

### Carburetors

- Connect fuel level gauge [A] to the rubber hose.  
**Special Tool - Fuel Level Gauge: 57001-1017**
- Hold the gauge vertically against the side of the carburetor body so that the "middle" line [B] is several millimeters higher than the bottom edge [D] of the carburetor body.
- Turn the fuel tap to the PRI position to feed fuel to the carburetor, then turn out the carburetor drain plug [C] a few turns.
- Wait until the fuel level [E] in the gauge settles.
- Keeping the gauge vertical, slowly lower the gauge until the "middle" line is even with the bottom edge of the carburetor body.

#### NOTE

○ Do not lower the "middle" line below the bottom edge of the carburetor body. If the gauge is lowered and then raised again, the fuel level measured shows somewhat higher than the actual fuel level. If the gauge is lowered too far, dump the fuel out of it into a suitable container and start the procedure over again.

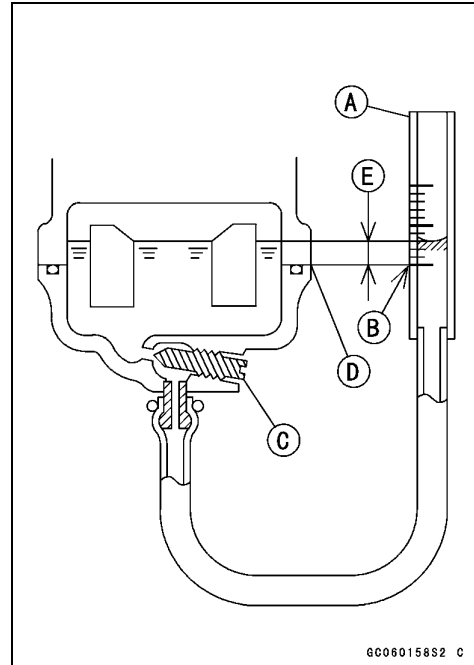

- Read the fuel level in the gauge and compare it to the specification.
- Screw in the carburetor drain plug.

#### Fuel Level

1.5 mm (0.06 in.) above ~ 0.5 mm (0.02 in.) below the bottom edge of carburetor body

- Turn the fuel tap to the ON position and remove the fuel level gauge.
- Inspect the fuel level in another carburetor in the same manner.
- ★ If the fuel level is incorrect, adjust it (see Service Fuel Level Adjustment).

#### Service Fuel Level Adjustment


#### **⚠ WARNING**

**Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.**


- Remove the carburetor, and drain the fuel into a suitable container.

**Carburetors**

- Remove the float bowl by taking out the float chamber screws [A] and water hose fitting screws [B] with lock-washers.

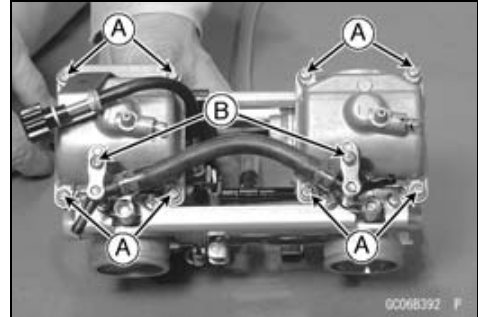


- Slide out the pivot pin [A] and remove the float [B].

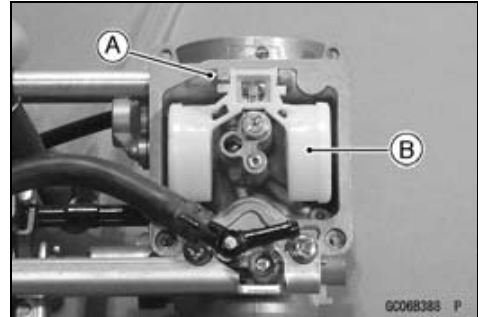

- Bend the tang [A] on the float arm very slightly to change the float height. Increasing the float height lowers the fuel level and decreasing the float height raises the fuel level.

**Float Height**


17.0 ±2.0 mm (0.67 ±0.08 in.)

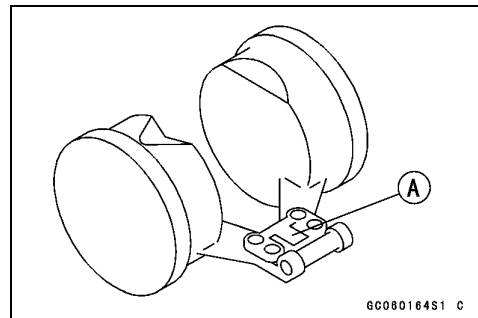

**NOTE**

○ Do not push the needle rod [A] in during the float height measurement [B].

- Assemble the carburetor, and recheck the fuel level.
- ★ If the fuel level cannot be adjusted by this method, the float or the float valve [C] is damaged.

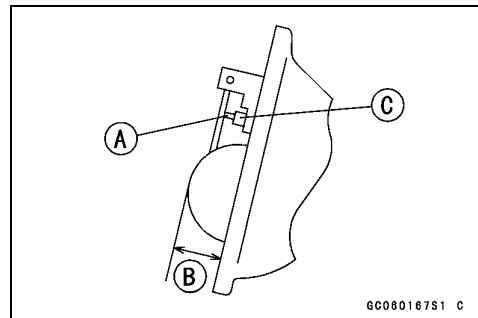

*Fuel System Cleanliness Inspection*

**⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light

## 3-14 FUEL SYSTEM

### Carburetors

- Connect a suitable hose [A] to the fitting at the bottom of each carburetor float bowl.
- Run the lower ends of the hoses into a suitable container.
- Turn the fuel tap to the PRI position.
- Turn out each drain plug [B] a few turns and drain the fuel from the float bowls.
- Check to see if water or dirt comes out.

**Special Tool - Carburetor Drain Plug Wrench, Hex 3: 57001-1269 [C]**

- ★ If any water or dirt appears during the above inspection, clean the fuel system (see Carburetor Cleaning and Fuel Tank Cleaning).
- Tighten the drain plugs and turn the fuel tap to the ON position.



#### *Carburetor Disassembly/Assembly*

- Read the WARNINGS in the Carburetor Removal.
- Check the throttle bores at the butterfly valves and around them for carbon deposits by opening the valves.
- Punch a hole in the plug and pry it out with an awl or other suitable tool
- Turn in the pilot screw and count the number of turns until it seats fully but not tightly, and then remove the screw. This is to set the screw to its original position when assembling.
- After installing the upper chamber cover, check that the vacuum piston slides up and down smoothly without binding in the carburetor bore.

#### **CAUTION**

**During carburetor disassembly, be careful not to damage the diaphragm. Never use a sharp edge to remove the diaphragm.**


- Turn in the pilot screw [A] fully but not tightly, and then back it out the same number of turns counted during disassembly.

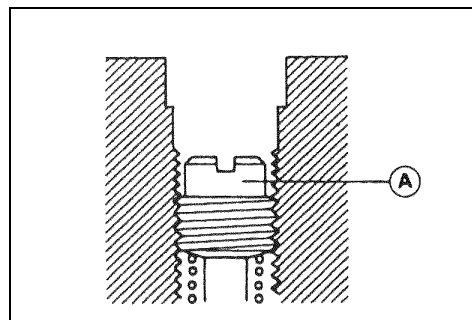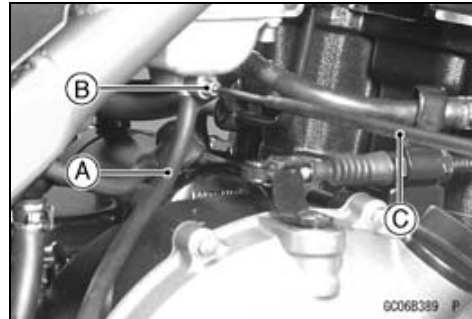




**Carburetors**

- Turn the carburetor body upside-down, and drop the needle jet [A] into place so that the smaller diameter end [B] of the jet goes in first.

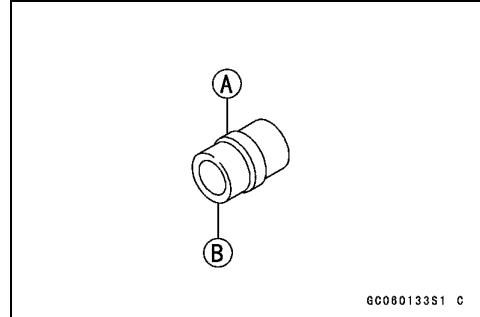


- Carefully screw in the needle jet holder. It will seat against the needle jet, pushing the end of the jet into the carburetor bore.

<b>CAUTION</b>
<b>Do not force the needle jet holder [A] and main jet [B] or overtighten them. The needle jet or the carburetor body could be damaged requiring replacement.</b>

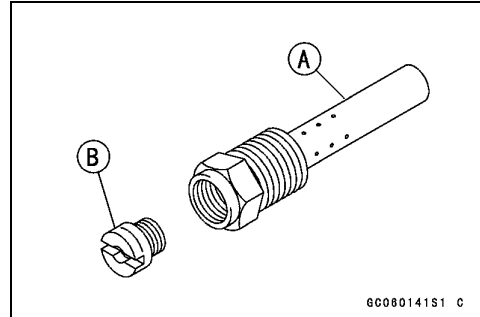


- Slip the jet needle through the hole in the center of the vacuum piston, and put the spring seat [A] on the top of the needle. Turn the seat so that it does not block the hole [B] at the bottom of the vacuum piston.

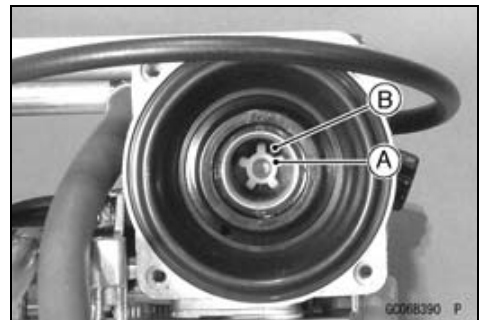


- Install the carburetor top cover.
- Turn in the pilot screw fully but not tightly, and then back it out the same number of turns counted during disassembly.
- When removing the coasting enricher system, unscrew the mounting screws [B] and remove the air cut valve cover [C], spring [D], O-ring [E] and diaphragm [F].  
Right Carburetor [A]

**Torque - Air Cut valve Cover Screws: 1.0 N·m (0.10 kgf·m, 9 in·lb)**

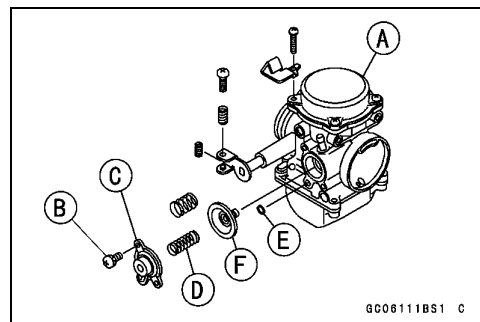

**Carburetor Separation/Assembly**


- Read the WARNINGS in the Carburetor Removal.
- Remove the choke synchronizing stay spring [A].
- Remove the choke synchronizing stay screws [B] with nylon washers, and remove the stay [C].

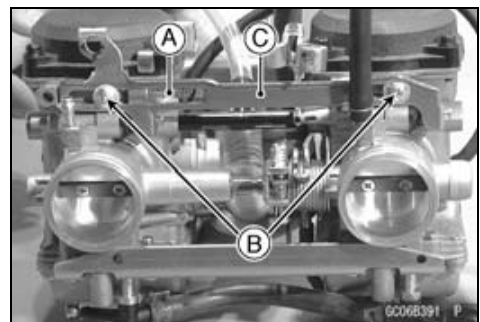


## 3-16 FUEL SYSTEM

### Carburetors


- Remove the upper carburetor mounting screws [A] and stay [B].
- Remove the fuel supply pipe connected both carburetors.
- Remove the vacuum hose [C] connected both carburetors.

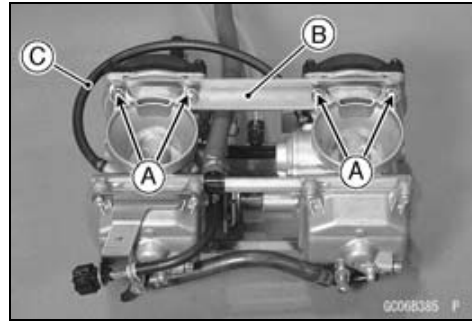

- Remove the lower carburetor mounting screws [A] and stay [B].

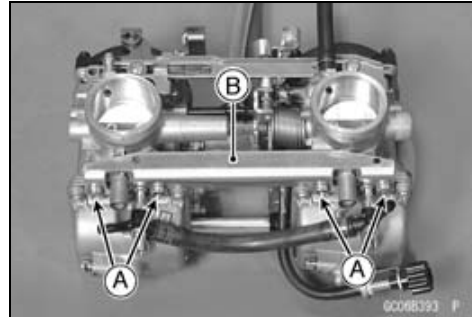

- Inspect the O-rings [A] of fuel supply pipe.
- ★ If they are damaged, replace the O-rings.

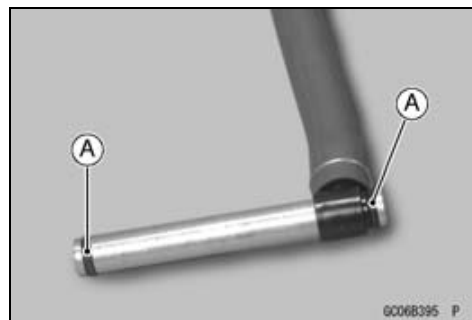


- The center lines of the carburetor bores must be parallel both horizontally and vertically. If they are not, loosen the mounting screws and align the carburetors on a flat surface. Retighten the mounting screws.
- After assembling the choke mechanism, check to see that the starter plunger lever slides from side to side smoothly without abnormal friction.

#### CAUTION

**Fuel mixture trouble could result if the starter plunger does not seat properly in its rest position after the choke lever is returned.**

## Carburetors

- Visually synchronize the throttle (butterfly) valves.
- Check to see that the throttle valves open and close smoothly without binding when turning the pulley.
- Visually check the clearance [A] between the throttle valve and the carburetor bore in each carburetor.
- ★ If there is a difference between the throttle valves, turn the balance adjusting screw [B] to obtain the same clearance. Do not remove the atmospheric pressure hose.

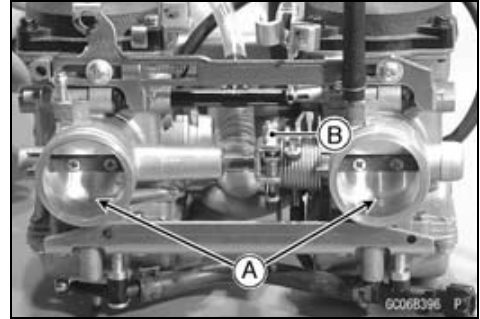

### Carburetor Cleaning

#### **⚠ WARNING**

Clean the carburetors in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents to clean the carburetors.

#### **CAUTION**

Do not use compressed air on an assembled carburetor, or the floats may be crushed by the pressure, and the vacuum piston diaphragms may be damaged. Remove as many rubber or plastic parts from the carburetor as possible before cleaning the carburetor with a cleaning solution. This will prevent damage to or deterioration of the parts. The carburetor body has plastic parts that cannot be removed. Do not use a strong carburetor cleaning solution which could attack these parts; instead, use a mild, high flash-point cleaning solution safe for plastic parts. Do not use wire or any other hard instrument to clean carburetor parts, especially jets, as they may be damaged.

- Disassemble the carburetors.
- Immerse all the metal parts in a carburetor cleaning solution.
- Rinse the parts in water.
- When the parts are clean, dry them with compressed air.
- Blow through the air and fuel passages with compressed air.
- Assemble the carburetors.

## 3-18 FUEL SYSTEM

### Carburetors

#### Carburetor Inspection


#### **⚠ WARNING**

**Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.**

- Remove the carburetors.
- Before disassembling the carburetors, check the fuel level (see Fuel Level Inspection).
- ★ If the fuel level is incorrect, inspect the rest of the carburetor before correcting it.
- Move the starter plunger lever from side to side to check that the starter plungers move smoothly without abnormal friction.
- ★ If the starter plungers do not work properly, replace the carburetors.
- Turn the throttle cable bracket to check that the throttle butterfly valves [A] move smoothly and return with spring tension.
- ★ If the throttle valves do not move smoothly, replace the carburetors.



- Disassemble the carburetors.
- Clean the carburetors.
- Check that the O-rings on the float bowl and drain plug and the diaphragm on the vacuum piston are in good condition.
- ★ If any of the O-rings or diaphragms are not in good condition, replace them.
- Check the plastic tip [A] of the float valve needle [B]. It should be smooth, without any grooves, scratches, or tears.
- ★ If the plastic tip is damaged [C], replace the needle.
- Push in the rod [D] in the other end of the float valve needle.
- ★ If it does not spring out, replace the needle.  
[E] Push and release

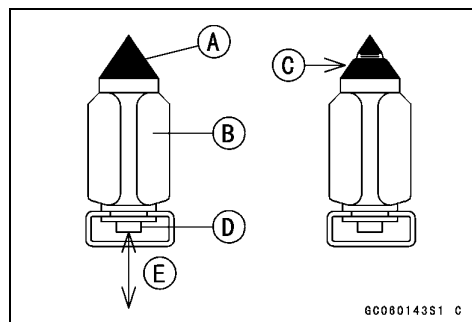


#### Coolant Filter Cleaning

- Refer to the Coolant Filter Cleaning in the Periodic Maintenance chapter.

## Air Cleaner

### Air Cleaner Element Removal


- Remove:
  - Side Covers (see Side Cover Removal in the Frame chapter)
  - Air Cleaner Cover Screws [A]
  - Seat (see Seat Removal in the Frame chapter)
  - Fuel Tank (see Fuel Tank Removal in the Fuel System chapter)

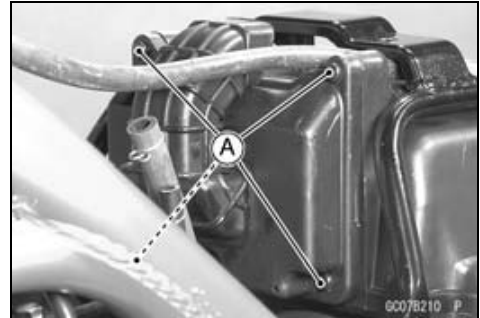

- Remove the element [A].
- Push a clean, lint-free towel into the carburetor intake to keep dirt or other foreign material from entering.

**⚠ WARNING**

**If dirt or dust is allowed to pass through into the carburetor, the throttle may become stuck, possibly causing accident.**

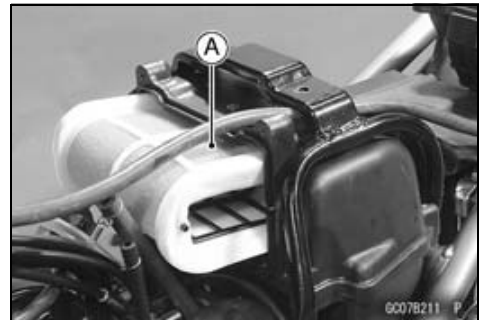


**CAUTION**

**If dirt gets through into the engine, excessive engine wear and possibly engine damage will occur.**

### Air Cleaner Element Installation

- Insert the air cleaner element into the housing so that the projections [A] on both side of the element holder fit to the groove [B].

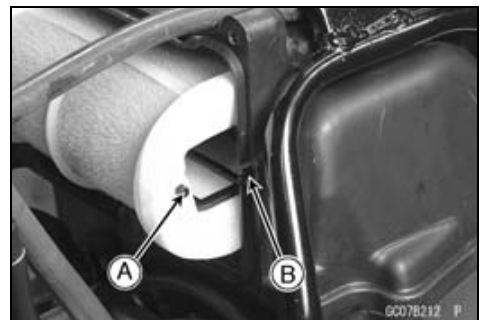

- Install:
  - Air Cleaner Element Cover
  - Fuel Tank
  - Seat
  - Side Covers

### Air Cleaner Element Cleaning and Inspection

- Refer to the Air Cleaner Element Cleaning and Inspection in the Periodic Maintenance chapter.

### Air Cleaner Housing Removal

- Remove:
  - Side Covers (see Side Cover Removal in the Frame chapter)
  - Seat (see Seat Removal in the Frame chapter)
  - Fuel Tank (see Fuel Tank Removal in the Fuel System chapter)

## 3-20 FUEL SYSTEM

### Air Cleaner

Fuel Tank Bracket [A]  
Air Cleaner Ducts  
Breather Tube  
Air Suction Valve Hose



- Remove the air cleaner housing [A].




#### *Air Cleaner Housing Installation*

- Air cleaner housing installation is the reverse of removal.

#### *Air Cleaner Draining*

A drain hose [A] is provided beneath the air cleaner housing, and catches the water or oil from the bottom of the hose. Usually water or oil does not collect at the bottom of the hose. In the event that rain water is drawn in through the air cleaner, or if engine oil is blown back, drain the housing.

- Check the drain hose.
- ★ If any water or oil accumulates in the hose, drain it by pinching the lower end [B] of the drain hose.
- Be sure to install the plug firmly, or the air will be drawn in through it.

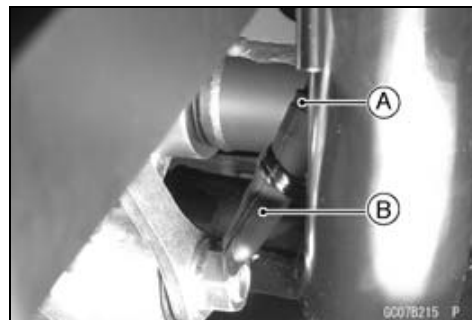

### **⚠ WARNING**

**Be sure to install the plug in the drain hose after draining. Oil could drain from the open hose and get on the tires which could cause an accident and injury.**




## Fuel Tank

### Fuel Tank Removal


#### **⚠ WARNING**

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.


- Remove:
  - Side Covers (see Side Covers Removal in the Frame chapter)
  - Seat (see Seat Removal in the Frame chapter)
- Turn the fuel tap to the ON or RES position.
- Remove the fuel tank mounting bolts [A].

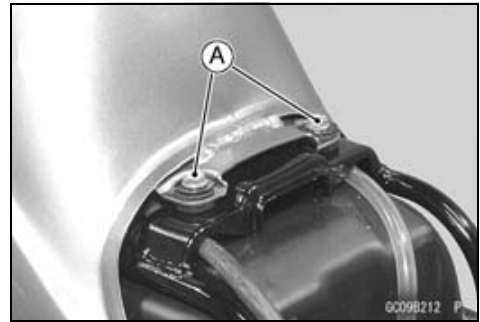

- Remove the lower fairing mounting screws [A], stoppers [B] and free the fuel tank from the fairings.

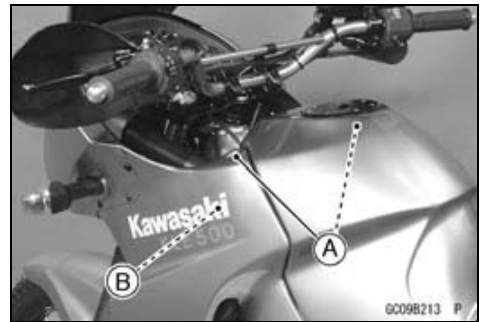

- Pull the fuel tap outlet hose [A] and vacuum hose [B] off the tap.
- Pull the over flow drain hose [C] off the fuel tank.

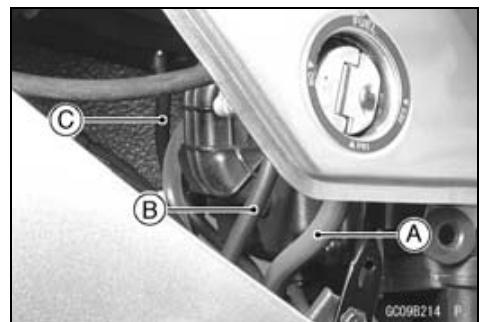


- Remove the fuel tank.
- Drain the fuel tank.
  - Place a suitable container under the fuel tank.
  - Turn the fuel tap to the PRI position to drain the fuel into the container.

## 3-22 FUEL SYSTEM

### Fuel Tank

#### Fuel Tank Installation

- Read the WARNING in the Fuel Tank Removal section.
- Check the rubber dampers [A] on the frame and the one pasted under the fuel tank.
- ★ If the dampers are damaged or deteriorated, replace them.
- Route the hoses correctly (see Cable, Wire, and Hose Routing in the Appendix chapter).
- Be sure the hoses are clamped to the fuel tap to prevent leakage.

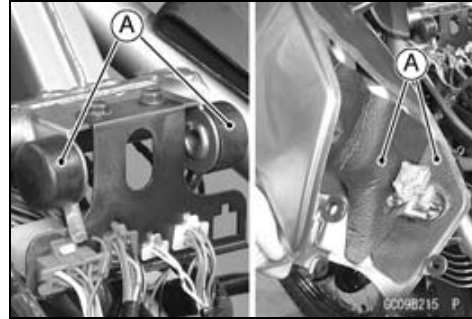


#### Fuel Tap Removal

#### **⚠ WARNING**

**Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well-ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.**

- Remove the fuel tank (see Fuel Tank Removal).
- Remove the bolts [A] and take out the fuel tap [B].

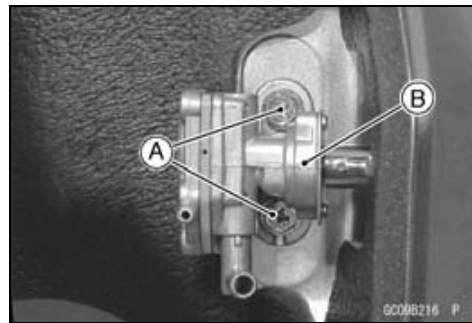

#### Fuel Tap Installation

- Install the fuel tap with a specified torque.  
**Torque - Fuel Tap Mounting Bolts: 5.0 N·m (0.51 kgf·m, 44 in·lb)**
- Be sure to clamp the fuel hose to the tap to prevent leaks.
- Install the fuel tank (see Fuel Tank Installation)

#### Fuel Tank and Tap Cleaning

- Remove the fuel tank and drain it.
- Pour some high flash-point solvent into the fuel tank and shake the tank to remove dirt and fuel deposits.

#### **⚠ WARNING**

**Clean the tank in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents to clean the tank.**




## Fuel Tank

- Pour the solvent out of the tank.
- Remove the fuel tap from the tank by taking out the bolts with nylon washers.
- Clean the fuel tap filter screens in a high flash-point solvent.
- Pour high flash-point solvent through the tap in all lever position.
- Dry the tank and tap with compressed air.
- Install the tap in the tank.
- Install the fuel tank.


### Fuel Tap Inspection

- Remove the fuel tap.
- Check the fuel tap filter screens [A] for any breaks or deterioration.
- ★ If the fuel tap screens have any breaks or are deteriorated, they may allow dirt to reach the carburetor, causing poor running. Replace the fuel tap.
- ★ If the fuel tap leaks, or allows fuel to flow when it is at ON or RES without engine running, replace the damaged gasket [B] or O-ring [C].

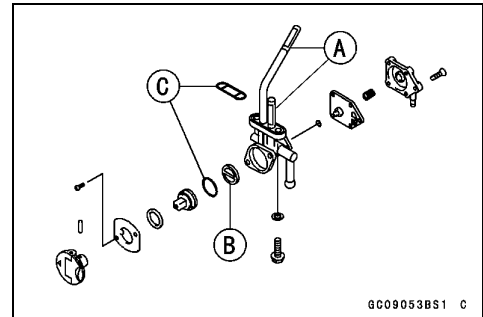

### Fuel Tank and Cap Inspection

- Open the tank cap.
- Visually inspect the gasket [A] on the tank cap for any damage.
- ★ Replace the gaskets if they are damaged.
- Remove the drain pipes and check to see if the pipes in the tank do not clogged up. Check the tank cap breather also.
- ★ If they are clogged, remove the tank and drain it, and then blow the breather free with compressed air.

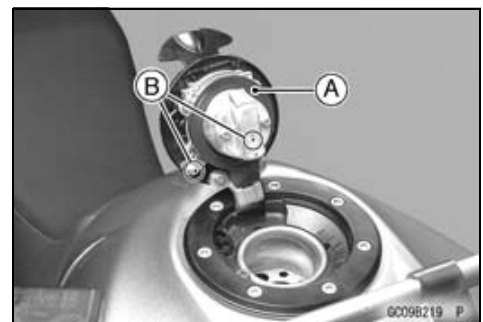

### CAUTION

**Do not apply compressed air to the air vent holes [B] in the tank cap. This could cause damage and clogging of the labyrinth in the cap.**

## 3-24 FUEL SYSTEM

---

### Fuel Hose

---

#### *Fuel Hose and Connection Inspection*

- Refer to the Fuel Hoses and Connections Inspection in the Periodic Maintenance chapter.


# Cooling System

## Table of Contents

Exploded View .....	4-2
Specifications .....	4-4
Special Tool and Sealant .....	4-5
Coolant Flow Chart .....	4-6
Coolant .....	4-8
Coolant Deterioration Inspection .....	4-8
Coolant Level Inspection .....	4-8
Coolant Draining .....	4-8
Coolant Filling .....	4-8
Visual Leak Inspection .....	4-8
Cooling System Pressure Testing .....	4-8
Flushing .....	4-9
Coolant Filter Cleaning .....	4-9
Coolant Valve Inspection .....	4-9
Water Pump .....	4-10
Water Pump Removal .....	4-10
Water Pump Installation .....	4-10
Mechanical Seal Inspection .....	4-11
Water Pump Housing Disassembly .....	4-11
Water Pump Housing Assembly .....	4-11
Impeller Assembly .....	4-12
Pump Impeller Inspection .....	4-12
Radiator, Radiator Fan .....	4-13
Radiator Removal .....	4-13
Radiator Inspection .....	4-13
Radiator Fan Removal .....	4-14
Filler Neck Inspection .....	4-14
Radiator Cap Inspection .....	4-14
Radiator Hose and Connection Inspection .....	4-15
Radiator Hose, Pipe, Air Vent Hose, Reservoir Tank Hose Installation .....	4-15
Thermostat .....	4-16
Thermostat Removal .....	4-16
Thermostat Installation .....	4-16
Thermostat Inspection .....	4-16
Radiator Fan Switch, Water Temperature Switch .....	4-18
Radiator Fan Switch Removal .....	4-18
Water Temperature Switch Removal .....	4-18
Radiator Fan Switch, Water Temperature Switch Installation .....	4-18
Radiator Fan Switch, Water Temperature Switch Inspection .....	4-18

# 4-2 COOLING SYSTEM

## Exploded View

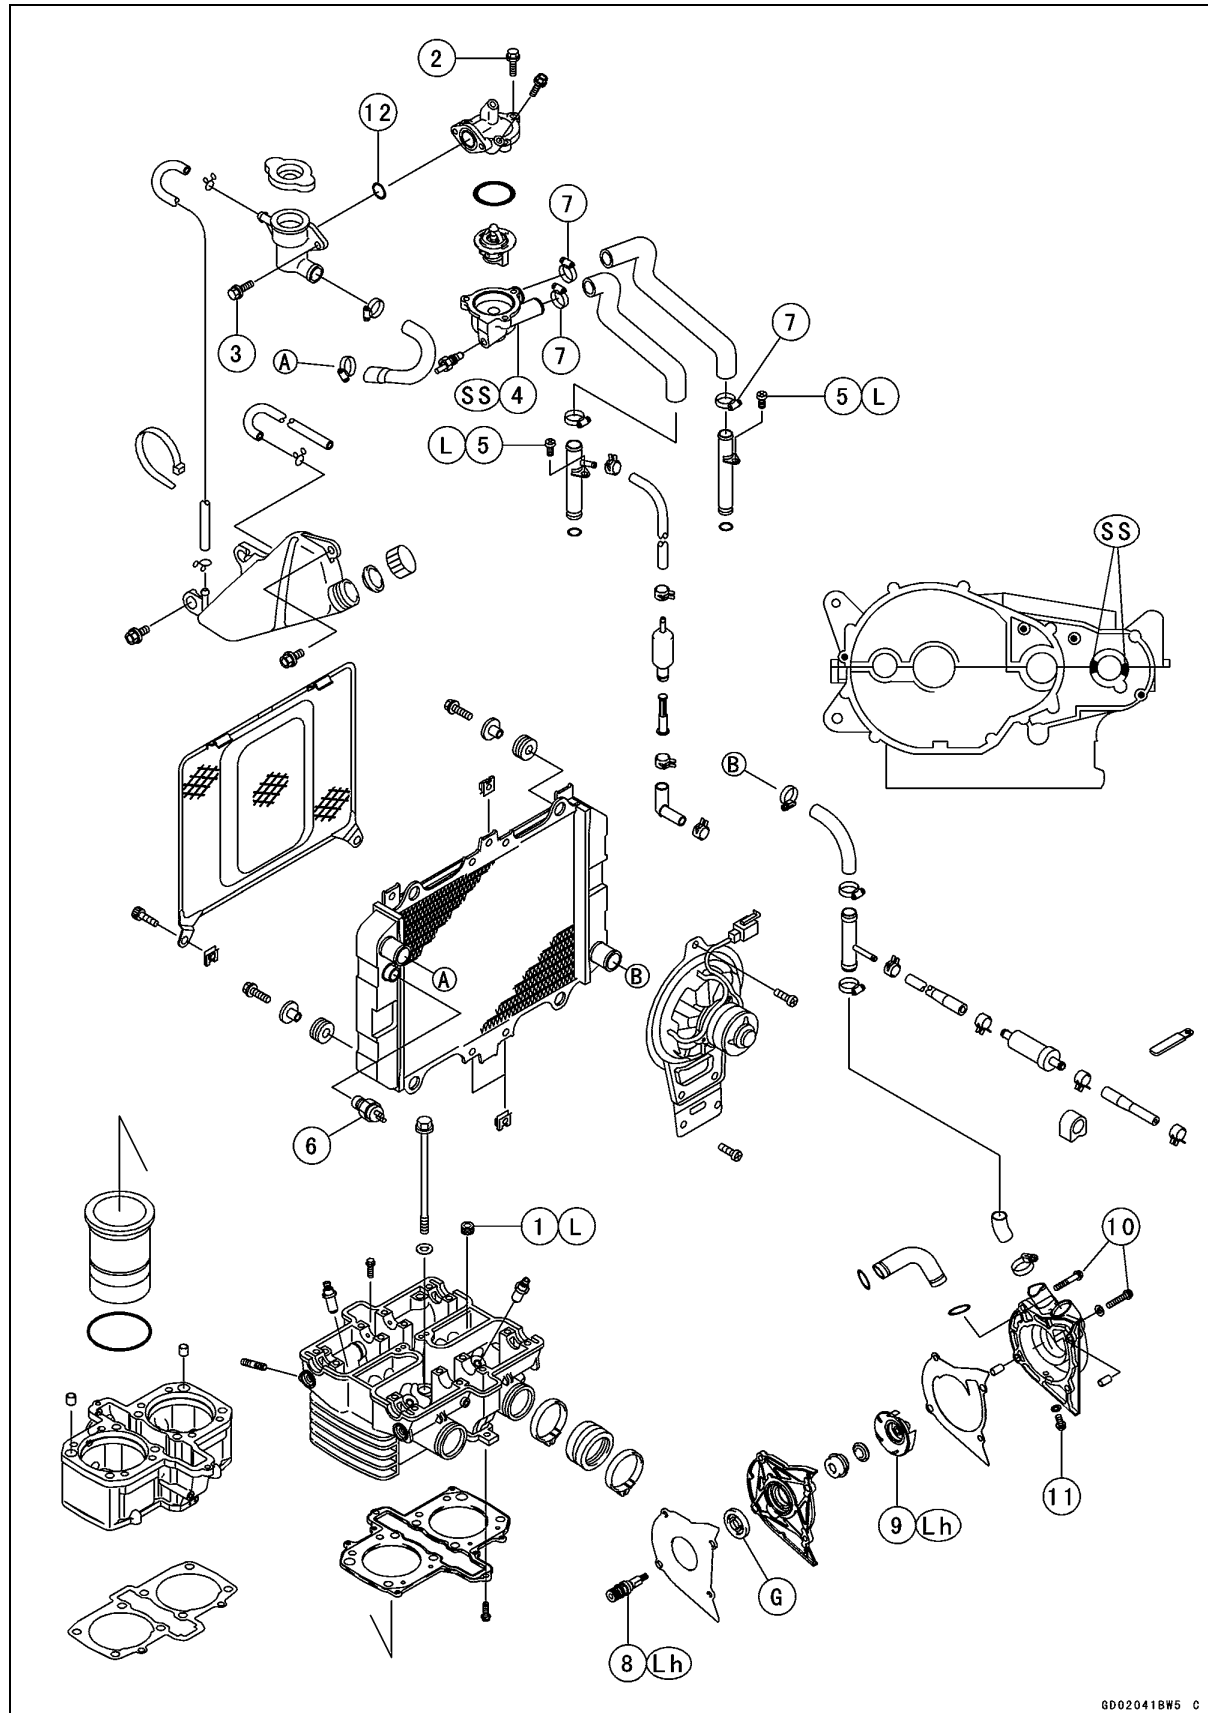

GD02041BWS C

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Cylinder Head Jacket Plug	9.8	1.0	87 in·lb	L
2	Thermostat Housing Bolts	11	1.1	95 in·lb	
3	Radiator Cap Holder Mounting Bolts	11	1.1	95 in·lb	
4	Water Temperature Switch	7.8	0.8	69 in·lb	SS
5	Water Pipe Bolts	9.8	1.0	87 in·lb	L
6	Radiator Fan Switch	18	1.8	13	
7	Radiator Hose Clamp Screws	2.5	0.25	22 in·lb	
8	Water Pump Shaft	25	2.5	18	Lh
9	Water Pump Impeller	9.8	1.0	87 in·lb	Lh
10	Water Pump Cover Bolts	11	1.1	95 in·lb	
11	Coolant Drain Bolt	11	1.1	95 in·lb	

12. Thermostat

G: Apply high temperature grease.

L: Apply a non-permanent locking agent.

Lh: Left-hand Thread

SS: Apply silicone sealant.


## 4-4 COOLING SYSTEM

### Specifications


Item	Standard
<b>Coolant Provided when Shipping</b> Type (recommended)  Color Mixed Ratio Freezing Point Total Amount	Permanent type antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators)  Green Soft water 50%, coolant 50% -35°C (-31°F) 1.7 L (1.8 US qt) (reserve tank full level including radiator and engine)
<b>Radiator Cap</b> Relief Pressure	93 ~ 123 kPa (0.95 ~ 1.25 kgf/cm <sup>2</sup> , 14 ~ 18 psi)
<b>Thermostat</b> Valve Opening Temperature Valve Full Opening Lift	80.5 ~ 83.5°C (177 ~ 182°F) 8 mm (0.31 in.) or more @95°C (203°F)

**Special Tool and Sealant**

**Bearing Driver Set:  
57001-1129**

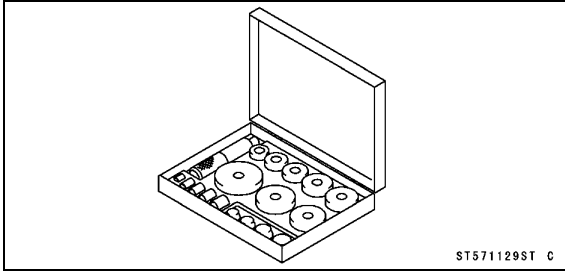

**Kawasaki Bond (Silicone Sealant):  
56019-120**

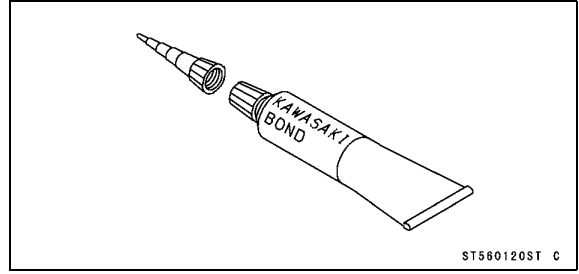

## 4-6 COOLING SYSTEM

---

### Coolant Flow Chart

---

Permanent type antifreeze is used as a coolant to protect the cooling system from rust and corrosion. When the engine starts, the water pump turns and the coolant circulates.

The thermostat is a wax pellet type which opens or closes with coolant temperature changes. The thermostat continuously changes its valve opening to keep the coolant temperature at the proper level. When coolant temperature is below 80.5 ~ 83.5°C (177 ~ 182°F), the thermostat closes so that the coolant flow is restricted through the air bleeder hole, causing the engine to warm up more quickly. When coolant temperature is more than 80.5 ~ 83.5°C, the thermostat opens and the coolant flows.

When the coolant temperature goes up beyond 96 ~ 100°C (205 ~ 212°F), the radiator fan switch conducts to operate the radiator fan. The radiator fan draws air through the radiator core when there is not sufficient air flow such as at low speeds. This increases up the cooling action of the radiator. When the temperature is below 91°C (196°F) temperature less than ON temperature, the fan switch opens and the radiator fan stops.


In this way, this system controls the engine temperature within narrow limits where the engine operates most efficiently even if the engine load varies.

The system is pressurized by the radiator cap to suppress boiling and the resultant air bubbles which can cause engine overheating. As the engine warms up, the coolant in the radiator and the water jacket expands. The excess coolant flows through the radiator cap and hose to the reserve tank to be stored there temporarily. Conversely, as the engine cools down, the coolant in the radiator and the water jacket contracts, and the stored coolant flows back to the radiator from the reserve tank.

The radiator cap has two valves. One is a pressure valve which holds the pressure in the system when the engine is running. When the pressure exceeds 93 ~ 123 kPa (0.95 ~ 1.25 kgf/cm<sup>2</sup>, 14 ~ 18 psi), the pressure valve opens and releases the pressure to the reserve tank. As soon as pressure escapes, the valve closes, and keeps the pressure at 93 ~ 123 kPa (0.95 ~ 1.25 kgf/cm<sup>2</sup>, 14 ~ 18 psi). When the engine cools down, another small valve (vacuum valve) in the cap opens. As the coolant cools, the coolant contracts to form a vacuum in the system. The vacuum valve opens and allows the coolant from the reserve tank to enter the radiator.



Coolant Flow Chart

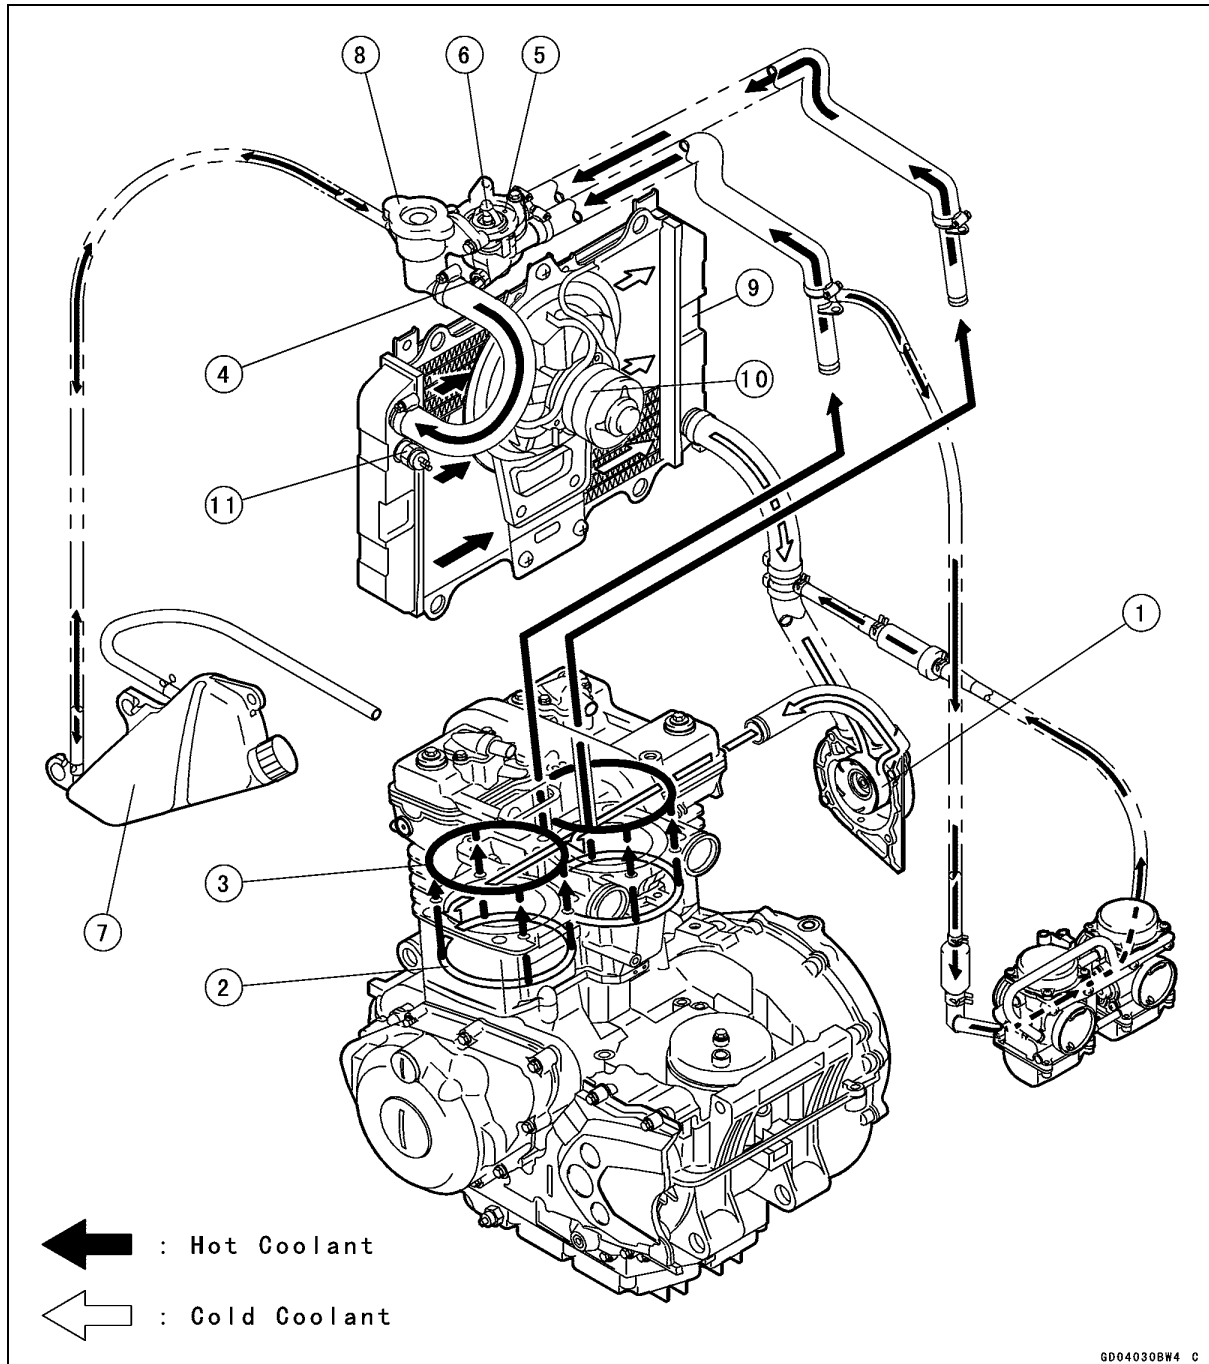

G004030B#4 C

1. Water Pump (driven by balancer shaft)
2. Cylinder Jacket
3. Cylinder Head Jacket
4. Water Temperature Switch
5. Air Bleeder Hole
6. Thermostat
7. Reserve Tank
8. Radiator Cap
9. Radiator
10. Radiator Fan
11. Radiator Fan Switch

## 4-8 COOLING SYSTEM

### Coolant

#### *Coolant Deterioration Inspection*

- Visually inspect the coolant in the reservoir tank.
- If whitish cotton-like wafts are observed, aluminum parts in the cooling system are corroded. If the coolant is brown, iron or steel parts are rusting. In either case flush the cooling system.
- If the coolant gives off an abnormal smell, check for a cooling system leak. It may be caused by exhaust gas leaking into the cooling system.

#### *Coolant Level Inspection*

- Refer to the Coolant Level Inspection in the Periodic Maintenance chapter.

#### *Coolant Draining*

- Refer to the Coolant Change in the Periodic Maintenance chapter.


#### *Coolant Filling*

- Refer to the Coolant Change in the Periodic Maintenance chapter.

#### *Visual Leak Inspection*

Any time the system slowly loses water, inspect for leaks.

- Check the water pump body drainage outlet passage [A] for coolant leaks.
- ★ If the mechanical seal is damaged, the coolant leaks through the seal and drains through the passage. Replace the mechanical seal.
- ★ If there are no apparent leaks, pressure test the system.

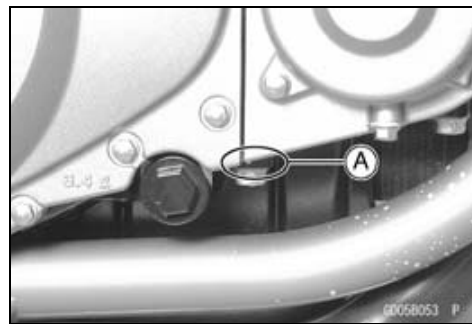

#### *Cooling System Pressure Testing*


##### CAUTION

**During pressure testing, do not exceed the pressure for which the system is designed. The maximum pressure is 123 kPa (1.25 kgf/cm<sup>2</sup>, 18 psi).**

- Remove the left lower fairing (see Lower Fairing Removal in the Frame chapter).
- Remove the radiator cap, and install a cooling system pressure tester [A] on the radiator filler neck.

##### NOTE

- *Wet the cap sealing surfaces with water or coolant to prevent pressure leaks.*
- Build up pressure in the system carefully until the pressure reaches 123 kPa (1.25 kgf/cm<sup>2</sup>, 18 psi).
- Watch the gauge for at least 6 seconds. If the pressure holds steady, the system is all right.
- ★ If the pressure drops and no external source is found, check for internal leaks. Droplets in the engine oil indicate internal leakage. Check the cylinder head gasket and the cylinder liner O-rings.
- Remove the pressure tester, replenish the coolant, and install the radiator cap.

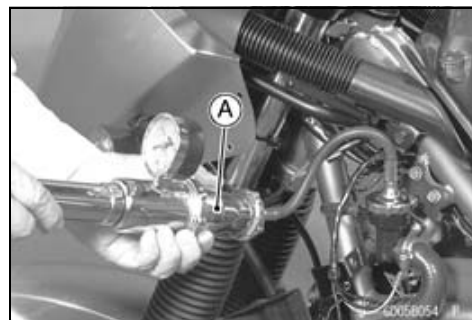

## Coolant

### Flushing

Over a period of time, the cooling system accumulates rust, scale, and lime in the water jacket and radiator. When this accumulation is suspected or observed, flush the cooling system. If this accumulation is not removed, it will clog up the water passages and considerably reduce the efficiency of the cooling system.

- Drain the cooling system.
- Fill the cooling system with fresh water mixed with a flushing compound.

### CAUTION

**Avoid the use of a flushing compound which is harmful to the aluminum engine and radiator. Carefully follow the instructions supplied by the manufacturer of the cleaning product.**

- Warm up the engine, and run it at normal operating temperature for about ten minutes.
- Stop the engine, and drain the cooling system.
- Fill the system with fresh water.
- Warm up the engine and drain the system.
- Repeat the previous two steps once more.
- Fill the system with a permanent type coolant and bleed the air from the system (see Coolant Change in the Periodic Maintenance chapter).

### Coolant Filter Cleaning


- Refer to the Coolant Filter Cleaning in the Periodic Maintenance chapter.

### Coolant Valve Inspection

- Drain the coolant (see Coolant Change in the Periodic Maintenance chapter).
- Remove the coolant valve on the engine right side.
- Inspect the coolant valve [A] at room temperature.
- ★ If the valve is closed, replace the valve with a new one.
- To check valve opening, just blow through the valve.

#### Valve Closing Temperature (for reference)

**Standard: 70°C (158°F) or more at 25 kPa (0.25 kgf/cm<sup>2</sup>, 3.6 psi)**

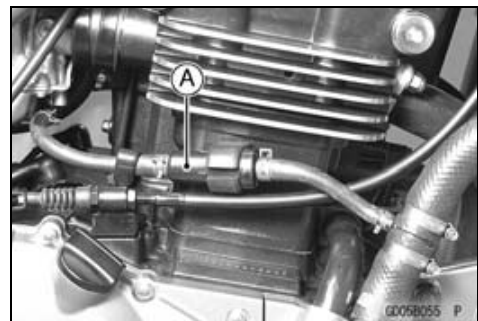


## 4-10 COOLING SYSTEM

### Water Pump

#### Water Pump Removal

- Drain the coolant.
- Remove the engine guard (see Engine Guard Removal in the Frame chapter)
- Loosen the clamp and remove the radiator hose [A] from the water pump cover [B].
- Remove the four cover bolts [C].
- With the water pipe [D] attached, remove the water pump cover.


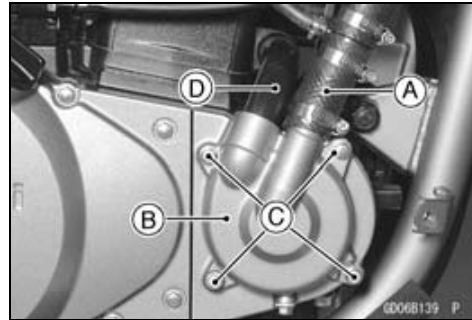


- Install the right footpeg assembly.

#### NOTE

○ The impeller and water pump shaft have a left-handed thread, therefore they must be turned clockwise [A] to remove.

- Shift the transmission into 1st gear.
- While applying the rear brake, remove the impeller [B].
- Pull the water pump housing [A] and gasket out of the right crankcase.
- Turn the water pump shaft [B] clockwise, and remove it.

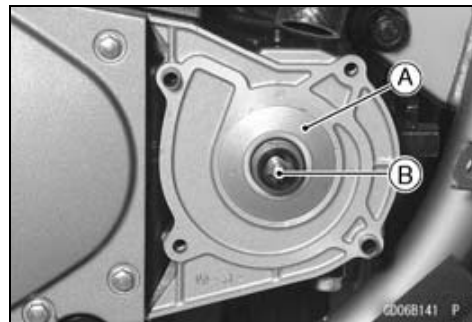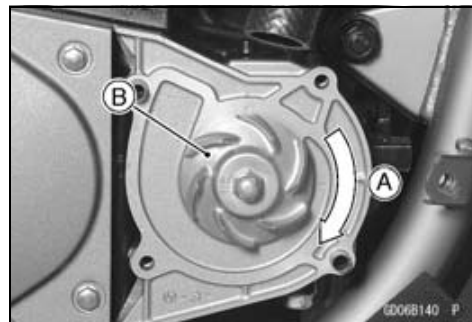

#### Water Pump Installation


- When installing the water pump shaft or impeller, shift the transmission into 1st gear and apply the rear brake.
- Apply silicone sealant to the area [A] where the mating surface of the crankcase contacts the water pump housing gasket.

**Sealant - Kawasaki Bond (Silicone Sealant): 56019-120**

- Apply high temperature grease to the lips of the water pump housing oil seal.
- Turn the water pump shaft or impeller counterclockwise, and tighten them.

**Torque - Water Pump Shaft: 25 N·m (2.5 kgf·m, 18 ft·lb)**


**Water Pump Impeller: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

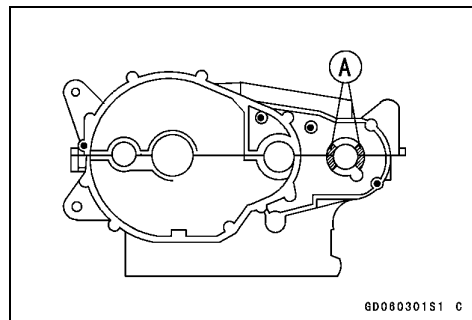

## Water Pump


- Be sure to install the water pipe O-rings [A], and apply high temperature grease to them.
- Install the water pump cover with the water pipe, being careful of the two knock pins [B].

**Torque - Water Pump Cover Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

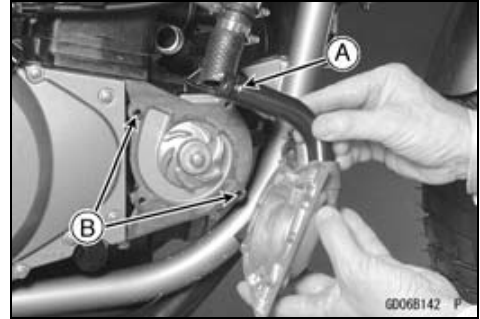

### Mechanical Seal Inspection

- Visually inspect the mechanical seal.
- ★ If any one of the parts is damaged, replace the mechanical seal as a unit.
- The sealing seat and rubber seal may be removed easily by hand.
  - [A] Impeller Sealing Seat Surface
  - [B] Rubber Seal
  - [C] Mechanical Seal Diaphragm

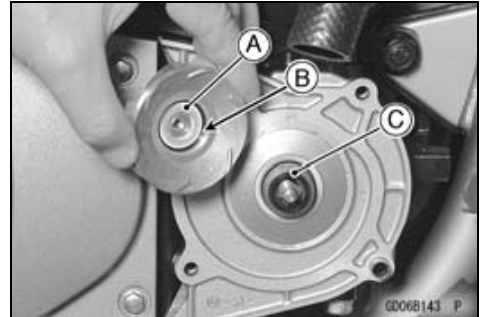


### Water Pump Housing Disassembly

**CAUTION**


**Be careful not to damage the sealing surface of the mechanical seal.**

- Take the oil seal [A] out of the housing [B] with a hook [C].

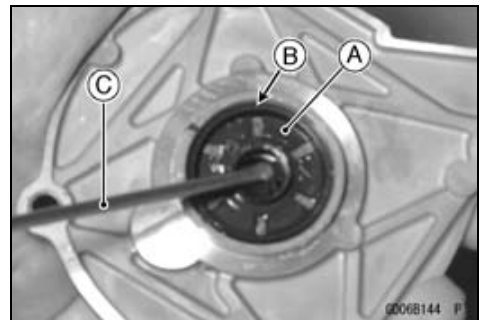

- Press the mechanical seal [A] out of the housing with a bearing driver [B].


**Special Tool - Bearing Driver Set: 57001-1129**

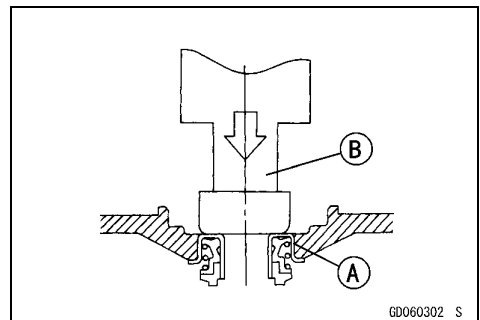

### Water Pump Housing Assembly

- Apply a high temperature grease [A] to the oil seal [B].
- Press the oil seal into the housing with a bearing driver until it stops at the bottom surface of the housing [C].
- Press the mechanical seal into the housing with a bearing driver [D] until its flange [E] touches the surface [F] of the housing.

**Special Tool - Bearing Driver Set: 57001-1129**

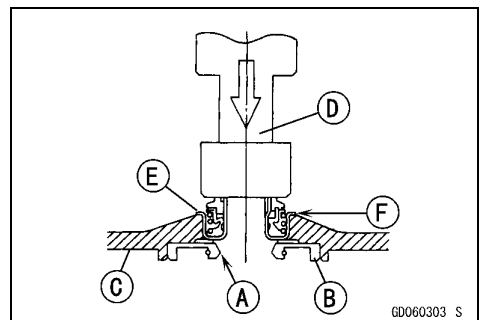


## 4-12 COOLING SYSTEM

### Water Pump


#### *Impeller Assembly*

- Clean the sliding surface of the mechanical seal with a high flash-point solvent, and apply a little coolant to the sliding surface to give the mechanical seal initial lubrication.
- Apply coolant to the surfaces of the rubber seal [A] and sealing seat [B], and install the rubber seal and sealing seat into the impeller by pressing them by hand until the seat stops at the bottom of the hole.

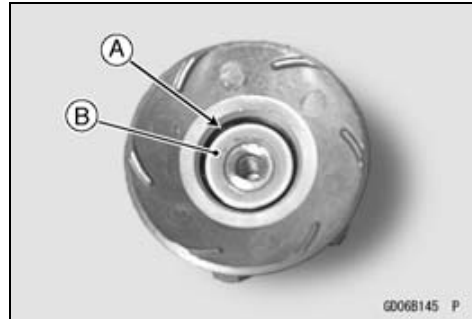

#### *Pump Impeller Inspection*

- Visually check the impeller [A].
- ★ If the surface is corroded, or if the blades are damaged, replace the impeller.

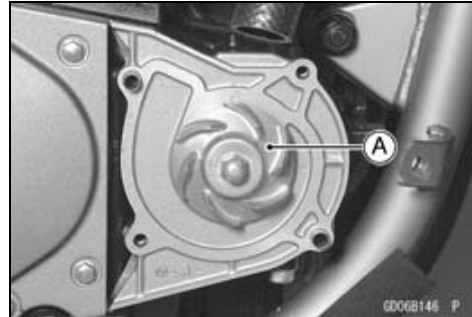



Radiator, Radiator Fan

**⚠ WARNING**




The radiator fan is connected directly to the battery. The radiator fan may start even if the ignition switch is off. **NEVER TOUCH THE RADIATOR FAN UNTIL THE RADIATOR FAN CONNECTOR IS DISCONNECTED. TOUCHING THE FAN BEFORE THE CONNECTOR IS DISCONNECTED COULD CAUSE INJURY FROM THE FAN BLADES.**

*Radiator Removal*

- Drain the coolant.
- Remove:
  - Both Lower Fairing (see Lower Fairing Removal in the Frame chapter)
  - Both Radiator Cover Screws [A] and Radiator Covers [B]
  
- Disconnect:
  - Radiator Fan Connector
  - Radiator Fan Switch Connector [A]
  - Radiator Hoses [B]
- Unscrew the radiator mounting bolts [C] and remove the radiator taking care not to damage the radiator core.

**CAUTION**

**Do not touch the radiator core. This could damage the radiator fins, resulting in loss of cooling efficiency.**

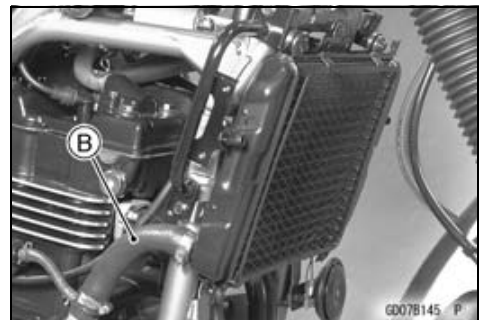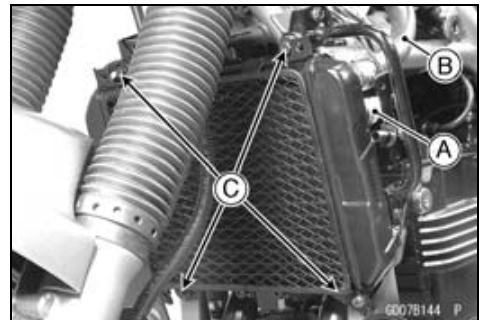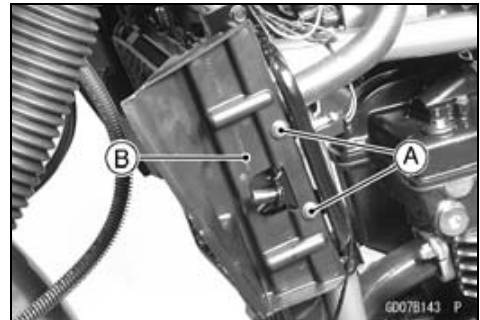


*Radiator Inspection*

- Check the radiator core.
- ★ If there are obstructions to air flow, remove them.
- ★ If the corrugated fins [A] are deformed, carefully straighten them with the blade of a thin screw driver.

**CAUTION**

**Do not tear the radiator tubes while straightening the fins.**

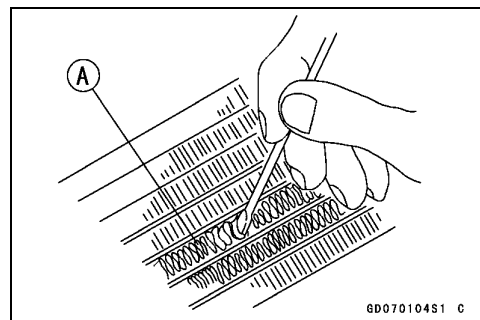


- ★ If the air passages of the radiator core are blocked more than 20% by unremovable obstructions or irreparable deformed fins, replace the radiator with a new one.

## 4-14 COOLING SYSTEM

### Radiator, Radiator Fan

#### Radiator Fan Removal


- Remove the radiator (see Radiator Removal).
- Remove the radiator fan mounting screws [A].

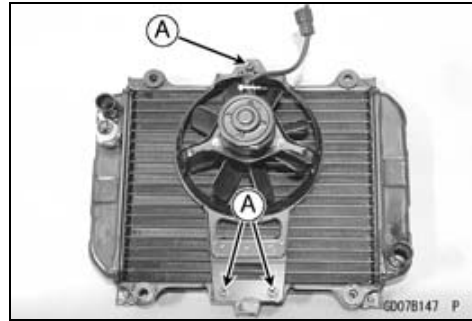

#### CAUTION


**When cleaning the radiator with steam cleaner, be careful of the following to prevent radiator damage.**

- 1) Keep the steam gun [A] away more than 0.5 m (20 in.) [B] from the radiator core.
- 2) Hold the steam gun perpendicular to the core surface.
- 3) Run the steam gun horizontally following the core fin direction. Running it vertically may damage the fin.

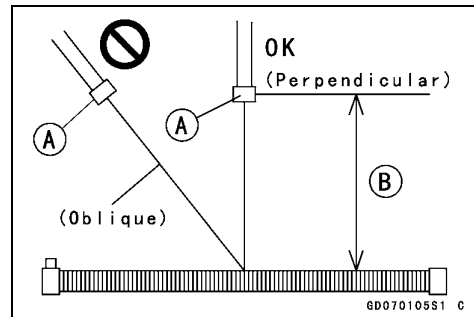


#### Filler Neck Inspection

- Remove:
  - Left Lower Fairing (see Lower Fairing Removal in the frame chapter)
- Check the radiator filler neck for signs of damage.
- Check the condition of the top [A] and bottom sealing seats [B] in the filler neck. They must be smooth and clean for the radiator cap to function properly.

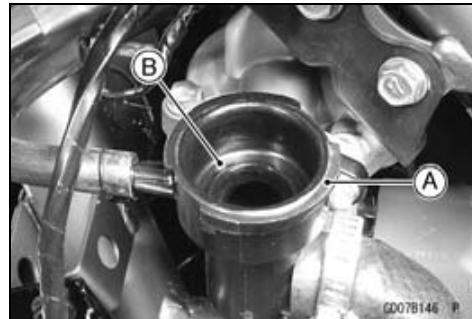

#### Radiator Cap Inspection

- Check the condition of the bottom and top valve seals [A], valve spring [B] of the radiator cap.
- ★ If any one of them shows visible damage, replace the cap with a new one.

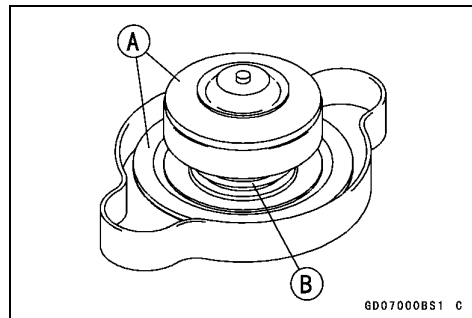


- Install the cap [A] on a cooling system pressure tester [B].

#### NOTE

○ Wet the cap sealing surfaces with water or coolant to prevent pressure leaks.

- Watching the pressure gauge, slowly pump the pressure tester to build up the pressure. The relief valve must open within the relief pressure range as shown below. The gauge hand must remain at least 6 seconds between the lowest relief pressure and the valve opened pressure.

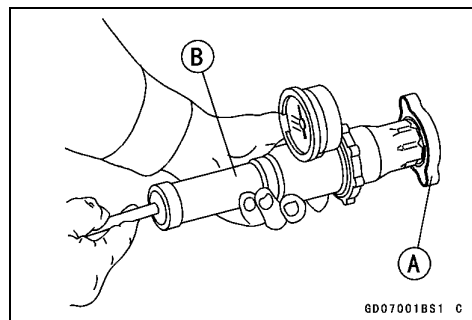

#### Radiator Cap Relief Pressure

**Standard: 93 ~ 123 kPa (0.95 ~ 1.25 kgf/cm<sup>2</sup>, 14 ~ 18 psi)**

- ★ If the cap cannot hold the specified pressure, or if it holds too much pressure, replace it with a new one.



---

### Radiator, Radiator Fan

---

#### *Radiator Hose and Connection Inspection*

- Refer to the Radiator Hoses and Connections Inspection in the Periodic Maintenance chapter.

#### *Radiator Hose, Pipe, Air Vent Hose, Reservoir Tank Hose Installation*

- Install the radiator hoses. Avoid sharp bending, kinking, flattening, or twisting.
- Tighten the hose clamps securely.

**Torque - Radiator Hose Clamp Screws: 2.5 N·m (0.25 kgf·m, 22 in·lb)**


- Route the air vent hose, radiator hoses, pipes and reservoir tank hose (see Cable, Wire, and Hose Routing in the Appendix chapter).

## 4-16 COOLING SYSTEM


### Thermostat

#### *Thermostat Removal*

- Drain the coolant.
- Remove the left lower fairing (see Lower Fairings Removal in the Frame chapter).
- Turn the handlebar to right side fully.
- Remove the radiator filler mounting bolts [A].
- Remove the thermostat housing mounting bolts [B], and pull the thermostat housing [C] to outside.
- Unscrew the thermostat housing bolts [D].

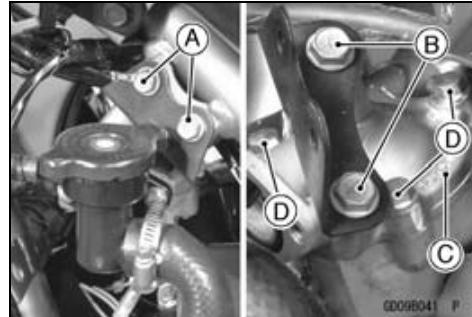


- Pull out the thermostat [A].

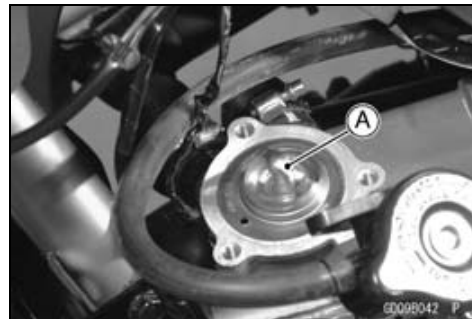


#### *Thermostat Installation*

- Install the thermostat [A] into the thermostat housing so that the thermostat does not touch the water temperature switch [B] as shown.
- Be sure to install the O-ring on the thermostat housing cover.
- Fill the radiator with coolant.

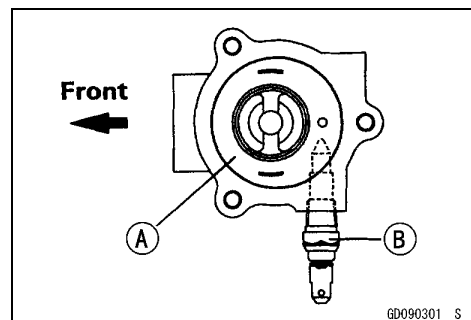

#### *Thermostat Inspection*


- Remove the thermostat, and inspect the thermostat valve [A] at room temperature.
- ★ If the valve is open, replace the valve with a new one.

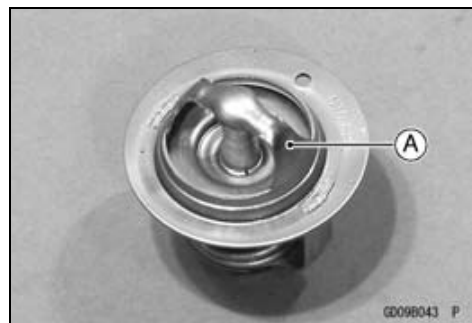

### Thermostat

- To check valve opening temperature, suspend the thermostat [A] in a container of water and raise the temperature of the water.  
[B] Thermometer
- ★ If the measurement is out of the specified range, replace the thermostat with a new one.

**Thermostat Valve Opening Temperature**  
80.5 ~ 83.5°C (177 ~ 182°F)

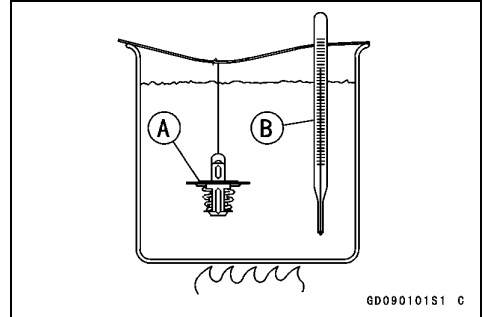

## 4-18 COOLING SYSTEM

### Radiator Fan Switch, Water Temperature Switch

#### CAUTION

The fan switch or the water temperature switch should never be allowed to fall on a hard surface. Such a shock to these parts can damage them.


#### *Radiator Fan Switch Removal*

- Remove the Left Lower Fairing (see Lower Fairing Removal in the Frame chapter).
- Disconnect the fan switch connector [A] and remove the radiator fan switch [B].



#### *Water Temperature Switch Removal*

- Drain the coolant.
- Remove the left lower fairing (see Lower Fairing Removal in the Frame chapter).
- Disconnect the lead [A] and remove the water temperature switch [B].

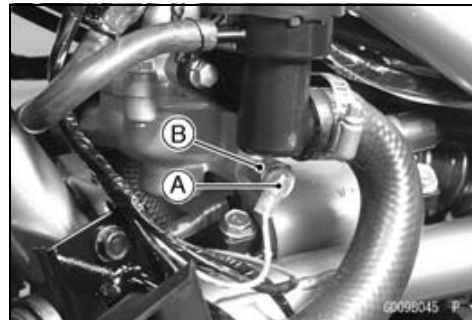

#### *Radiator Fan Switch, Water Temperature Switch Installation*

- Apply silicone sealant to the threads before mounting the water temperature switch.

**Sealant - Kawasaki Bond (Silicone Sealant): 56019-120**

- Do not apply silicone sealant to the radiator fan switch on the radiator.

- Tighten the water temperature switch and the fan switch.

**Torque - Water Temperature Switch: 7.8 N·m (0.80 kgf·m, 69 in·lb)**

**Radiator Fan Switch: 18 N·m (1.8 kgf·m, 13.0 ft·lb)**

#### *Radiator Fan Switch, Water Temperature Switch Inspection*

- Refer to the Switch and Sensor in the Electrical System chapter for these inspections.


# Engine Top End

## Table of Contents

Exploded View .....	5-2	Main Oil Pipe Removal .....	5-20
Specifications .....	5-6	Main Oil Pipe Installation .....	5-20
Special Tools and Sealant .....	5-8	Cylinder Head.....	5-21
Clean Air System.....	5-11	Compression Measurement.....	5-21
Vacuum Switch Valve Removal ...	5-11	Cylinder Head Removal.....	5-22
Vacuum Switch Valve Installation	5-11	Cylinder Head Installation.....	5-23
Air Suction Valve Removal.....	5-11	Cylinder Head Warp.....	5-24
Air Suction Valve Installation.....	5-11	Cylinder Head Cleaning .....	5-24
Air Suction Valve Inspection .....	5-11	Valves .....	5-25
Clean Air System Hose		Valve Clearance Inspection .....	5-25
Inspection.....	5-11	Valve Removal .....	5-25
Vacuum Switch Valve Test.....	5-12	Valve Installation .....	5-25
Cylinder Head Cover .....	5-13	Valve Guide Removal .....	5-25
Cylinder Head Cover Removal ....	5-13	Valve Guide Installation .....	5-26
Cylinder Head Cover Installation .	5-14	Valve Seat Inspection .....	5-26
Camshaft Chain Tensioner .....	5-15	Measuring Valve-to-guide	
Camshaft Chain Tensioner		Clearance (Wobble method) .....	5-27
Removal.....	5-15	Valve Seat Repair .....	5-27
Camshaft Chain Tensioner		Cylinder, Piston.....	5-32
Installation .....	5-15	Cylinder Removal.....	5-32
Camshaft, Camshaft Chain .....	5-16	Cylinder Installation.....	5-32
Camshaft Removal .....	5-16	Piston Removal.....	5-32
Camshaft Installation .....	5-16	Piston Installation.....	5-33
Camshaft and Sprocket		Piston Ring, Piston Ring Groove	
Assembly.....	5-17	Wear.....	5-34
Camshaft, Camshaft Cap Wear ...	5-18	Piston Ring End Gap .....	5-34
Camshaft Chain Guide Wear .....	5-18	Cylinder Inside Diameter.....	5-34
Rocker Shaft, Rocker Arm.....	5-19	Piston Diameter .....	5-35
Rocker Shaft, Rocker Arm		Boring, Honing .....	5-35
Removal.....	5-19	Carburetor Holder.....	5-36
Rocker Shaft, Rocker Arm		Carburetor Holder Installation .....	5-36
Installation .....	5-19	Muffler.....	5-37
Oil Pipe .....	5-20	Muffler Removal .....	5-37
Cylinder Head Oil Pipe Removal .	5-20	Muffler Installation.....	5-37
Cylinder Head Oil Pipe			
Installation .....	5-20		

# 5-2 ENGINE TOP END

## Exploded View

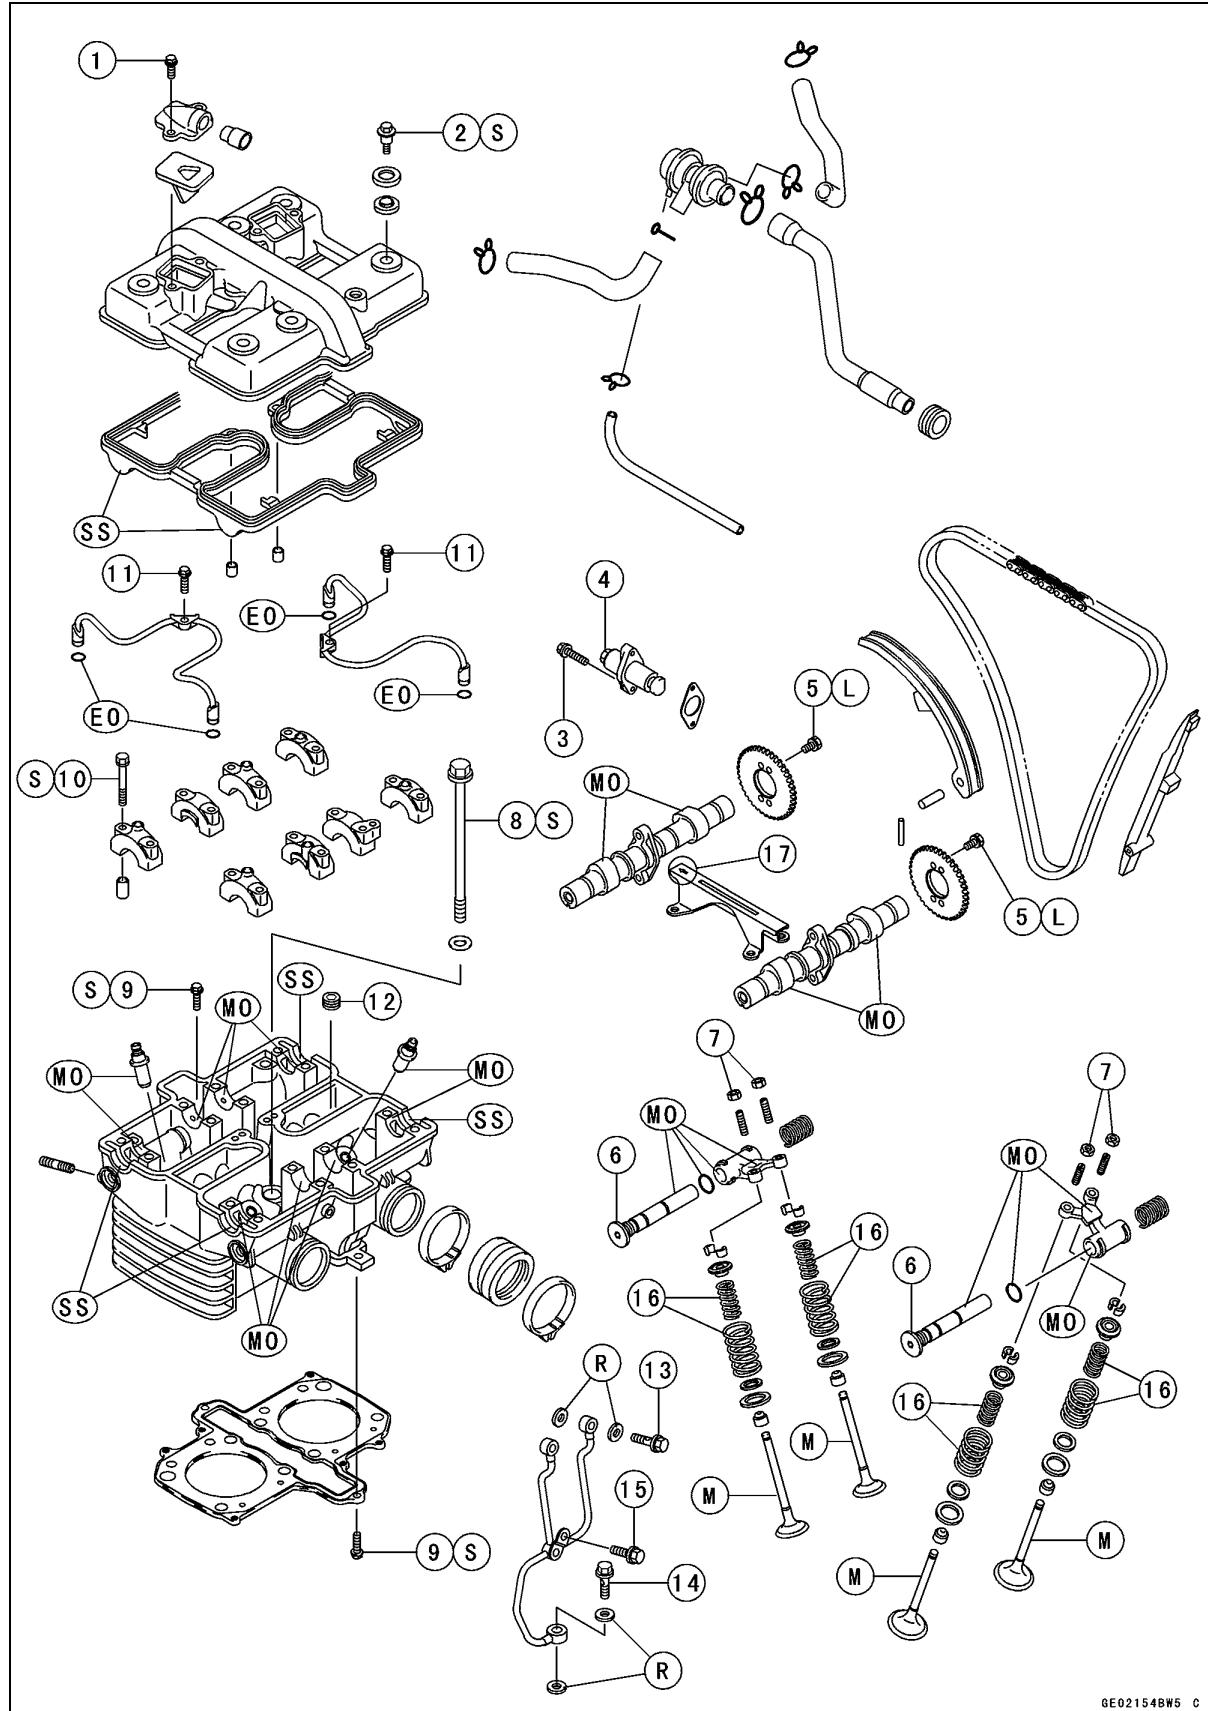

GE02154BW5 C

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Air Suction Valve Cover Bolts	11	1.1	95 in·lb	
2	Cylinder Head Cover Bolts	9.8	1.0	87 in·lb	S
3	Camshaft Chain Tensioner Mounting Bolts	11	1.1	95 in·lb	
4	Camshaft Chain Tensioner Cap Bolt	13	1.3	113 in·lb	
5	Camshaft Sprocket Bolts	15	1.5	11	L
6	Rocker Shafts	39	4.0	29	EO
7	Valve Adjuster Locknuts	25	2.5	18	
8	Cylinder Head Bolts (10 mm)	51	5.2	38	S
9	Cylinder Head Bolts (6 mm)	9.8	1.0	87 in·lb	S
10	Camshaft Cap Bolts	12	1.2	104 in·lb	S
11	Oil Pipe Bolts	11	1.1	95 in·lb	
12	Water Jacket Plug	9.8	1.0	87 in·lb	L
13	Main Oil Pipe Upper Banjo Bolt	12	1.2	104 in·lb	
14	Main Oil Pipe Lower Banjo Bolt	20	2.0	14.5	
15	Main Oil Pipe Mounting Bolt	11	1.1	95 in·lb	

16. Closed coil end faces downward.

17. Arrow points to the front.

EO: Apply engine oil.

L: Apply a non-permanent locking agent.

M: Apply molybdenum disulfide grease.

MO: Apply molybdenum disulfide oil.


R: Replacement Parts

S: Follow the specific tightening sequence.

SS: Apply Silicone sealant.

# 5-4 ENGINE TOP END

## Exploded View

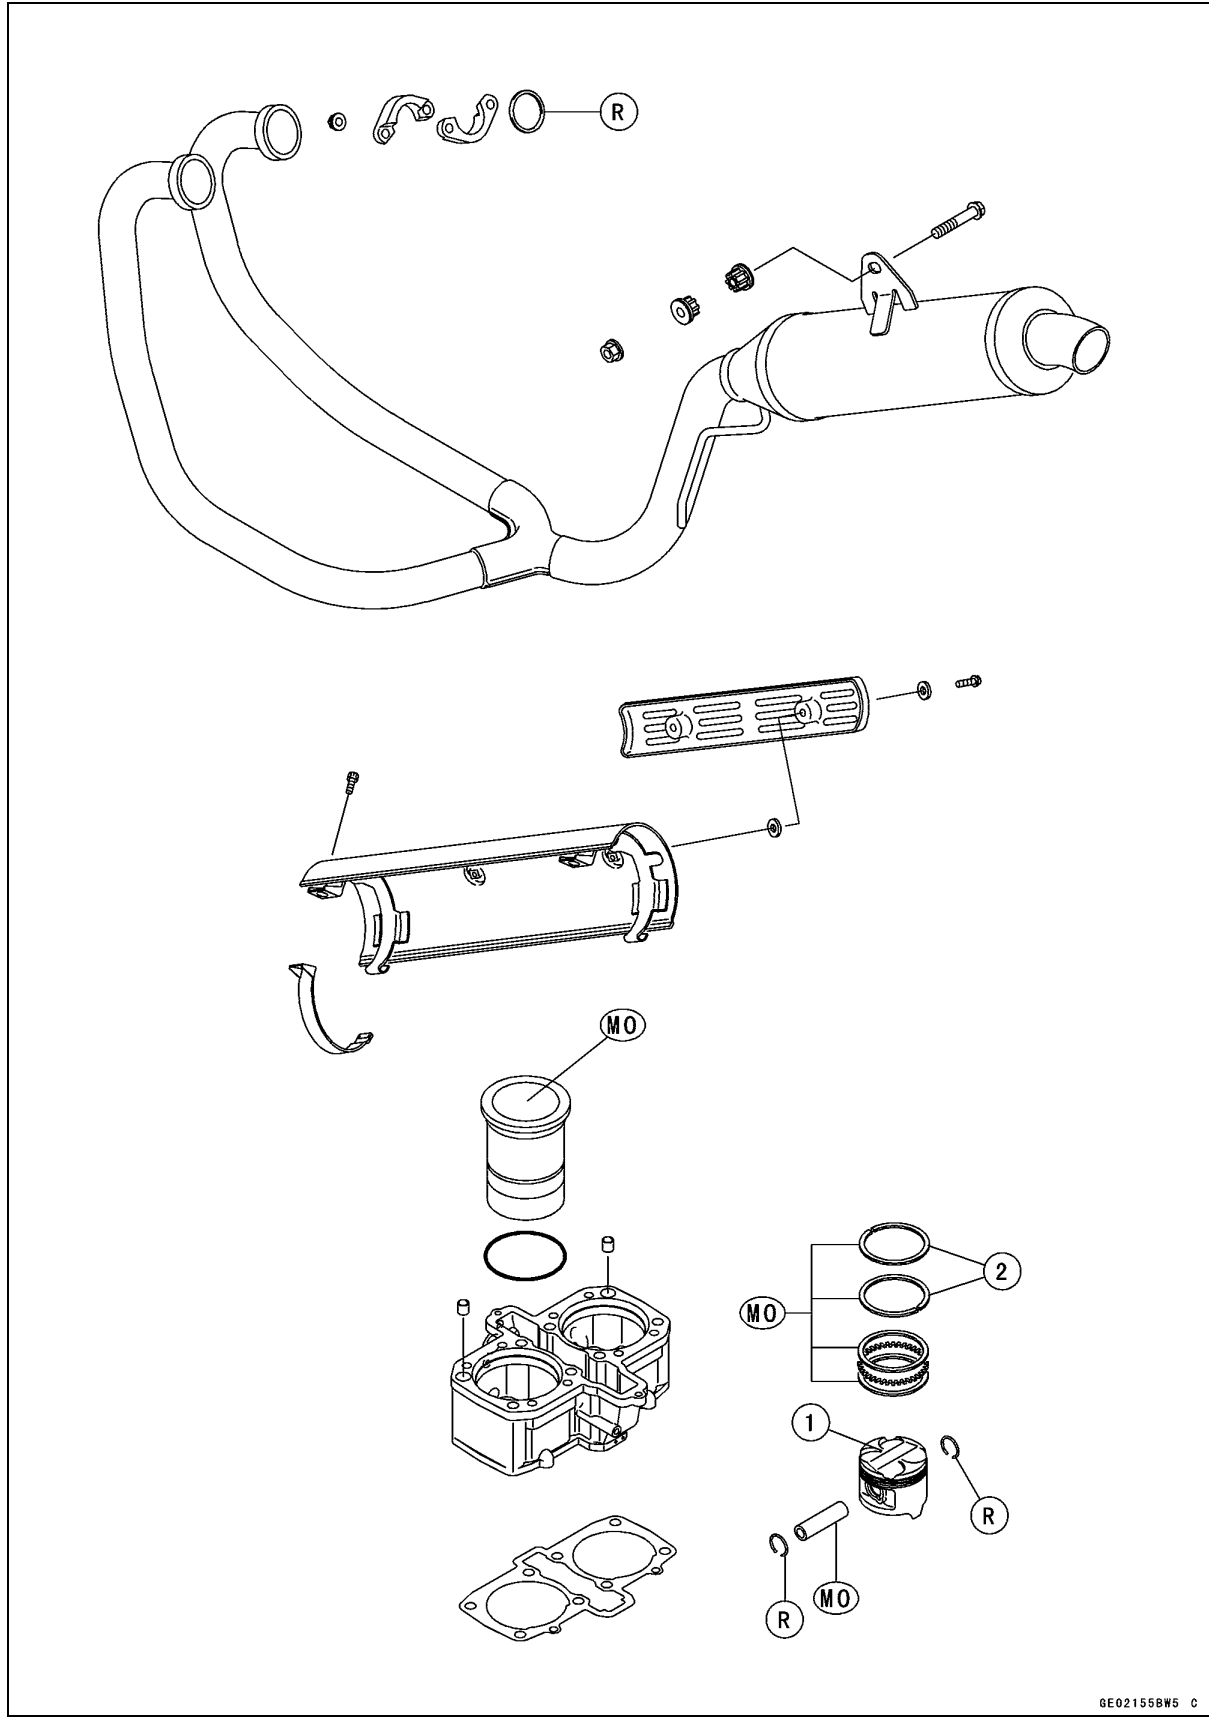

GE021558W5 C



---

**Exploded View**

---

1. "N" marked side faces up.
  2. Install the piston so that the circle mark on the top of the piston come to front side of the engine.
- MO: Apply molybdenum disulfide oil.  
R: Replacement Parts

## 5-6 ENGINE TOP END

### Specifications

Item	Standard	Service Limit
<b>Clean Air System</b>		
Vacuum Switch Valve Closing Pressure	Open → Close 45 ~ 53 kPa (340 ~ 400 mmHg)	— — —
<b>Camshafts</b>		
Cam Height:		
Exhaust	35.416 ~ 35.530 mm (1.3943 ~ 1.3988 in.)	35.32 mm (1.3905 in.)
Inlet	35.476 ~ 35.590 mm (1.3967 ~ 1.4012 in.)	35.38 mm (1.3929 in.)
Camshaft, Camshaft Cap Clearance	0.030 ~ 0.071 mm (0.0012 ~ 0.0028 in.)	0.16 mm (0.006 in.)
Camshaft Journal Diameter	24.950 ~ 24.970 mm (0.9823 ~ 0.9831 in.)	24.92 mm (0.9811 in.)
Camshaft Bearing Inside Diameter	25.000 ~ 25.021 mm (0.9843 ~ 0.9851 in.)	25.08 mm (0.9874 in.)
Camshaft Runout	TIR 0.03 mm (0.0012 in.) or less	TIR 0.1 mm (0.004 in.)
Rocker Arm Inside Diameter	12.500 ~ 12.518 mm (0.4921 ~ 0.4928 in.)	12.55 mm (0.4941 in.)
Rocker Shaft Diameter	12.466 ~ 12.484 mm (0.4908 ~ 0.4915 in.)	12.44 mm (0.4898 in.)
<b>Cylinder Head</b>		
Cylinder Compression	(usable range)	
Electric Starter	960 ~ 1 470 kPa (9.8 ~ 15.0 kgf/cm <sup>2</sup> , 139 ~ 213 psi) @450 r/min (rpm)	— — —
Cylinder Head Warp	— — —	0.05 mm (0.002 in.)
<b>Valves</b>		
Valve Clearance:		
Exhaust	0.18 ~ 0.23 mm (0.0070 ~ 0.0090 in.)	— — —
Inlet	0.13 ~ 0.18 mm (0.0051 ~ 0.0071 in.)	— — —
Valve Head Thickness:		
Exhaust	0.9 ~ 1.1 mm (0.0354 ~ 0.0433 in.)	0.7 mm (0.028 in.)
Inlet	0.4 ~ 0.6 mm (0.0157 ~ 0.0236 in.)	0.25 mm (0.01 in.)
Valve Stem Bend	TIR 0.01 mm (0.0004 in.) or less	TIR 0.05 mm (0.002 in.)
Valve Stem Diameter:		
Exhaust	5.455 ~ 5.470 mm (0.2148 ~ 0.2154 in.)	5.44 mm (0.2142 in.)
Inlet	5.475 ~ 5.490 mm (0.2156 ~ 0.2161 in.)	5.46 mm (0.2150 in.)
Valve Guide Inside Diameter:		
Exhaust	5.500 ~ 5.512 mm (0.2165 ~ 0.2170 in.)	5.58 mm (0.2197 in.)
Inlet	5.500 ~ 5.512 mm (0.2165 ~ 0.2170 in.)	5.58 mm (0.2197 in.)
Valve/valve Guide Clearance (wobble method):		
Exhaust	0.07 ~ 0.14 mm (0.0028 ~ 0.0055 in.)	0.27 mm (0.0106 in.)
Inlet	0.02 ~ 0.08 mm (0.0008 ~ 0.0032 in.)	0.22 mm (0.0087 in.)
Valve Seat Cutting Angle	45°, 32°, 60°	— — —
Valve Seat Surface:		
Width:		
Exhaust	0.5 ~ 1.0 mm (0.020 ~ 0.039 in.)	— — —
Inlet	0.5 ~ 1.0 mm (0.020 ~ 0.039 in.)	— — —


**Specifications**

Item	Standard	Service Limit
Outside diameter:		
Exhaust	24.0 ~ 24.2 mm (0.945 ~ 0.953 in.)	— — —
Inlet	28.3 ~ 28.5 mm (1.114 ~ 1.122 in.)	— — —
Valve spring free length:		
Inner	36.3 mm (1.429 in.)	35 mm (1.3780 in.)
Outer	40.4 mm (1.591 in.)	39 mm (1.5354 in.)
<b>Cylinder, Piston</b>		
Cylinder Inside Diameter	74.000 ~ 74.012 mm (2.9134 ~ 2.9139 in.)	74.11 mm (2.9177 in.)
Piston Diameter	73.942 ~ 73.957 mm (2.9111 ~ 2.9117 in.)	73.79 mm (2.9051 in.)
Piston/cylinder Clearance	0.043 ~ 0.070 mm (0.0017 ~ 0.0028 in.)	— — —
Oversize Piston and Rings	+0.5 mm (0.020 in.)	— — —
Piston Ring/groove Clearance:		
Top	0.03 ~ 0.07 mm (0.0012 ~ 0.0028 in.)	0.17 mm (0.0067 in.)
Second	0.02 ~ 0.06 mm (0.0008 ~ 0.0024 in.)	0.16 mm (0.0063 in.)
Piston Ring Groove Width:		
Top	0.82 ~ 0.84 mm (0.0323 ~ 0.0331 in.)	0.92 mm (0.0362 in.)
Second	1.01 ~ 1.03 mm (0.0398 ~ 0.0406 in.)	1.11 mm (0.0437 in.)
Piston Ring Thickness:		
Top	0.77 ~ 0.79 mm (0.0303 ~ 0.0311 in.)	0.70 mm (0.0276 in.)
Second	0.97 ~ 0.99 mm (0.0382 ~ 0.0390 in.)	0.90 mm (0.0354 in.)
Piston Ring End Gap:		
Top	0.20 ~ 0.35 mm (0.0079 ~ 0.0138 in.)	0.7 mm (0.0276 in.)
Second	0.20 ~ 0.35 mm (0.0079 ~ 0.0138 in.)	0.7 mm (0.0276 in.)
Oil	0.2 ~ 0.7 mm (0.008 ~ 0.028 in.)	1.0 mm (0.0394 in.)


# 5-8 ENGINE TOP END

## Special Tools and Sealant


**Piston Ring Pliers:**  
57001-115

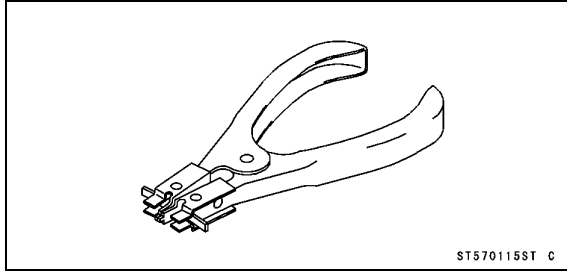


**Compression Gauge, 20 kgf/cm<sup>2</sup>:**  
57001-221

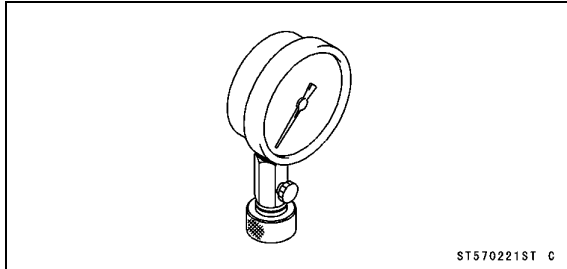


**Valve Spring Compressor Assembly:**  
57001-241

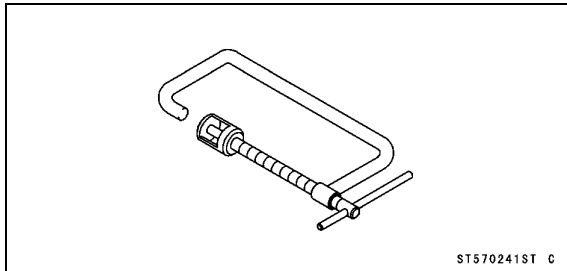


**Piston Pin Puller Assembly:**  
57001-910

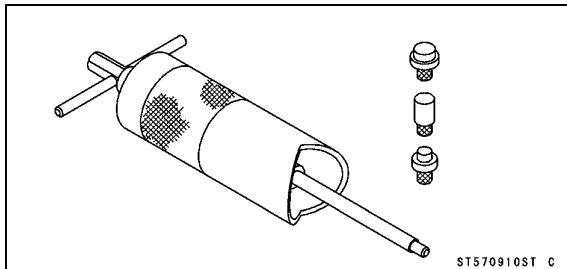


**Valve Guide Arbor,  $\phi 5.5$ :**  
57001-1021

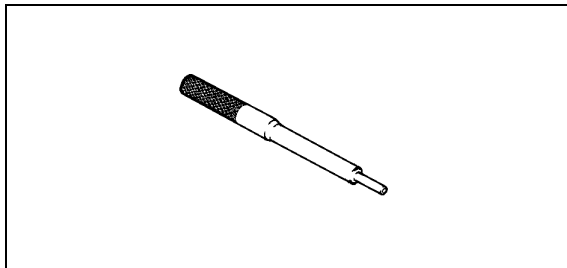


**Valve Guide Reamer,  $\phi 5.5$ :**  
57001-1079

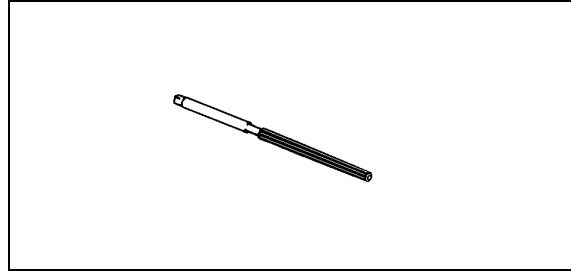


**Piston Ring Compressor Grip:**  
57001-1095

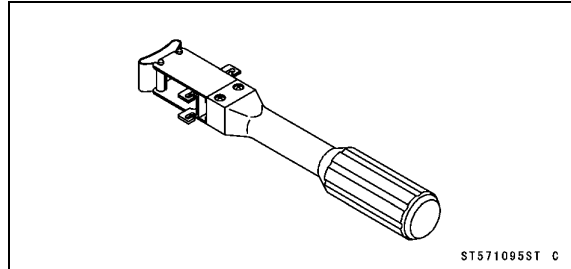


**Piston Ring Compressor Belt,  $\phi 67 \sim \phi 79$ :**  
57001-1097

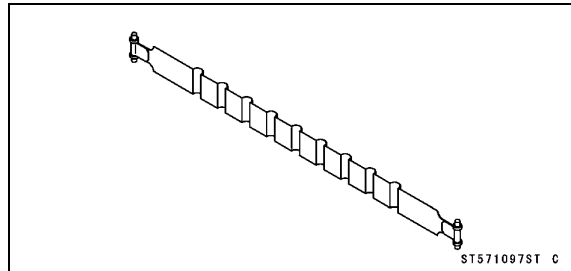

**Valve Seat Cutter, 45° -  $\phi 24.5$ :**  
57001-1113

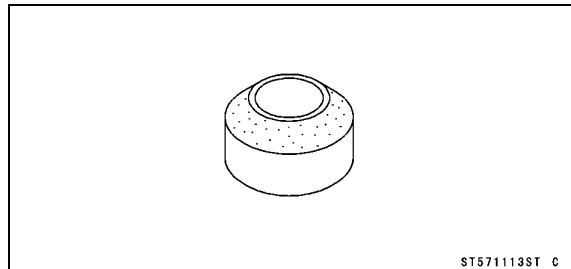


**Valve Seat Cutter, 32° -  $\phi 25$ :**  
57001-1118

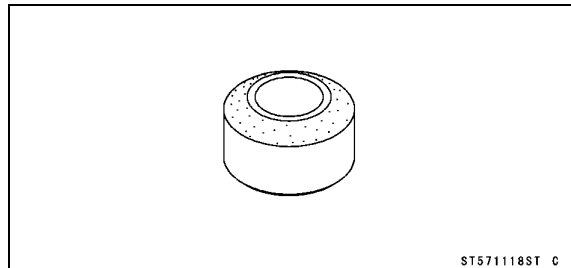


Special Tools and Sealant


Valve Seat Cutter, 32° -  $\phi$ 30:  
57001-1120

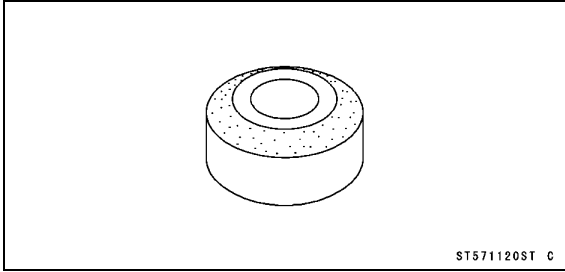


Valve Spring Compressor Adapter,  $\phi$ 22:  
57001-1202

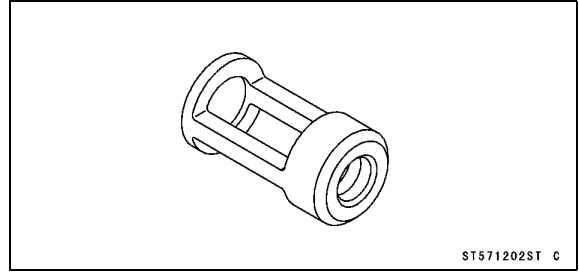


Valve Seat Cutter, 60° -  $\phi$ 30:  
57001-1123

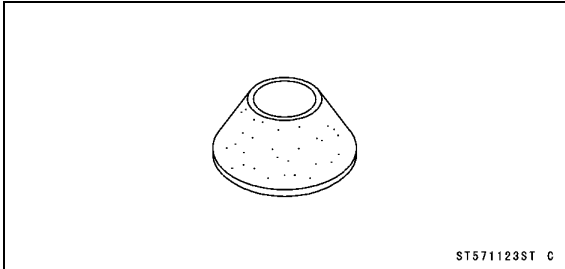


Fork Oil Level Gauge:  
57001-1290

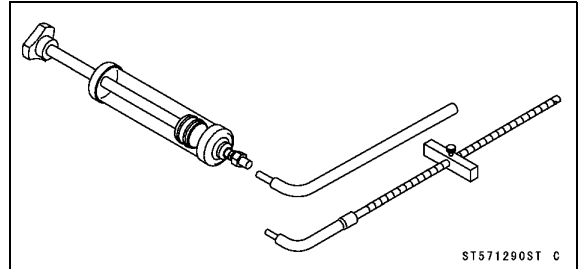


Valve Seat Cutter Holder,  $\phi$ 5.5:  
57001-1125

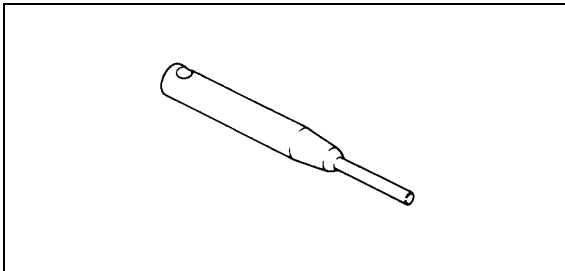


Valve Seat Cutter, 60° -  $\phi$ 25:  
57001-1328

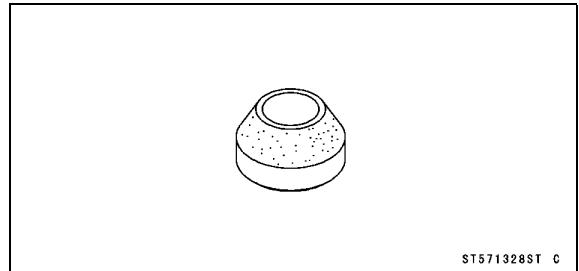


Valve Seat Cutter Holder Bar:  
57001-1128

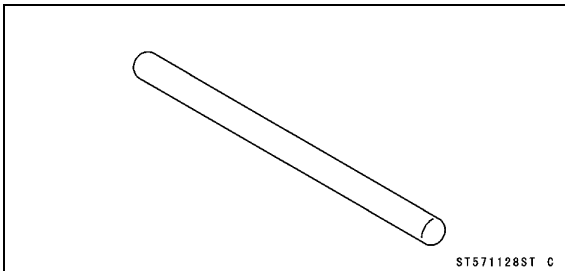


Piston Base,  $\phi$ 2.3:  
57001-1336

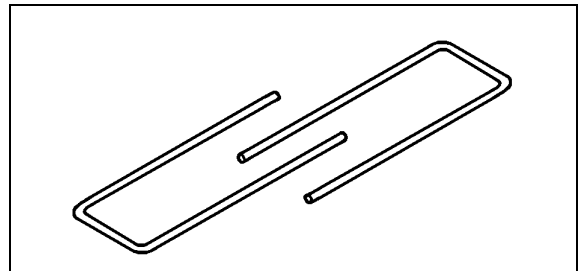

Valve Seat Cutter, 45° -  $\phi$ 30:  
57001-1187

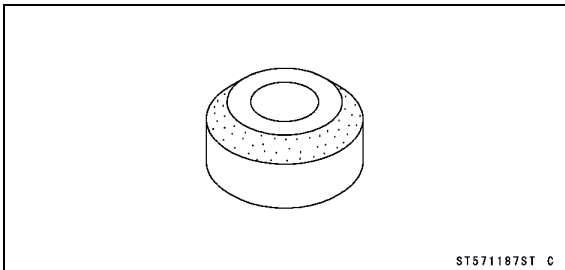

Compression Gauge Adapter, M12 x 1.25:  
57001-1644

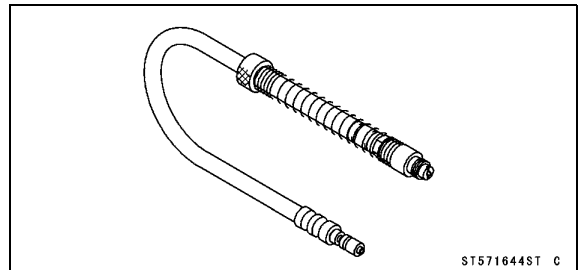


## 5-10 ENGINE TOP END

### Special Tools and Sealant

---


**Kawasaki Bond (Silicone Sealant):**  
**56019-120**

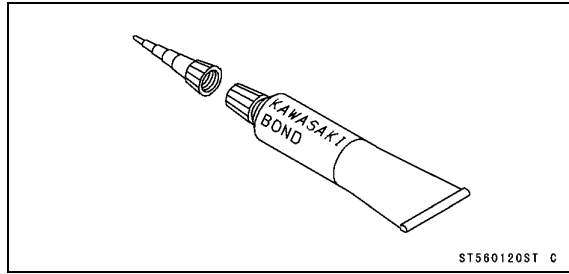

## Clean Air System

### Vacuum Switch Valve Removal

- Remove:  
Fuel Tank (see Fuel Tank Removal in the Fuel System chapter)
- Remove the clamps [A] and take off the vacuum switch valve [B].

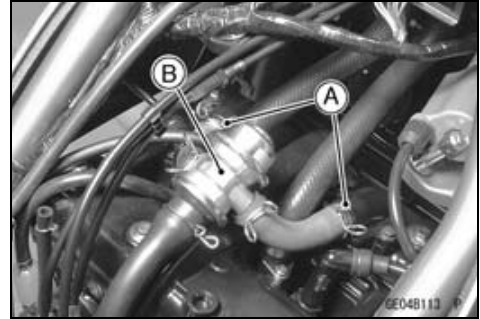


### Vacuum Switch Valve Installation

- Install the vacuum switch valve so that the air hole [A] faces downwards.



### Air Suction Valve Removal


- Remove the vacuum switch valve (see Vacuum Switch Valve Removal).
- Remove the bolts [A] and remove the air suction valve covers [B].

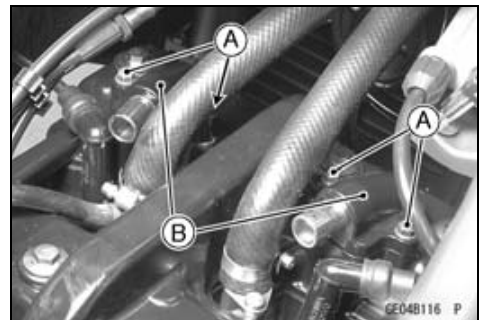

### Air Suction Valve Installation

- Replace the gasket with a new one.
- Install the air suction valve [A] so that its wider side [B] of the reed faces the rear [C].

**Torque - Air Suction Valve Cover Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

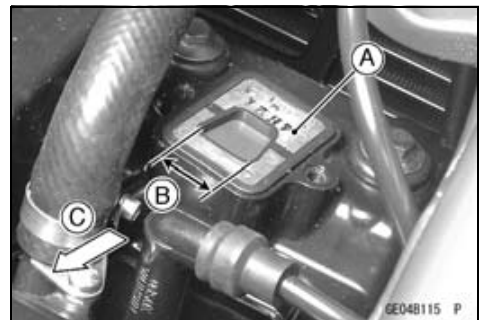

### Air Suction Valve Inspection

- Refer to the Engine Top End in the Periodic Maintenance chapter.

### Clean Air System Hose Inspection

- Be certain that all the hoses are routed without being flattened or kinked, and are connected correctly to the air cleaner housing, silencer, vacuum switch valve, carburetors, and air suction valve covers.
- ★ If they are not, correct them. Replace them if they are damaged.

## 5-12 ENGINE TOP END

### Clean Air System


#### Vacuum Switch Valve Test

Using the vacuum gauge and a syringe, inspect the vacuum switch operation as follows.

- Remove a vacuum switch valve.
- Connect a vacuum gauge [A] and syringe [B] or fork oil level gauge to the vacuum hoses as shown.

Air Flow [C]

**Special Tool - Fork Oil Level Gauge: 57001-1290**

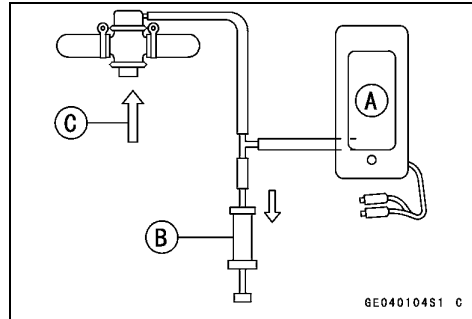

- Gradually raise the vacuum (lower the pressure) applied to the vacuum switch valve, and check the valve operation. When the vacuum is low, the vacuum switch valve should permit air to flow. When the vacuum raises to the level shown below, the valve should stop air flow. When the vacuum is high enough, air cannot flow through the valve.


Spring [A]

Diaphragm [B]

Valve [C]

Low Vacuum [D]

Secondary Air Flow [E]

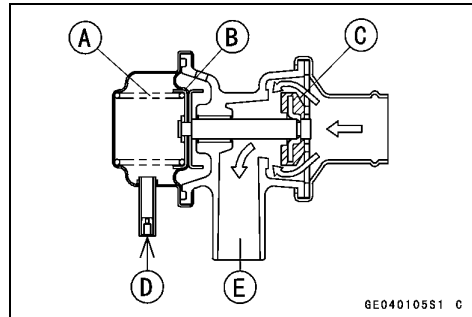

- ★ If the vacuum switch valve does not operate as described, replace it with a new one.

#### NOTE


○ To check air flow through the vacuum switch valve, just blow through the air cleaner hose.

**Vacuum Switch Valve Closing Pressure (open → close)**

**Standard: 45 ~ 53 kPa (340 ~ 400 mmHg)**

High Vacuum [A]

Secondary air cannot flow [B].

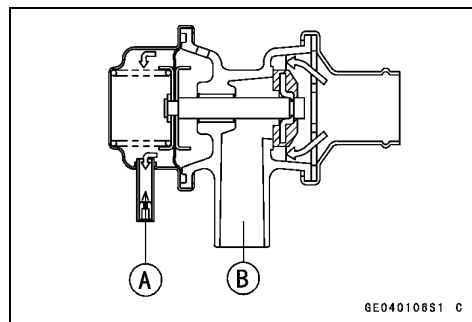



## Cylinder Head Cover

### *Cylinder Head Cover Removal*

- Drain the coolant (see Coolant Draining in the Cooling System chapter).
- Remove:
  - Side Covers (see Side Cover Removal in the Frame chapter)
  - Seat (see Seat Removal in the Frame chapter)
  - Lower Fairing (see Lower Fairing Removal in the Frame chapter)
  - Fuel Tank (see Fuel Tank Removal in the Fuel System chapter)


Choke Cable Lower End [A]

Throttle Cable Lower Ends [B]


Spark Plug Caps [C]

Vacuum Switch Valve


- Remove the coolant hose [D] from the pipe.
- Remove the radiator hoses and pipes mounting screws [E] and pull up them.

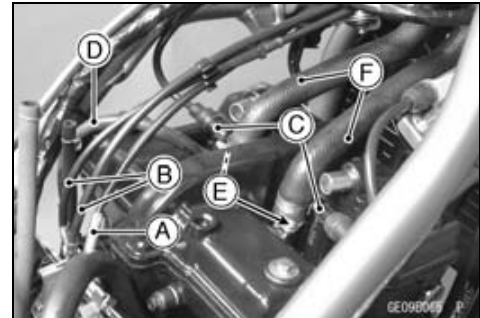

- Unscrew the cylinder head cover bolts [A].

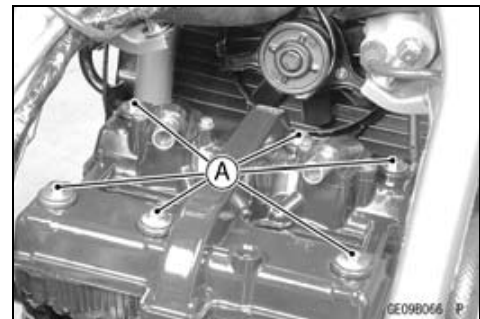

- Tilt up the right side [A] of the head cover slightly, move the head cover back [B] and upward.
- Remove the cylinder head cover.

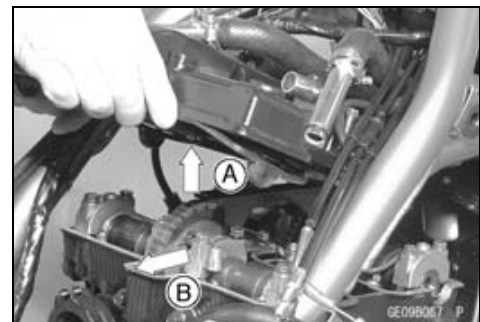

## 5-14 ENGINE TOP END

### Cylinder Head Cover

#### *Cylinder Head Cover Installation*


- Replace the head cover gasket [A] with a new one, if it is damaged.
- Stick the gasket to the cover with a liquid gasket [B] for installation convenience.
- Be sure to install the knock pins [C].
- Apply silicone sealant [D] as shown.

**Sealant - Kawasaki Bond (Silicone Sealant): 56019-120**

- Tighten the cover bolts [E].

**Torque - Cylinder Head Cover Bolts: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

- Install the removed parts in reverse of removal.

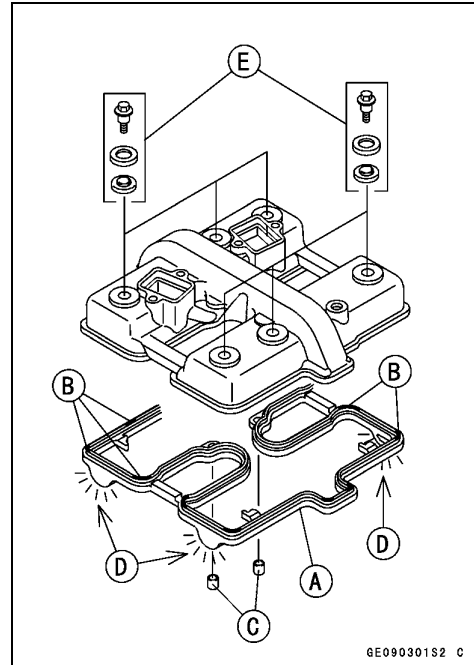

## Camshaft Chain Tensioner

### Camshaft Chain Tensioner Removal


#### CAUTION

This is a non-return type cam chain tensioner. The push rod does not return to its original position once it moves out to take up cam chain slack. Observe all the rules listed below:

When removing the tensioner, do not take out the mounting bolts only halfway. Retightening the mounting bolts from this position could damage the tensioner and the camshaft chain. Once the bolts are loosened, the tensioner must be removed and reset as described in "Chain Tensioner Installation".


Do not turn over the crankshaft while the tensioner is removed. This could upset the cam chain timing, and damage the valves.

- Loosen the cap bolt [A] before tensioner removal for later disassembly convenience.
- Unscrew the mounting bolts [B] and remove the camshaft chain tensioner [C].

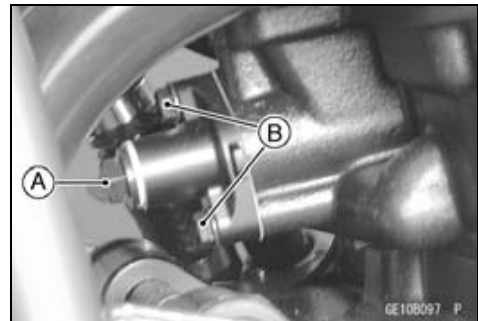

### Camshaft Chain Tensioner Installation

- Release the stopper [A] and push the rod [B] into the tensioner body [C].

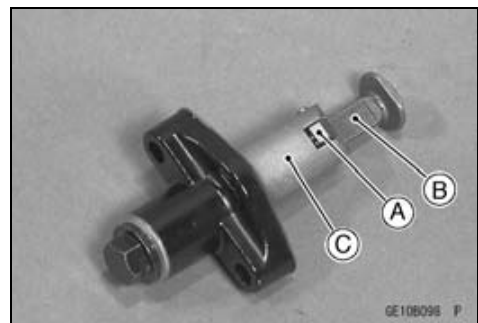


- Replace the gasket with a new one.
- Tighten the mounting bolts.

**Torque - Camshaft Chain Tensioner Mounting Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

- Install the spring [A], washer [B], Pin [C], and tighten the cap bolt [D].

**Torque - Camshaft Chain Tensioner Cap Bolt: 13 N·m (1.3 kgf·m, 9.5 ft·lb)**

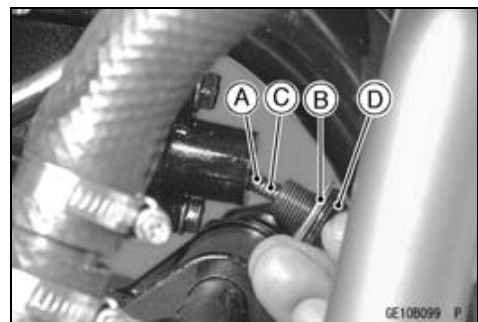


## 5-16 ENGINE TOP END


### Camshaft, Camshaft Chain

#### Camshaft Removal

- Remove the cylinder head cover (see Cylinder Head Cover Removal).
- Position the crankshaft at #2 piston TDC.
- Using a wrench on the crankshaft rotation bolt turn the crankshaft clockwise until the "C" mark line [A] on the rotor is aligned with the notch [B] in the edge of the upper hole in the alternator cover.

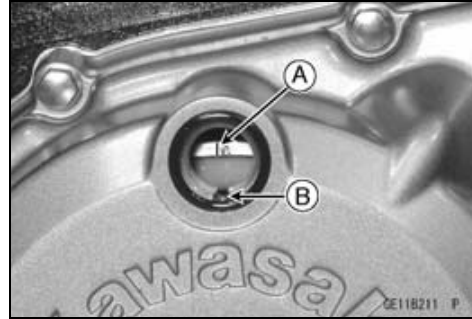

- Remove:
  - Camshaft Chain Tensioner (see Camshaft Chain Tensioner Removal)
  - Cylinder Head Oil Pipes [A]
  - Top Chain Guide [B]
  - Camshaft Caps [C]
  - Camshafts [D]
- Stuff a clean cloth into the chain tunnel to keep any parts from dropping into the crankcase.

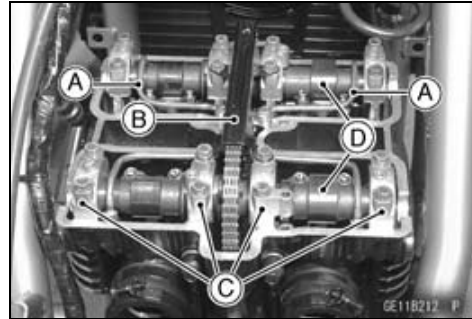

#### CAUTION


**The crankshaft may be turned while the camshafts are removed. Always pull the chain taut while turning the crankshaft. This avoids kinking the chain on the lower (crankshaft) sprocket. A kinked chain could damage both the chain and the sprocket.**

#### Camshaft Installation

- Apply molybdenum disulfide oil to all cam parts and journals.
- If the camshaft(s) and/or cylinder head are replaced with new ones, apply a thin coat of a molybdenum disulfide oil on the new cam part surfaces.

#### NOTE

- The Exhaust camshaft has an EX mark [A] and the inlet camshaft has an IN mark [B]. Be careful not to mix up these shafts.
- Be sure to operate from the engine left side.
- Position the crankshaft at #2 piston TDC (see Camshaft Removal).

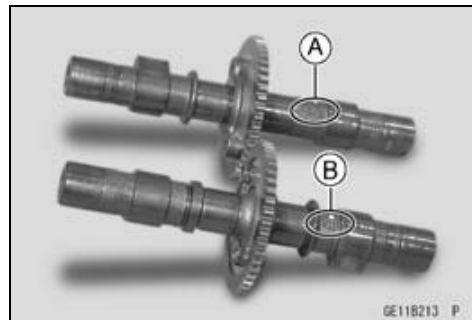


#### CAUTION


**The crankshaft may be turned while the camshafts are removed. Always pull the chain taut while turning the crankshaft. This avoids kinking the chain on the lower (crankshaft) sprocket. A kinked chain could damage both the chain and the sprocket.**

## Camshaft, Camshaft Chain

- Engage the camshaft chain with the camshaft sprockets.
- Pull the tension side [A] (inlet side) of the chain taut to install the chain.
- The timing marks [B] on the inlet sprocket [C] must be aligned with the cylinder head upper surface [D].
- Pull the chain taut and fit it onto the camshaft sprocket.
- Starting with the punch mark [E] on the top of the inlet sprocket, count to the 24th pin. Feed the inlet camshaft through the chain and align the 24th pin with the punch mark [F] on the exhaust camshaft sprocket [G].

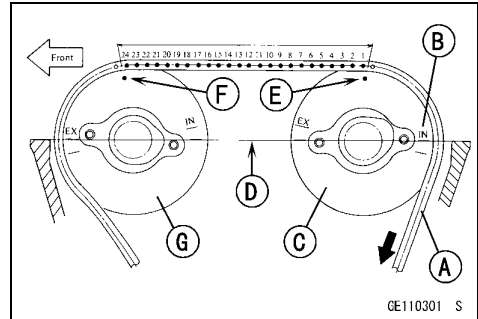

- Be sure to install the knock pins.
- Install the camshaft caps and top chain guide in the correct locations as shown. Location alphabets are marked on the cylinder head and each cap.

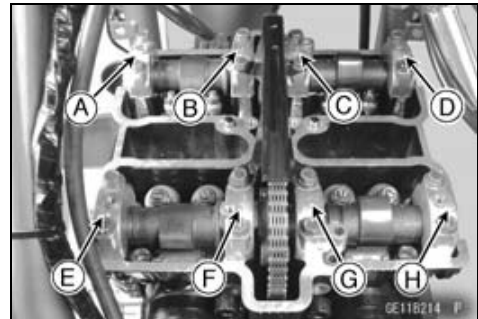


### CAUTION

The camshaft caps are machined with the cylinder head. So, if a cap is installed in a wrong location, the camshaft may seize because of improper oil clearance in the bearings.

- First tighten down the two camshaft cap bolts (#1 and #2 bolts in the figure) evenly to seat the camshafts in place, then tighten all bolts following the specified tightening sequence.

**Torque - Camshaft Cap Bolts: 12 N·m (1.2 kgf·m, 8.5 ft·lb)**

- Install the head oil pipes.
- Torque - Oil Pipe Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**
- Install the camshaft chain tensioner (see Camshaft Chain Tensioner Installation).
- Check the chain timing.

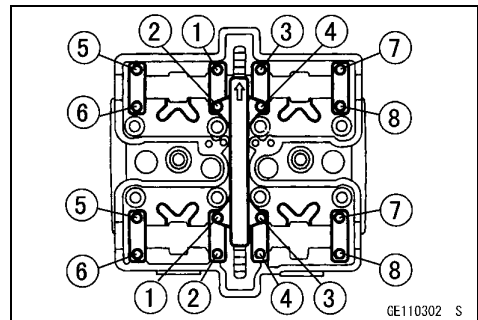

### Camshaft and Sprocket Assembly

- The inlet and exhaust sprockets are identical.
- Install the sprockets so that the marked [A] ("IN" and "EX") side faces to the left side.


### CAUTION

Inlet sprocket must use "I" marked bolt holes.  
Exhaust sprocket must use "E" marked bolt holes.

- Apply a non-permanent locking agent to the camshaft sprocket bolts and tighten them.

**Torque - Camshaft Sprocket Bolts: 15 N·m (1.5 kgf·m, 11.0 ft·lb)**

- ★ If a new camshaft is to be used, apply a thin coat of a molybdenum disulfide oil to the cam surfaces.

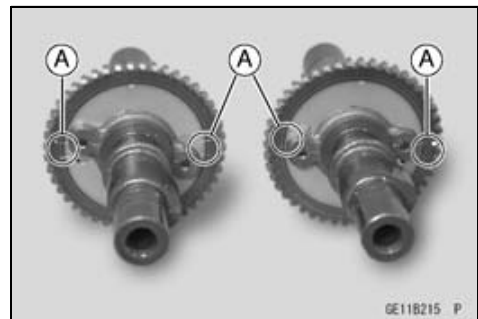

## 5-18 ENGINE TOP END

### Camshaft, Camshaft Chain

#### Camshaft, Camshaft Cap Wear

The journal wear is measured using plastigage (press gauge), which is inserted into the clearance to be measured. The plastigage indicates the clearance by the amount it is compressed and widened when the parts are assembled.

- Cut strips of plastigage to journal width. Place a strip on each journal parallel to the camshaft with the camshaft installed in the correct position and so that the plastigage will be compressed between the journal and camshaft cap.
- Install the camshaft caps, tightening the bolts in the correct sequence.


**Torque - Camshaft Cap Bolts: 12 N·m (1.2 kgf·m, 8.5 ft·lb)**

#### NOTE

○Do not turn the camshaft when the plastigage is between the journal and camshaft cap.

- Remove the camshaft caps again, and measure the plastigage width [A] to determine the clearance between each journal and camshaft cap. Measure the widest portion of the plastigage.

Plastigage Scale [B]

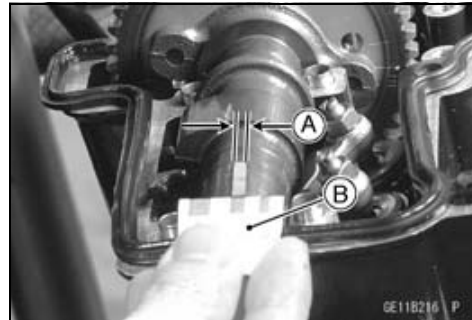

- ★If any clearance exceeds the service limit, measure the camshaft journal diameter and the camshaft bearing inside diameter.
- ★If any of the measurements is beyond the service limit, replace the worn part and check the clearance again.


#### Camshaft Journal, Camshaft Cap Clearance

**Standard: 0.030 ~ 0.071 mm (0.0012 ~ 0.0028 in.)**

**Service Limit: 0.16 mm (0.006 in.)**

#### Camshaft Chain Guide Wear

- Visually inspect the rubber [A] on the guides.
- ★If the rubber is damaged or cut, replace the guides.

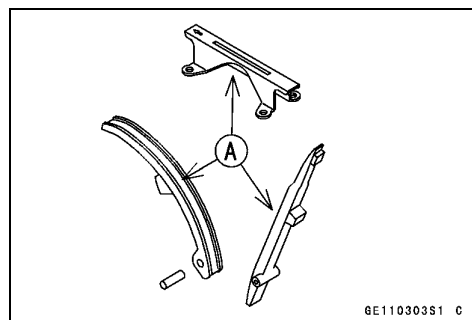


GE110303S1 0



## Rocker Shaft, Rocker Arm


### *Rocker Shaft, Rocker Arm Removal*

- Remove the camshafts (see Camshaft Removal).
- Unscrew the rocker shafts [A] and remove the rocker arms [B] and springs [C].
- Mark and record the rocker arm locations so that the rocker arm can be reinstalled in their original positions.

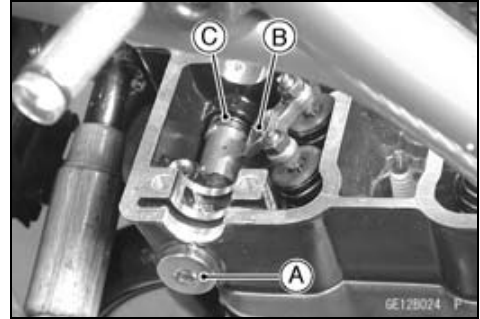

### *Rocker Shaft, Rocker Arm Installation*


- Blow the rocker arm oil passage [A] clean with compressed air.
- Apply molybdenum disulfide oil to all the rocker arms and the rocker shafts.

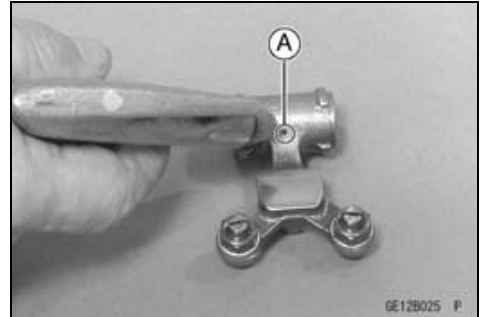

- Install the retainer spring [A] on each rocker arm so that the spring is placed to the camshaft chain side.
- Check that the O-rings are in good condition and install the O-rings onto the rocker shafts.
- Insert the shaft running it through the cylinder head, rocker arms and springs.
- Tighten the rocker shafts.

**Torque - Rocker Shafts: 39 N·m (4.0 kgf·m, 29 ft·lb)**

- Install the camshaft (see Camshaft Installation).
- Check the chain timing.

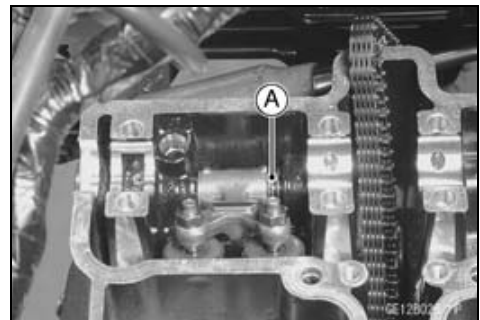


## 5-20 ENGINE TOP END

### Oil Pipe

#### *Cylinder Head Oil Pipe Removal*

- Remove the oil pipe mounting bolts [A] and pull the oil pipes [B] and O-rings out of the cylinder head.

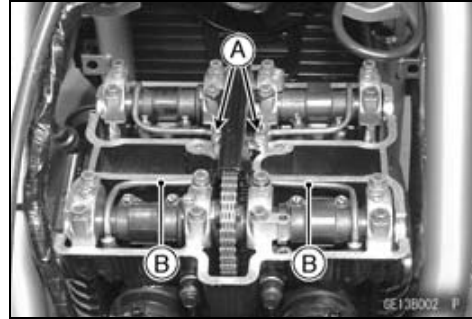


#### *Cylinder Head Oil Pipe Installation*

- Flush out the oil pipes with a high flash-point solvent.
- Check that the O-rings are in good condition.
- ★ If they are damaged, replace them with new ones.
- Apply a small amount of engine oil to the O-rings.
- Fix the oil pipes properly into the cylinder head oil passage holes by pushing both ends at the same time.
- Install the oil pipe mounting bolts.

#### *Main Oil Pipe Removal*

- Remove:
  - Carburetor (see Carburetor Removal in the Fuel System chapter)
  - Starter Motor (see Starter Motor Removal in the Electrical System chapter)
- Unscrew the banjo bolts [A] and mounting bolt [B].
- Remove the oil pipe [C].

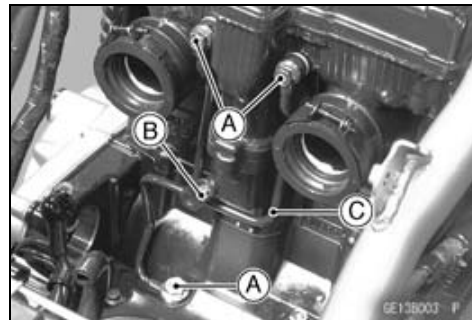

#### *Main Oil Pipe Installation*

- Flush out the oil pipes with a high flash-point solvent.
- Discard the used gaskets and install new gaskets on each side of the pipe fittings.
- Tighten the banjo bolts and mounting bolt to a snug fit, and then tighten them to the specified torque.

**Torque - Main Oil Pipe Upper Banjo Bolts: 12 N·m (1.2 kgf·m, 104 in·lb)**

**Main Oil Pipe Lower Banjo Bolt: 20 N·m (2.0 kgf·m, 14.5 ft·lb)**

**Main Oil Pipe Mounting Bolt: 11 N·m (1.1 kgf·m, 95 in·lb)**




## Cylinder Head

### Compression Measurement

- Remove:
  - Side Covers (see Side Cover Removal in the Frame chapter)
  - Lower Fairings (see Lower Fairing Removal in the Frame chapter)
  - Seat (see Seat Removal in the Frame chapter)
- Thoroughly warm up the engine so that the engine oil between the piston and cylinder wall will help seal compression as it does during normal running.
- Stop the engine, remove the fuel tank, ignition coil and spark plugs, and attach the compression gauge firmly into the spark plug hole.

**Special Tools - Compression Gauge, 20 kgf/cm<sup>2</sup>: 57001-221 [A]**  
**Compression Gauge Adapter, M12 × 1.25: 57001-1644 [B]**

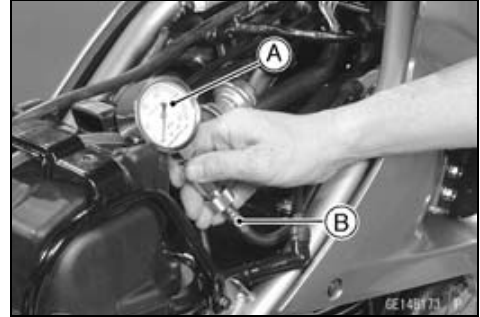

- Measure the cylinder compression.
- Using the starter motor, turn the engine over with the throttle fully open until the compression gauge stops rising; the compression is the highest reading obtainable.

### NOTE

- Be sure the battery is fully charged.
- Be sure no air leaks out of the cylinder head gasket.

### Cylinder Compression (Usable Range)

**960 ~ 1 470 kPa (9.8 ~ 15.0 kgf/cm<sup>2</sup>, 139 ~ 213 psi) @410 r/min (rpm)**

- Repeat the measurement for the other cylinder.
- ★ If cylinder compression is higher than the usable range, check the following:
  1. Carbon build-up on the piston head and cylinder head. - clean off any carbon on the piston head and cylinder head.
  2. Cylinder head gasket, cylinder base gasket - use only the proper gaskets for the cylinder head and base. The use of gaskets of the incorrect thickness will change the compression.
  3. Valve stem oil seals and piston rings - rapid carbon accumulation in the combustion chambers may be caused by damaged valve stem oil seals and/or damaged piston oil rings. This may be indicated by white exhaust smoke.

## 5-22 ENGINE TOP END

### Cylinder Head

★If cylinder compression is lower than the usable range, check the following:


1. Gas leakage around the cylinder head - replace the damaged gasket and check the cylinder head for warping.
2. Condition of the valve seating.
3. Valve clearance - if a valve requires an unusually large adjustment to obtain proper clearance, the valve may be bent, and not seating completely.
4. Piston/cylinder clearance, piston seizure.
5. Piston ring, piston ring groove.

### Cylinder Head Removal


● Remove:

Cylinder Head Cover (see Cylinder Head Cover Removal)  
Exhaust Pipes and Mufflers (see Crankshaft/Transmission chapter)  
Cam Chain Tensioner (see Chain Tensioner Removal)  
Camshafts (see Camshaft Removal)  
Carburetors (see Carburetor Removal in the Fuel System chapter)

- Remove the main oil pipe banjo bolts [A].
- Loosen the main oil pipe mounting bolt [B].
- Remove the rear 6 mm cylinder head bolt [C].

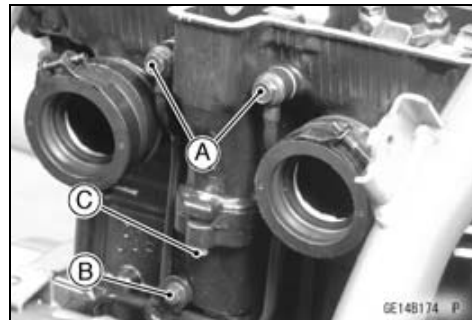


- Remove the front 6 mm cylinder head bolt [A] first, then remove the 10 mm cylinder head bolts [B]. This prevents excessive stress on the small bolts.

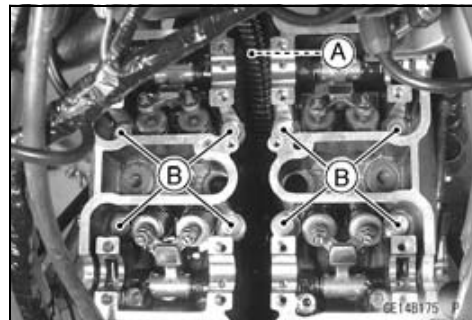


## Cylinder Head

- Tap in the places shown with a mallet [A] to remove the cylinder head.

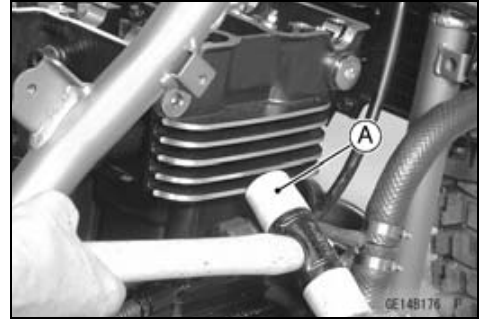


### Cylinder Head Installation

- Install the rear chain guide, knock pins [A] and new gasket [B].

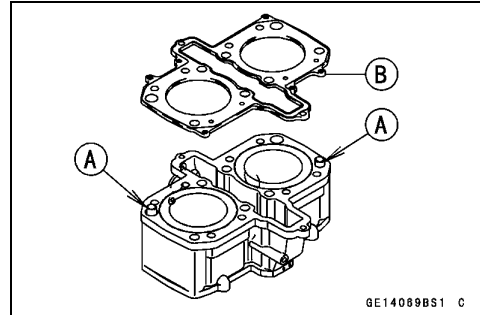

- Install a new cylinder head gasket with "UP" [A] marked side positioning to the right.

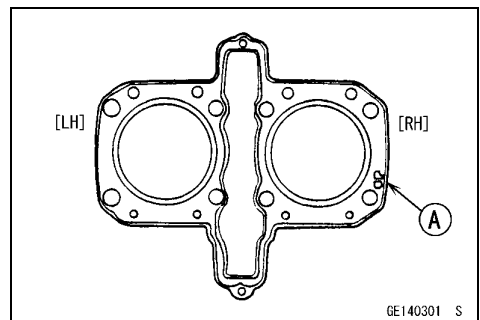


- NOTE**
- The camshaft caps are machined with the cylinder head so if a new cylinder head is installed, use the caps that are supplied with the new head.

- Tighten the 10 mm cylinder head bolts following the tightening sequence. Tighten them first to about one half of the specified torque.

**Torque - Cylinder Head Bolts 10 mm: 51 N·m (5.2 kgf·m, 38 ft·lb)**

**Cylinder Head Bolts 6 mm: 9.8 N·m (1.0 kgf·m, 87 in·lb)**

- Tighten the 6 mm cylinder bolts.
- Install the camshafts, camshaft caps and top chain guide.
- Install the head oil pipes.

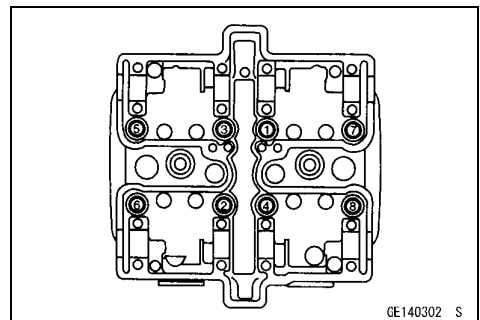

## 5-24 ENGINE TOP END

### Cylinder Head

#### *Cylinder Head Warp*

- Clean the cylinder head (see Cylinder Head Cleaning).
- Lay a straightedge [A] across the lower surface of the head at several different points, and measure warp by inserting a thickness gauge [B] between the straightedge and the head.
- ★ If warp exceeds the service limit, repair the mating surface. Replace the cylinder head if the mating surface is badly damaged.




#### **Cylinder Head Warp**

**Service Limit: 0.05 mm (0.002 in.)**

#### *Cylinder Head Cleaning*

- Remove the cylinder head (see Cylinder Head Removal).
- Remove the valves (see Valve Removal).
- Wash the head with a high-flash point solvent.
- Scrape [A] the carbon out of the combustion chamber and exhaust port with a suitable tool.

- Using compressed air, blow out any particles which may obstruct the oil passage [A] in the cylinder head.
- Install the valves (see Valve Installation).

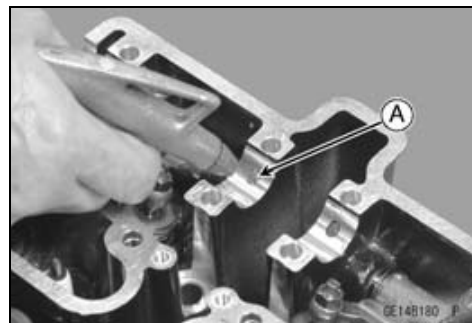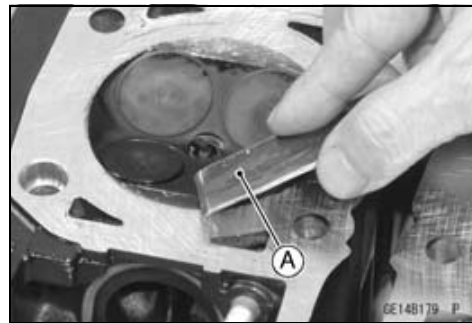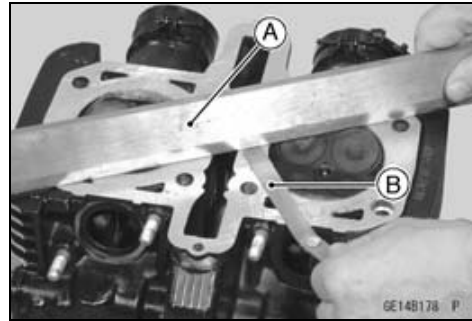

## Valves


### Valve Clearance Inspection

- Refer to the Valve Clearance Inspection in the Periodic Maintenance chapter.

### Valve Removal

- Remove the cylinder head (see Cylinder Head Removal).
- Use a valve spring compressor assembly to press down the valve spring retainer, and remove the split keepers.

**Special Tools - Valve Spring Compressor Assembly: 57001-241 [A]**  
**Valve Spring Compressor Adapter,  $\phi$ 22: 57001-1202 [B]**

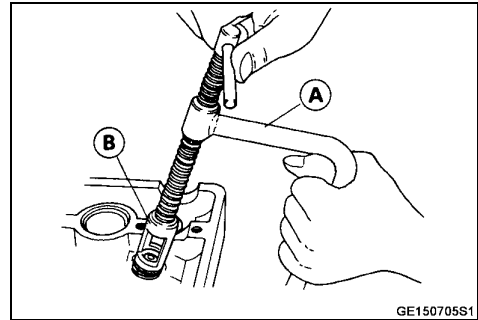


### Valve Installation

- Check to see that the valve [A] moves smoothly up and down in the guide.
- Check to see that the valve seats properly in the valve seat. If it does not, repair the valve seat.
- Replace the oil seal [B] with a new one.
- Apply a thin coat of molybdenum disulfide grease to the valve stem before valve installation.
- Be sure to install the inner [C] and outer [D] spring seats under the inner [E] and outer [F] springs.
- Install the springs so that the closed coil end [G] is facing toward the valve seat (downwards).
- Install the spring retainer [H], press it down with the valve spring compressor assembly, and fit the split keepers [I] into place.

**Special Tools - Valve Spring Compressor Assembly: 57001-241**  
**Valve Spring Compressor Adapter,  $\phi$ 22: 57001-1202**


- Install the other removed parts.

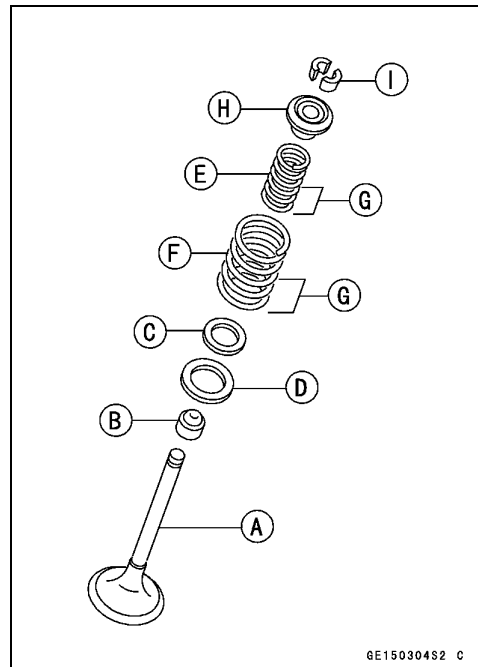

### Valve Guide Removal

- Remove:
  - Valve (see Valve Removal)
  - Oil Seal
  - Spring Seats
- Heat the area around the valve guide to about 120 ~ 150°C (248 ~ 302°F), and hammer lightly on the valve guide arbor [A] to remove the guide from the top of the head.

**Special Tool - Valve Guide Arbor,  $\phi$ 5.5: 57001-1021**

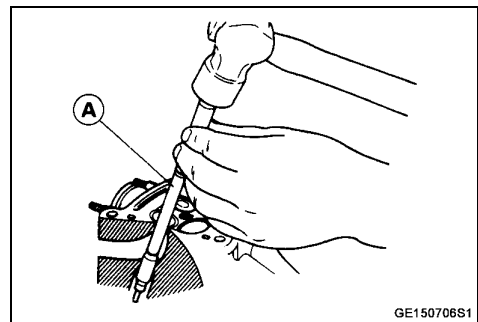

## 5-26 ENGINE TOP END

### Valves

#### Valve Guide Installation

- Apply molybdenum disulfide oil to the valve guide outer surface before installation.
- Heat the area around the valve guide hole to about 120 ~ 150°C (248 ~ 302°F).
- Drive the valve guide in from the top of the head using the valve guide arbor. The flange stops the guide from going in too far.

**Special Tool - Valve Guide Arbor,  $\phi$ 5.5: 57001-1021**

- Ream the valve guide with a valve guide reamer [A] even if the valve guide is reused.

**Special Tool - Valve Guide Reamer,  $\phi$ 5.5: 57001-1079**

#### Valve Seat Inspection

- Remove the valve (see Valve Removal).
- Check the valve seating surface [A] between the valve [B] and valve seat [C].
- Coat the valve seat with machinist's dye.
- Push the valve into the guide.
- Rotate the valve against the seat with a lapping tool.
- Pull the valve out, and check the seating pattern on the valve head. It must be the correct width and even all the way around.
- Measure the outside diameter [D] of the seating pattern on the valve seat.
- ★ If the outside diameter of the valve seating pattern is too large or too small, repair the seat (see Valve Seat Repair).

#### Valve Seating Surface Outside Diameter

Inlet	28.3 ~ 28.5 mm (1.114 ~ 1.122 in.)
Exhaust	24.0 ~ 24.2 mm (0.945 ~ 0.953 in.)

#### NOTE

- The valve stem and guide must be in good condition, or this check will not be valid.



- ★ If the valve seating pattern is not correct, repair the seat (see Valve Seat Repair).
- Measure the seat width [E] of the portion where there is no build-up carbon (white portion) of the valve seat with a vernier caliper.

- ★ If the width is too wide, too narrow or uneven, repair the seat (see Valve Seat Repair).

- [F] Good
- [G] Too Wide
- [H] Too Narrow
- [J] Uneven

#### Valve Seating Surface Width

Inlet	0.5 ~ 1.0 mm (0.020 ~ 0.039 in.)
Exhaust	0.5 ~ 1.0 mm (0.020 ~ 0.039 in.)

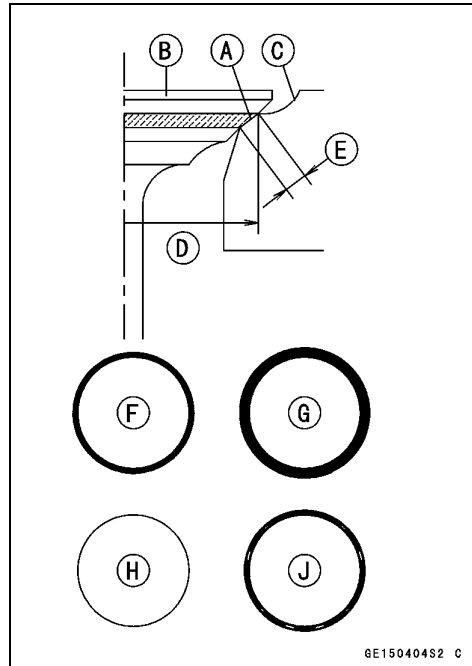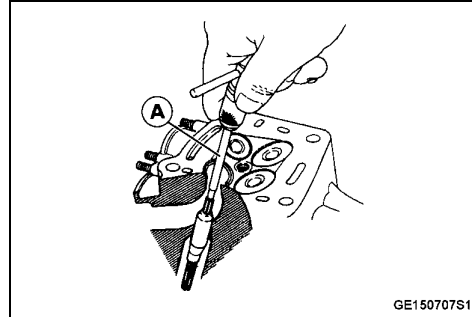


**Valves**

*Measuring Valve-to-guide Clearance (Wobble method)*

If a small bore gauge is not available, inspect the valve guide wear by measuring the valve to valve guide clearance with the wobble method, as indicated below.

- Insert a new valve [A] into the guide [B] and set a dial gauge against the stem perpendicular to it as close as possible to the cylinder head mating surface.
  - Move the stem back and forth [C] to measure valve/valve guide clearance.
  - Repeat the measurement in a direction at a right angle to the first.
- ★ If the reading exceeds the service limit, replace the guide.

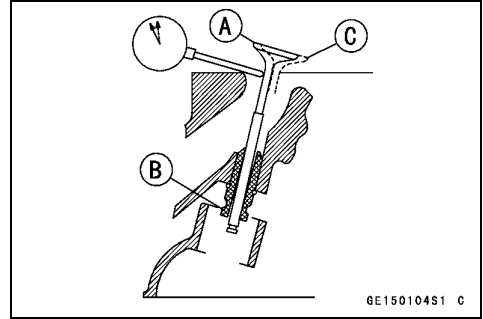

**NOTE**

○ *The reading is not actual valve/valve guide clearance because the measuring point is above the guide.*

**Valve/Valve Guide Clearance (Wobble Method)**

**Standard:**

Inlet	0.02 ~ 0.08 mm (0.0008 ~ 0.0032 in.)
Exhaust	0.07 ~ 0.14 mm (0.0028 ~ 0.0055 in.)

**Service Limit:**

Inlet	0.22 mm (0.0087 in.)
Exhaust	0.27 mm (0.0106 in.)

*Valve Seat Repair*

- Repair the valve seat with the valve seat cutters.

**Special Tools -**

**Inlet Valve**

Seat Cutter	45°-φ30.0	57001-1187
Seat Cutter	32°-φ30.0	57001-1120
Seat Cutter	60°-φ30.0	57001-1123

**Exhaust Valve**

Seat Cutter	45°-φ24.5	57001-1113
Seat Cutter	32°-φ25.0	57001-1118
Seat Cutter	60°-φ25.0	57001-1328
Valve Seat Cutter Holder - φ5.5		57001-1125
Valve Seat Cutter Holders Bar		57001-1128

- ★ If the manufacturer's instructions are not available, use the following procedure.



# 5-28 ENGINE TOP END

## Valves

### Seat Cutter Operating Cares

1. This valve seat cutter is developed to grind the valve for repair. Therefore the cutter must not be used for other purposes than seat repair.
2. Do not drop or shock the valve seat cutter, or the diamond particles may fall off.
3. Do not fail to apply engine oil to the valve seat cutter before grinding the seat surface. Also wash off ground particles sticking to the cutter with washing oil.

#### NOTE


○Do not use a wire brush to remove the metal particles from the cutter. It will take off the diamond particles.

4. Setting the valve seat cutter holder [A] in position, operate the cutter [B] in one hand [C]. Do not apply too much force to the diamond portion.

#### NOTE


○Prior to grinding, apply engine oil to the cutter and during the operation, wash off any ground particles sticking to the cutter with washing oil.

5. After use, wash the cutter with washing oil and apply a thin layer of engine oil before storing.

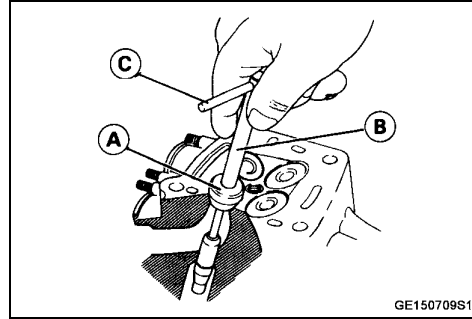

### Marks Stamped on the Cutter

- The marks stamped on the back of the cutter [A] represent the following.  
60° ..... Cutter angle [B]  
37.5φ ..... Cutter diameter of cutter [C]

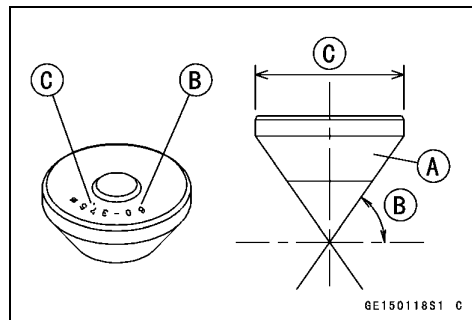

### Operating Procedures

- Clean the seat area carefully.
- Coat the seat with machinist's dye.
- Fit a 45° cutter to the holder and slide it into the valve guide.
- Press down lightly on the handle and turn it right or left. Grind the seating surface only until it is smooth.

#### CAUTION

**Do not grind the seat too much. Overgrinding will reduce valve clearance by sinking the valve into the head. If the valve sinks too far into the head, it will be impossible to adjust the clearance, and the cylinder head must be replaced.**

[A] Grind the seat at a 45° angle to enlarge the width of the seating surface.


[B] 32° cut

[C] 32°

[D] Specified seating surface width

[E] 60° cut

[F] 60°

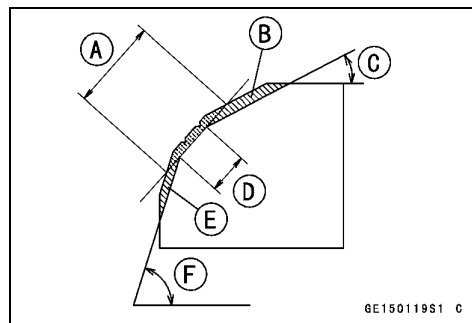



## Valves

- Measure the outside diameter (O.D.) of the seating surface with a vernier caliper.
- ★ If the outside diameter of the seating surface is too small, repeat the 45° grind [A] until the diameter is within the specified range.

Original Seating Surface [B]




### NOTE

- Remove all pittings or flaws from 45° ground surface.
  - After grinding with 45° cutter, apply thin coat of machinist's dye to seating surface. This makes seating surface distinct and 32° and 60° grinding operation easier.
  - When the valve guide is replaced, be sure to grind with 45° cutter for centering and good contact.
- ★ If the outside diameter of the seating surface is too large, make the 32° grind described below.
  - ★ If the outside diameter [A] of the seating surface is within the specified range, measure the seat width as described below.
  - Grind the seat at a 32° angle [B] until the seat O.D. is within the specified range.
  - To make the 32° grind, fit a 32° cutter to the holder, and slide it into the valve guide.
  - Turn the holder one turn at a time while pressing down very lightly. Check the seat after each turn.

### CAUTION

**The 32° cutter removes material very quickly. Check the seat outside diameter frequently to prevent overgrinding.**


- After making the 32° grind, return to the seat O.D. measurement step above.
  - To measure the seat width, use a vernier caliper to measure the width of the 45° angle portion of the seat at several places around the seat.
  - ★ If the seat width is too narrow, repeat the 45° grind until the seat is slightly too wide, and then return to the seat O.D. measurement step above.
  - ★ If the seat width is too wide, make the 60° [A] grind described below.
  - ★ If the seat width is within the specified range, lap the valve to the seat as described below.
  - Grind the seat at a 60° angle until the seat width is within the specified range.
  - To make the 60° grind, fit a 60° cutter to the holder, and slide it into the valve guide.
  - Turn the holder, while pressing down lightly.
  - After making the 60° grind, return to the seat width measurement step above.
- Correct Width [B]

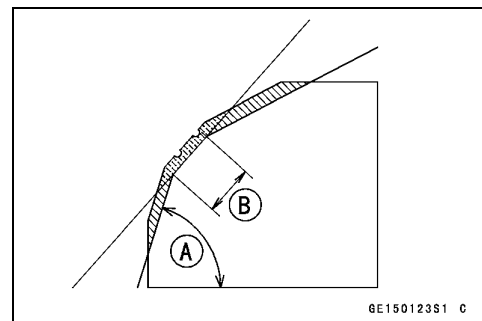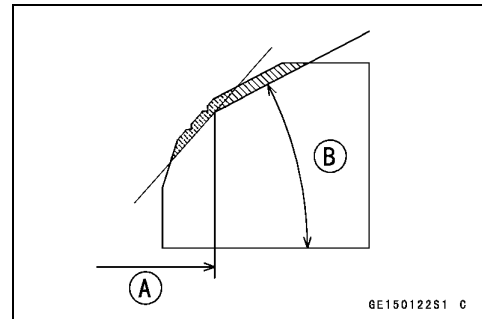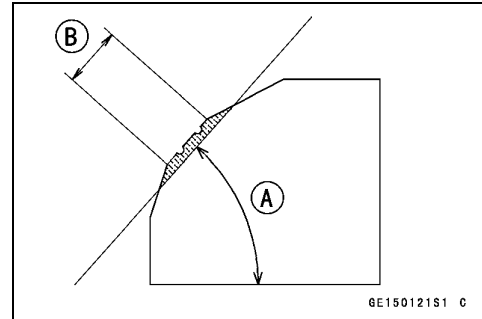


## 5-30 ENGINE TOP END

### Valves

- Lap the valve to the seat, once the seat width and O.D. are within the ranges specified above.
- Put a little coarse grinding compound on the face of the valve in a number of places around the valve head.
- Spin the valve against the seat until the grinding compound produces a smooth, matched surface on both the seat and the valve.
- Repeat the process with a fine grinding compound.
  - [A] Lapper
  - [B] Valve Seat
  - [C] Valve
- The seating area should be marked about in the middle of the valve face.
- ★ If the seat area is not in the right place on the valve, check to be sure the valve is the correct part. If it is, it may have been refaced too much; replace it.
- Be sure to remove all grinding compound before assembly.
- When the engine is assembled, be sure to adjust the valve clearance (see Valve Clearance Adjustment in the Periodic Maintenance chapter).

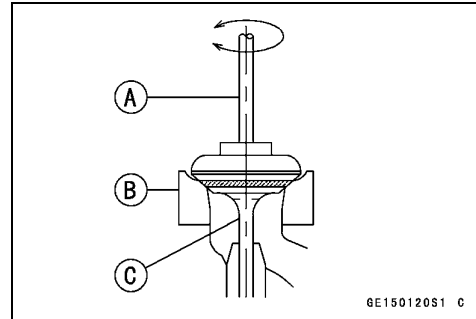

Valves

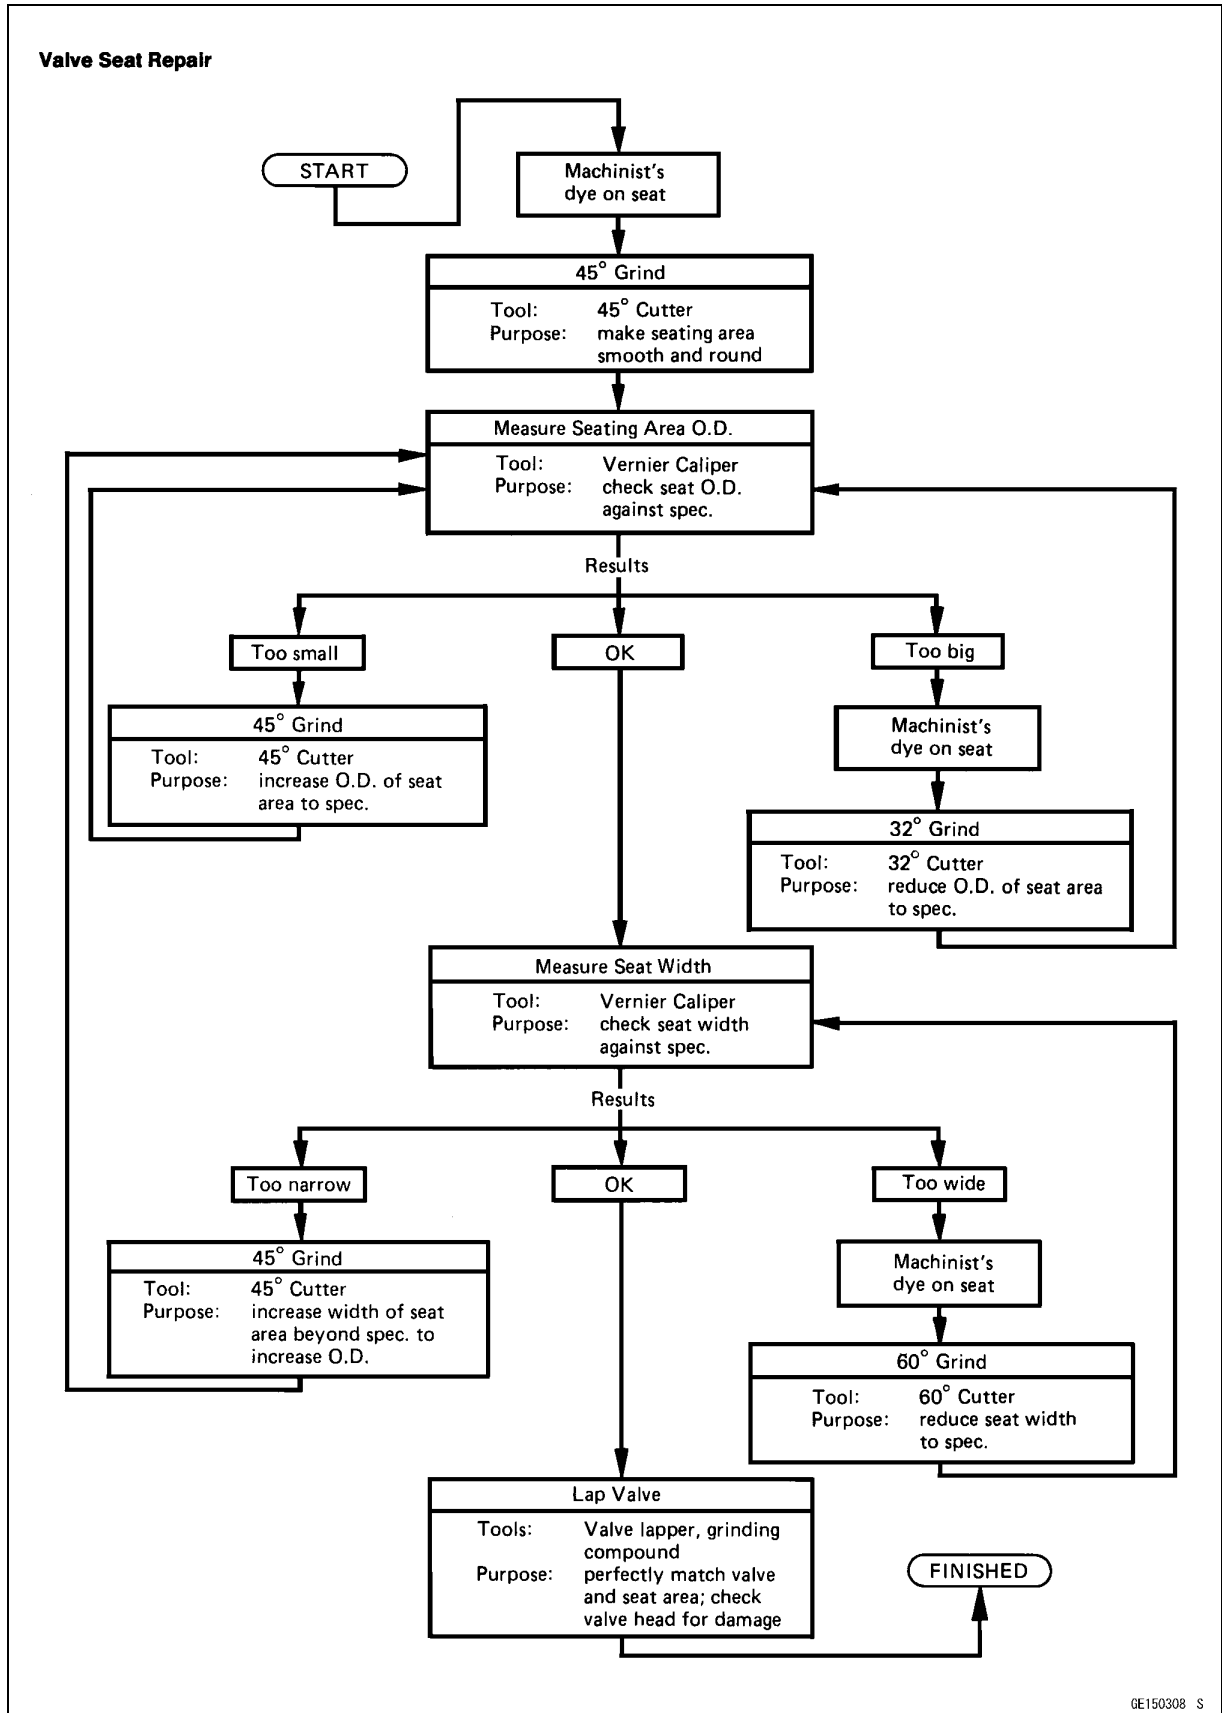


GE150308 S

## 5-32 ENGINE TOP END

### Cylinder, Piston


#### Cylinder Removal

- Remove the cylinder head (see Cylinder Head Removal).
- Remove the main oil pipe mounting bolt.
- Remove the bolts [A] and pull out the water pipe with water pump cover [B] (see water pump removal in the Cooling System chapter).
- Take out the cylinder block so as not to damage the main oil pipe.

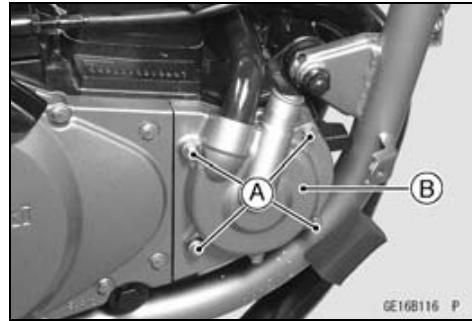


#### Cylinder Installation

- Install:
  - Dowel Pins [A]
  - New Cylinder Base Gasket [B]
- Install the cylinder base gasket so that the swollen groove come to upper side.
- Apply molybdenum disulfide oil to the cylinder bore.
- Position the crankshaft so that all the piston heads are almost level.

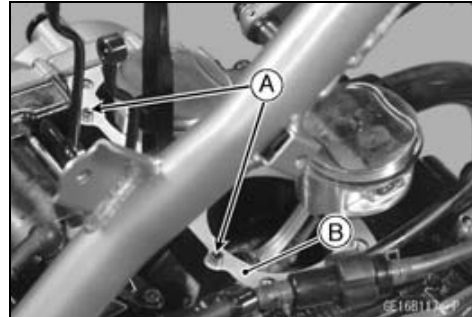

- Install the cylinder block [A].
  - **Special Tool - Piston Ring Compressor Grip: 5700-1095 [B]**
  - **Piston Ring Compressor Belt,  $\phi 67 \sim \phi 79$ : 5700-1097 [C]**
  - **Piston Base,  $\phi 2.3$ : 5700-1336 [D]**
- Insert the piston rings with your thumbs, if the special tools are not available.

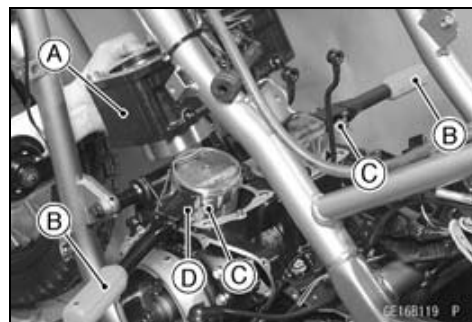


#### Piston Removal

- Remove the cylinder (see Cylinder Removal).
- Wrap a clean cloth [A] around the base of each piston to secure it in position for removal and so that no parts and dirt will fall into the crankcase.
- Remove the piston pin snap rings [B] from the outside of each piston.




- Remove the piston by pushing its piston pin puller out the side from which the snap ring was removed. Use a piston pin puller, if the pin is tight.

**Special Tool - Piston Pin Puller Assembly: 57001-910 [A]**

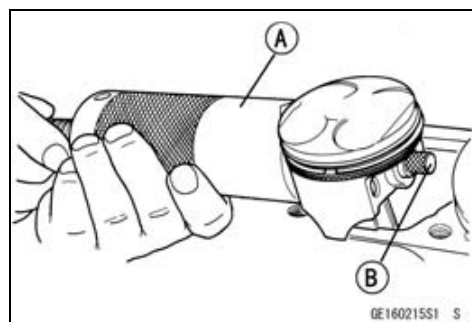


## Cylinder, Piston

- Remove the top and second rings with piston ring pliers.  
**Special Tool - Piston Ring Pliers: 57001-115**
- If the special tool is not available, carefully spread the ring opening with your thumbs and then push up on the opposite side of the ring [A] to remove it.
- Remove the 3-piece oil ring with your thumbs in the same manner.

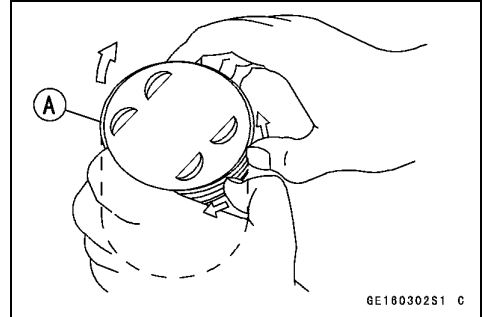


### Piston Installation

- Apply molybdenum disulfide oil to the oil ring expanders, oil ring steel rails, top rings, second rings and piston pins.
- Install the oil ring expander [A] in the piston oil ring groove so that the expander ends [B] butt together, never overlap.
- Install the upper and lower steel rails. There is no UP or Down to the rails. They can be installed either way.

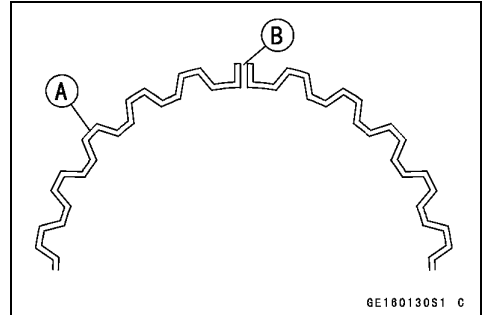


- Do not mix up the top ring and second ring.
- Install the top ring [A] and the second ring [B] so that the "N" mark [C] faces up.

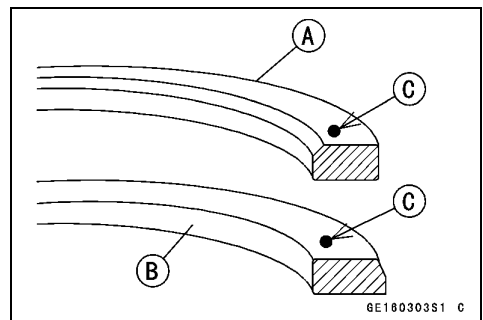

- Position each piston ring so that the openings in the top ring and oil ring steel rails are facing forwards, and the second ring and oil ring expander openings face the rear. The openings of the oil ring steel rails must be about 30° ~ 40° of angle from the opening of the top ring.

- [A] Top Ring
- [B] Second Ring
- [C] Oil Ring Steel Rails
- [D] Oil Ring Expander
- [E] Circle

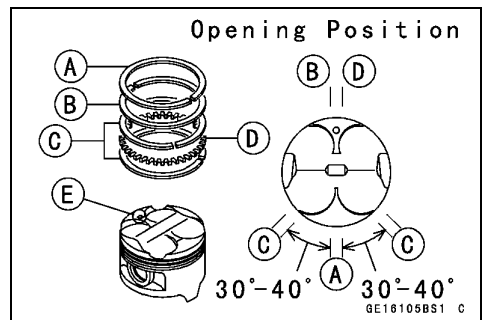

- Install the piston so that the circle mark on the top of the piston come to front side of the engine.
- When installing a piston pin snap ring, compress it only enough to install it and no more.

### CAUTION

**Do not reuse snap rings, as removal weakens and deforms them. They could fall out and score the cylinder wall.**

## 5-34 ENGINE TOP END

### Cylinder, Piston

#### *Piston Ring, Piston Ring Groove Wear*

- Check for uneven groove wear by inspecting the ring seating.
- ★ The rings should fit perfectly parallel to the groove surfaces. If not, the piston must be replaced.
- With the piston rings in their grooves, make several measurements with a thickness gauge [A] to determine piston ring/groove clearance.


#### **Piston Ring/Groove Clearance**

##### **Standard:**

<b>Top</b>	<b>0.03 ~ 0.07 mm (0.0012 ~ 0.0028 in.)</b>
<b>Second</b>	<b>0.02 ~ 0.06 mm (0.0008 ~ 0.0024 in.)</b>

##### **Service Limit:**

<b>Top</b>	<b>0.17 mm (0.0067 in.)</b>
<b>Second</b>	<b>0.16 mm (0.0063 in.)</b>

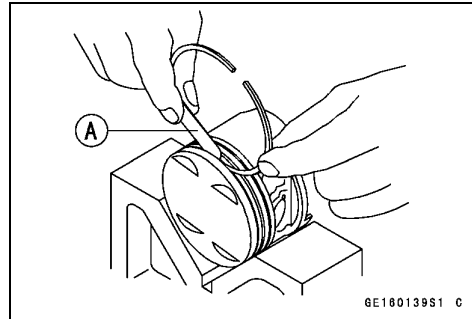

#### *Piston Ring End Gap*

- Place the piston ring [A] inside the cylinder, using the piston to locate the ring squarely in place. Set it close to the bottom of the cylinder, where cylinder wear is low.
- Measure the gap [B] between the ends of the ring with a thickness gauge.


#### **Piston Ring End Gap**

##### **Standard:**

<b>Top</b>	<b>0.20 ~ 0.35 mm (0.0079 ~ 0.0138 in.)</b>
<b>Second</b>	<b>0.20 ~ 0.35 mm (0.0079 ~ 0.0138 in.)</b>
<b>Oil</b>	<b>0.2 ~ 0.7 mm (0.008 ~ 0.028 in.)</b>

##### **Service Limit:**

<b>Top</b>	<b>0.7 mm (0.0276 in.)</b>
<b>Second</b>	<b>0.7 mm (0.0276 in.)</b>
<b>Oil</b>	<b>1.0 mm (0.0394 in.)</b>

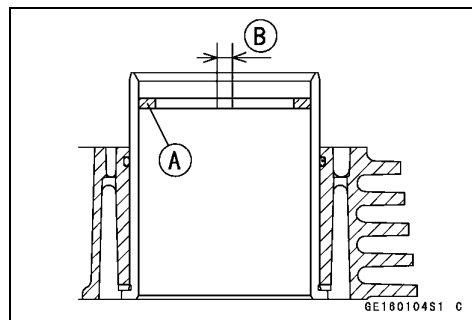


#### *Cylinder Inside Diameter*

- Since there is a difference in cylinder wear in different directions, take a side-to-side and a front-to-back measurement at each of the 3 locations (total of 6 measurements) shown in the figure.
- ★ If any of the cylinder inside diameter measurements exceeds the service limit, the cylinder will have to be bored to oversize and then honed.

- [A] 10 mm
- [B] 60 mm
- [C] 20 mm

#### **Cylinder Inside Diameter**

<b>Standard:</b>	<b>74.000 ~ 74.012 mm (2.9134 ~ 2.9139 in.)</b>
<b>Service Limit:</b>	<b>74.11 mm (2.9177 in.)</b>

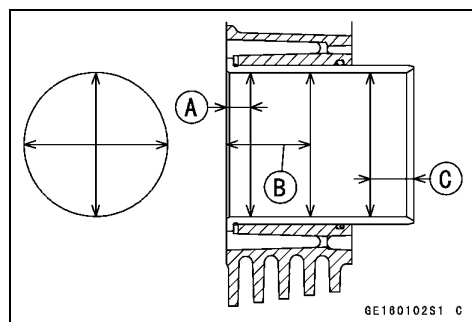

## Cylinder, Piston


### Piston Diameter

- Measure the outside diameter [A] of each piston 5 mm [B] up from the bottom of the piston at a right angle to the direction of the piston pin.
- ★ If the measurement is under the service limit, replace the piston.

### Piston Diameter

**Standard:** 73.942 ~ 73.957 mm (2.9111 ~ 2.9117 in.)

**Service Limit:** 73.79 mm (2.9051 in.)

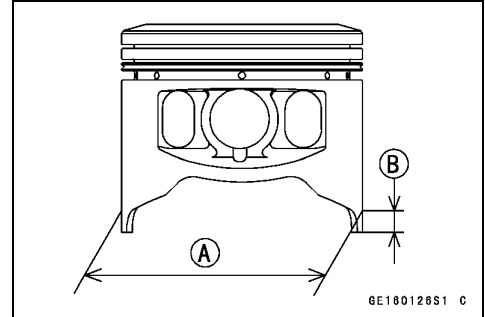

### Boring, Honing

When boring and honing a cylinder, note the following:


- There is one oversize piston available. Oversize pistons require oversize rings. Oversize pistons and rings available are **0.5 mm** larger than standard.
- Before boring a cylinder, first measure the exact diameter of the oversize piston, and then, according to the standard clearance in the Service Data Section, determine the re-bore diameter. However, if the amount of boring necessary would make the inside diameter greater than **0.5 mm** oversize, the cylinder block must be replaced.
- Cylinder inside diameter must not vary more than **0.01 mm** at any point.
- Be wary of measurements taken immediately after boring since the heat affects cylinder diameter.
- In the case of a rebored cylinder and oversize piston, the service limit for the cylinder is the diameter that the cylinder was bored to plus **0.1 mm** and the service limit for the piston is the oversize piston original diameter minus **0.15 mm**. If the exact figure for the rebored diameter is unknown, it can be roughly determined by measuring the diameter at the base of the cylinder.
- Never separate the liner from the cylinder, because the top surface of cylinder and liner is machined at the factory as an assembly.

## 5-36 ENGINE TOP END

### Carburetor Holder

#### Carburetor Holder Installation

- Install the carburetor holders. The projection [A] faces upwards.

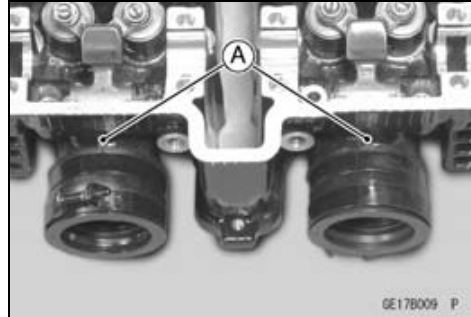


- Install the holder clamps [A] as shown being careful of the screw position and the screw head [B] direction.

#### **⚠ WARNING**

**Install the clamp screws horizontally. Otherwise the screws could come in contact with the vacuum adjusting screws, resulting in an unsafe riding condition.**

[C] Top

[D] Bottom

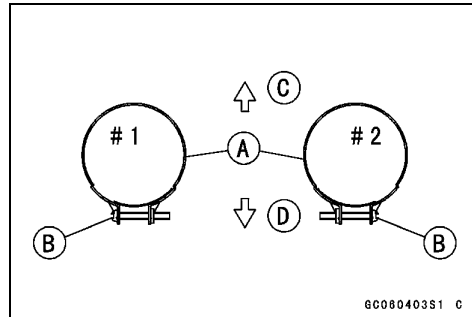




## Muffler

### Muffler Removal


- Remove the right side cover (see Side Cover Removal in the Frame chapter).
- Unscrew the muffler mounting bolt and nut [A].



- Remove the exhaust pipe holder nuts [A].

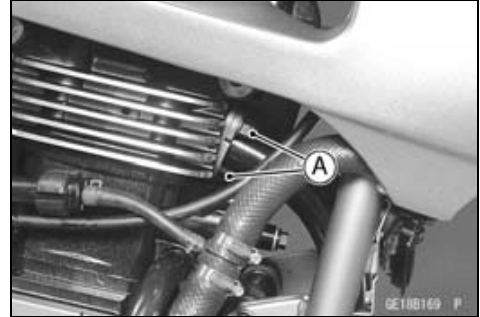

- Take off the muffler [A].

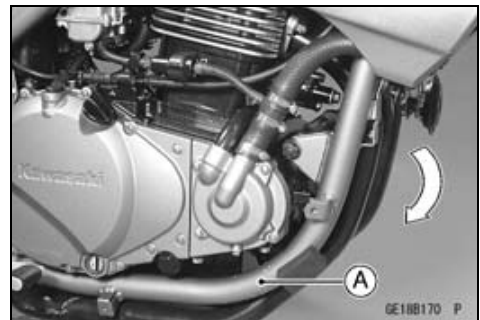

### Muffler Installation

- Replace the exhaust pipe holder gaskets with new ones.
- First, all the bolts and nuts to a snug fit.
- Secondary, tighten the exhaust pipe holder nuts evenly to avoid exhaust leaks.
- Finally, tighten the rest of the mounting bolt and nut securely.
- Thoroughly warm up the engine, wait until the engine cools down, and retighten all the bolts and nuts.



# Clutch


## Table of Contents

Exploded View .....	6-2
Specifications .....	6-6
Special Tool and Sealant .....	6-7
Clutch Lever and Cable .....	6-8
Clutch Lever Position Adjustment .....	6-8
Clutch Cable Inspection .....	6-8
Clutch Lever Installation .....	6-8
Cable Lubrication .....	6-8
Right Engine Cover .....	6-9
Clutch Cover Removal .....	6-9
Clutch Cover Installation .....	6-9
Clutch Release Removal .....	6-9
Clutch Release Installation .....	6-10
Clutch .....	6-11
Clutch Removal .....	6-11
Clutch Installation .....	6-11
Clutch Plate Wear, Damage Inspection .....	6-12
Clutch Plate Warp Inspection .....	6-12
Clutch Spring Free Length Measurement .....	6-13
Clutch Housing Finger Inspection .....	6-13
Clutch Hub Spline Inspection .....	6-13



# 6-2 CLUTCH

## Exploded View

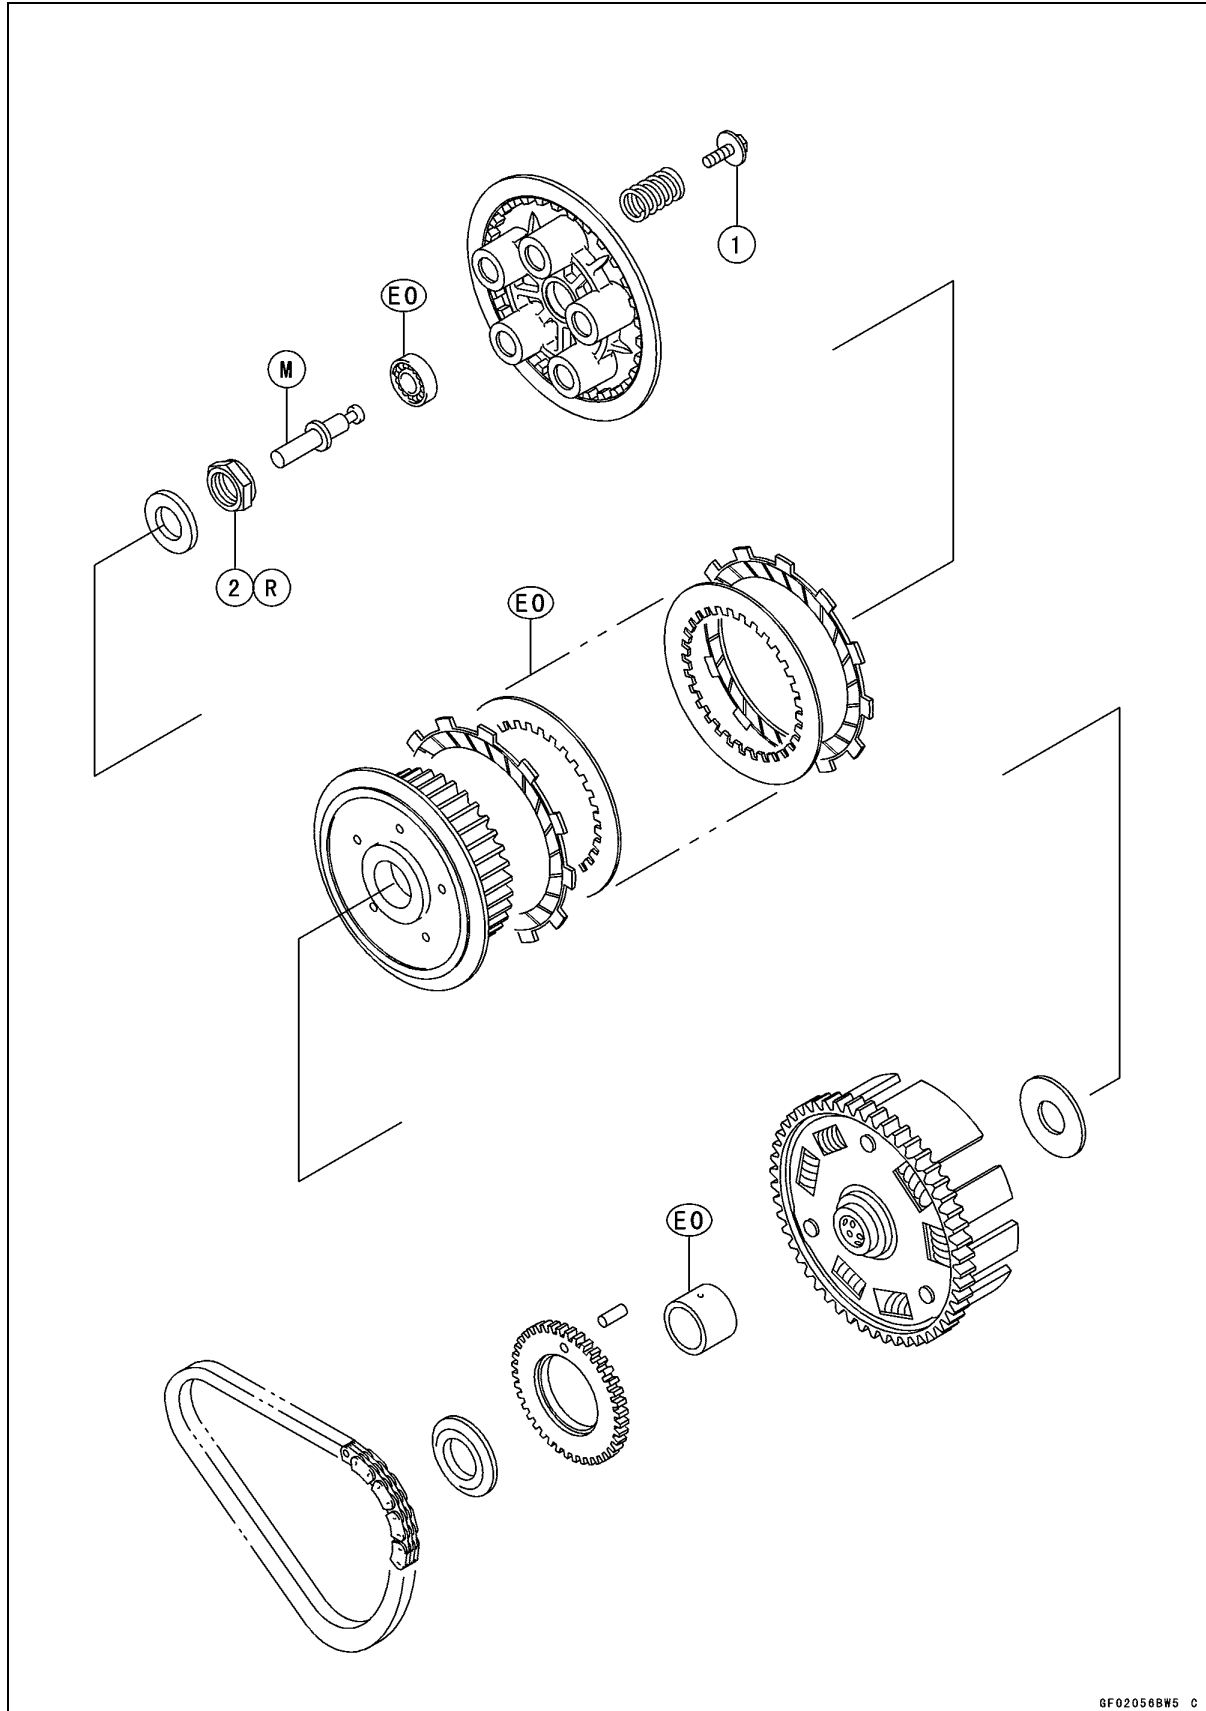

GF02056BW5 C

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Clutch Spring Bolts	9.3	0.95	82 in·lb	
2	Clutch Hub Nut	132	13.5	98	


EO: Apply engine oil.

M: Apply molybdenum disulfide grease.

R: Replacement Parts

# 6-4 CLUTCH

## Exploded View

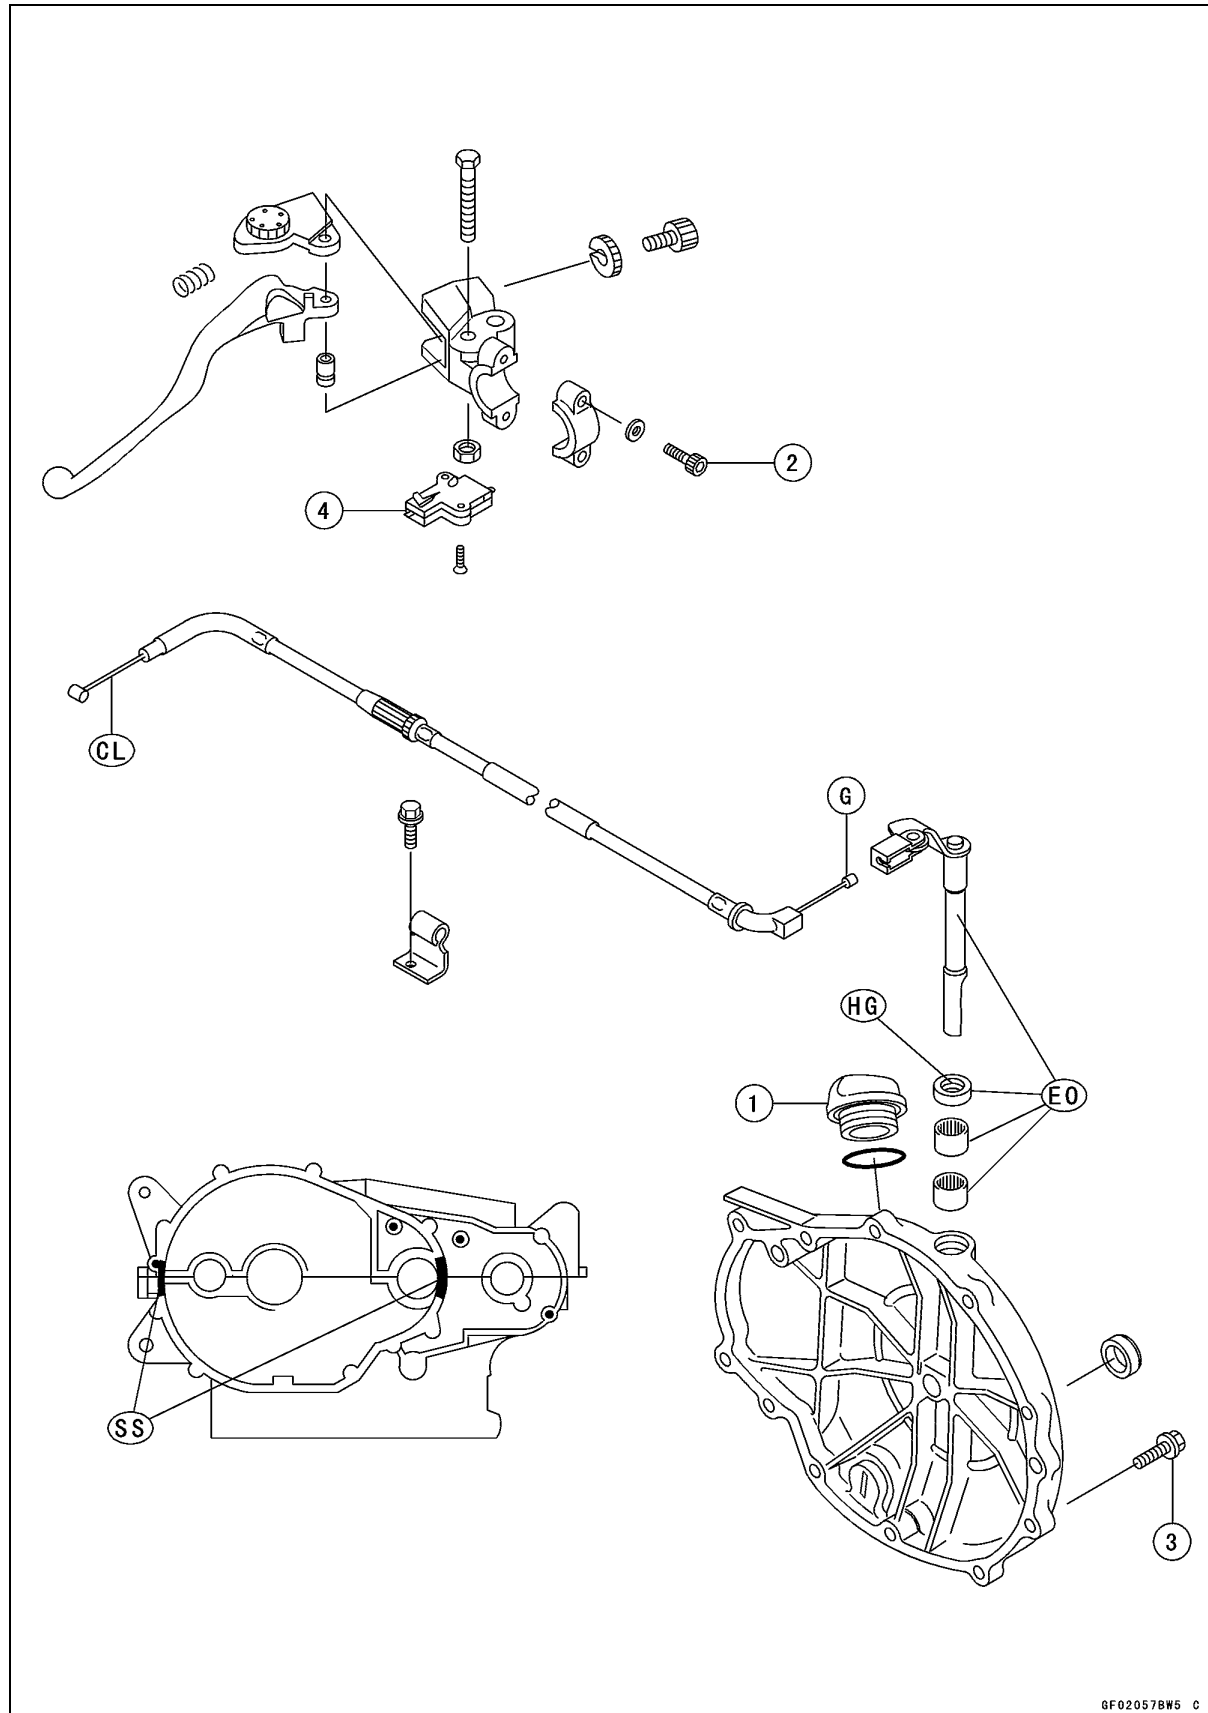

GF02057BW5 C

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Oil Filler Plug	1.5	0.15	13 in·lb	
2	Clutch Cable Holder Bolts	11	1.1	95 in·lb	
3	Clutch Cover Bolts	11	1.1	95 in·lb	

4. Starter Lockout Switch

CL: Apply cable lubricant.

EO: Apply engine oil.

G: Apply grease.

HG: Apply high temperature grease.

SS: Apply silicone sealant.

## 6-6 CLUTCH

### Specifications

Item	Standard	Service Limit
<b>Clutch Lever Position</b>	Non-adjustable	— — —
<b>Clutch Lever Free Play</b>	2 ~ 3 mm (0.08 ~ 0.12 in.)	— — —
<b>Clutch</b>		
Friction Plate Thickness	2.9 ~ 3.1 mm (0.114 ~ 0.122 in.)	2.75 mm (0.1082 in.)
Friction and Steel Plate Warp	0.2 mm (0.008 in.) or less	0.3 mm (0.012 in.)
Clutch Spring Free Length	34.2 mm (1.346 in.)	33.1 mm (1.303 in.)




---


**Special Tool and Sealant**

---

**Clutch Holder:  
57001-1243**

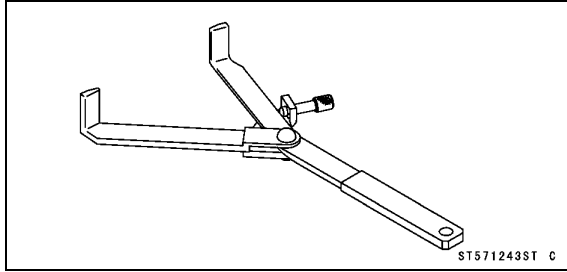

**Kawasaki Bond (Silicone Sealant):  
56019-120**

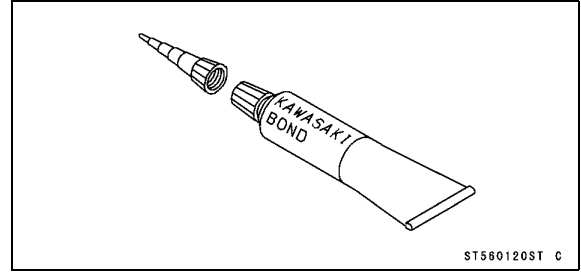


## 6-8 CLUTCH

### Clutch Lever and Cable

#### *Clutch Lever Position Adjustment*

The adjuster has 5 position so that the clutch lever position can be adjusted to suit the operator's hand.

- Push the lever forward and turn the adjuster [A] to align the number with the arrow mark [B] on the lever holder.
- The distance from the grip to the released lever is minimum at number 5 and maximum at number 1.

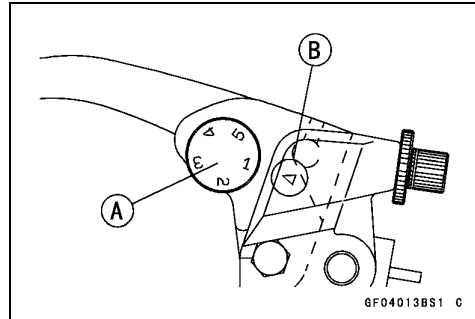


#### *Clutch Cable Inspection*

- Refer to the Clutch Cable Inspection in the Periodic Maintenance chapter.

#### *Clutch Lever Installation*


- Install the clutch lever so that the mating surface [A] of the lever holder is aligned with the punch mark [B] on the handlebar.

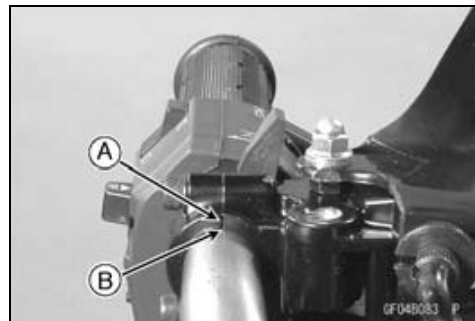

#### *Cable Lubrication*

Whenever the clutch cable is removed, lubricate the clutch cable as follows.


- Apply a thin coating of grease to the cable upper and lower ends.
- Lubricate the cable with a penetrating rust inhibitor.

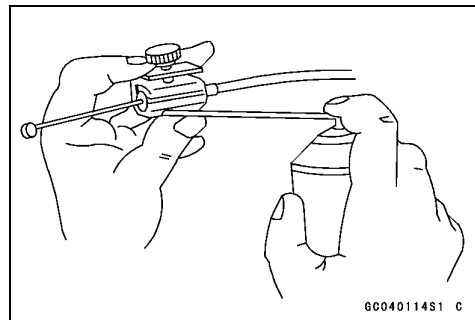

## Right Engine Cover


### Clutch Cover Removal

- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove:
  - Clutch Cable
  - Engine Guard (see Engine Guard Removal in the Frame chapter)
  - Clutch Cover Bolts [A]
- Turn the release lever [B] toward the front as shown, and remove the clutch cover [C].

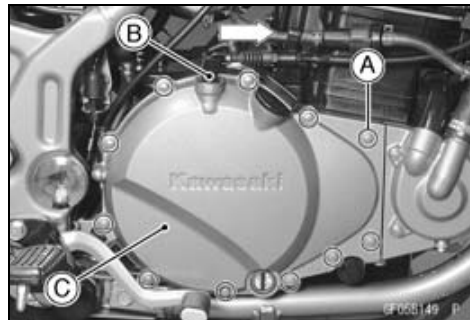

### Clutch Cover Installation

- Apply silicone sealant to the area [A] where the mating surface of the crankcase touches the clutch cover gasket.
- **Sealant - Kawasaki Bond (Silicone Sealant): 56019-120**
- Install the knock pins [B], and replace the cover gasket with a new one.
- Tighten the cover bolts.
- **Torque - Clutch Cover Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

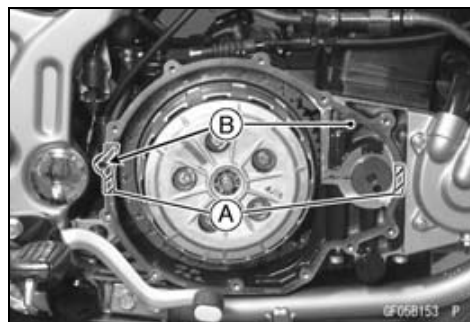

### Clutch Release Removal


#### NOTE

- Do not pull out the clutch release shaft for clutch cover removal.

#### CAUTION

**Clutch release shaft removal damages the oil seal in the clutch cover necessitating the oil seal replacement.**

- Slide the dust cover at the clutch cable lower end out of place.
- Loosen the nuts, and slide the lower end of the clutch cable to give the cable plenty of play.
- Loosen the knurled locknut [B] at the clutch lever, and screw in the adjuster [C].
- Remove the left handlebar cover.
- Line up the slots [A] in the clutch lever, knurled locknut, and adjuster, and then free the cable from the lever.

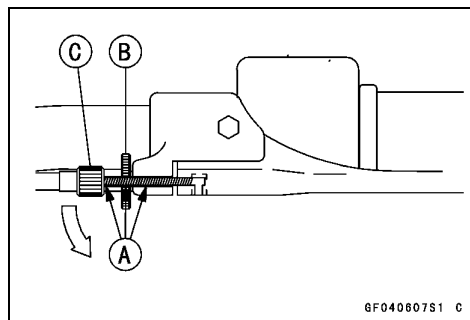


6F040607S1 C

## 6-10 CLUTCH

### Right Engine Cover

- Free the clutch inner cable tip from the clutch release lever [A].
- Turn the release lever toward the rear [B] as shown in the figure.
- Pull the lever and shaft assembly out of the clutch cover.

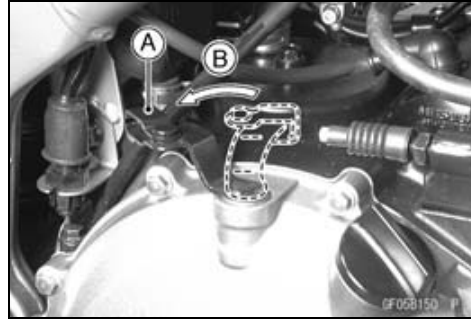

#### Clutch Release Installation

##### CAUTION



**Always install a new oil seal when the clutch release shaft is removed.**

- Apply high temperature grease to the oil seal lips in the clutch cover.
- Apply engine oil to the bearings in the hole of the clutch cover.
- Apply engine oil to the release shaft.
- Turning the release lever toward the rear, insert the release shaft straight into the hole of the clutch cover.

##### CAUTION

**When inserting the release shaft, be careful not to remove the spring of the oil seal.**


- Install the clutch inner cable tip in the release lever.
- Turn the release lever clockwise until it becomes hard to turn.
- The release lever should have proper clearance and angle as shown.
  - [A] 1 ~ 3 mm
  - [B] 80° ~ 90°

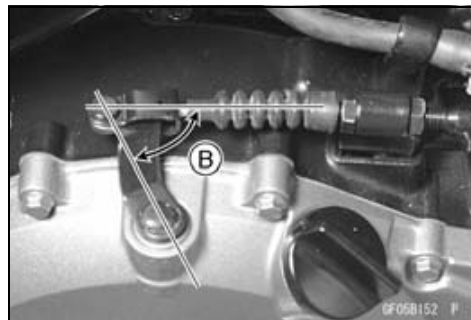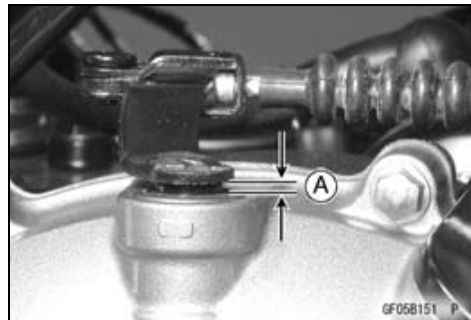

## Clutch

### Clutch Removal


- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove the clutch cover (see Clutch Cover Removal).
- Remove the clutch spring bolts [A], washers [B] and springs.
- Remove the clutch spring plate [C] with the thrust ball bearing [D] and pusher [E].
- Remove the friction plates and steel plates.

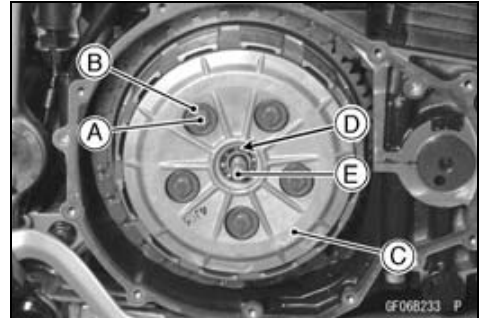

- When loosening the clutch hub self-locking nut [A], use the clutch holder [B] to keep the clutch hub from turning as shown.

**Special Tool - Clutch Holder: 57001-1243**


- Remove the clutch hub self-locking nut and washer.

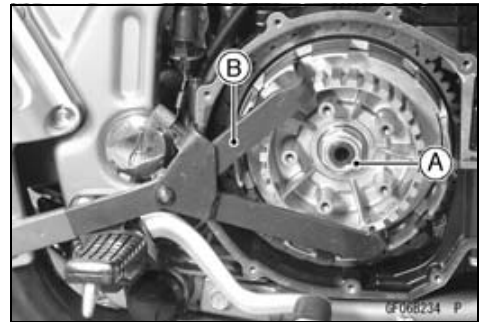

- Pull out the clutch hub [A] and thrust washer [B].

### NOTE

- *The clutch housing can not be removed without major disassembly work (see Crankshaft/Transmission chapter).*

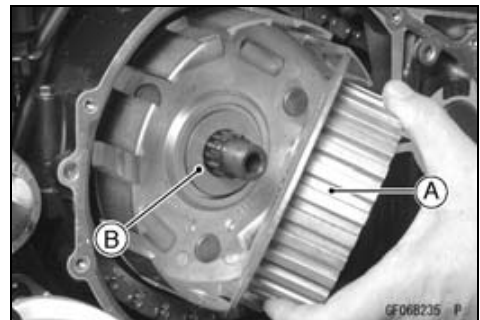

### Clutch Installation

- Install the thrust washer and clutch hub.
- Install the washer.
- Discard the used clutch hub self-locking nut, and install a new self-locking nut with the projected side facing outward.
- Install the clutch holder to keep the clutch hub from turning and tighten the clutch hub self-locking nut.

**Special Tool - Clutch Holder: 57001-1243**


**Torque - Clutch Hub Nut: 132 N·m (13.5 kgf·m, 98 ft·lb)**

- Install the friction plates and steel plates, starting with a friction plate and alternating them.

## 6-12 CLUTCH

### Clutch

- The grooves [A] on the friction plate surfaces are cut tangentially and radially, install the friction plates so that the grooves run toward the center in the direction of the clutch housing rotation (counterclockwise viewed from the engine right side).

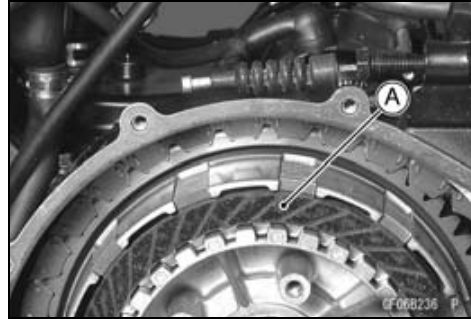

#### CAUTION

**If new dry steel plates and friction plates are installed, apply engine oil to the surfaces of each plate to avoid clutch plate seizure.**

- Apply engine oil to the thrust ball bearing.
- Apply molybdenum disulfide grease to the rubbing portion of clutch spring plate pusher.
- Tighten the clutch spring bolts.

**Torque - Clutch Spring Bolts: 9.3 N·m (0.95 kgf·m, 82 in·lb)**


#### *Clutch Plate Wear, Damage Inspection*

- Visually inspect the friction and steel plates for signs of seizure, overheating (discoloration), or uneven wear.
- ★ If any plates show signs of damage, replace the friction plates and steel plates as a set.
- Measure the thickness of the friction plate [A] at several points.
- ★ If any of the measurements is less than the service limit, replace the friction plate.

#### **Friction Plate Thickness**

**Standard: 2.9 ~ 3.1 mm (0.114 ~ 0.122 in.)**

**Service Limit: 2.75 mm (0.1082 in.)**

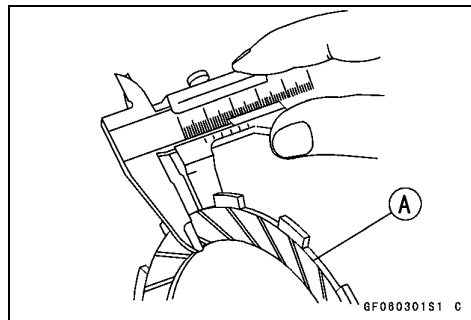


#### *Clutch Plate Warp Inspection*

- Place each friction plate or steel plate on a surface plate, and measure the gap between the surface plate [A] and each friction plate or steel plate [B] with a thickness gauge [C]. The gap is the amount of friction or steel plate warp.
- ★ If any plate is warped over the service limit, replace it with a new one.

#### **Friction and Steel Plate Warp**

**Standard: less than 0.2 mm (0.008 in.)**

**Service Limit: 0.3 mm (0.012 in.)**

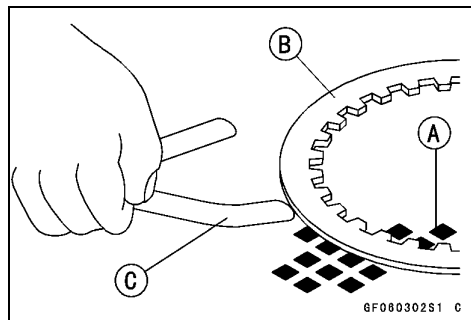

## Clutch


### *Clutch Spring Free Length Measurement*

- Measure the free length of the clutch spring [A].
- ★ If any spring is shorter than the service limit, it must be replaced.

#### **Clutch Spring Free Length**


**Standard:** 34.2 mm (1.346 in.)

**Service Limit:** 33.1 mm (1.303 in.)

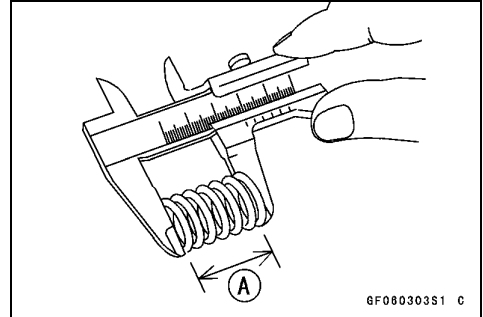


### *Clutch Housing Finger Inspection*

- Visually inspect the fingers [A] of the clutch housing where the tangs [B] of the friction plates hit them.
- ★ If they are badly worn or if there are grooves cut where the tangs hit, replace the housing. Also, replace the friction plates if their tangs are damaged.

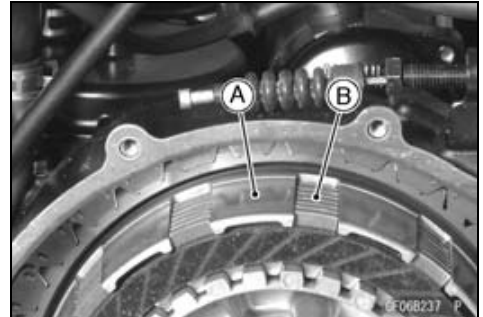

### *Clutch Hub Spline Inspection*

- Visually inspect where the teeth on the steel plates wear against the splines [A] of the clutch hub.
- If there are notches worn into the splines, replace the clutch hub. Also, replace the steel plates if their teeth are damaged.

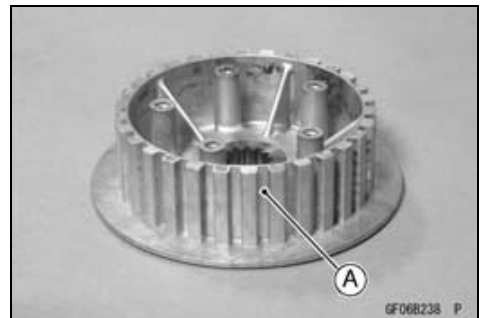






# Engine Lubrication System

## Table of Contents

Exploded View .....	7-2
Engine Oil Flow Chart.....	7-6
Specifications .....	7-7
Special Tools and Sealant .....	7-8
Engine Oil and Oil Filter.....	7-9
Engine Oil Level Inspection .....	7-9
Engine Oil Change.....	7-9
Oil Filter Replacement .....	7-9
Oil Pan and Relief Valve .....	7-10
Oil Pan Removal .....	7-10
Oil Pan Installation .....	7-10
Relief Valve Removal.....	7-10
Relief Valve Installation.....	7-11
Relief Valve Inspection.....	7-11
Oil Pump.....	7-12
Oil Pump Removal .....	7-12
Oil Pump Installation .....	7-13
Oil Pump Disassembly.....	7-13
Oil Pump Assembly.....	7-14
Oil Screen Cleaning and Inspection.....	7-14
Oil Pressure Measurement.....	7-15
Oil Pressure Measurement .....	7-15

# 7-2 ENGINE LUBRICATION SYSTEM

## Exploded View

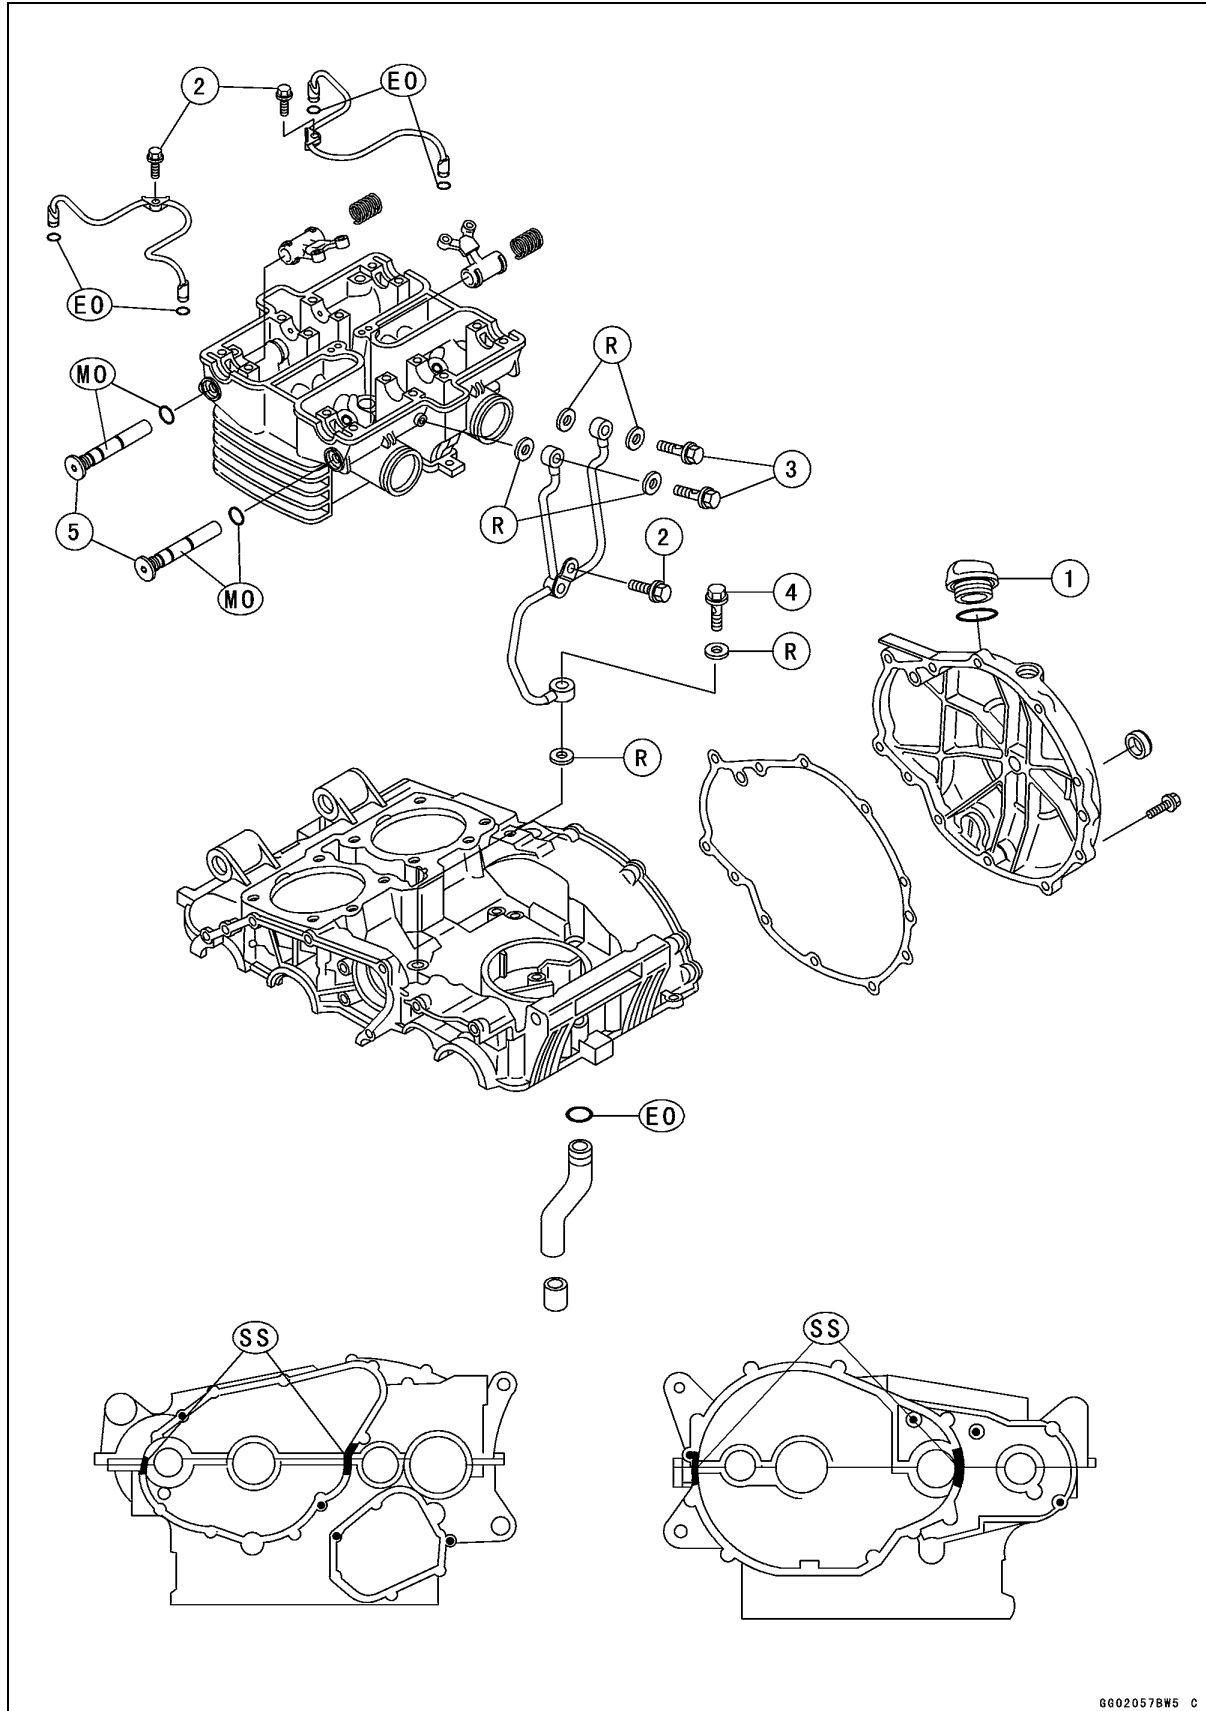

6002057BW5 C

## ENGINE LUBRICATION SYSTEM 7-3

### Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Oil Filler Plug	1.5	0.15	13 in·lb	
2	Main Oil Pipe Mounting Bolt	11	1.1	95 in·lb	
3	Main Oil Pipe Upper Banjo Bolt	12	1.2	104 in·lb	
4	Main Oil Pipe Lower Banjo Bolt	20	2.0	14.5	
5	Rocker Shafts	39	4.0	29	

EO: Apply engine oil.


MO: Apply molybdenum disulfide oil.

R: Replacement Parts

SS: Apply silicone sealant.

# 7-4 ENGINE LUBRICATION SYSTEM

## Exploded View

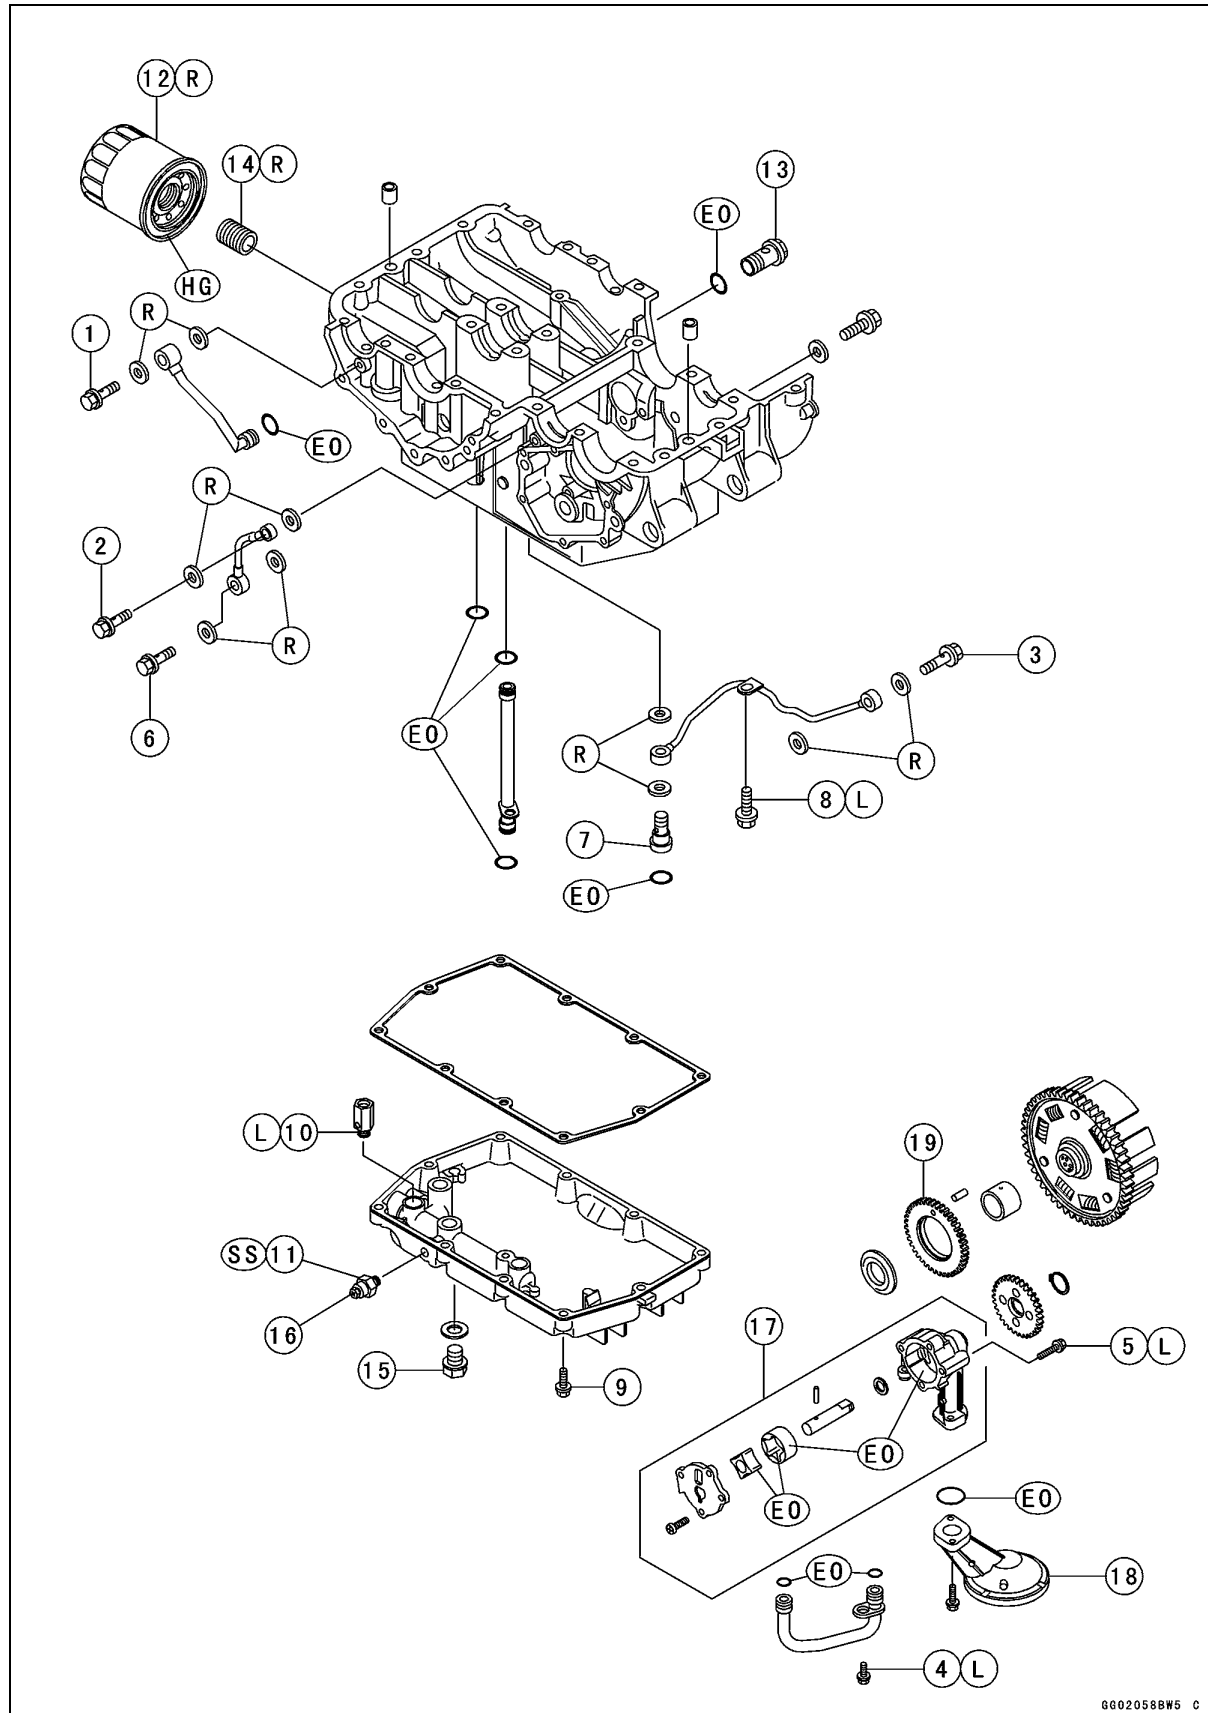

## ENGINE LUBRICATION SYSTEM 7-5

### Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Oil Pipe for Balancer Shaft Banjo Bolt	7.8	0.80	69 in·lb	
2	Oil Pipe for Drive Shaft Upper Banjo Bolt	7.8	0.80	69 in·lb	
3	Oil Pipe for Output Shaft Upper Banjo Bolt	7.8	0.80	69 in·lb	
4	Oil Pump Outer Oil Pipe Bolts	11	1.1	95 in·lb	L
5	Oil Pump Mounting Bolts	11	1.1	95 in·lb	L
6	Oil Pipe for Drive Shaft Lower Banjo Bolt	12	1.2	104 in·lb	
7	Oil Pipe for Output Shaft Lower Banjo Bolt	12	1.2	104 in·lb	
8	Oil Pipe for Output Shaft Mounting Bolt	11	1.1	95 in·lb	L
9	Oil Pan Mounting Bolts	11	1.1	95 in·lb	
10	Relief Valve	15	1.5	11	L
11	Oil Pressure Switch	15	1.5	11	SS
12	Oil Filter	17	1.7	12.5	R
13	Oil Passage Plug	18	1.8	13	
14	Oil Filter Mounting Stud	25	2.5	18	L
15	Engine Oil Drain Bolt	29	3.0	22	
16	Oil Pressure Switch Terminal Bolt	1.5	0.15	13 in·lb	

17. Oil Pump

18. Oil Screen

19. Oil Pump Drive Gear

EO: Apply engine oil.

HG: Apply high temperature grease.


L: Apply a non-permanent locking agent.

R: Replacement Parts

SS: Apply Silicone Sealant.

# 7-6 ENGINE LUBRICATION SYSTEM

## Engine Oil Flow Chart

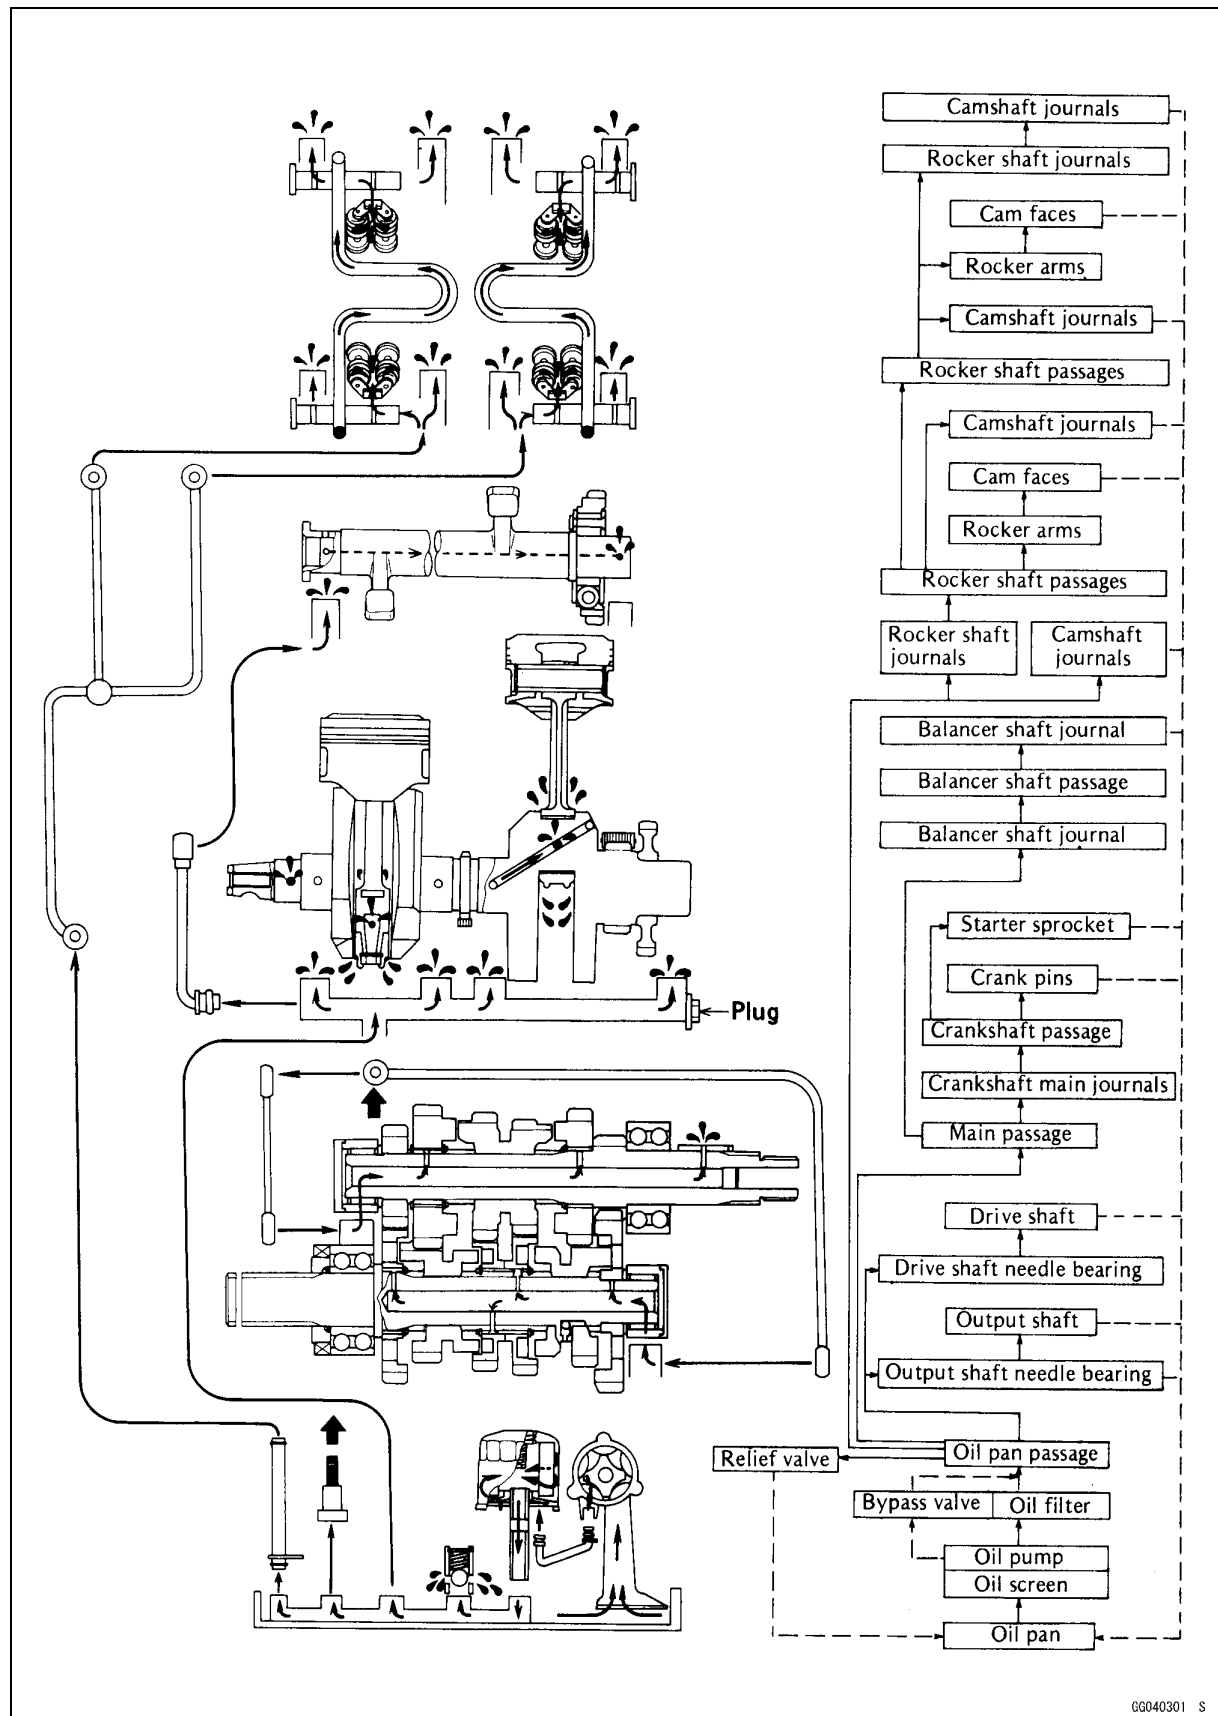

## ENGINE LUBRICATION SYSTEM 7-7


### Specifications

Item	Standard
<b>Engine Oil</b> Grade Viscosity Capacity Level	API SE, SF, SG or API SH or SJ JASO MA SAE 10W-40 2.8 L (when filter is not removed) 3.0 L (when filter is removed) 3.4 L (when engine is completely dry) Between upper and lower level lines
<b>Oil Pressure Measurement</b> Oil pressure @4 000 r/min (rpm), oil temperature 90°C (194°F)	275 ~ 335 kPa (2.8 ~ 3.4 kgf/cm <sup>2</sup> , 40 ~ 48 psi)


## 7-8 ENGINE LUBRICATION SYSTEM

### Special Tools and Sealant


**Oil Pressure Gauge, 5 kgf/cm<sup>2</sup>:**  
57001-125

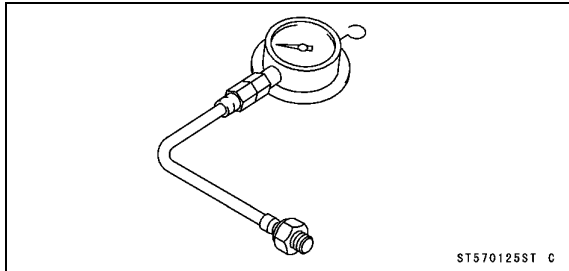

**Kawasaki Bond (Silicone Sealant):**  
56019-120

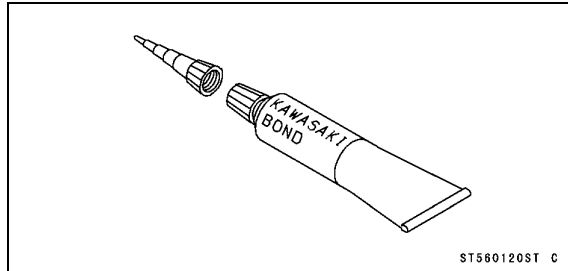

**Oil Pressure Gauge Adapter, M14 × 1.5:**  
57001-1209

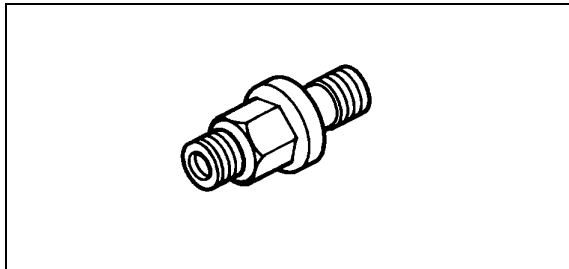



## Engine Oil and Oil Filter

### **⚠ WARNING**

**Motorcycle operation with insufficient, deteriorated, or contaminated engine oil will cause accelerated wear and may result in engine or transmission seizure, accident, and injury.**


### *Engine Oil Level Inspection*

- If the oil has just been changed, start the engine and run it for several minutes at idle speed. This fills the oil filter with oil. Stop the engine, then wait several minutes until the oil settles.

### **CAUTION**

**Racing the engine before the oil reaches every part can cause engine seizure.**

- If the motorcycle has just been used, wait several minutes for all the oil to drain down.
- Situate the motorcycle so that it is perpendicular to the ground, and check the engine oil level through the oil level gauge.
- ★ The oil level should come up between the upper [A] and lower level lines [B].
- ★ If the oil level is too high, remove the excess oil, using a syringe or some other suitable device.
- ★ If the oil level is too low, add the correct amount of oil through the oil filler opening. Use the same type and make of oil that is already in the engine.

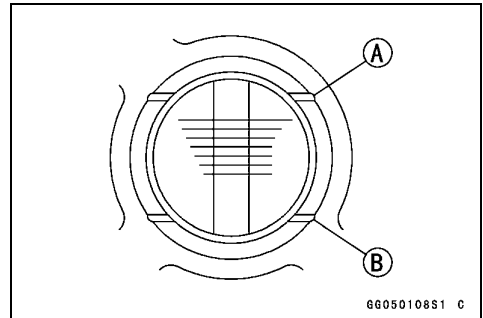

### **NOTE**

- *If the engine oil type and make are unknown, use any brand of the specified oil to top up the level in preference to running the engine with the oil level low. Then at your earliest convenience, change the oil completely.*

### **CAUTION**

**If the engine oil gets extremely low or if the oil pump or oil passages clog up or otherwise do not function properly, the oil pressure warning light will light. If this light stays on when the engine is running above idle speed, stop the engine immediately and find the cause.**

### *Engine Oil Change*

- Refer to the Engine Oil Change in the Periodic Maintenance chapter.

### *Oil Filter Replacement*


- Refer to the Oil Filter Replacement in the Periodic Maintenance chapter.

## 7-10 ENGINE LUBRICATION SYSTEM

### Oil Pan and Relief Valve


#### Oil Pan Removal

- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove the engine guard (see Engine Guard Removal in the Frame chapter).
- Disconnect the oil pressure switch lead.
- Remove the oil pan mounting bolts [A] and the oil pan from the crankcase.

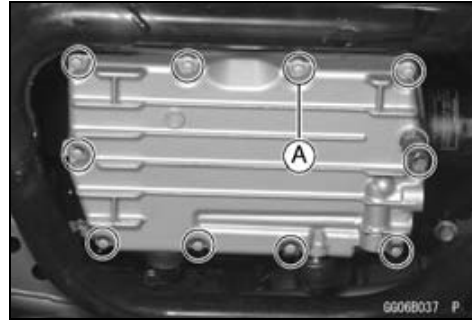

#### Oil Pan Installation

- Check that the O-rings for the outlet side [A] and inlet side [B] are in good condition.
- ★ If they are damaged, replace them with new ones.
- The O-rings between the oil pan and the lower case oil passage must be installed so that flat side faces the lower case oil passage.

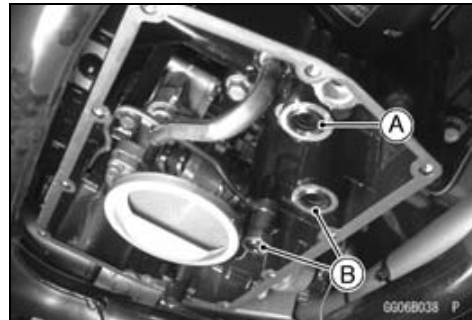

- Apply a small amount of engine oil to the O-rings.
- Install the oil pan and tighten its mounting bolts.  
**Torque - Oil Pan Mounting Bolts: 11 N·m (1.1 kgf·m, 95 ft·lb)**
- Connect the oil pressure switch lead.  
**Torque - Oil Pressure Switch Terminal Bolt: 1.5 N·m (0.15 kgf·m, 13 in·lb)**
- Fill the engine with the specified oil.

#### Relief Valve Removal

- Remove the oil pan (see Oil Pan Removal).
- Remove the relief valve [A] from the oil passage on the oil pan.



## Oil Pan and Relief Valve

### Relief Valve Installation

- Apply a non-permanent locking agent to the threads of the relief valve, and tighten it.

**Torque - Relief Valve: 15 N·m (1.5 kgf·m, 11 ft·lb)**

### CAUTION

**Do not over apply a non-permanent locking agent to the threads. This may block the oil passage.**

- Install the oil pan.

**Torque - Oil Pan Mounting Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

### Relief Valve Inspection

- Remove the relief valve.
- Check to see if the steel ball inside the valve slides smoothly when pushing it in with a wooden or other soft rod, and see if it comes back to its seat by valve spring pressure.

### NOTE

○ *Inspect the valve in its assembled state. Disassembly and assembly may change the valve performance.*

- If any rough spots are found during above inspection, wash the valve clean in a high flash-point solvent and blow out any foreign particles that may be in the valve with compressed air.


[A] Valve

[B] Spring

### ⚠ WARNING

**Clean the parts in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash-point solvents.**

- ★ If cleaning does not solve the problem, replace the relief valve as an assembly. The relief valve is precision made with no allowance for replacement of individual parts.

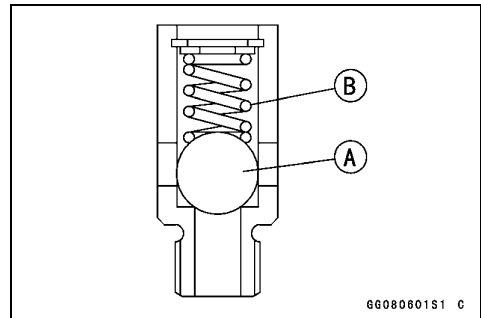

## 7-12 ENGINE LUBRICATION SYSTEM




### Oil Pump

#### Oil Pump Removal

- Drain the coolant (see Coolant change in the Periodic Maintenance chapter).
- Drain the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Remove the engine (see Engine Removal in the Engine Removal/Installation chapter).
- Remove:
  - Water Pump (see Water Pump Removal in the Cooling System chapter)
  - Clutch Cover (see Clutch Cover Removal in the Clutch chapter)
  - Alternator Cover with Shift Change Link and Pedal (see Alternator Rotor/Starter Clutch Removal in the Electrical System chapter)
  - Chain Guide (see Primary Chain Guide Wear Inspection in the Crankshaft/Transmission chapter)
  - Starter Motor (see Starter Motor Removal in the Electrical System chapter)
  - Upper Crank Case Mounting Bolts
- Turn the engine upside down and remove the following:
  - Oil Pan (see Oil Pan Removal)
  - Oil Screen Bolts [A]
  - Oil Screen [B]

Oil Pump Outer Oil Pipe Bolt [A]  
Oil Pump Outer Oil Pipe [B]  
Lower Crank Case Mounting Bolts  
Lower Crank Case

- Remove the circlip [A] that holds the oil pump gear [B] on the oil pump shaft [C].
- Remove the oil pump gear.
- Take off the oil pump mounting bolts [D].
- Remove the oil pump from the lower case.

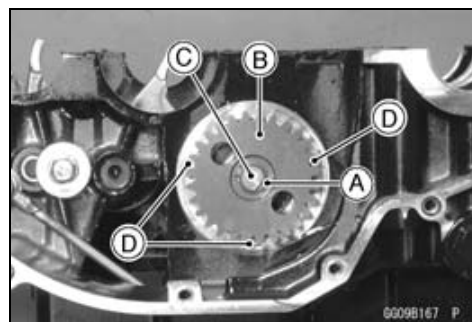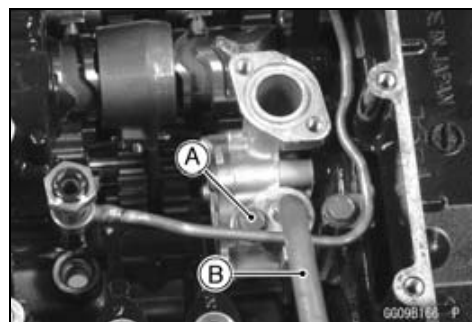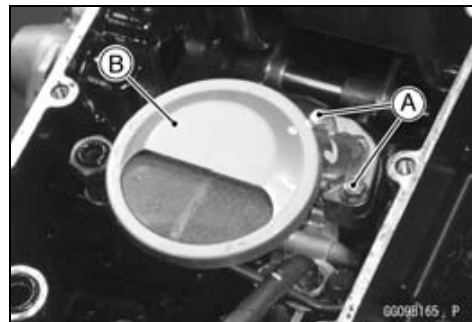

## Oil Pump

### Oil Pump Installation

- Fill the pump with engine oil turning the pump shaft before installation.
- Apply a non-permanent locking agent to the threads of the oil pump mounting bolts and tighten them.

**Torque - Oil Pump Mounting Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

- Install the oil pump gear [A] so that the projection [B] side faces inward.
- Install a new circlip.

- Be sure to install the oil pump and outer oil pipe O-rings [A], and apply engine oil to them.
- Install the oil pump outer oil pipe [B] and oil screen.
- Apply a non-permanent locking agent to the oil pipe bolt and tighten it.




**Torque - Oil Pump Outer Oil Pipe Bolt: 11 N·m (1.1 kgf·m, 95 in·lb)**

- Install:
  - Upper Crank Case Mounting Bolts
  - Starter Motor (see Starter Motor Installation in the Electrical System chapter)
  - Chain Guide (see Primary Chain Guide Wear in the Crankshaft/Transmission chapter)
  - Alternator Cover with Gear Change Link and Pedal (see Alternator Rotor/Starter Clutch Installation in the Electrical System chapter)
  - Clutch Cover (see Clutch Cover Installation in the Clutch chapter)
  - Water Pump (see Water Pump Installation in the Cooling System chapter)
  - Engine (see Engine Installation in the Engine Removal/Installation chapter)
- Fill the engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Fill the coolant (see Coolant Filling in the Periodic Maintenance chapter).

**Special Tool - Kawasaki Bond (Silicone Sealant): 56019 -120**

### Oil Pump Disassembly


- Remove the oil pump from the lower case.
- Take off the oil pump cover screws.
- Remove the oil pump cover.
- Drop the outer rotor [A] and inner rotor [B] out of the oil pump body [C].

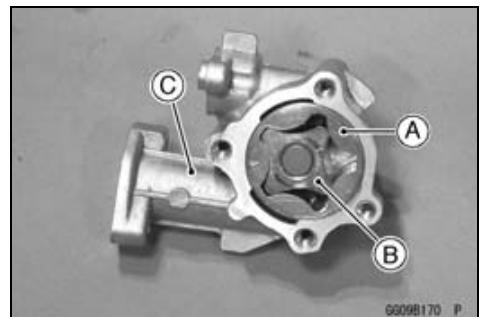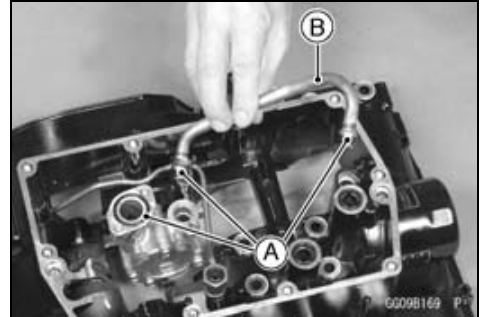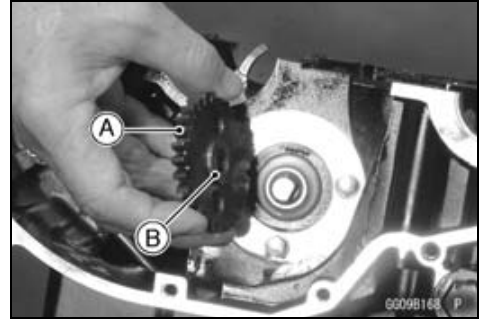

## 7-14 ENGINE LUBRICATION SYSTEM

### Oil Pump

- Pull the pin [A] out of the pump shaft.
- Pull the oil pump shaft [B] out of the body.
- Remove the washer.

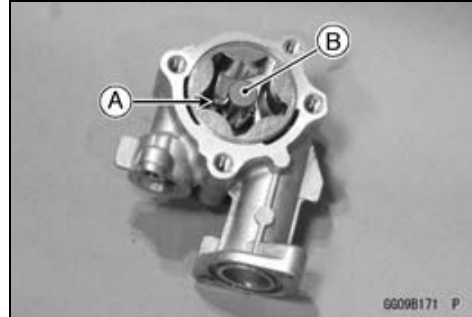

#### *Oil Pump Assembly*

- Assembly of the oil pump is the reverse of disassembly.
- Before installing the oil pump, be sure the shaft and rotors turn freely.

#### *Oil Screen Cleaning and Inspection*

- Clean the oil pump screen with high flash-point solvent and remove any particles stuck to it.

#### **⚠ WARNING**

**Clean the screen in a well-ventilated area, and take care that there is no spark or flame anywhere near the working area. Because of the danger of highly flammable liquids, do not use gasoline or low flash point solvents.**

#### **NOTE**

- *While cleaning the screen, check for any metal particles that might indicate internal engine damage.*
- Check the screen carefully for any damage: holes and broken wires.
- ★ If the screen is damaged, replace the oil screen assembly.

## Oil Pressure Measurement

### Oil Pressure Measurement

#### NOTE

○ Measure the oil pressure after the engine is warmed up.

- Remove:  
Oil Passage Plug

#### **⚠ WARNING**

If the oil passage plug is removed while the engine is warm, hot engine oil will drain through the oil passage; take care against burns.

- Attach the oil pressure gauge [A] and adapter [B] to the oil passage hole.

**Special Tools - Oil Pressure Gauge, 5 kgf/cm<sup>2</sup>: 57001-125**  
**Oil Pressure Gauge Adapter, M14 × 1.5: 57001-1209**

- Run the engine at the specified speed, and read the oil pressure gauge.
- ★ If the oil pressure is significantly below the specification, inspect the oil pump and relief valve.
- ★ If the oil pump and relief valve are not at fault, inspect the rest of the lubrication system.

#### Oil Pressure

275 ~ 335 kPa (2.8 ~ 3.4 kgf/cm<sup>2</sup>, 40 ~ 48 psi) @4 000 r/min (rpm), 90°C (194°F) of oil temp.

- Stop the engine.
- Remove the oil pressure gauge and adapter.
- Install the oil passage plug and tighten it.


**Torque - Oil Passage Plug: 18 N·m (1.8 kgf·m, 13 ft·lb)**

#### NOTE

○ When binding the brake switch lead with the plastic clamp, make sure it does not touch the exhaust pipe.

#### **⚠ WARNING**

To avoid a serious burn, never touch the hot exhaust pipe.

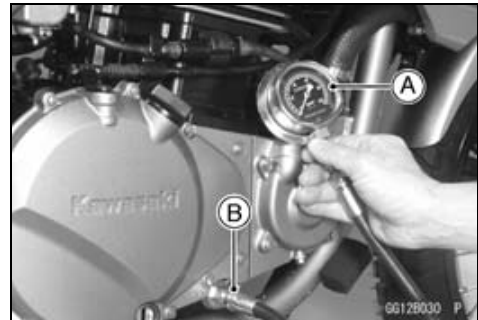






# Engine Removal/Installation

## Table of Contents

Exploded View .....	8-2
Engine Removal/Installation .....	8-4
Engine Removal.....	8-4
Engine Installation.....	8-6

# 8-2 ENGINE REMOVAL/INSTALLATION

## Exploded View

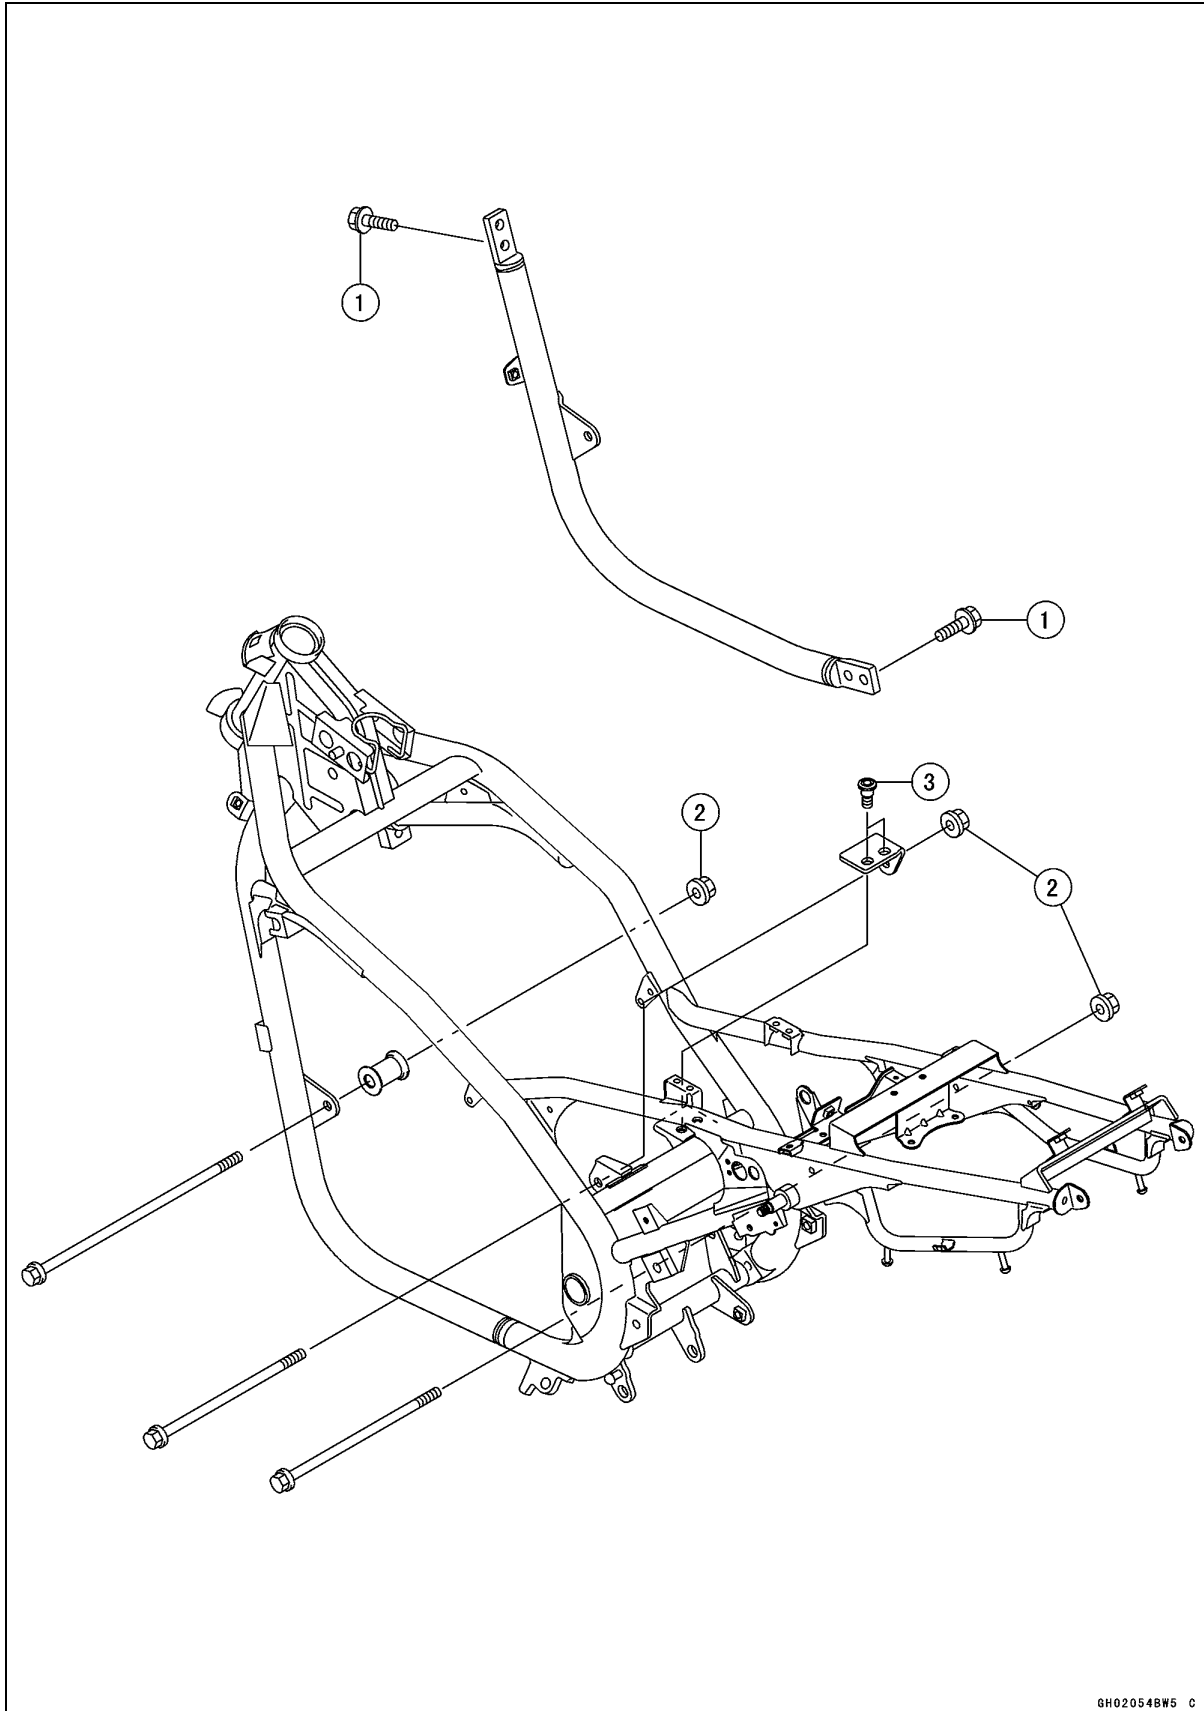

GH02054BW5 C

## ENGINE REMOVAL/INSTALLATION 8-3

### Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Frame Downtube Bolts	44	4.5	33	
2	Engine Mounting Bolts and Nut	44	4.5	33	
3	Engine Mounting Bracket Bolts	25	2.5	18	

## 8-4 ENGINE REMOVAL/INSTALLATION

### Engine Removal/Installation

#### Engine Removal

- Set the motorcycle up on its center stand.
- Squeeze the brake lever slowly and hold it with a band [A].



#### **⚠ WARNING**

**Be sure to hold the front brake when removing the engine, or the motorcycle may fall over. It could cause an accident and injury.**

#### **CAUTION**


**Be sure to hold the front brake when removing the engine, or the motorcycle may fall over. The engine or the motorcycle could be damaged.**

- Drain:
  - Coolant (see Coolant Draining in the Cooling System chapter)
  - Engine Oil (see Engine Oil Change in the Periodic Maintenance chapter)
- Remove:
  - Side Covers (see Side Covers Removal in the Frame chapter)
  - Seat (see Seat Removal in the Frame chapter)
  - Fuel Tank (see Fuel Tank Removal in the Fuel System chapter)
  - Lower Fairings and Brackets
- Pull out the water Hoses [A] over the cylinder head cover.
- Disconnect the clutch cable lower end [B] from the clutch release lever [C] and remove the clutch cable holder [D].
- Remove:
  - Radiator [E] (see Radiator Removal in the Cooling System chapter)
  - Vacuum Switch Valve and Hoses (see Vacuum Switch Valve Removal in the Engine Top End chapter)
  - Spark Plug Leads [F]
  - Muffler (see Muffler Removal in the Engine Top End chapter)
  - Carburetor (see Carburetor Removal in the Fuel System chapter)
  - Air Cleaner Housing (see Air Cleaner Housing Removal in the Fuel System chapter)
  - Engine Sprocket (see Engine Sprocket Removal in the Final Drive chapter)
  - Shift Link Lever
  - Rear Brake Light Switch [G]
  - Brake Pedal [H]
  - Right Front Step [I]

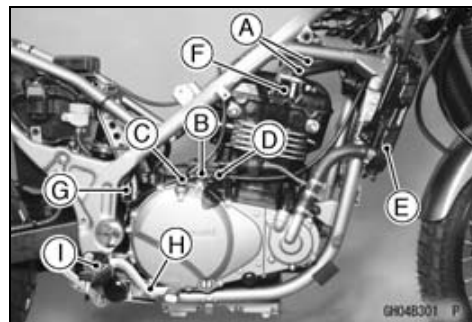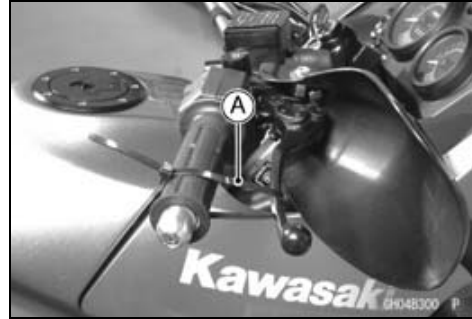


## Engine Removal/Installation


- Pull off the connectors from the engine and free the wiring from the straps.  
Crankshaft Sensor Lead Connector [A]  
Alternator Lead Connector [B]

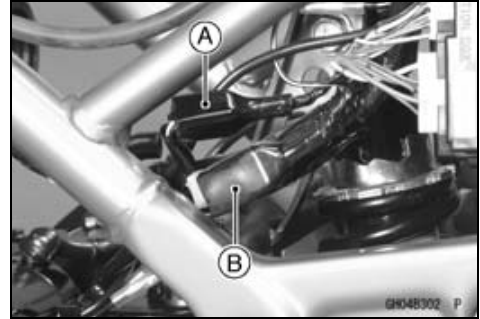


- Remove:  
Battery Negative Lead [A]  
Starter Motor Lead [B]

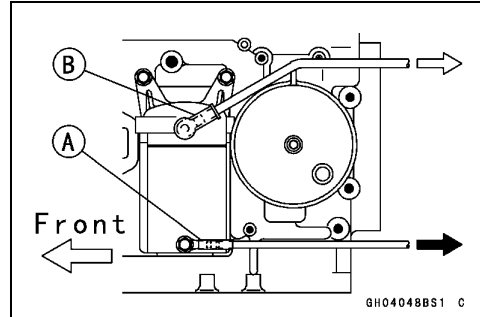

- Remove:  
Oil Pressure Switch Lead [A]  
Neutral Switch Lead [B]

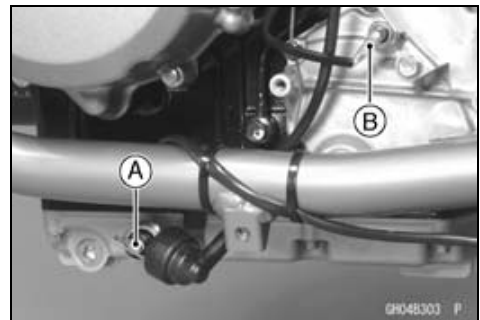

- Support the engine with a stand or jack [A].
- Remove the engine mounting bolts [B].
- Remove the frame downtube bolts [C] and take off the downtube [D].

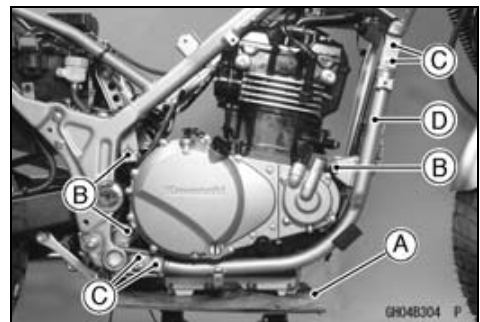

### NOTE

○ *The drive chain will be removed from the output shaft when removing the engine.*


- Lift up the engine and move it right to free the output shaft from the drive chain.
- Remove the engine from the vehicle right side.

## 8-6 ENGINE REMOVAL/INSTALLATION

### Engine Removal/Installation

#### Engine Installation

- Hang the drive chain [A] over the output shaft [B] just before moving the engine into its final position in the frame.

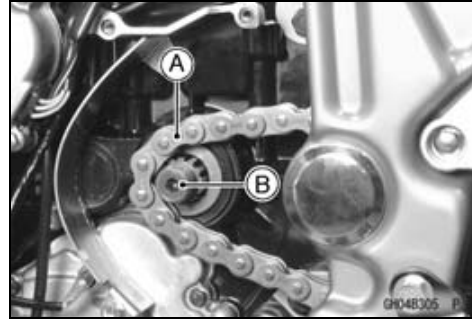

- Install the engine sprocket [A] so that the mark side is outward.



- Insert the rear mounting bolts from the left side of the engine.
- Tighten the rear engine upper mounting bolt and nut first to eliminate the gap between the engine and frame bracket, and then the rear engine lower mounting bolt and nut.
- Tighten the engine mounting bracket bolts after tightening the rear engine upper mounting bolt and nut.

**Torque - Engine Mounting Bolts and Nuts: 44 N·m (4.5 kgf·m, 33 ft·lb)**

**Engine Mounting Bracket Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

**Frame Downtube Bolts: 44 N·m (4.5 kgf·m, 33 ft·lb)**

- Install the engine sprocket (see Engine Sprocket Installation in the Final Drive chapter).
- Run the leads, cables, and hoses correctly (see Cable, Wire, and Hose Routing in the Appendix chapter).
- Install the removed parts (see appropriate chapters).
- Adjust:
  - Throttle Cables (see Throttle Cable Inspection in the Periodic Maintenance chapter)
  - Choke Cable (see Choke Cable Free Play Adjustment in the Fuel System chapter)
  - Clutch Cable (see Clutch Cable Inspection in the Periodic Maintenance chapter)
  - Drive Chain (see Drive Chain Slack Inspection in the Periodic Maintenance chapter)
- Fill the engine with engine oil (see Engine Oil Change in the Periodic Maintenance chapter).
- Fill the engine with coolant and bleed the air from the cooling system (see Coolant Change in the Periodic Maintenance chapter).
- Adjust the idling (see Idle Speed Inspection in the Periodic Maintenance chapter).


# Crankshaft/Transmission

## Table of Contents

Exploded View.....	9-2
Specifications .....	9-6
Special Tools and Sealant .....	9-9
Crankcase Splitting.....	9-10
Crankcase Splitting .....	9-10
Crankcase Assembly .....	9-11
Clutch Housing/Primary Chain .....	9-14
Clutch Housing/Primary Chain Removal.....	9-14
Clutch Housing/Primary Chain Installation.....	9-14
Primary Chain Guide Wear Inspection.....	9-15
Crankshaft/Connecting Rods.....	9-16
Crankshaft Removal .....	9-16
Crankshaft Installation .....	9-16
Connecting Rod Removal .....	9-16
Connecting Rod Installation .....	9-17
Crankshaft/Connecting Rod Cleaning.....	9-17
Connecting Rod Bend/Twist.....	9-18
Connecting Rod Big End Side Clearance .....	9-18
Connecting Rod Big End Bearing Insert/Crankpin Clearance .....	9-19
Crankshaft Runout.....	9-20
Crankshaft Main Bearing Insert/Journal Clearance .....	9-20
Crankshaft Side Clearance .....	9-22
Balancer .....	9-23
Balancer Removal.....	9-23
Balancer Installation.....	9-23
Balancer Shaft Bearing Insert/Journal Clearance .....	9-23
Transmission .....	9-25
External Shift Mechanism Removal .....	9-25
External Shift Mechanism Installation .....	9-25
External Shift Mechanism Inspection.....	9-26
Transmission Shaft Removal .....	9-26
Transmission Shaft Installation .....	9-26
Transmission Shaft Disassembly .....	9-27
Drive Shaft Assembly.....	9-28
Output Shaft Assembly .....	9-29
Shift Drum and Fork Removal.....	9-30
Shift Drum and Fork Installation.....	9-31
Shift Drum Disassembly.....	9-32
Shift Drum Assembly .....	9-32
Ball and Needle Bearing Wear.....	9-33
Shift Pedal Installation .....	9-33

# 9-2 CRANKSHAFT/TRANSMISSION

## Exploded View

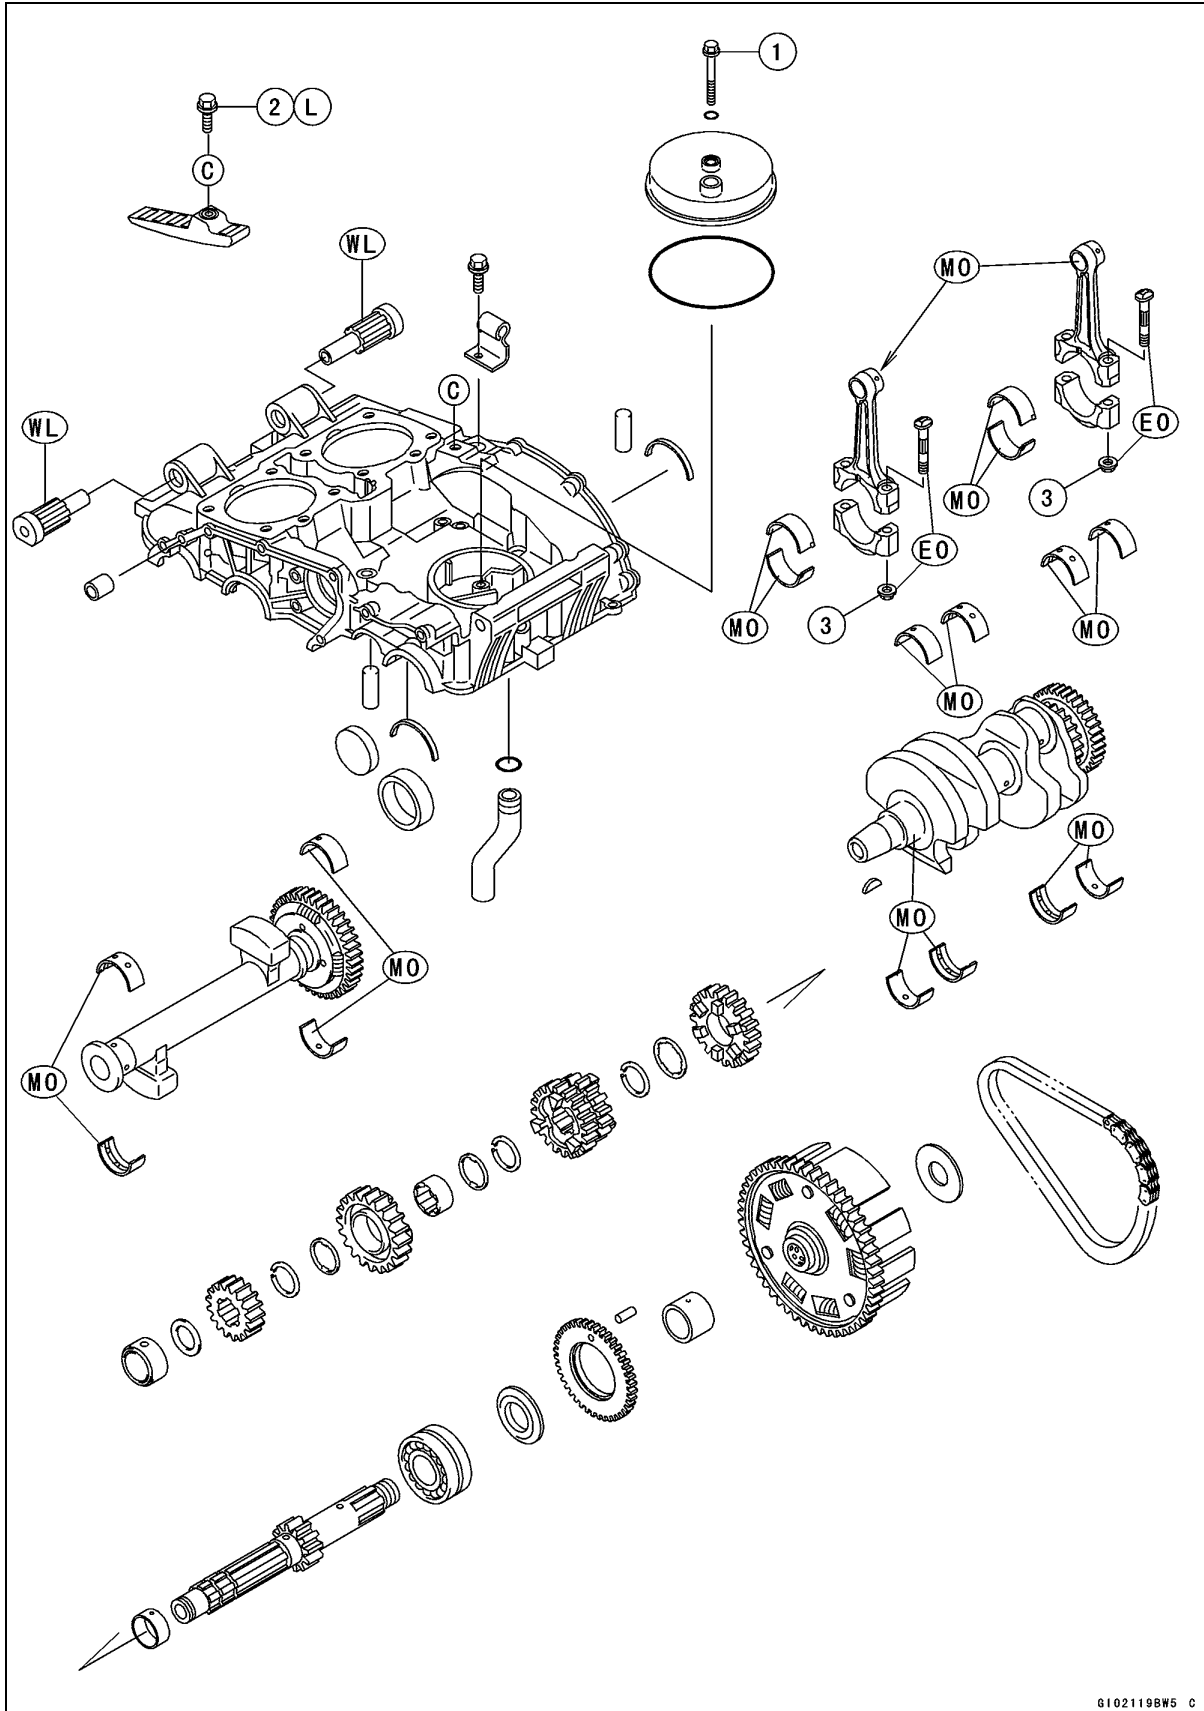

G102119BWS C



## CRANKSHAFT/TRANSMISSION 9-3

### Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Breather Body Bolt	5.9	0.6	52 in·lb	
2	Upper Primary Chain Guide Mounting Bolt	11	1.1	95 in·lb	L
3	Connecting Rod Big End Cap Nuts	36	3.7	27	

EO: Apply engine oil.


L: Apply a non-permanent locking agent.

MO: Apply molybdenum disulfide oil.

WL: Apply soap water solution or rubber lubricant.

# 9-4 CRANKSHAFT/TRANSMISSION

## Exploded View

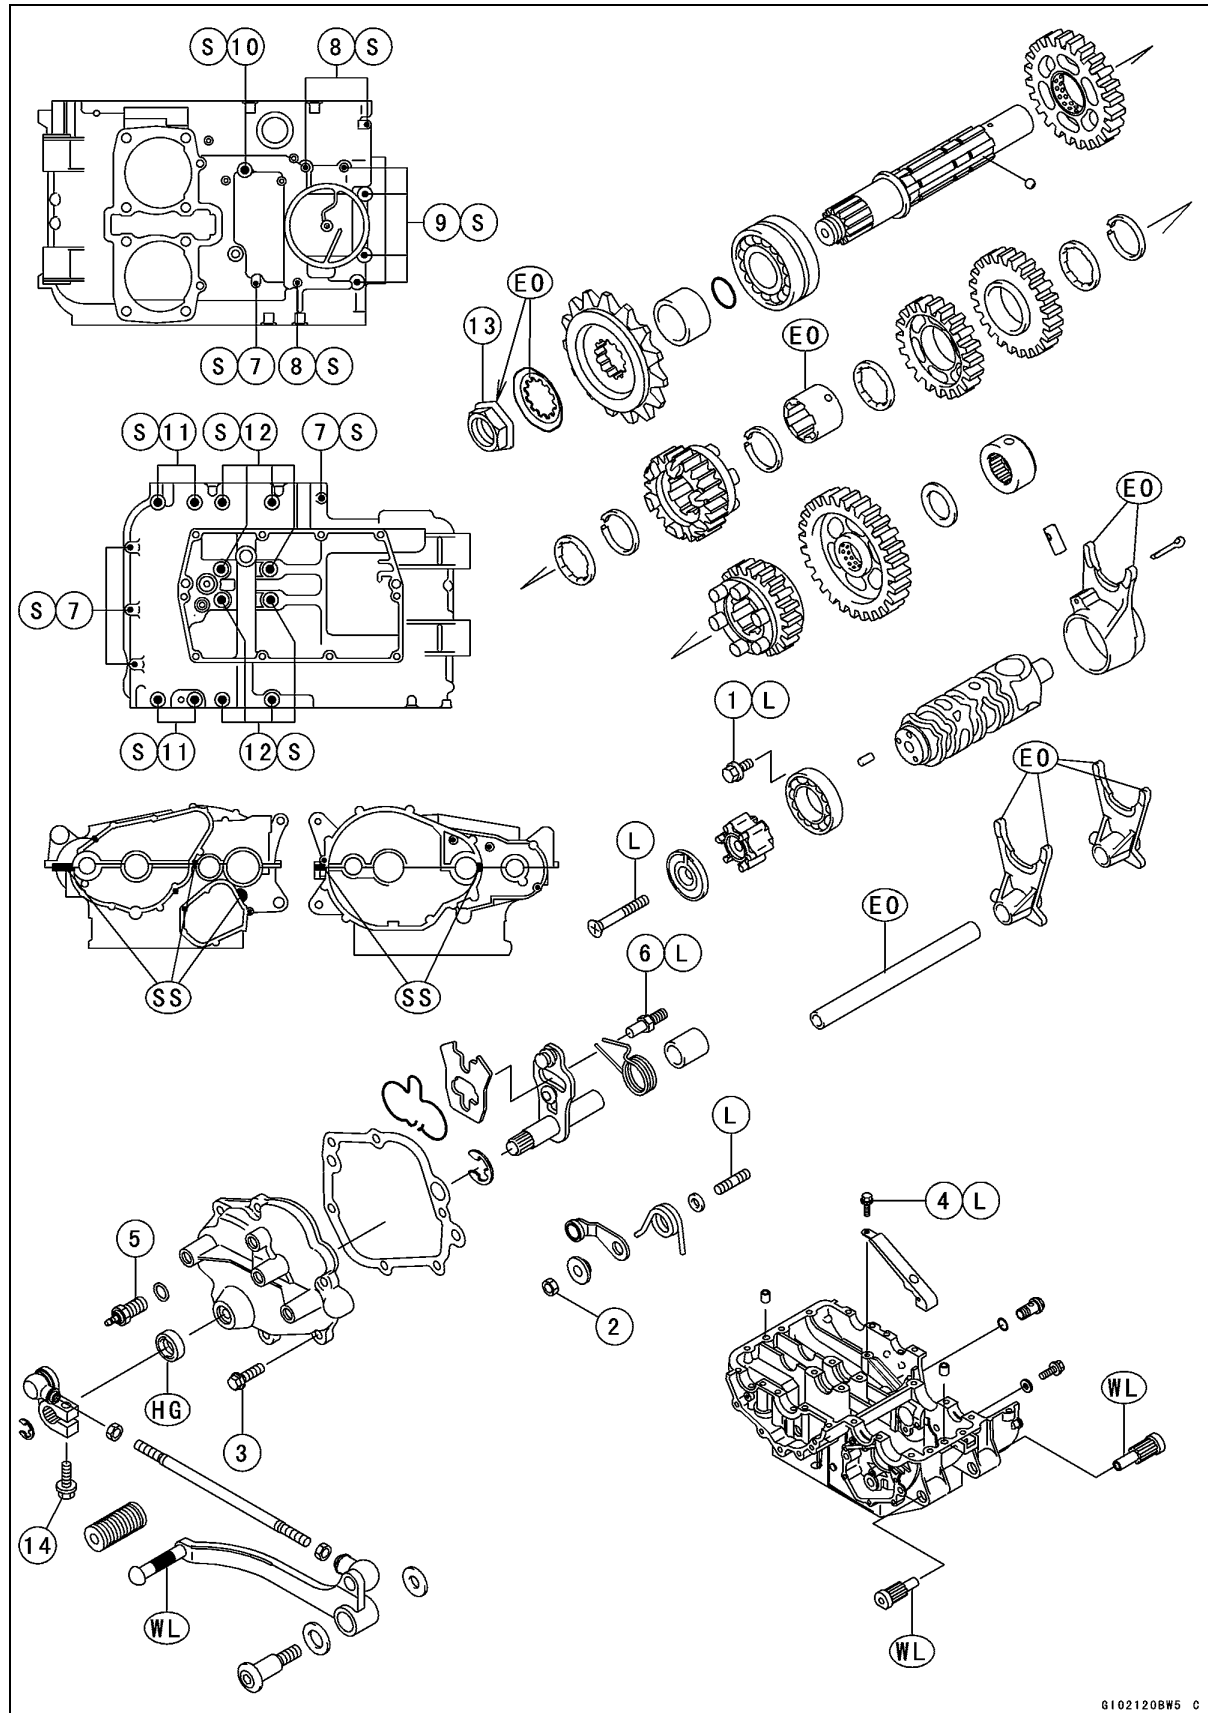

G102120BWS C

## CRANKSHAFT/TRANSMISSION 9-5

### Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Shift Drum Bearing Holding Bolts	11	1.1	95 in·lb	L
2	Gear Positioning Lever Nut	11	1.1	95 in·lb	
3	External Shift Mechanism Cover Bolts	11	1.1	95 in·lb	
4	Lower Primary Chain Guide Mounting Bolt	11	1.1	95 in·lb	L
5	Neutral Switch	15	1.5	11	
6	Return Spring Pin	20	2.0	14.5	L
7	Crank Case Bolts (M6 × 40)	12	1.2	104 in·lb	S
8	Crank Case Bolts (M6 × 60)	12	1.2	104 in·lb	S
9	Crank Case Bolts (M6 × 80)	12	1.2	104 in·lb	S
10	Crank Case Bolts (M8 × 55)	27	2.8	20	S
11	Crank Case Bolts (M8 × 75)	27	2.8	20	S
12	Crank Case Bolts (M8 × 100)	27	2.8	20	S
13	Engine Sprocket Nut	127	13	94	EO
14	Shift Pedal Link Lever Mounting Bolt	12	1.2	104 in·lb	

EO: Apply engine oil.

G: Apply high temperature grease.

L: Apply a non-permanent locking agent.

LG: Apply liquid gasket.

S: Follow the specific tightening sequence.

SS: Apply silicone sealant.

WL: Apply soap water solution or rubber lubricant.

## 9-6 CRANKSHAFT/TRANSMISSION

### Specifications

Item	Standard	Service Limit																					
<b>Crankshaft, Connecting Rods</b>																							
Connecting Rod Bend	— — —	0.2/100 mm (0.0079/4 in.)																					
Connecting Rod Twist	— — —	0.2/100 mm 0.0079/4 in.)																					
Connecting Rod Big End Side Clearance	0.13 ~ 0.38 mm (0.0051 ~ 0.0150 in.)	0.50 mm (0.02 in.)																					
Connecting Rod Big End Bearing Insert/crankpin Clearance	0.036 ~ 0.066 mm (0.0014 ~ 0.0026 in.)	0.10 mm (0.0039 in.)																					
Crankpin Diameter	37.984 ~ 38.000 mm (1.4954 ~ 1.4961 in.)	37.97 mm (1.4949 in.)																					
Marking:																							
None	37.984 ~ 37.994 mm (1.4954 ~ 1.4958 in.)	— — —																					
○	37.995 ~ 38.000 mm (1.4959 ~ 1.4961 in.)	— — —																					
Connecting Rod Big End Bore Diameter	41.000 ~ 41.016 mm (1.6142 ~ 1.6145 in.)	— — —																					
Marking:																							
None	41.000 ~ 41.008 mm (1.6142 ~ 1.6145 in.)	— — —																					
○	41.009 ~ 41.016 mm (1.6145 ~ 1.6148 in.)	— — —																					
Connecting Rod Big End Bearing Insert Thickness:																							
Brown	1.474 ~ 1.479 mm (0.0580 ~ 0.0582 in.)	— — —																					
Black	1.479 ~ 1.484 mm (0.0582 ~ 0.0584 in.)	— — —																					
Blue	1.484 ~ 1.489 mm (0.0584 ~ 0.0586 in.)	— — —																					
Connecting rod big end bearing insert selection:																							
<table border="1"> <thead> <tr> <th rowspan="2">Con-rod Big End Bore Diameter Marking</th> <th rowspan="2">Crankpin Diameter Marking</th> <th colspan="2">Bearing Insert</th> </tr> <tr> <th>Size Color</th> <th>Part Number</th> </tr> </thead> <tbody> <tr> <td>None</td> <td>○</td> <td>Brown</td> <td>92028-1350</td> </tr> <tr> <td>○</td> <td>○</td> <td rowspan="2">Black</td> <td rowspan="2">92028-1349</td> </tr> <tr> <td>None</td> <td>None</td> </tr> <tr> <td>○</td> <td>None</td> <td>Blue</td> <td>92028-1348</td> </tr> </tbody> </table>				Con-rod Big End Bore Diameter Marking	Crankpin Diameter Marking	Bearing Insert		Size Color	Part Number	None	○	Brown	92028-1350	○	○	Black	92028-1349	None	None	○	None	Blue	92028-1348
Con-rod Big End Bore Diameter Marking	Crankpin Diameter Marking	Bearing Insert																					
		Size Color	Part Number																				
None	○	Brown	92028-1350																				
○	○	Black	92028-1349																				
None	None																						
○	None	Blue	92028-1348																				
Crankshaft Runout	less than 0.02 mm (0.0008 in.) TIR	0.05 mm (0.0020 in.) TIR																					
Crankshaft Side Clearance	0.05 ~ 0.25 mm (0.0020 ~ 0.0098 in.)	0.40 mm (0.0157 in.)																					
Crankshaft Main Bearing Insert/journal Clearance	0.020 ~ 0.044 mm (0.0008 ~ 0.0017 in.)	0.08 mm (0.0032 in.)																					
Crankshaft Main Journal Diameter	35.984 ~ 36.000 mm (1.4167 ~ 1.4173 in.)	35.96 mm (1.4157 in.)																					
Marking:																							
None	35.984 ~ 35.992 mm (1.4167 ~ 1.4170 in.)	— — —																					
1	35.993 ~ 36.000 mm (1.4170 ~ 1.4173 in.)	— — —																					

## CRANKSHAFT/TRANSMISSION 9-7

### Specifications

Item	Standard	Service Limit
Crankshaft Main Bearing Bore Diameter	39.000 ~ 39.016 mm (1.5354 ~ 1.5361 in.)	- - -
Marking:		
○	39.000 ~ 39.008 mm (1.5354 ~ 1.5357 in.)	- - -
None	39.009 ~ 39.016 mm (1.5358 ~ 1.5361 in.)	- - -
Crankshaft Main Bearing Insert Thickness:		
Brown	1.490 ~ 1.494 mm (0.0587 ~ 0.0588 in.)	- - -
Black	1.494 ~ 1.498 mm (0.0588 ~ 0.0590 in.)	- - -
Blue	1.498 ~ 1.502 mm (0.0590 ~ 0.0591 in.)	- - -

Crankshaft main bearing insert selection:

Crankcase Main Bearing Bore Diameter Marking	Crankshaft Main Journal Diameter Marking	Bearing Insert*		
		Size Color	Part Number	Journal Nos.
○	1	Brown	92028-1102	2, 3
			92028-1274	1, 4
○	None	Black	92028-1101	2, 3
None	1		92028-1273	1, 4
None	None	Blue	92028-1100	2, 3
			92028-1272	1, 4

<b>Balancer Shaft</b>		
Balancer Shaft Bearing Insert/journal Clearance	0.020 ~ 0.050 mm (0.0008 ~ 0.0020 in.)	0.09 mm (0.0035 in.)
Balancer Shaft Journal Diameter	27.987 ~ 28.000 mm (1.1019 ~ 1.1024 in.)	27.96 mm (1.1008 in.)
Marking:		
None	27.987 ~ 27.993 mm (1.1019 ~ 1.1021 in.)	- - -
○	27.994 ~ 28.000 mm (1.1021 ~ 1.1024 in.)	- - -
Crankcase Bearing Bore Diameter	31.008 ~ 31.024 mm (1.2208 ~ 1.2214 in.)	- - -
Marking:		
None	31.008 ~ 31.016 mm (1.2208 ~ 1.2211 in.)	- - -
○	31.017 ~ 31.024 mm (1.2211 ~ 1.2214 in.)	- - -
Balancer Shaft Bearing Insert Thickness:		
Brown	1.495 ~ 1.499 mm (0.0589 ~ 0.0590 in.)	- - -
Black	1.499 ~ 1.503 mm (0.0590 ~ 0.0592 in.)	- - -
Blue	1.503 ~ 1.507 mm (0.0592 ~ 0.0593 in.)	- - -

## 9-8 CRANKSHAFT/TRANSMISSION


### Specifications

Item	Standard	Service Limit				
Balancer Shaft Bearing Insert Selection:						
Crankcase Bearing Bore Diameter Marking	Balancer Shaft Journal Diameter Marking	Bearing Insert*				
			Size Color	Part Number		
○	○	Brown			92028-1497	92028-1692
○	None	Black	92028-1496	92028-1691		
None	○				None	None
<b>Transmission</b>						
Gear Shift Fork Groove Width	5.05 ~ 5.15 mm (0.1988 ~ 0.2028 in.)	5.3 mm (0.2087 in.)				
Shift Fork Ear Thickness	4.9 ~ 5.0 mm (0.193 ~ 0.197 in.)	4.8 mm (0.189 in.)				
Shift Fork Guide Pin Diameter	7.900 ~ 8.000 mm (0.3110 ~ 0.3150 in.)	7.8 mm (0.307 in.)				
Shift Fork Dowel Pin Diameter	7.985 ~ 8.000 mm (0.3144 ~ 0.3150 in.)	7.8 mm (0.307 in.)				
Shift Drum Groove Width	8.05 ~ 8.20 mm (0.3169 ~ 0.3228 in.)	8.3 mm (0.327 in.)				


\*: The bearing inserts for Nos. 2 and 3 journals have oil grooves.

## Special Tools and Sealant


**Bearing Puller:**  
57001-135

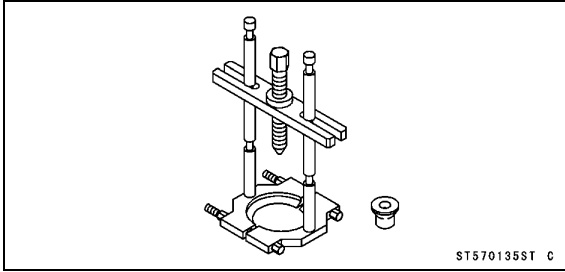


**Bearing Driver,  $\phi$ 32:**  
57001-382

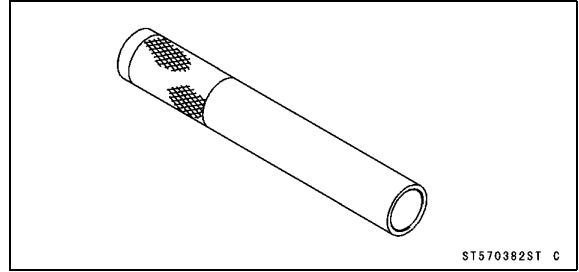


**Outside Circlip Pliers:**  
57001-144

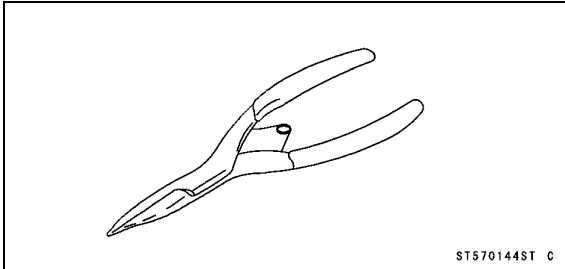


**Kawasaki Bond (Silicone Sealant):**  
56019-120

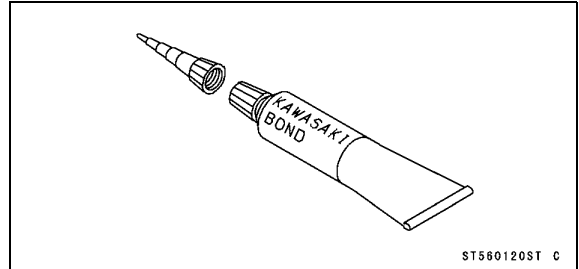

**Bearing Puller Adapter:**  
57001-317

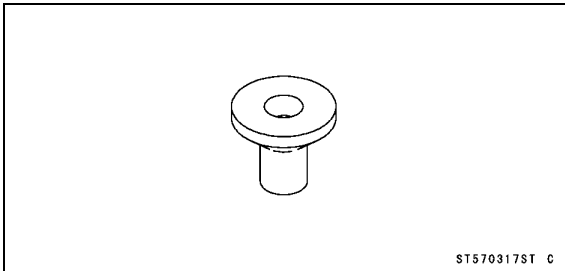

**Kawasaki Bond (Liquid Gasket - Gray):**  
92104-1063

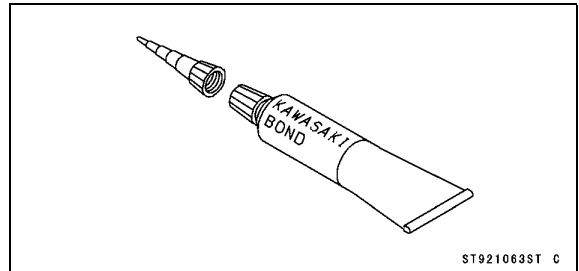


## 9-10 CRANKSHAFT/TRANSMISSION


### Crankcase Splitting

#### *Crankcase Splitting*

- Remove the engine (see Engine Removal in the Engine Removal/Installation chapter).
- Set the engine on a clean surface and hold the engine steady while parts are being removed.
- Remove:
  - Shift Pedal Link Lever
  - Starter Motor (see Starter Motor Removal in the Electrical System chapter)
  - Water Pump (see Water Pump Removal in the Cooling System chapter)
  - Clutch Cover (see Clutch Cover Removal in the Clutch chapter)
- Remove the following parts only if the crankshaft is to be removed.
  - Cylinder Head, Cylinder and Pistons (see Cylinder Head, Cylinder and Piston Removal in the Engine Top End chapter)
  - Starter Clutch Sprocket (see Starter Clutch Sprocket Removal in the Electrical System chapter)
  - Clutch (see Clutch Removal in the Clutch chapter)
- Remove the 6 mm upper crankcase-half bolts [A], [B] first, and then the 8 mm bolt [C].
- Remove the 6 mm upper crankcase-half bolts [A] before installing the engine to the engine equipment.

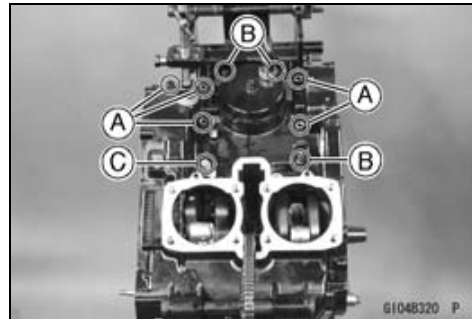

- Turn the engine upside down and remove the following parts:
  - Oil Pan (see Oil Pan Removal in the Engine Lubrication System chapter)
  - Oil Pump Outer Pipe (see Oil Pump Removal in the Engine Lubrication System chapter)
- Remove the 6 mm lower crankcase-half bolts [A] first, and then the 8 mm bolts [B] in the reverse order of installation sequence (see Crankcase Assembly).

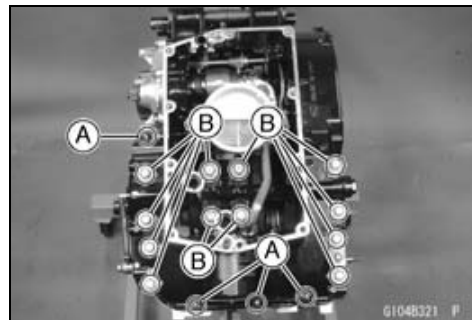


- Pull the breather return pipe out of the crankcase and leave it in place temporarily.



**Crankcase Splitting**

- Pry the points [A] indicated in the figure to split the crankcase halves apart, and remove the lower crankcase half. There are two knock pins at the front and rear of the cases.

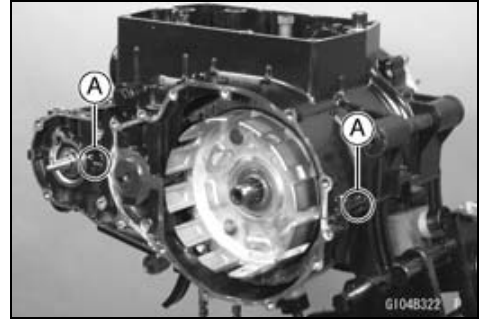


*Crankcase Assembly*


**CAUTION**

**The upper crankcase half and the lower crankcase half are machined at the factory in the assembled state, so the crankcase halves must be replaced together as a set.**

- Using compressed air, blow out the oil passages [A] in the crankcase halves.
- With a high flash-point solvent, clean off the mating surfaces of the crankcase halves and wipe dry.
- Before fitting the lower case on the upper case, check the following.

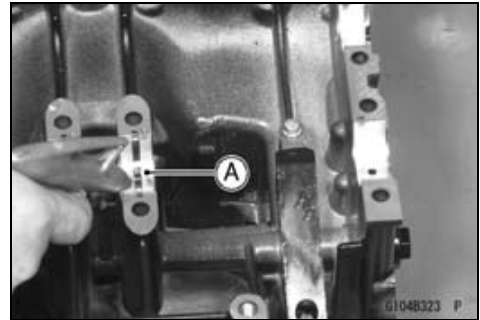


- Check to see that the following parts are in place on the upper crankcase half.
  - Knock Pins [A]
  - Crankshaft Assembly [B]
  - Balancer Shaft Assembly [C]
  - Drive Shaft Assembly and Clutch Housing [D]
  - Output Shaft Assembly [E]
- Check to see that the shift drum and transmission gears are in the neutral position.

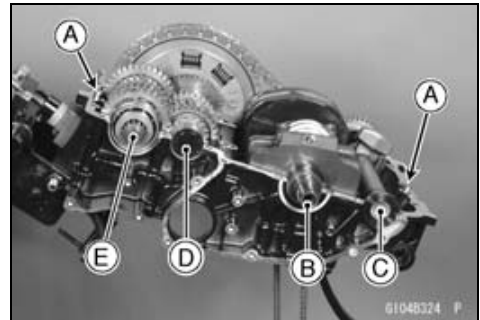

- Apply liquid gasket [A] to the mating surface of the lower crankcase half.  
**Sealant - Kawasaki Bond (Liquid Gasket - Gray): 92104-1063**

**CAUTION**


**Do not apply liquid gasket around the crankshaft main bearing inserts and balancer shaft inserts.**

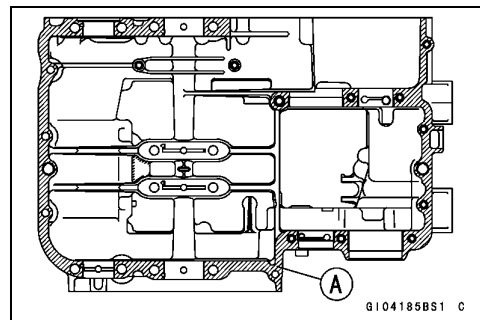


## 9-12 CRANKSHAFT/TRANSMISSION

### Crankcase Splitting

- Fit the lower crankcase half on the upper crankcase half observing the following.
- Set the shift forks so that the ears [A] of each fork fit into the grooves of the gears.

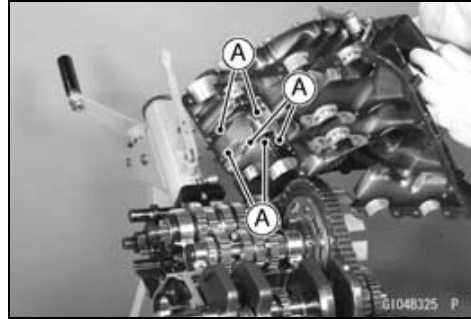

- Tighten the lower crankcase-half bolts using the following 3 steps:
  - Tighten all lower crankcase-half bolts to a snug fit.
- Following the sequence numbers on the lower crankcase half, torque the 8 mm bolts first to about one half of the specification, and finally to the specification in the same sequence.

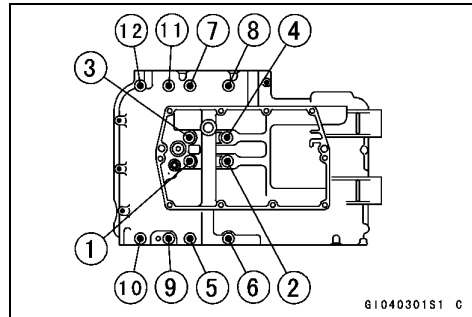

#### Torque Value for 8 mm Bolts


**First 14 N·m (1.4 kgf·m, 10.0 ft·lb)**

**Final 27 N·m (2.8 kgf·m, 20 ft·lb)**


- Tighten the 6 mm bolts.

**Torque - Crankcase 6 mm Bolts: 12 N·m (1.2 kgf·m, 104 in·lb)**

- Check that the O-ring [A] of the breather return pipe is in good condition.
- ★ If it is damaged, replace it with a new one.
- Apply a small amount of oil to the O-ring.
- Fit the breather return pipe [B] into the passage in the upper crankcase half.

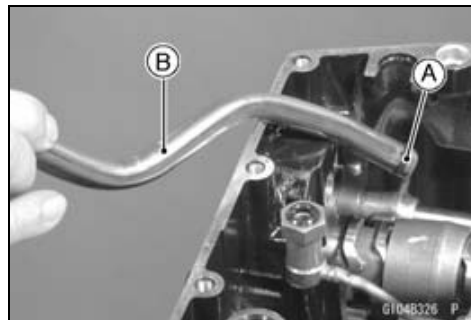

- Install the main oil pipe connecting pipe [A] and oil pump outer pipe [B].
- Check that the O-rings are in good condition.
- ★ If they are damaged, replace them with new ones.
- Apply a small amount of oil to the O-rings. The positioning hole in the connecting pipe must fit to the boss on the lower case.
- Apply a non-permanent locking agent to the threads of the oil outer pipe mounting bolt.
- Install the oil screen.
- Install the oil pan (see Oil Pan Installation in the Engine Lubrication System chapter).

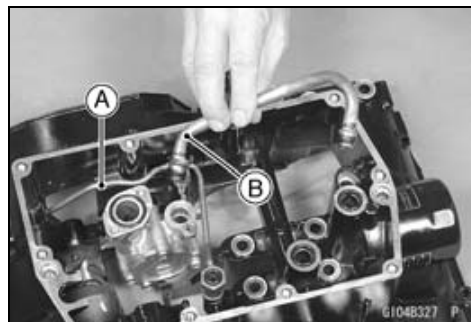


### Crankcase Splitting

- Turn the engine over so it is upright.
- Put the 8 mm bolts [A], and the 6 mm bolts [B] into the upper crankcase half as shown in the figure, torque the 8 mm bolt first, then the other bolts in the sequence shown.

**Torque - Crankcase 8 mm Bolts: 27 N·m (2.8 kgf·m, 20 ft·lb)**

**Crankcase 6 mm Bolts: 12 N·m (1.2 kgf·m, 104 in·lb)**

- After tightening all crankcase bolts, check the following items:
  - Drive shaft and output shaft turn freely.
  - While spinning the output shaft, gears shift smoothly from the 1st to 6th gear, and 6th to 1st.
  - When the output shaft stays still, the gear can not be shifted to 2nd gear or other higher gear positions.

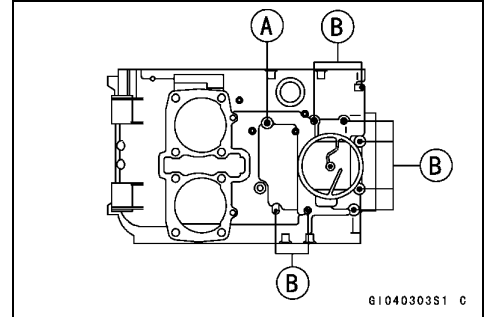


## 9-14 CRANKSHAFT/TRANSMISSION


### Clutch Housing/Primary Chain

#### Clutch Housing/Primary Chain Removal


- Remove the engine.
- Remove:
  - Cylinder Head, Cylinder and Pistons (see Cylinder Head, Cylinder and Piston in the Engine Top End chapter)
  - Starter Clutch Sprocket (see Starter Clutch Sprocket Removal in the Electrical System chapter)
  - Clutch (except the Clutch Housing)
- Split the crankcase.
- Lift up the transmission drive shaft assembly [A], and pull the shaft out of the clutch housing [B].

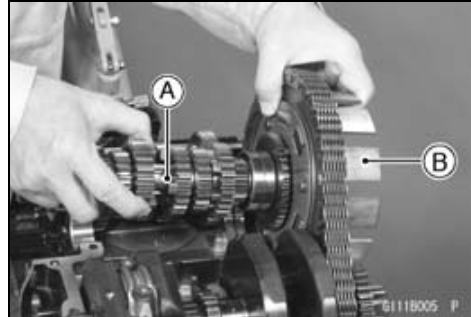

- Place the clutch housing on the balancer drive gear, slack off the primary chain [A] as much as possible and slip the primary chain off the clutch housing sprocket [B].

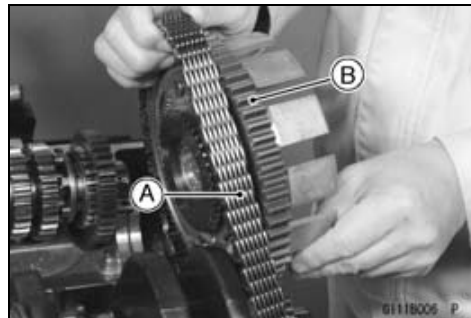


- Remove the clutch housing [A].
- Pull off the oil pump drive gear [B] from the clutch housing.
- Lift up the crankshaft, and remove the primary chain.

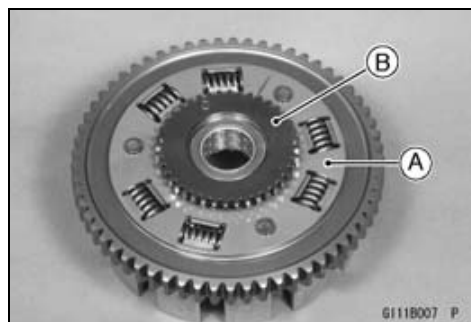


#### Clutch Housing/Primary Chain Installation

- Install the primary chain on the sprocket of the crankshaft.
- Install the oil pump drive gear fitting its pin [A] to the groove [B] of the clutch housing sprocket.

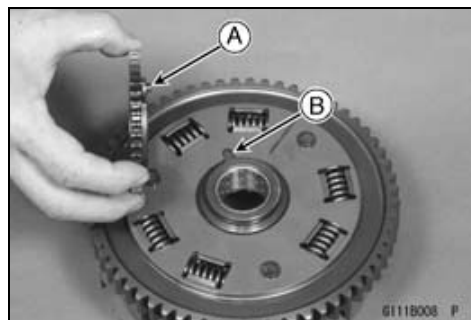

### Clutch Housing/Primary Chain

- Install the spacer [A] onto the drive shaft [B], facing the chamfered side [C] to the ball bearing [D].
- Install the clutch housing in the reverse order of removal.

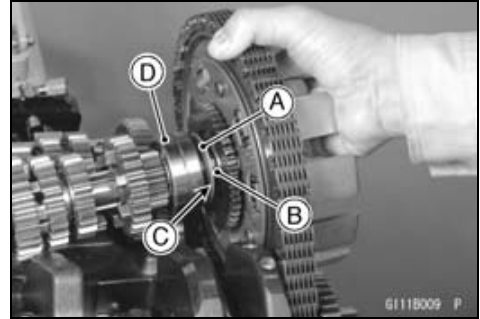

#### *Primary Chain Guide Wear Inspection*

- Visually inspect the rubber on the guides.
- If the rubber is cut or damaged in any way, replace the guide.

**Torque - Upper/Lower Primary Chain Guide Mounting Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

## 9-16 CRANKSHAFT/TRANSMISSION

### Crankshaft/Connecting Rods

#### *Crankshaft Removal*


- Split the crankcase (see Crankcase Splitting).
- Remove the clutch housing and the primary chain.
- Remove the crankshaft with the camshaft chain and primary chain.

#### *Crankshaft Installation*

#### **CAUTION**

**If the crankshaft, bearing inserts or crankcase halves are replaced with new ones, select the bearing inserts and check clearance with plastigage before assembling engine to be sure the correct bearing inserts are installed.**

- Apply molybdenum disulfide oil to the crankshaft bearing inserts.
- Install the camshaft and primary chains on the crankshaft.
- Align the timing mark [B] on the balancer gear [A] with the timing mark [B] on the balancer drive gear [C] of the crankshaft.
- Assemble the crankcase (see Crankcase Assembly).

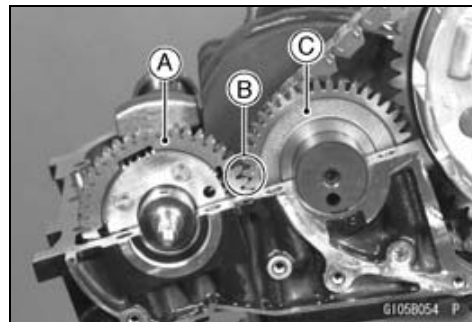

#### *Connecting Rod Removal*

- Remove the crankshaft (see Crankshaft Removal).

#### **NOTE**

○ *Mark and record locations of the connecting rods and their big end caps so that they can be reassembled in their original positions.*

- Remove the connecting rod big end cap nuts, and take off the rod and cap with the bearing inserts from the crankshaft.

#### **CAUTION**

**To prevent damage to the crankpin surfaces, do not allow the big end cap bolts to bump against them.**


**Crankshaft/Connecting Rods**

*Connecting Rod Installation*


**CAUTION**

The connecting rod and the connecting rod big end cap are machined at the factory in the assembled state, so they must be replaced together as a set. To minimize vibration, the connecting rods should have the same weight mark. The weight mark is indicated by a capital letter, and is stamped on the connecting rod big end. If the connecting rods, bearing inserts, or crankshaft are replaced with new ones, select the bearing insert and check clearance with plastigage before assembling engine to be sure the correct bearing inserts are installed.

- Big End Cap [A]
- Connecting Rod [B]
- Weight Mark, Alphabet [C]
- Diameter Mark [D]

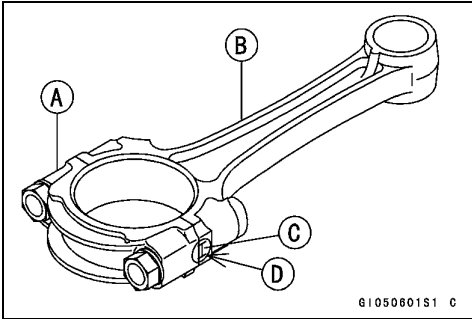

- Apply molybdenum disulfide oil to the inner surface of the upper and lower bearing inserts [A].
  - Apply a small amount of engine oil to the threads [B] and seating surface [C] of the connecting rod big end cap nuts.
  - Tighten the cap nuts.
- Torque - Connecting Rod Big End Cap Nuts: 36 N·m (3.7 kgf·m, 27 ft·lb)**
- Install the crankshaft (see Crankshaft Installation).

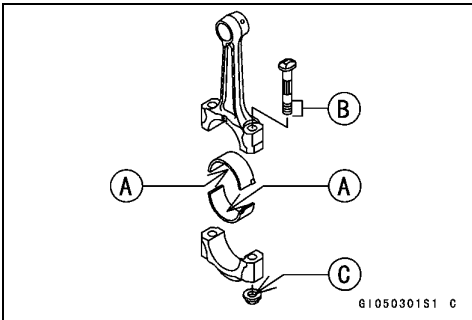

*Crankshaft/Connecting Rod Cleaning*

- After removing the connecting rods from the crankshaft clean them with a high flash-point solvent.
- Blow the crankshaft oil passages with compressed air to remove any foreign particles or residue that may have accumulated in the passages.




## 9-18 CRANKSHAFT/TRANSMISSION

### Crankshaft/Connecting Rods

#### Connecting Rod Bend/Twist


- Measure the connecting rod bend.
- Remove the connecting rod big end bearing inserts, and reinstall the connecting rod big end cap.
- Select an arbor [A] of the same diameter as the connecting rod big end, and insert the arbor through the connecting rod big end.
- Select an arbor of the same diameter as the piston pin and at least 100 mm (4 in.) long, and insert the arbor [B] through the connecting rod small end.
- On a surface plate, set the big-end arbor on V blocks [C].
- With the connecting rod held vertical, use a height gauge to measure the difference in the height of the arbor above the surface plate over a 100 mm (4 in.) length to determine the amount of connecting rod bend.
- ★ If connecting rod bend exceeds the service limit, the connecting rod must be replaced.

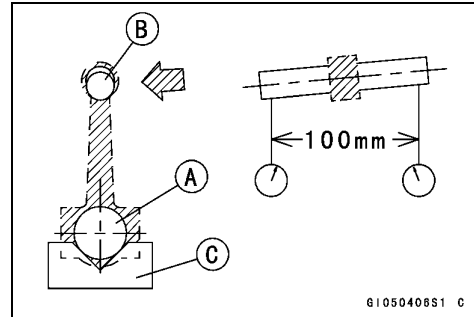

#### Connecting Rod Bend

**Service Limit:** 0.2/100 mm (0.0079/4 in.)

- Measure the connecting rod twist.
- With the big-end arbor [A] still on V blocks [C], hold the connecting rod horizontal and measure the difference in the height of the arbor [B] above the surface plate over a 100 mm (4 in.) length of the arbor to determine the amount of connecting rod twist.
- ★ If the connecting rod twist exceeds the service limit, the connecting rod must be replaced.

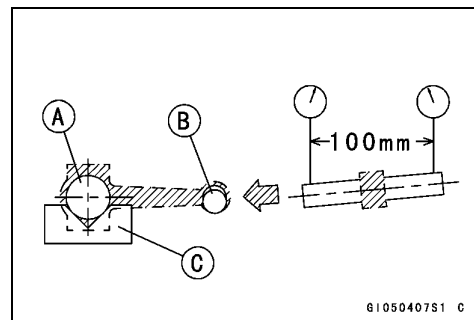

#### Connecting Rod Twist

**Service Limit:** 0.2/100 mm (0.0079/4 in.)


#### Connecting Rod Big End Side Clearance

- Measure the connecting rod big end side clearance.
- Insert a thickness gauge [A] between the big end [B] and either crank web [C] to determine the clearance.

#### Connecting Rod Big End Side Clearance

**Standard:** 0.13 ~ 0.38 mm (0.0051 ~ 0.0150 in.)

**Service Limit:** 0.50 mm (0.02 in.)

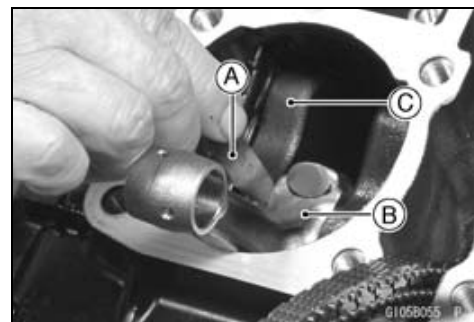

- ★ If the clearance exceeds the service limit, replace the connecting rod with a new one and then check the clearance again. If the clearance is too large after connecting rod replacement, the crankshaft must be replaced.



**Crankshaft/Connecting Rods**

*Connecting Rod Big End Bearing Insert/Crankpin Clearance*

- Measure the bearing insert/crankpin clearance using a plastigage.
- Remove the connecting rod big end caps and wipe each bearing insert and crankpin surface clean of oil.
- Cut strips of plastigage to bearing insert width, and place a strip on the crankpin for each connecting rod parallel to the crankshaft so that the plastigage will be compressed between the crankpin and the bearing insert.

Install the connecting rod big end caps and tighten the big end cap nuts to the specified torque.

**Torque - Connecting Rod Big End Cap Nuts: 36 N·m (3.7 kgf·m, 27 ft·lb)**

**NOTE**

- Do not move the connecting rod and crankshaft during clearance measurement.
- Remove the connecting rod big end caps, and measure the plastigage width [A] to determine the bearing insert/crankpin [B] clearance.

**Connecting Rod Big End Bearing Insert/Crankpin Clearance**

**Standard: 0.036 ~ 0.066 mm (0.0014 ~ 0.0026 in.)**

**Service Limit: 0.10 mm (0.0039 in.)**

- ★ If the clearance is within the standard, no bearing insert replacement is required.
- ★ If the clearance is between 0.066 mm (0.0026 in.) and the service limit (0.10 mm, 0.0039 in.), replace the bearing inserts [A] with inserts painted blue [B]. Check insert/crankpin clearance with a plastigage. The clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid bearing seizure.
- ★ If the clearance exceeds the service limit, measure the diameter of the crankpins.

**Crankpin Diameter**

**Standard: 37.984 ~ 38.000 mm (1.4954 ~ 1.4961 in.)**

**Service Limit: 37.97 mm (1.4949 in.)**




- ★ If any crankpin has worn past the service limit, replace the crankshaft with a new one.
- ★ If the measured crankpin diameters are not less than the service limit, but do not coincide with the original diameter markings on the crankshaft, write new marks on it.

**Crankpin Diameter Marks**

**None: 37.984 ~ 37.994 mm (1.4954 ~ 1.4958 in.)**

○: 37.995 ~ 38.000 mm (1.4959 ~ 1.4961 in.)

Δ: Crankpin Diameter Marks, "○" mark or no mark.

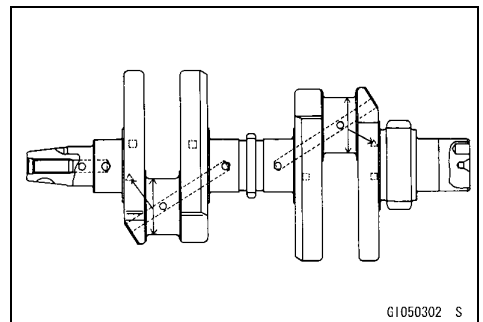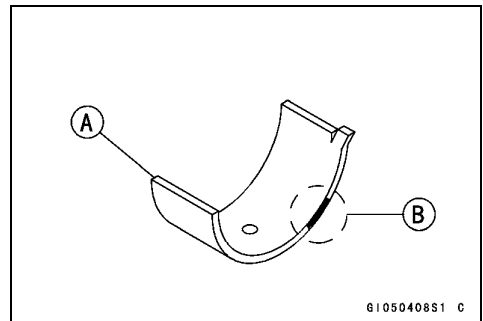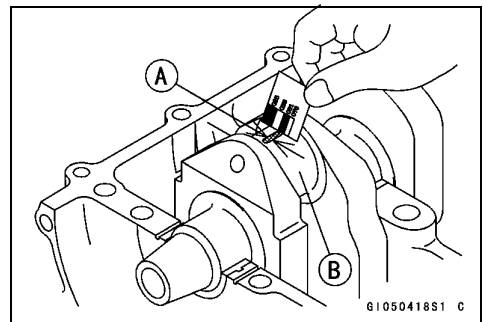

## 9-20 CRANKSHAFT/TRANSMISSION

### Crankshaft/Connecting Rods

- Put the connecting rod big end caps on the rods and tighten the nuts to the specified torque.

**Torque - Connecting Rod Big End Cap Nuts: 36 N·m (3.7 kgf·m, 27 ft·lb)**

- Measure the bore diameter, and mark each connecting rod big end in accordance with the bore diameter.

#### NOTE

○ The mark already on the big end should almost coincide with the measurement.

#### Connecting Rod Big End Bore Diameter Marks

**None: 41.000 ~ 41.008 mm (1.6142 ~ 1.6145 in.)**


**○: 41.009 ~ 41.016 mm (1.6145 ~ 1.6148 in.)**

[A] Big End Cap

[B] Connecting Rod

[C] Weight Mark, Alphabet

[D] Diameter Mark (around Weight Mark): "○" or no mark

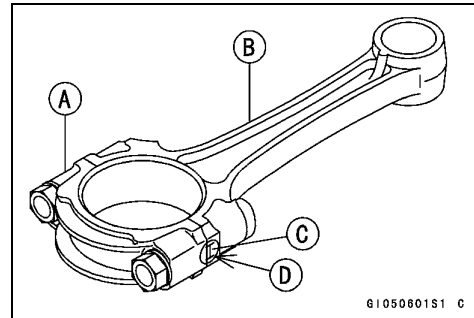


- Select the proper bearing insert in accordance with the combination of the connecting rod and crankshaft coding.
- Install the new insert in the connecting rod and check insert/journal clearance with a plastigage.

#### Connecting Rod Big End Bearing Insert Selection

Con-rod Bore Diameter Mark	Crankpin Diameter Mark	Bearing Insert	
		Size Color	Part Number
○	○	Black	92028-1349
None	None		
○	None	Blue	92028-1348
None	○	Brown	92028-1350

#### Crankshaft Runout

- Measure the crankshaft runout.
- Set the crankshaft in a flywheel alignment jig or on V blocks.
- Set a dial gauge against the points indicated.
- Turn the crankshaft slowly to measure the runout. The difference between the highest and lowest dial gauge readings (TIR) is the amount of runout.
- ★ If the measurement exceeds the service limit, replace the crankshaft.

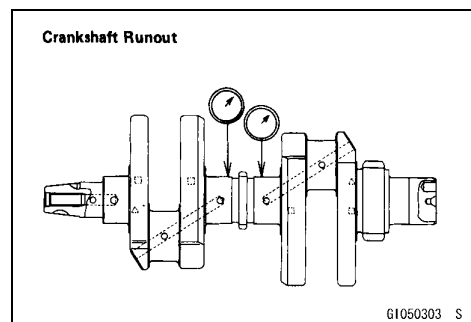

#### Crankshaft Runout

**Service Limit: 0.05 mm (0.0020 in.) TIR**

#### Crankshaft Main Bearing Insert/Journal Clearance

- Measure the bearing insert/journal clearance using a plastigage.
- Split the crankcase and wipe each bearing insert and journal surface clean of oil.
- Cut strips of plastigage to bearing insert width, and place a strip on each journal parallel to the crankshaft so that the plastigage will be compressed between the journal and the bearing insert.

**Crankshaft/Connecting Rods**

○ Install the lower crankcase half, and tighten the case bolts to the specified torque.

**Torque - Crankcase 8 mm Bolts: 27 N·m (2.8 kgf·m, 20 ft·lb)**  
**Crankcase 6 mm Bolts: 12 N·m (1.2 kgf·m, 104 in·lb)**

**NOTE**

- Do not turn the crankshaft during clearance measurement.
- Remove the lower crankcase half and measure the plastigage width [A] to determine the bearing insert/journal [B] clearance.

**Crankshaft Main Bearing Insert/Journal Clearance**  
**Standard: 0.020 ~ 0.044 mm (0.0008 ~ 0.0017 in.)**  
**Service Limit: 0.08 mm (0.0032 in.)**

- ★ If the clearance is within the standard, no bearing insert replacement is required.
- ★ If the clearance is between 0.044 mm (0.0017 in.) and the service limit 0.08 mm (0.0032 in.), replace the bearing inserts [A] with inserts painted blue [B]. Check insert/journal clearance with a plastigage. The clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid bearing seizure.
- ★ If the clearance exceeds the service limit, measure the diameter of the crankshaft main journal.

**Crankshaft Main Journal Diameter**  
**Standard: 35.984 ~ 36.000 mm (1.4167 ~ 1.4173 in.)**  
**Service Limit: 35.96 mm (1.4157 in.)**

- ★ If any journal has worn past the service limit, replace the crankshaft with a new one.
- ★ If the measured journal diameters are not less than the service limit, but do not coincide with the original diameter markings on the crankshaft, write a new mark on it.





**Crankshaft Main Journal Diameter Marks**  
**None: 35.984 ~ 35.992 mm (1.4167 ~ 1.4170 in.)**  
**1: 35.993 ~ 36.000 mm (1.4170 ~ 1.4173 in.)**

□: Crankshaft Main Journal Diameter Marks, "1" mark or no mark.

- Put the lower crankcase half on the upper crankcase half without bearing inserts, and tighten the case bolts to the specified torque and sequence (see Crankcase Assembly).
- Measure the crankcase main bearing bore diameter, and mark the upper crankcase half in accordance with the bore diameter.

**NOTE**

○ The mark already on the upper crankcase half should almost coincide with the measurement.

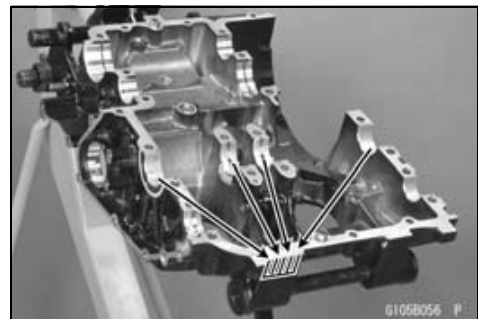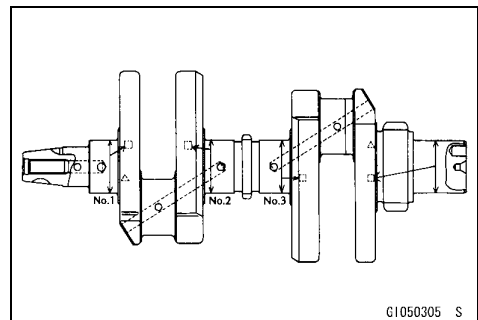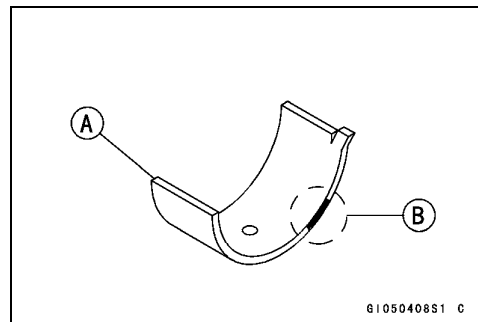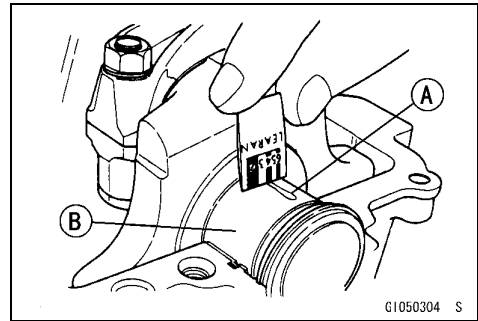

## 9-22 CRANKSHAFT/TRANSMISSION

### Crankshaft/Connecting Rods

#### Crankcase Main Bearing Bore Diameter Marks

- : 39.000 ~ 39.008 mm (1.5354 ~ 1.5357 in.)
- None: 39.009 ~ 39.016 mm (1.5358 ~ 1.5361 in.)
- □□: Crankcase Main Bearing Bore Diameter Marks, "○" mark or no mark.

- Select the proper bearing insert in accordance with the combination of the crankcase and the crankshaft coding.
- Install the new inserts in the crankcase halves and check insert/journal clearance with a plastigage.


#### Crankshaft Main Bearing Insert Selection

Crankcase Main Bearing Bore Diameter Mark	Crankshaft Main Journal Diameter Mark	Bearing Insert*		
		Size Color	Part Number	Journal Nos
○	1	Brown	92028-1102	2, 3
			92028-1274	1, 4
None	None	Blue	92028-1100	2, 3
			92028-1272	1, 4
○	None	Black	92028-1101	2, 3
None	1		92028-1273	1, 4

\*: The bearing inserts for Nos. 2 and 3 journals have oil grooves.

#### Crankshaft Side Clearance

- Measure the crankshaft side clearance.
- Install the lower crankcase half on the upper crankcase half, and turn the crankcase upside down.
- Insert a thickness gauge [A] between the upper crankcase [B] and the crank web [C] at the No.2 and No.3 journals to determine clearance.
- ★ If the clearance exceeds the service limit, replace the crankcase halves as set.

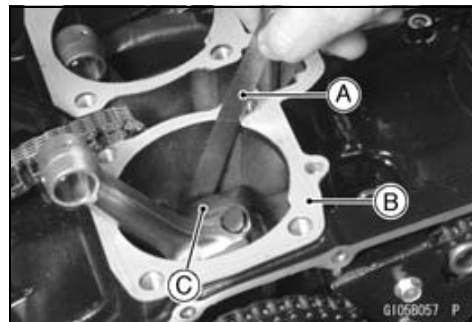

#### CAUTION

**The upper crankcase half and lower crankcase half are machined at the factory in the assembled state, so they must be replaced as a set.**

#### Crankshaft Side Clearance

- Standard: 0.05 ~ 0.25 mm (0.0020 ~ 0.0098 in.)
- Service Limit: 0.40 mm (0.0157 in.)


**Balancer**

*Balancer Removal*

- Split the crankcase (see Crankcase Splitting).
- Pull the balancer shaft with the balancer gear out of the crankcase.

*Balancer Installation*

- Apply oil to the inside of the balancer shaft bearing insert.
- Align the timing mark [B] on the balancer gear [A] with the timing mark [B] on the balancer drive gear [C] of the crankshaft.
- Assemble the crankcase (see Crankcase Assembly).

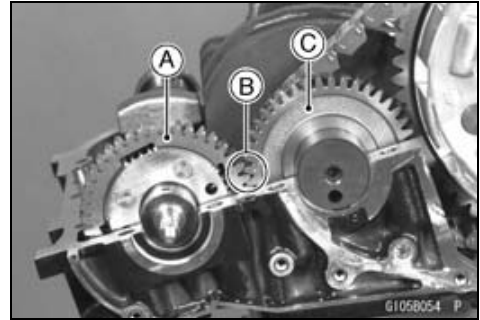

*Balancer Shaft Bearing Insert/Journal Clearance*

- Measure the bearing insert/journal clearance using a plastigage.
- Split the crankcase and wipe each bearing insert and journal surface clean of oil.
- Cut strips of plastigage to bearing insert width, and place a strip on each journal parallel to the balancer shaft so that the plastigage will be compressed between the journal and the bearing insert.
- Install the lower crankcase half, and tighten the case bolts to the specified torque.

**Torque - Crankcase 8 mm Bolts: 27 N·m (2.8 kgf·m, 20 ft·lb)**  
**Crankcase 6 mm Bolts: 12 N·m (1.2 kgf·m, 104 in·lb)**

**NOTE**

- Do not turn the balancer shaft during clearance measurement.
- Remove the lower crankcase half and measure the plastigage width [A] to determine the bearing insert/journal [B] clearance.



**Balancer Shaft Bearing Insert/Journal Clearance**

**Standard: 0.020 ~ 0.050 mm (0.0008 ~ 0.0020 in.)**  
**Service Limit: 0.09 mm (0.0035 in.)**

- ★ If the clearance is within the standard, no bearing insert replacement is required.
- ★ If the clearance is between 0.050 mm (0.0020 in.) and the service limit 0.09 mm (0.0035 in.), replace the bearing inserts [A] with inserts painted blue [B]. Check insert/journal clearance with a plastigage. The clearance may exceed the standard slightly, but it must not be less than the minimum in order to avoid bearing seizure.
- ★ If the clearance exceeds the service limit, measure the diameter of the balancer shaft journal.

**Balancer Shaft Journal Diameter**

**Standard: 27.987 ~ 28.000 mm (1.1019 ~ 1.1024 in.)**  
**Service Limit: 27.96 mm (1.1008 in.)**

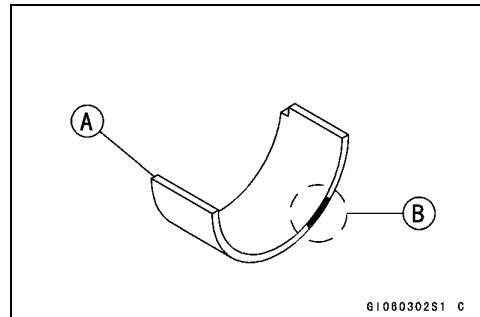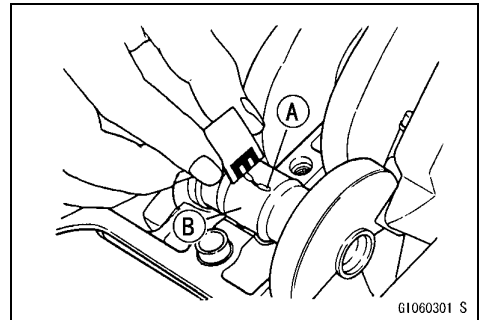

## 9-24 CRANKSHAFT/TRANSMISSION

### Balancer


- ★ If either journal has worn past the service limit, replace the balancer shaft with a new one.
- ★ If the measured journal diameters are not less than the service limit, but do not coincide with the original diameter markings on the balancer shaft, write new marks on it.

#### Balancer Shaft Diameter Marks

None: 27.987 ~ 27.993 mm (1.1019 ~ 1.1021 in.)

○: 27.994 ~ 28.000 mm (1.1021 ~ 1.1024 in.)


△: Balancer Shaft Journal Diameter Marks, "○" mark or no mark.

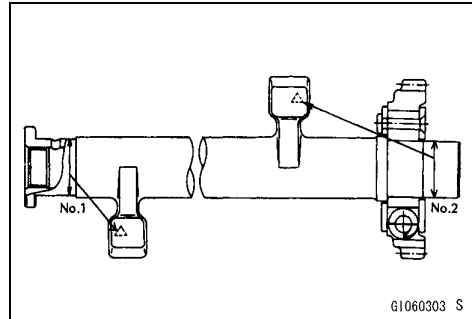

- Put the lower crankcase half on the upper crankcase half without bearing inserts, and tighten the case bolts to the specified torque and sequence (see Crankcase Assembly).
- Measure the crankcase bearing bore diameter for the balancer shaft, and mark the upper crankcase half in accordance with the bore diameter.

#### NOTE

○ The mark already on the upper crankcase half should almost coincide with the measurement.

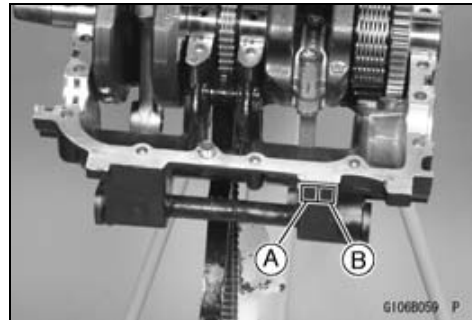

#### Crankcase Bearing Bore Diameter Marks

○: 31.008 ~ 31.016 mm (1.2208 ~ 1.2211 in.)

None: 31.017 ~ 31.024 mm (1.2211 ~ 1.2214 in.)

□□: Crankcase Bearing Bore Diameter Marks, "○" mark or no mark.

[A] No. 1 Journal

[B] No. 2 Journal

- Select the proper bearing insert in accordance with the combination of the crankcase and the balancer shaft coding.
- Install the new inserts in the crankcase and check insert/journal clearance with a plastigage.

### Balancer Shaft Bearing Insert Selection


Crankcase Main Bearing Bore Diameter Mark	Crankshaft Main Journal Diameter Mark	Bearing Insert*		
		Size Color	Part Number	
			L.H.	R.H.
○	○	Brown	92028-1497	92028-1692
None	None	Blue	92028-1495	92028-1690
○	None	Black	92028-1496	92028-1691
None	○			




**Transmission**

*External Shift Mechanism Removal*


- Remove:
  - Left Front Footpeg
  - Shift Pedal Link Lever
  - Engine Sprocket (see Engine Sprocket Removal in the Final Drive chapter)
  - Chain Guard [A]
  - Neutral Switch Lead Connector [B]

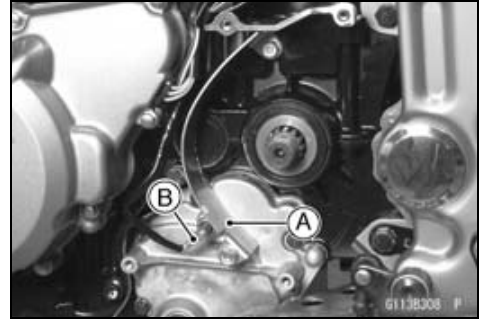


- Place an oil pan beneath the external shift mechanism cover [A].
- Remove the external shift mechanism cover bolts [B].

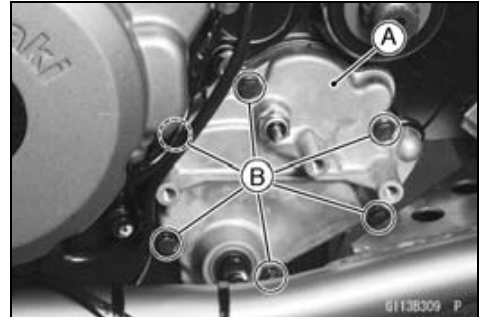

- Pull the cover.
- Remove the cover with the shift shaft assembly while pushing the shift mechanism arm [A] down..

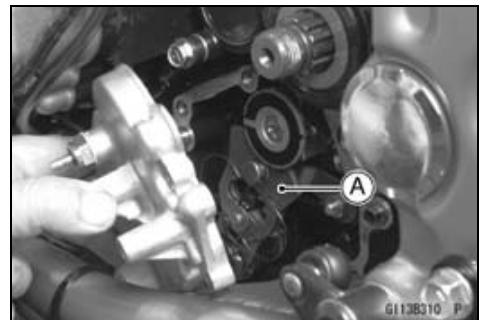

- Remove the nut [A] and take off the gear positioning lever [B]. The lever has a collar [C], spring [D], and washer.

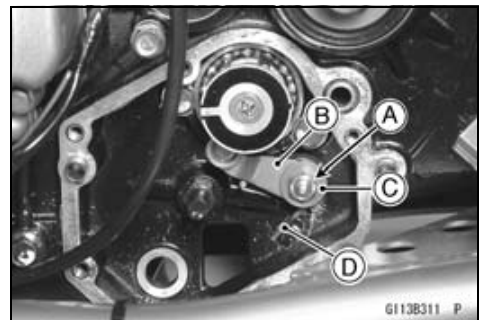

*External Shift Mechanism Installation*


○The small diameter side of the collar in the gear positioning lever must face toward the crankcase.

- Tighten the positioning lever nut [A].
- Torque - Gear Positioning Lever Nut: 11 N·m (1.1 kgf·m, 95 in·lb)**

- Check that the return spring pin [B] is not loose.
- ★If it is loose, remove it, apply a non-permanent locking agent to the threads, and tighten it.

**Torque - Return Spring Pin: 20 N·m (2.0 kgf·m, 14.5 ft·lb)**

- Apply silicone sealant to the area [C].
- Sealant - Kawasaki Bond (Silicone Sealant): 56129-120**
- Replace the cover gasket with a new one.

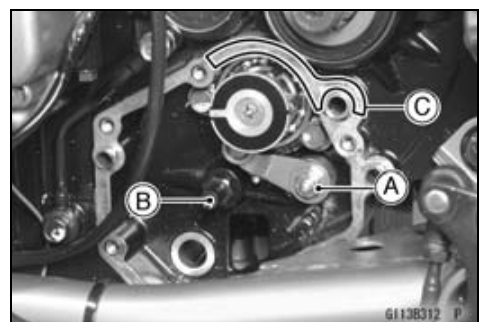

## 9-26 CRANKSHAFT/TRANSMISSION

### Transmission




- Apply high temperature grease to the seal lips.
- Insert the shift shaft into the crankcase half and fit the shift mechanism arm [A] to the shift drum [B].
- Install the external shift mechanism cover.
- Tighten the cover bolts.

**Torque - External Shift Mechanism Cover Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

- Check:
  - Engine Oil Level (see Engine Oil Level Inspection in the Engine Lubrication System chapter)
  - Drive Chain Slack (see Drive Chain Slack Inspection in the Periodic Maintenance chapter)

#### *External Shift Mechanism Inspection*

- Examine the shift shaft for any damage.
  - Check the shift shaft for bending or damage to the splines [A].
    - ★ If the shaft is bent, straighten or replace it. If the splines are damaged, replace the shaft.
  - Check the return spring [B] and arm spring [C] for breaks or distortion.
    - ★ If the springs are damaged in any way, replace them.
  - Check the shift mechanism arm [D] for distortion.
    - ★ If the shift mechanism arm is damaged in any way, replace the arm.
  - Check that the return spring pin [A] is not loose.
    - ★ If it is loose, unscrew it, apply a non-permanent locking agent to the threads, and tighten it.
- Torque - Return Spring Pin: 20 N·m (2.0 kgf·m, 14.5 ft·lb)**
- Check the gear positioning levers [B], and their springs [C] for break or distortion.
    - ★ If the levers or springs are damaged in any way, replace them.
  - Visually inspect the shift drum cam [D] and pin plate [E].
    - ★ If they are badly worn or if they show any damage, replace them.

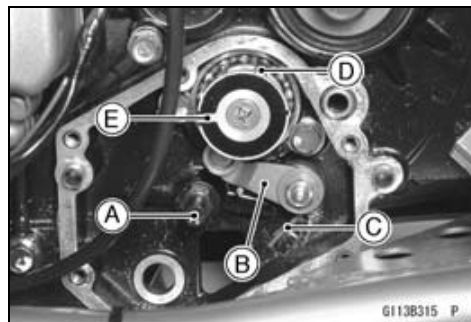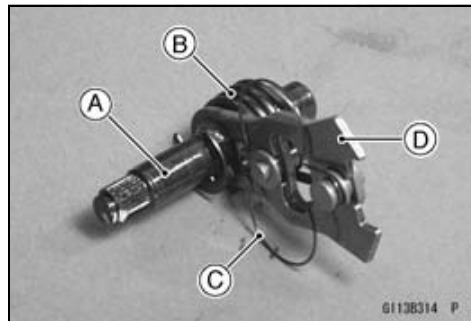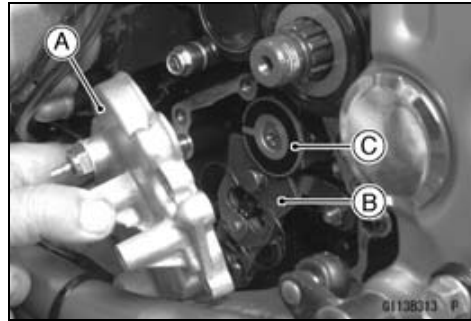

#### *Transmission Shaft Removal*

- Remove the engine (see Engine Removal in the Engine Removal/Installation chapter).
- Split the crankcase (see Crankcase Splitting).
- Take out the output shaft assembly.
- Lift up the drive shaft assembly, and pull the shaft assembly out of the clutch housing. Leave the clutch housing and primary chain in place.


#### *Transmission Shaft Installation*

- With a high flash-point solvent, clean off the outer circumferences of the transmission ball bearings and needle bearings, and their bearing housings, and wipe dry.




## Transmission

- Check to see that the set rings [A] and set pins [B] are in place in the transmission bearing housings.

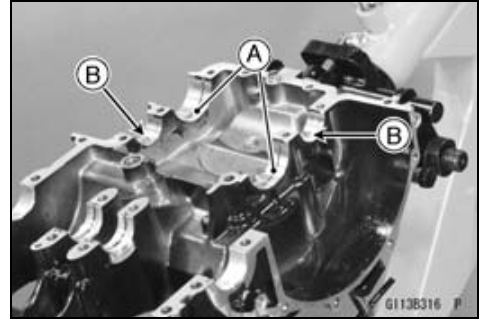

- Lift up the clutch housing and primary chain, insert the drive shaft assembly into the clutch housing, and install the drive shaft assembly in the upper crankcase half.
- Install the output shaft assembly in the upper crankcase half.

- The bearing set pins and rings must match properly with the holes or grooves in the bearing outer races. When they match properly, there is no clearance [A] between the crankcase and the bearing outer races.

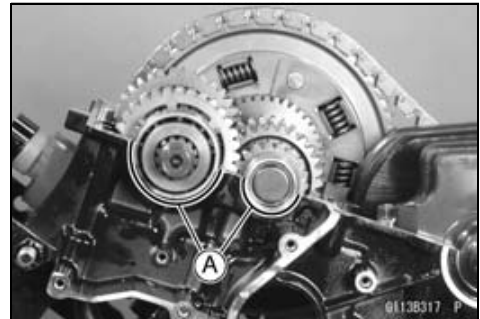


- Assemble the crankcase.
- Install the engine.

### *Transmission Shaft Disassembly*

- Remove the transmission shaft.
- Using the outside circlip pliers to remove the circlips, disassemble the transmission shafts.

**Special Tool - Outside Circlip Pliers: 57001-144**

- The 5th gear [A] on the output shaft has three steel balls assembled into it for the positive neutral finder mechanism. To remove this gear from the shaft, quickly spin [B] the shaft in a vertical position while holding the 3rd gear [C], and pull off the 5th gear upwards.

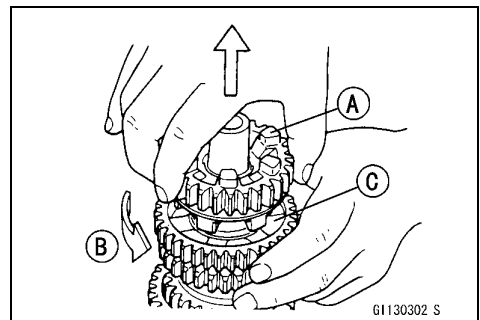

## 9-28 CRANKSHAFT/TRANSMISSION


### Transmission

- The ball bearings and collar are press-fit on the transmission shafts. To remove the bearings [A], use a press or the bearing puller [B] and bearing puller adapter [C].

**Special Tools - Bearing Puller: 57001-135**

**Bearing Puller Adapter: 57001-317**


- The output shaft ball bearing, O-ring and collar ought to be removed together.
- No need for the bearing puller adapter at output shaft.

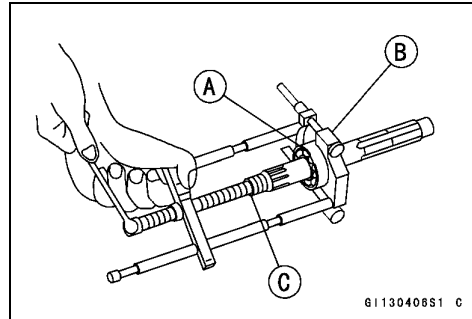


### Drive Shaft Assembly

- Apply engine oil liberally to the drive shaft, gears, bearings and bushing.
- Install the drive shaft ball bearing using the bearing driver [A].


**Special Tool - Bearing Driver,  $\phi 32$ : 57001-382**

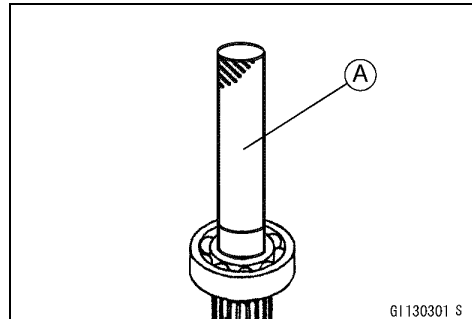


- Replace any circlips that were removed with new ones.
- Always install circlips [A] so that the opening is aligned with a spline groove [B], and install toothed washers [C] so that the teeth [D] are not aligned with the circlip opening [E]. To install a circlip without damage, fit the circlip onto the shaft expanding it just enough to install it, and use a suitable gear to push the circlip into place.

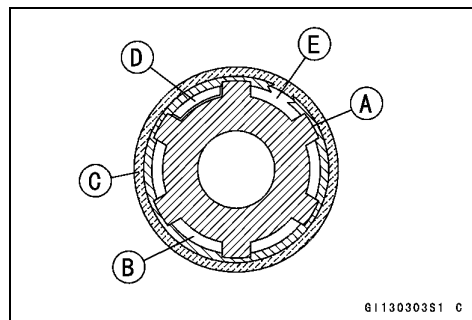

- When assembling the drive shaft 6th gear bushing [A] onto the shaft, align its oil hole [B] with the hole in the shaft.

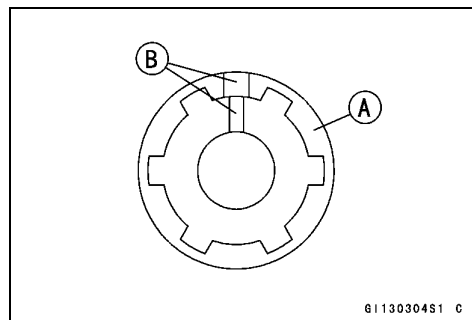

- The drive shaft gears can be identified by size: the smallest diameter gear is 1st gear, and the largest is 6th. Be sure that all parts are put back in the correct sequence, facing the proper direction, and all circlips and washers are properly in place.
- Proper sequence starting with 1st gear (part of drive shaft) is: 1st gear, 5th gear (face the flat side of the gear to the right), washer, circlip, 3rd/4th gear (face 3rd gear side to the right), circlip, toothed washer, bushing (align the oil hole with the hole in the shaft), 6th gear (face the dogs to the right), toothed washer, circlip, 2nd gear, spacer, needle bearing, needle bearing outer race, and plug.
- The toothed washer before the bushing has slightly smaller teeth than the last one.

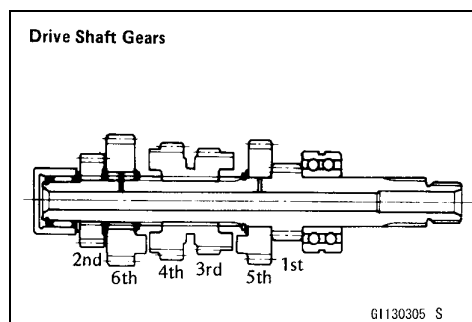

## Transmission

- Install the spacer onto the drive shaft, facing the chamfered side to the ball bearing.
- Check that each gear spins or slides freely on the drive shaft without binding.

### Output Shaft Assembly

- Assembly is the reverse of disassembly. Note the following.
- Apply engine oil liberally to the output shaft, gears, bearings, bushing and O-ring.
- Install the output shaft ball bearing, O-ring and collar using the bearing driver.



**Special Tool - Bearing Driver,  $\phi$ 32: 57001-382**

- The ball bearing, O-ring and collar ought to be installed individually.
- Replace any circlips that were removed with new ones.
- Always install circlips so that the opening is aligned with a spline groove. To install a circlip without damage, fit the circlip onto the shaft expanding it only enough to install it, and use a suitable gear to push the circlip into place.

[A] Circlip

[B] Toothed Washer

- When assembling the output shaft 3rd/4th gear bushing [A] to the shaft, align its oil holes [B] with the holes in the shaft.

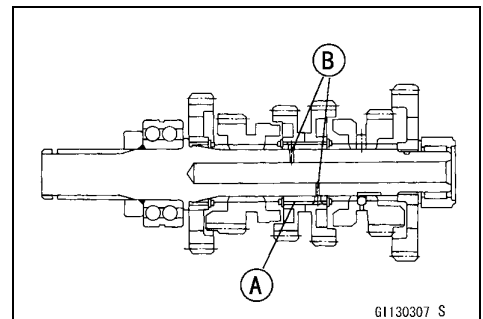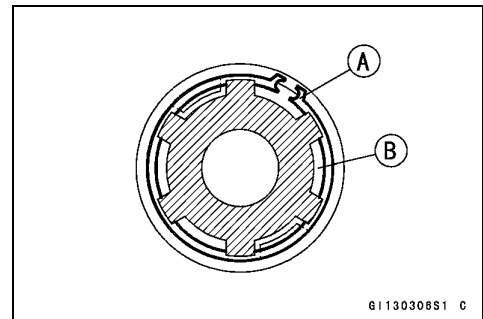


### CAUTION

**When installing the 5th gear and steel balls on the output shaft, do not apply grease to the balls to hold them in place. This will cause the positive neutral finder mechanism to malfunction.**



## 9-30 CRANKSHAFT/TRANSMISSION

### Transmission

- Check the effect of ball-locking, after assembling the 5th gear and steel balls on the output shaft.
- Check that the 5th gear [A] does not come out of the output shaft when moving it up and down by hand.

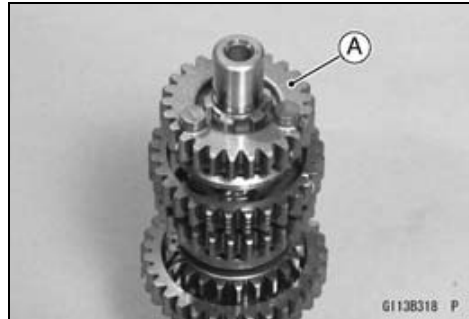


- The output shaft gears can be identified by size: the largest diameter gear is 1st gear, and the smallest is 6th. Be sure that all parts are put back in the correct sequence and facing the proper direction, and that all circlips and washers are properly in place.
- Proper sequence starting with 2nd gear is: 2nd gear (face the flat side of the gear to the left), toothed washer, circlip, 6th gear (face the fork groove side to the right), circlip, toothed washer, bushing (align the oil holes with the holes in the shaft), 4th gear (face the side with the dog recesses to the left), 3rd gear (face the side with the dog recesses to the right), toothed washer, circlip, 5th gear (face the fork groove side to the left) with steel balls (3), 1st gear (face the flat side of the gear to the right), spacer, needle bearing, and needle bearing outer race.
- Press the oil seal [A] onto the collar [B] so it is flush with the end of collar.
- Check that each gear spins or slides freely on the output shaft without binding.

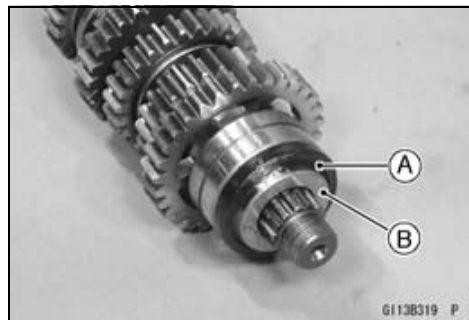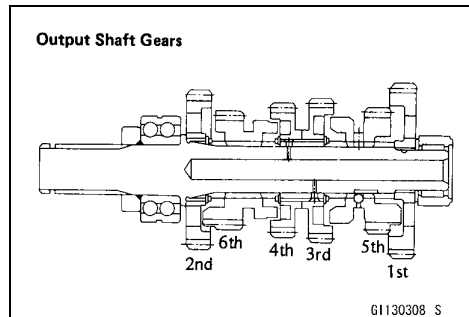


### Shift Drum and Fork Removal

- Remove:
  - Lower Crankcase Half (see Crankcase Splitting)
  - External Shift Mechanism (see External Shift Mechanism Removal)
- Pull out the shift rod [A], and remove the two shift forks [B] in the lower crankcase half.

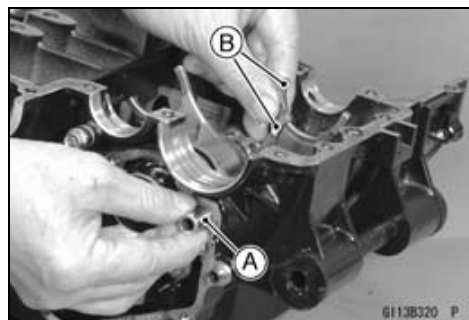


## Transmission

- Remove the cotter pin [A], and pull out the 3rd/4th shift fork guide pin [B].

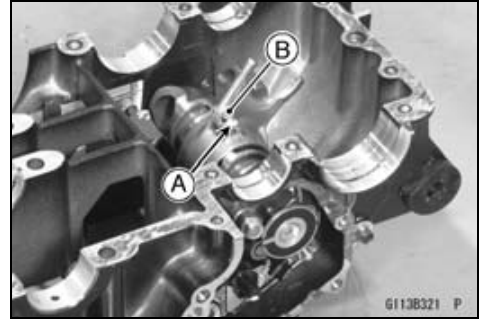


- Remove the bolts [A] holding the shift drum ball bearing [B].
- Pull out the shift drum [C] slightly, and remove the 3rd/4th shift fork. Pull the shift drum free from the crankcase.

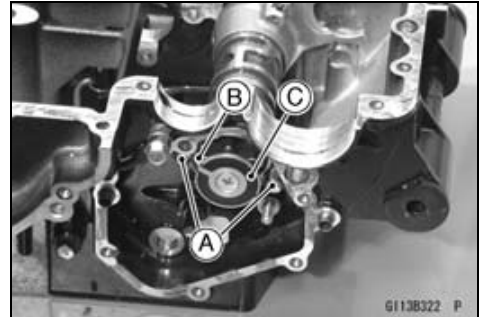

### Shift Drum and Fork Installation

- Insert the shift drum [A] into the crankcase part way, install the 3rd/4th shift fork [B] with the longer side [C] facing the neutral switch, i.e., the longer side goes onto the drum first.

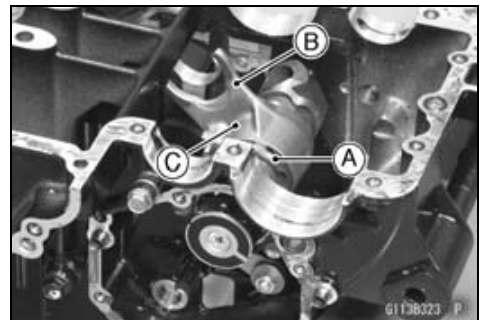

- Push the shift drum in the rest of the way.
- Apply a non-permanent locking agent to the threads of the holding bolts, and tighten them.

**Torque - Shift Drum Bearing Holding Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**


- Put the shift fork guide pin [A] with the pin hole upward into the 3rd/4th shift fork. The guide pin rides in the middle groove of the three shift drum grooves.
- Insert a new cotter pin through the 3rd/4th shift fork and guide pin from the shorter side of the shift fork, and spread the cotter pin longer side.




## 9-32 CRANKSHAFT/TRANSMISSION

### Transmission

- Install the washer, spring, gear positioning lever, collar and nut.
- Set the shift drum in the neutral position, that is, fit the gear positioning lever [A] into the detent on the shift drum cam [B].

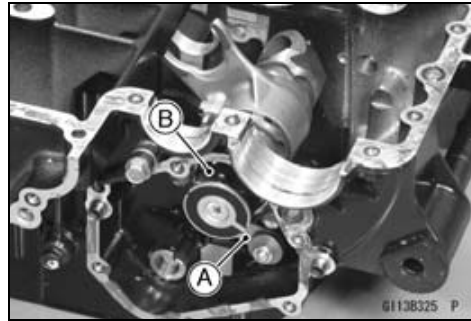


- Install the shift shaft.
- Apply a little engine oil to the shift rod and shift fork ears. Insert the shift rod [A], running it through the shift forks [B], fitting each shift fork guide pin into the shift drum groove. The shift forks are identical, and must be installed with their longer sides [C] facing toward the external shift mechanism.

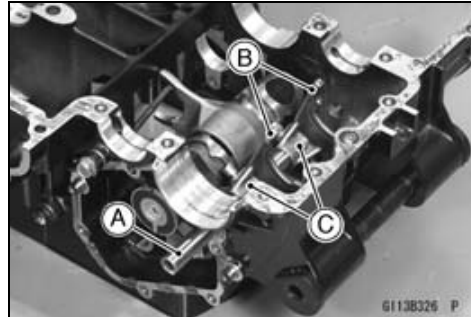

#### Shift Drum Disassembly

- Remove the screw [A] and the pin plate [B].
- Pull out the shift drum cam [C].
- Take off the ball bearing [D].
- Pull off the dowel pin [E].

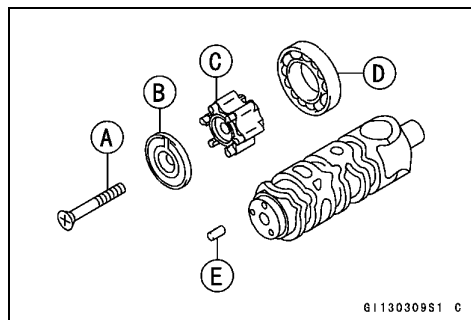


#### Shift Drum Assembly

- Set the dowel pin [A] into larger hole of the two which is the farthest hole from the center.




- Install the shift drum cam aligning its groove [A] with the dowel pin [B].

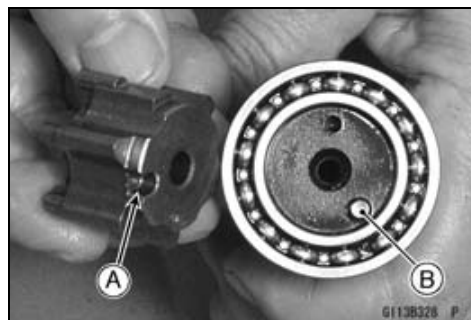



**Transmission**

- There are six points on the shift drum cam. The highest point [A] must be fitted into the back of the pin plate [B]. If these parts are assembled in the wrong position, the neutral indicator light will not light when the gears are in neutral.
- Apply a non-permanent locking agent to the threads of the pin plate screw.
- Tighten the pin plate screw.

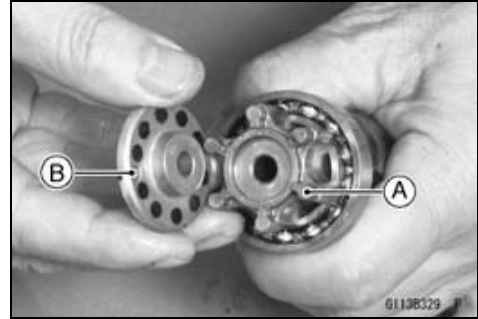

**Ball and Needle Bearing Wear**

- Check the following ball bearings: shift drum LH, drive shaft RH, and output shaft LH.
- Since the ball bearings are made to extremely close tolerances, the wear must be judged by feel rather than measurement. Clean each bearing in a high flash-point solvent, dry it (do not spin the bearing while it is dry), and oil it with engine oil.
- Spin the bearing by hand to check its condition.
- ★ If the bearing is noisy, does not spin smoothly, or has any rough spots, replace it.
- Check the following needle bearings: drive shaft LH and output shaft RH.
- The rollers in a needle bearing normally wear very little, and wear is difficult to measure. Instead of measuring, inspect the bearing for abrasion, color change, or other damage.
- ★ If there is any doubt as to the condition of a needle bearing, replace it.

**Shift Pedal Installation**


- Install the shift pedal [A] adjusting the length [B] of the shift rod [E] so that the height of the tip (a part of rubber) of shift pedal is almost same as the one of the drive chain guide installation lower bolt [D].

**NOTE**

- Tighten the shift pedal link lever mounting bolt before the muffler shall be installed.

**Torque - Shift Pedal Link Lever Mounting Bolt: 12 N·m (1.2 kgf·m, 104 in·lb)**

123 ±2 mm (4.8 ±0.08 in.) [B]  
Neutral Switch [C]

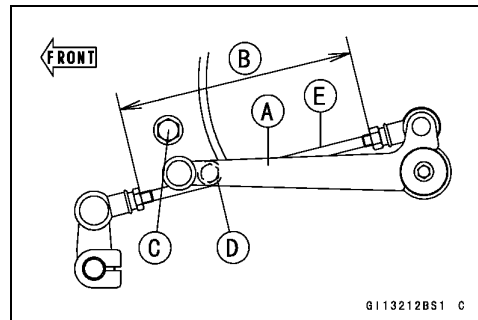






# Wheels/Tires

## Table of Contents

Exploded View .....	10-2
Specifications .....	10-4
Special Tools .....	10-5
Wheels (Rims) .....	10-6
Front Wheel Removal .....	10-6
Front Wheel Installation .....	10-6
Rear Wheel Removal .....	10-7
Rear Wheel Installation .....	10-7
Wheel Inspection .....	10-8
Spoke Inspection .....	10-8
Rim Inspection .....	10-8
Axle Inspection .....	10-8
Wheel Balance .....	10-9
Balance Inspection .....	10-9
Balance Adjustment .....	10-9
Tires .....	10-10
Air Pressure Inspection/Adjustment .....	10-10
Tire Wear Inspection .....	10-10
Tire Removal .....	10-10
Tire Installation .....	10-11
Hub Bearing .....	10-12
Hub Bearing Removal .....	10-12
Hub Bearing Installation .....	10-12
Hub Bearing Inspection .....	10-13
Hub Bearing Lubrication .....	10-13
Speedometer Gear .....	10-14
Disassembly and Assembly .....	10-14
Lubrication .....	10-14

# 10-2 WHEELS/TIRES

## Exploded View

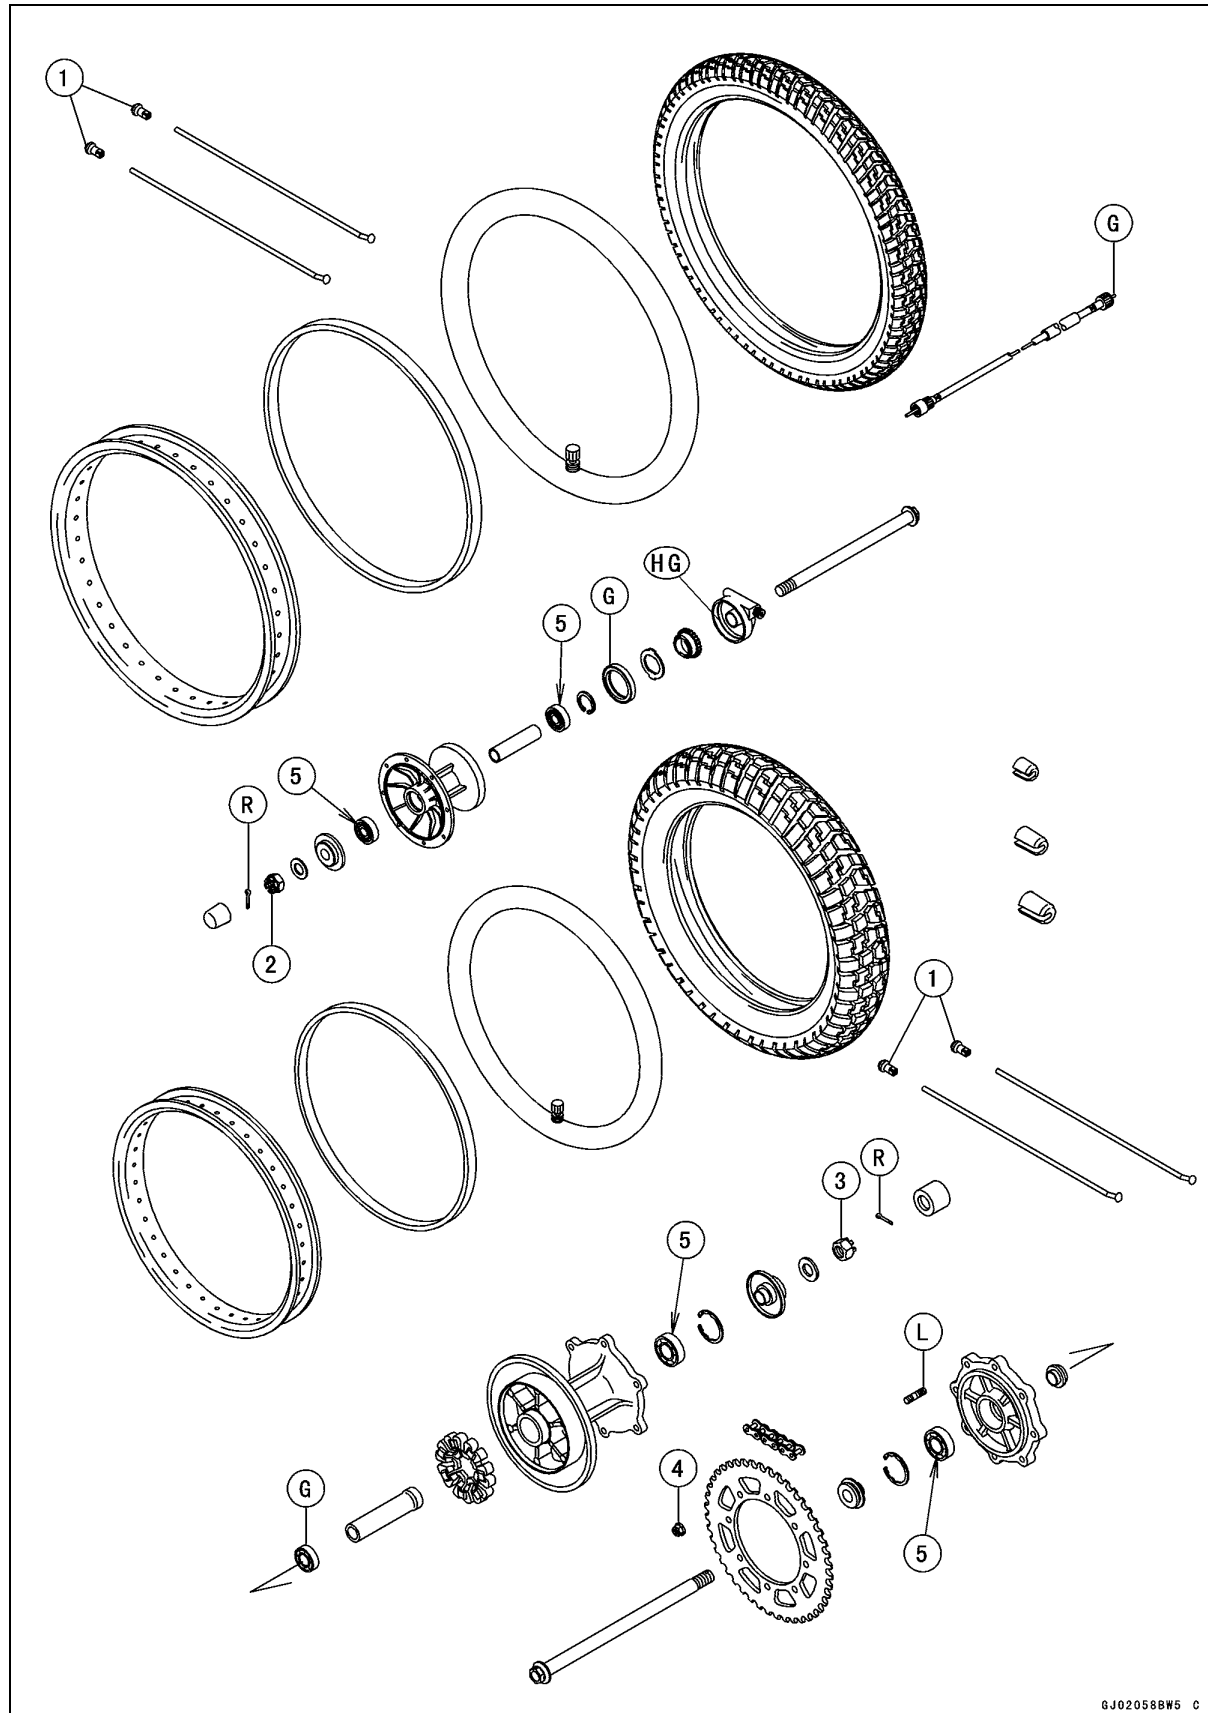

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Spoke Nipple	2.0 ~ 3.9	0.2 ~ 0.4	17 ~ 35 in·lb	
2	Front Axle Nut	88	9.0	65	
3	Rear Axle Nut	108	11	80	
4	Rear Sprocket Nut	33	3.4	24	

- 5. Sealed Side
- G: Apply grease.
- HG: Apply high temperature grease.
- L: Apply a non-permanent locking agent.
- R: Replacement Parts


## 10-4 WHEELS/TIRES

### Specifications

Item	Standard	Service Limit
<b>Wheels (Rims)</b>		
Rim Runout:		
Radial	0.5 mm (0.02 in.)	1.5 mm (0.06 in.)
Axial	0.8 mm (0.03 in.)	1.5 mm (0.06 in.)
Axle Runout/100 mm (3.94 in.)	Under 0.05 mm (0.002 in.)	0.2 mm (0.008 in.)
Balance Weight	10 g (0.35), 20 g (0.71), 30 g (1.06); (US oz)	---
<b>Tires</b>		
Air pressure (cold):		
Front	150 kPa (1.5 kgf/cm <sup>2</sup> , 21 psi)	---
Rear	225 kPa (2.25 kgf/cm <sup>2</sup> , 32 psi)	---
Tread depth		
Front:		
Dunlop	6.9 mm (0.27 in.)	1 mm (0.04 in.)
Bridgestone	6.0 mm (0.24 in.)	
Rear:		
Dunlop	8.8 mm (0.35 in.)	2 mm (0.08 in.) (Up to 130 km/h (80 mph))
Bridgestone	8.5 mm (0.33 in.)	3 mm (0.12 in.) (Over 130 km/h (80 mph))
<b>Standard Tires</b>		
Front:		
Make, Type	Dunlop, TRAILMAX	Bridgestone, TRAIL WING 101
Size	90/90-21 M/C 54S	90/90-21 54H
Rear:		
Make, Type	Dunlop, TRAILMAX G	Bridgestone, TRAIL WING 152 RADIAL
Size	130/80-17 M/C 65S	130/80 R17 65H


**Special Tools**

**Inside Circlip Pliers:**  
57001-143

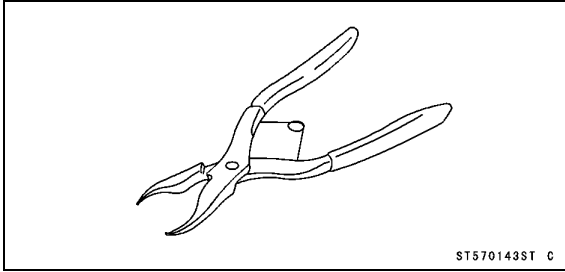


ST570143ST C

**Bearing Driver Set:**  
57001-1129

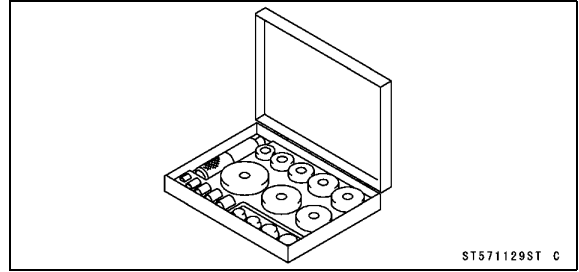


ST571129ST C

**Oil Seal & Bearing Remover:**  
57001-1058

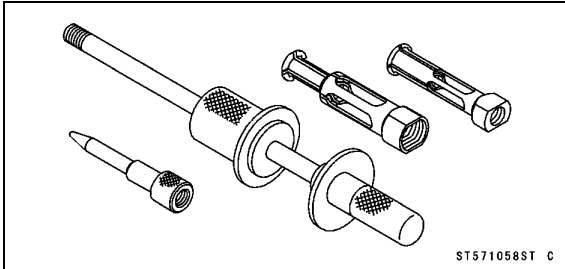


ST571058ST C

**Jack:**  
57001-1238

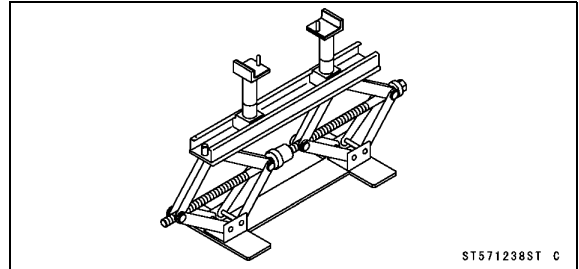


ST571238ST C

**Rim Protector:**  
57001-1063

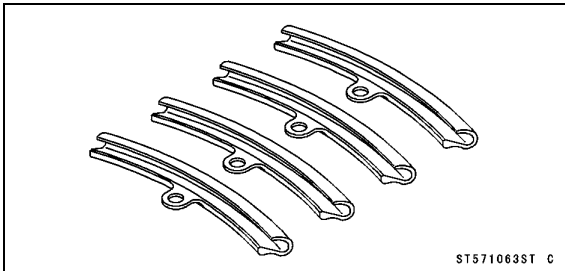


ST571063ST C

**Bearing Remover Head,  $\phi 15 \times \phi 17$ :**  
57001-1267

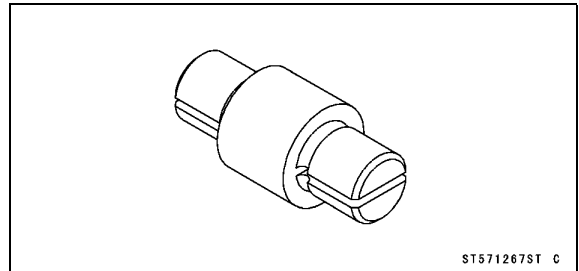


ST571267ST C

**Bead Breaker Assembly:**  
57001-1072

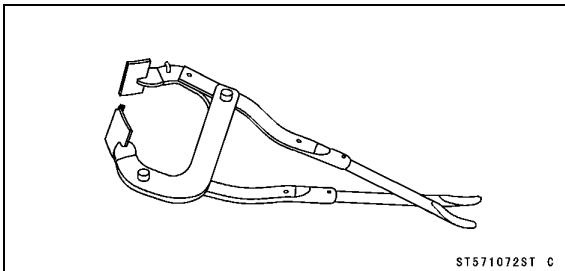

ST571072ST C

**Bearing Remover Shaft,  $\phi 13$ :**  
57001-1377

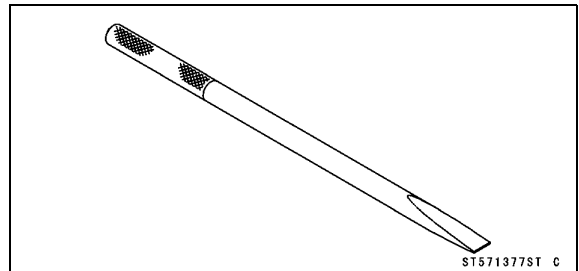

ST571377ST C


## 10-6 WHEELS/TIRES

### Wheels (Rims)

#### Front Wheel Removal

- Remove the cap.
- Remove the cotter pin [A] and loosen the front axle nut [B].
- Raise the front wheel off the ground using the jack.


**Special Tool - Jack: 57001-1238**

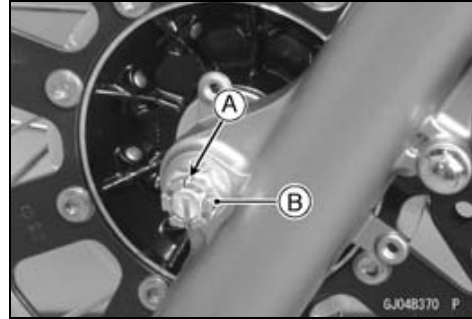

- Remove the speedometer cable lower end [A].
- Remove the nut and pull out the axle [B] to the right, and remove the front wheel, speedometer gear housing, and collars.


#### CAUTION

**Do not lay the front wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.**

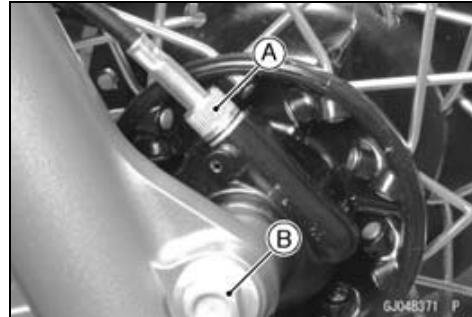


#### Front Wheel Installation

- Install the speedometer gear housing so that its projections [A] fit into the gear drive notches [B] in the wheel hub.
- Fit the collar on the right hand side of the hub.

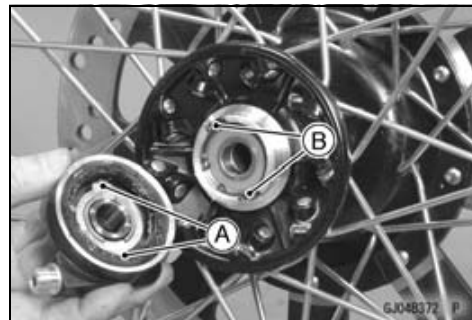

- Fit the speedometer gear housing stop [A] to the fork leg stop [B].
  - Tighten the axle nut.
- Torque - Front Axle Nut: 88 N·m (9.0 kgf·m, 65 ft·lb)**
- Install the speedometer cable lower end.
  - Check the front brake.

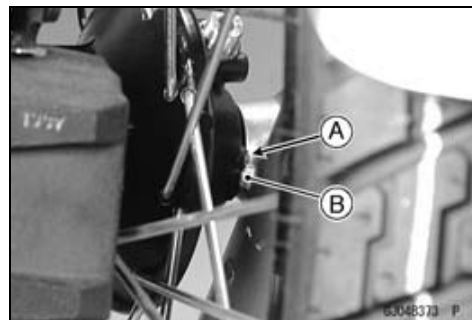

#### ⚠ WARNING

**Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.**



## Wheels (Rims)

### Rear Wheel Removal

- Remove:
  - Rubber Cap
  - Cotter Pin [A]
  - Rear Axle Nut [B] (loosen)
- Raise the rear wheel off the ground using the jack.


**Special Tool - Jack: 57001-1238**

- Remove:
  - Rear Axle Nut and Washer
  - Indicators [C]
- Pull out the rear axle to the right and drop the rear wheel holding the rear brake caliper with caliper holder on the swingarm so that the rear caliper does not fall.
- Remove the drive chain [A] from the rear sprocket toward the left.
- Move the rear wheel [B] back and remove it.

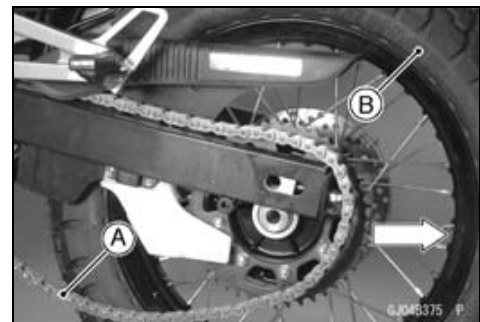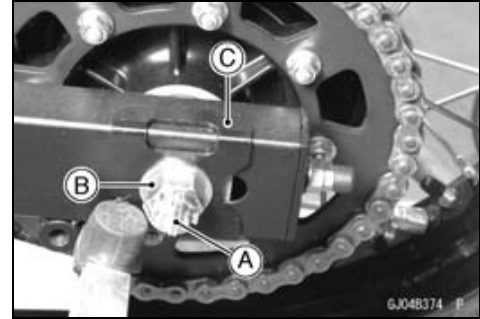

### Rear Wheel Installation

- Engage the drive chain with the rear sprocket.
- Fit the rear brake caliper to the brake disc.
- Hold the rear brake caliper holder aligning the holder stop [A] to the swing arm stop [B], and insert the axle from the right side of the wheel through both indicators and adjusters.

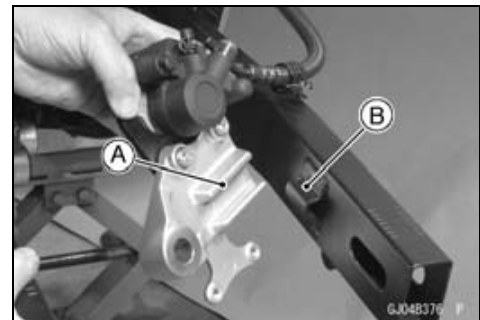

- Spin the wheel, and apply the rear brake, and then tighten the axle nut to the specified torque.

**Torque - Rear Axle Nut: 108 N·m (11 kgf·m, 80 ft·lb)**

- Check the drive chain slack and adjust it if necessary.
- Install the removed parts.


## 10-8 WHEELS/TIRES

### Wheels (Rims)


- Insert a new cotter pin [A].

#### NOTE

- When inserting the cotter pin, if the slots in the nut do not align with the cotter pin hole in the axle, tighten the nut clockwise [B] up to next alignment.
- It should be within 30 degree.
- Loosen once and tighten again when the slot goes past the nearest hole.

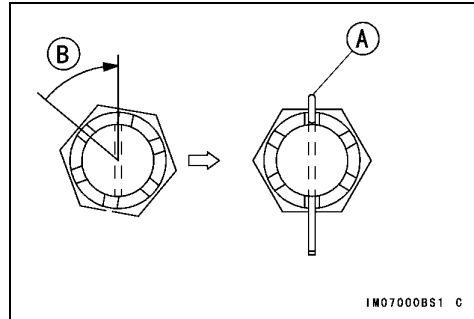

- Bend the cotter pin [A] over the nut [B].

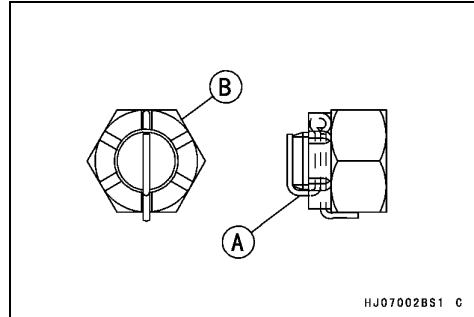

- Check the rear brake effectiveness.
- Check the rear brake light switch timing, and adjust it if necessary (see Brake Light Switch Operation Inspection in the Periodic Maintenance chapter).

#### Wheel Inspection

- Raise the front or rear wheel and turn it by hand to check that it turns smoothly without making a noise.

**Special Tool - Jack: 57001-1238**

- ★ If any abnormal condition is found, replace the hub bearing.

#### Spoke Inspection


- Refer to the Spoke Tightness and Rim Runout Inspection in the Periodic Maintenance chapter.

#### Rim Inspection

- Refer to the Spoke Tightness and Rim Runout Inspection in the Periodic Maintenance chapter.

#### Axle Inspection

- Visually inspect the front and rear axle for damages.
- ★ If the axle is damaged or bent, replace it.
- Place the axle in V blocks that are 100 mm (3.94 in.) [A] apart, and set a dial gauge [B] on the axle at a point halfway between the blocks. Turn [C] the axle to measure the runout. The difference between the highest and lowest dial gauge reading is the amount of runout.
- ★ If the axle runout exceeds the service limit, replace the axle.

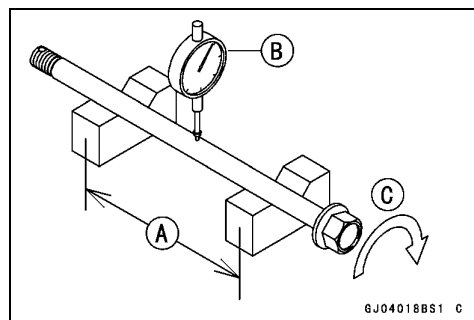

**Axle Runout/100 mm (3.94 in.)**

**Standard: less than 0.1 mm (0.004 in.)**

**Service Limit: 0.2 mm (0.008 in.)**



**Wheels (Rims)**


*Wheel Balance*

To improve stability and decrease vibration at high speed, the front and rear wheels must be kept balanced.

Check and balance the wheels when required, or when a tire is replaced with a new one.


*Balance Inspection*

- Remove the wheel.
- Support the wheel on a wheel balancer so that it can be spun freely.
- Spin the wheel lightly, and mark [A] the wheel at the top when the wheel stops.
- Repeat this procedure several times. If the wheel stops of its own accord in various positions, it is well balanced.
- ★ If the wheel always stops in one position, adjust the wheel balance.

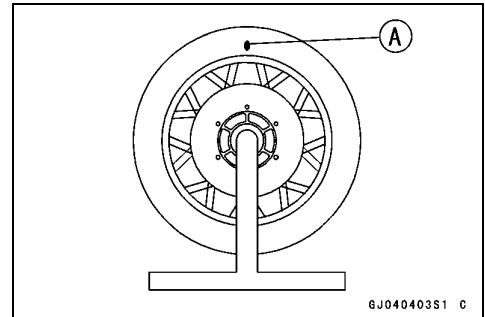

*Balance Adjustment*

- If the wheel always stops in one position, provisionally attach a balance weight [A] on the spoke at the marking using adhesive tape.
- Rotate the wheel 1/4 turn [B], and see whether or not the wheel stops in this position. If it does, the correct balance weight is being used.
- ★ If the wheel rotates and the weight goes up, replace the weight with the next heavier size. If the wheel rotates and the weight goes down, replace the weight with the next lighter size. Repeat these steps until the wheel remains at rest after being rotated 1/4 turn.
- Rotate the wheel another 1/4 turn and then another 1/4 turn to see if the wheel is correctly balanced.
- Repeat the entire procedure as many times as necessary to achieve correct wheel balance.
  
- Once proper balance has been achieved, permanently install the balance weight using a pliers [A].

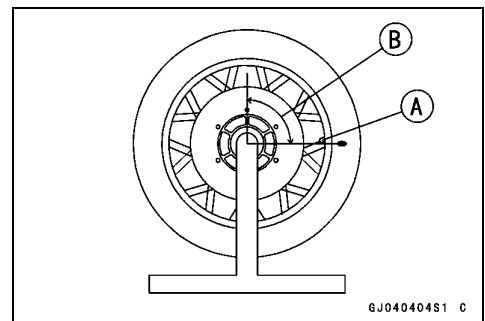


**Balance Weight**

Part Number	Weight: g (US oz)
41075-0011A	10 (0.35)
41075-0012A	20 (0.71)
41075-0013A	30 (1.06)

**NOTE**

- Balance weights are available from Kawasaki dealers in 10, 20 g (0.35, 0.71 US oz), and 30 g (1.06 US oz) sizes. An imbalance of less than 10 grams (0.35 US oz) will not usually affect running stability.
- Do not use four or more balance weight (more than 90 gram (3.17 US oz)). If the wheel requires an excess balance weight, disassemble the wheel to find the cause.

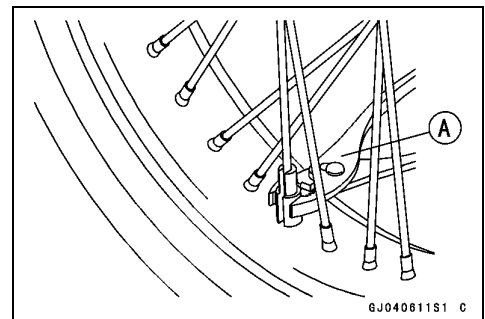

## 10-10 WHEELS/TIRES

### Tires

#### *Air Pressure Inspection/Adjustment*

- Refer to the Air Pressure Inspection/Adjustment in the Periodic Maintenance chapter.

#### *Tire Wear Inspection*


- Refer to the Tire Wear Inspection in the Periodic Maintenance chapter.

#### *Tire Removal*

#### CAUTION

**Do not lay the front wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.**

- Remove the wheel (see Front, Rear Wheel Removal).
- To maintain wheel balance, mark the valve stem position on the tire with chalk so that the tire can be reinstalled in the same position.
  - Chalk Mark or Yellow Mark [A]
  - Air Valve [B]
  - Align [C]

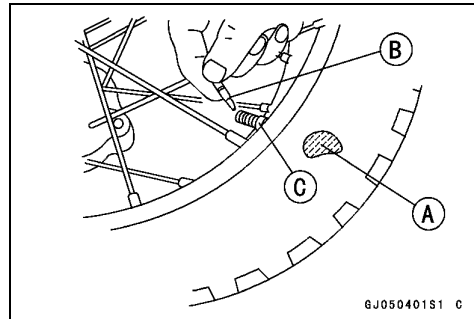


- Remove the valve stem nut.
- Lubricate the tire beads and rim flanges on both sides with a soap and water solution or rubber lubricant. This helps the tire beads slip off the rim flanges.

#### CAUTION

**Never lubricate with engine oil or petroleum distillates because they will deteriorate the tire.**

- Break the beads away from both sides of the rim with the bead breaker [A].

**Special Tool - Bead Breaker Assembly: 57001-1072**

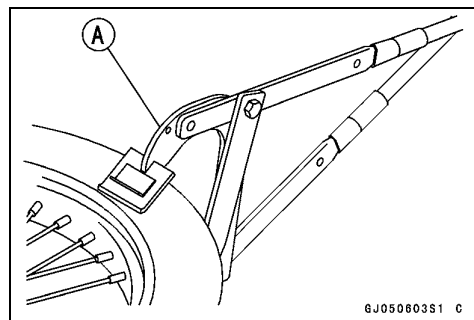

**Tires**

- Step on the side of the tire opposite valve stem, and pry the tire off the rim with the tire iron [B] of the bead breaker protecting the rim with rim protectors [A].

**Special Tools - Rim Protector: 57001-1063**

**Bead Breaker Assembly: 57001-1072**

**CAUTION**

**Take care not to insert the tire irons so deeply that the tube gets damaged.**




- Remove the tube when one side of the tire is pried off.
- Pry the tire off the rim.
- Remove the rim protector.

*Tire Installation*

- Inspect the rim and the tire before installing the tire, and replace them if necessary.
- Apply a soap and water solution or rubber lubricant to both the tire bead and the rim flange.
- Check the tire rotation mark on the front and rear tires and install them on the rim accordingly.  
Rotation Direction [A]  
Tire Rotation Mark [B]

- Install the tire in the reverse order of removal.
- Position the tire on the rim so that the valve stem [A] is at the tire balance mark [B] (the chalk mark made during removal, or the yellow paint mark on a new tire).
- Adjust the air pressure to the specified pressure (see Air Pressure Inspection/Adjustment in the Periodic Maintenance chapter).
- Tighten the valve stem nut securely.

- Install the air valve cap.
- Install the brake disc(s) so that the marked side faces out (see Brakes Disk Installation in the Brakes chapter).
- Adjust the wheel balance.

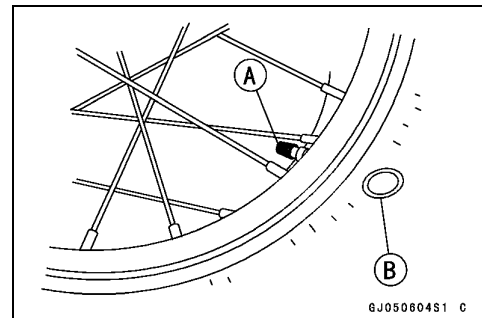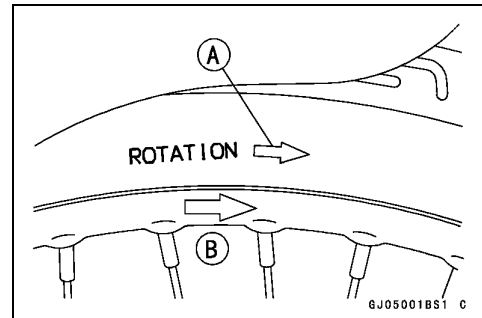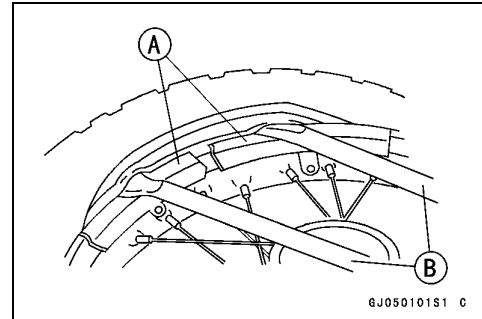

# 10-12 WHEELS/TIRES


## Hub Bearing

### Hub Bearing Removal

- Remove the wheel, and take out the following.

#### CAUTION

Do not lay the wheel on the ground with the disc facing down. This can damage or warp the disc. Place blocks under the wheel so that the disc does not touch the ground.

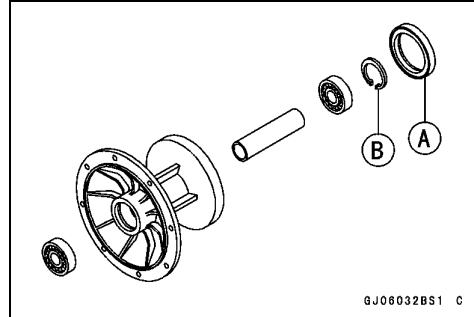

### Front


- Grease Seal [A]
- Circlips [B]

Special Tool - Inside Circlip Pliers: 57001-143

### Rear


- Coupling [A]
- Collar [B]
- Circlip [C]

Special Tool - Inside Circlip Pliers: 57001-143

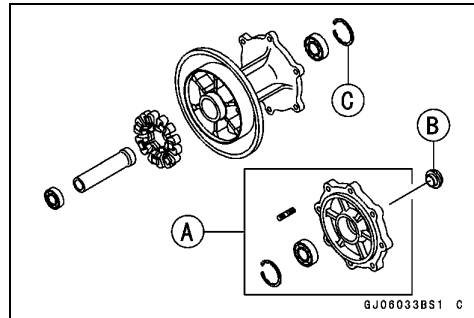

- Take the bearings [A] out of the hub, using the bearing remover.

Special Tools - Bearing Remove Shaft: 57001-1377 [B]  
Bearing Remover Head,  $\phi 15 \times \phi 17$ : 57001-1267 [C]  
Oil Seal & Bearing Remover: 57001-1058

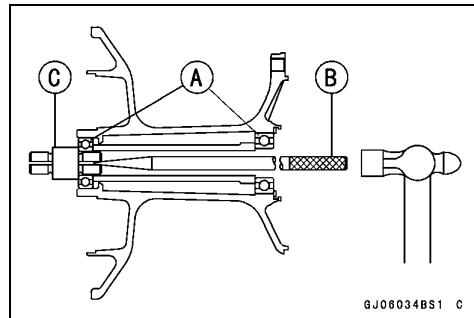

### Hub Bearing Installation

- Before installing the hub bearings, blow any dirt or foreign particles out of the hub with compressed air to prevent contamination of the bearings.
- Replace the bearings with new ones.
- Install the front bearings in the following sequence.
  - Press in the left side bearing [A] until it is bottomed.
  - Insert the collar [B] in the hub [C].
  - Press in the right side bearing [D] until it is bottomed.

Special Tool - Bearing Driver Set: 57001-1129

- Install the rear bearings in the following sequence.
  - Press in the right side bearing until it is bottomed.
  - Insert the collar in the hub.
  - Press in the left side bearing until it is bottomed.


Special Tool - Bearing Driver Set: 57001-1129

#### NOTE

○ Install the bearings so that the marked side or sealed side faces out.

- Replace the circlips with new ones.

Special Tool - Inside Circlip Pliers: 57001-143

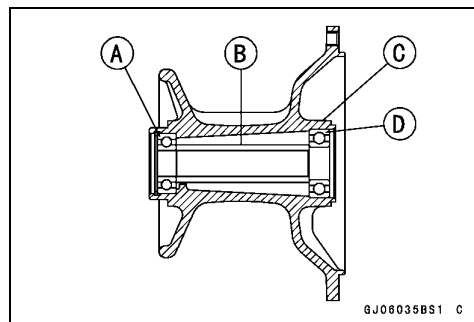

## Hub Bearing

### Hub Bearing Inspection

Since the hub bearings are made to extremely close tolerances, the clearance cannot normally be measured.

#### NOTE


- Do not remove any bearings for inspection. If any bearings are removed, they will need to be replaced with new ones.
- Turn each bearing in the hub back and forth [A] while checking for plays, roughness, or binding.
- ★ If bearing play, roughness, or binding is found, replace the bearing.
- Examine the bearing seal [B] for tears or leakage.
- ★ If the seal is torn or is leaking, replace the bearing.

### Hub Bearing Lubrication

- Clean and grease the rear left side hub bearing in accordance with the Periodic Maintenance chapter.

#### NOTE

- Since the front and rear hub bearings are packed with grease and sealed, lubrication is not required.

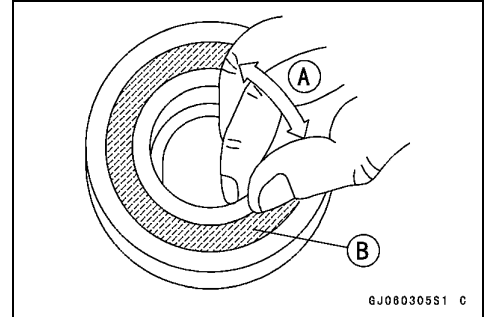

## 10-14 WHEELS/TIRES

### Speedometer Gear

---

#### *Disassembly and Assembly*


#### **NOTE**

○ *It is recommended that the assembly be replaced rather than attempting to repair the components.*

- Install the speedometer gear so that it fits in the speedometer gear drive notches (see Front Wheel Installation).

#### *Lubrication*

- Clean and grease [A] the speedometer gear housing [B] in accordance with the Periodic Maintenance chapter.

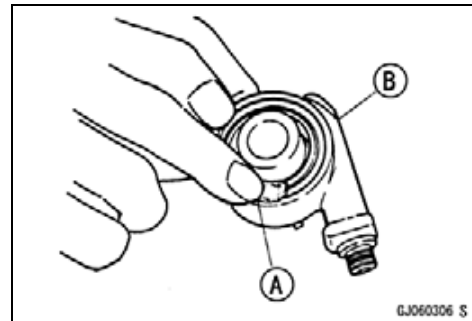


# Final Drive

## Table of Contents

Exploded View .....	11-2
Specifications .....	11-4
Special Tools and Sealants .....	11-5
Drive Chain .....	11-6
Drive Chain Slack Inspection .....	11-6
Wheel Alignment Inspection/Adjustment .....	11-6
Drive Chain Wear Inspection .....	11-6
Drive Chain Lubrication .....	11-6
Drive Chain Removal .....	11-6
Drive Chain Installation .....	11-6
Drive Chain Case and Chain Guide Removal .....	11-7
Drive Chain Replacement .....	11-7
Drive Chain Installation .....	11-8
Sprocket, Coupling .....	11-9
Engine Sprocket Removal .....	11-9
Engine Sprocket Installation .....	11-9
Rear Sprocket Removal .....	11-10
Rear Sprocket Installation .....	11-10
Sprocket Wear Inspection .....	11-10
Rear Sprocket Warp Inspection .....	11-10
Coupling Bearing Removal .....	11-11
Coupling Bearing Installation .....	11-11
Coupling Installation .....	11-11
Coupling Bearing Inspection and Lubrication .....	11-11

# 11-2 FINAL DRIVE

## Exploded View

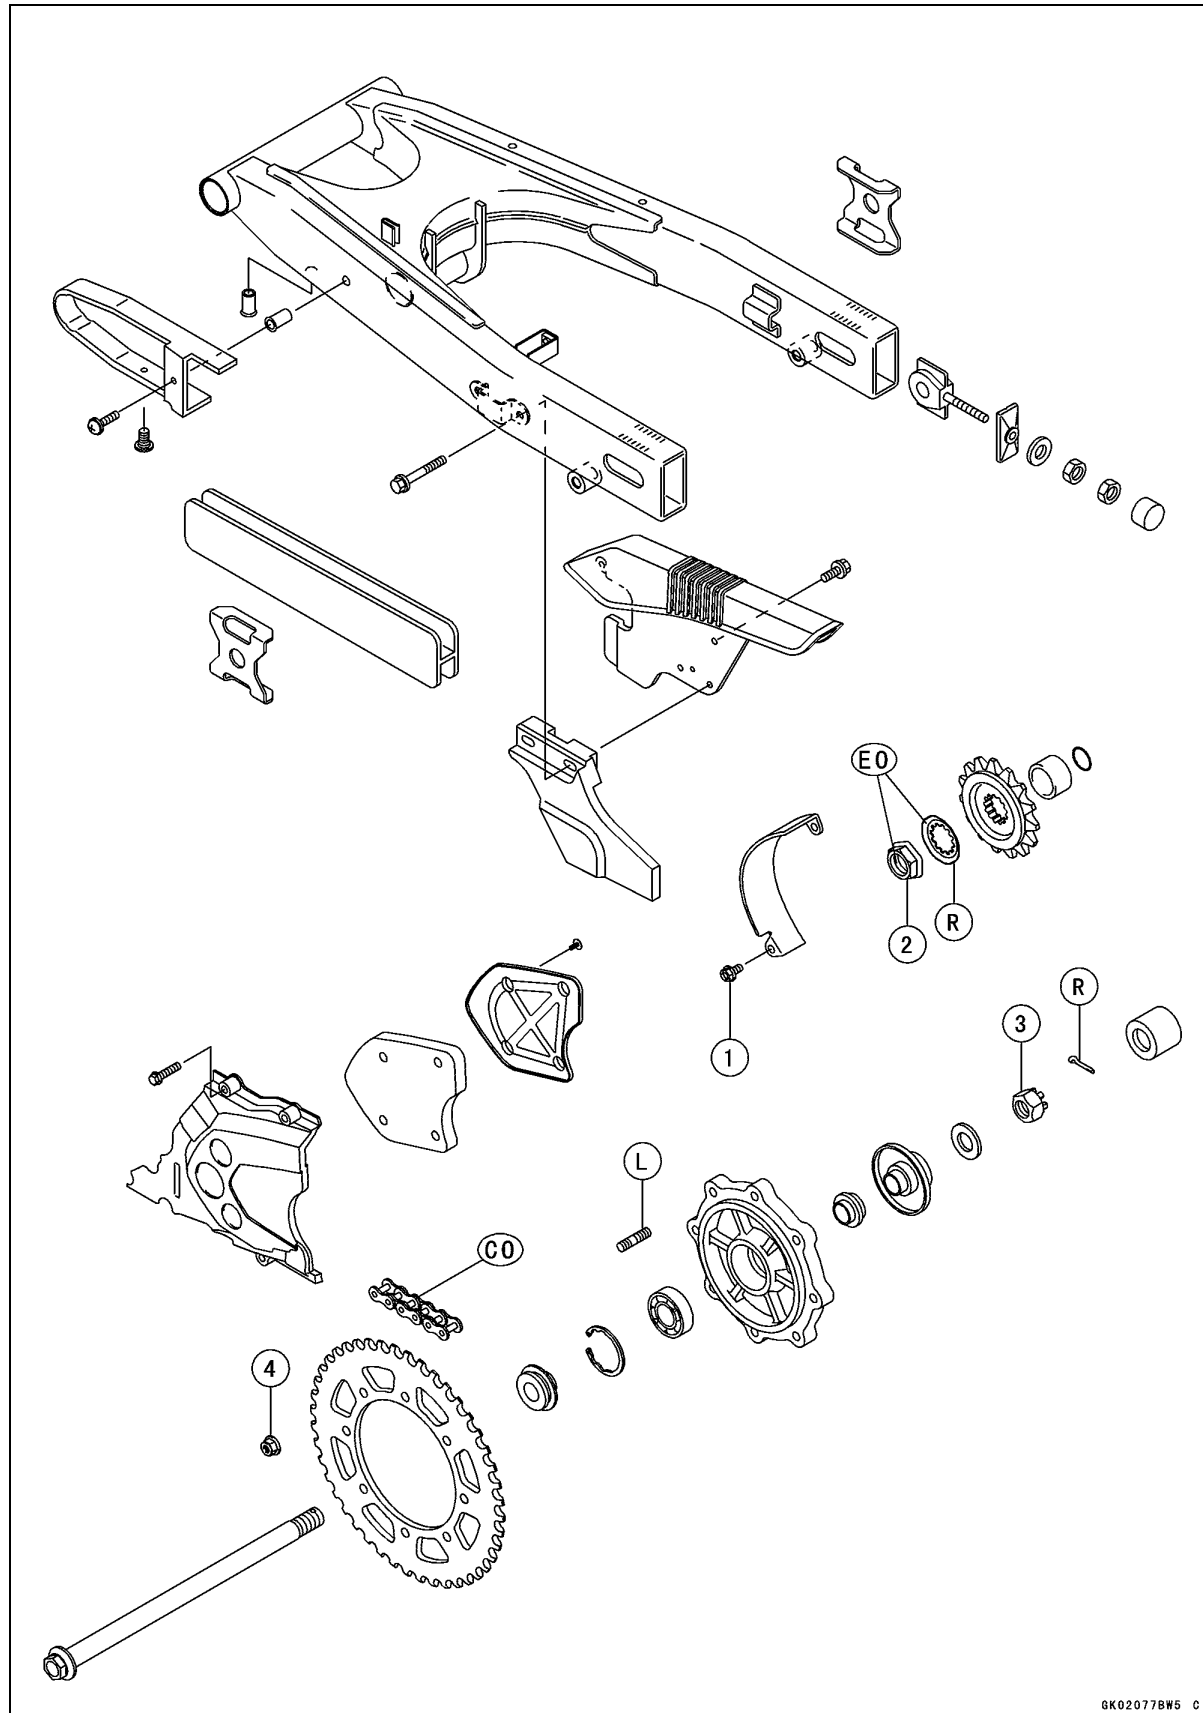

GK02077BW5 C



**Exploded View**

No.	Fastener	Torque			Re- marks
		N·m	kgf·m	ft·lb	
1	Drive Chain Guide Bolts	11	1.1	95 in·lb	
2	Engine Sprocket Nuts	127	13	94	EO
3	Rear Axle Nuts	108	11	80	
4	Rear Sprocket Nuts	33	3.4	24	

CO: Apply chain oil.

EO: Apply engine oil.

G: Apply grease.

L: Apply a non-permanent locking agent.

R: Replacement Parts

## 11-4 FINAL DRIVE

### Specifications


Item	Standard	Service Limit
<b>Drive Chain</b>		
Chain Slack	35 ~ 45 mm (1.4 ~ 1.8 in.)	— — —
20-link Length	317.5 ~ 318.2 mm (12.50 ~ 12.53 in.)	323 mm (12.7 in.)
Standard Chain		
Make	DAIDO KOGYO	— — —
Type	DID520VL2	— — —
Link	108 links	— — —
<b>Sprockets</b>		
Rear Sprocket Warp	0.4 mm (0.016 in.) or less	0.5 mm (0.020 in.)

---


**Special Tools and Sealants**

---

**Inside Circlip Pliers:**  
**57001-143**

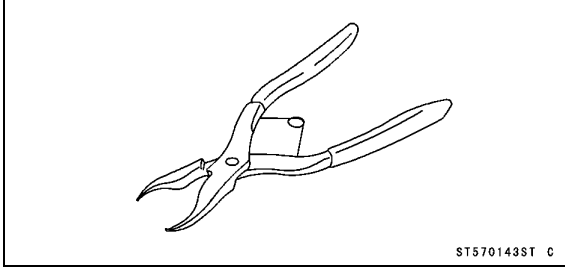

**Bearing Driver Set:**  
**57001-1129**

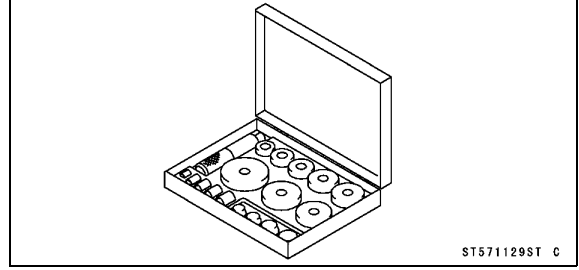

## 11-6 FINAL DRIVE

### Drive Chain

---

#### *Drive Chain Slack Inspection*

- Refer to the Drive Chain Slack Inspection in the Periodic Maintenance chapter.

#### *Wheel Alignment Inspection/Adjustment*

- Refer to the Drive Chain Slack Inspection in the Periodic Maintenance chapter.

#### *Drive Chain Wear Inspection*


- Refer to the Drive Chain Wear Inspection in the Periodic Maintenance chapter.

#### *Drive Chain Lubrication*

- Refer to the Drive Chain Lubrication in the Periodic Maintenance chapter.

#### *Drive Chain Removal*

- Remove:
  - Rear Wheel (see Rear Wheel Removal in the Wheels/Tires chapter)
  - Swingarm (see Swingarm Removal in the Suspension chapter)
  - Engine Sprocket Cover
  - Drive Chain Guide
- Disengage the drive chain [A] from the engine sprocket [B], and take it off the chassis.

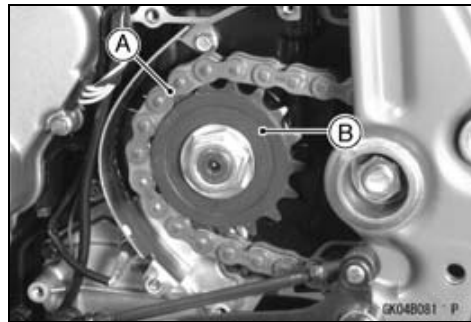

#### *Drive Chain Installation*

- Engage the drive chain with the engine sprocket.
  - Install:
    - Swingarm (see Swingarm Installation in the Suspension chapter)
    - Rear Wheel (see Rear Wheel Installation in the Wheels/Tires chapter)
    - Engine Sprocket Cover
    - Drive Chain Guide
- Torque - Drive Chain Guide Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**
- Adjust the chain slack after installing the chain (see Drive Chain Slack Adjustment in the Periodic Maintenance chapter).


## Drive Chain

### Drive Chain Case and Chain Guide Removal

- Remove the drive chain case mounting bolts [A], [B], and then removed the chain case [C].
- The chain guide [D] is installed together with the chain case with chain case mounting bolts [B].

#### NOTE

- Fit the chain case cover to the bracket groove on the swingarm at installing the chain case.


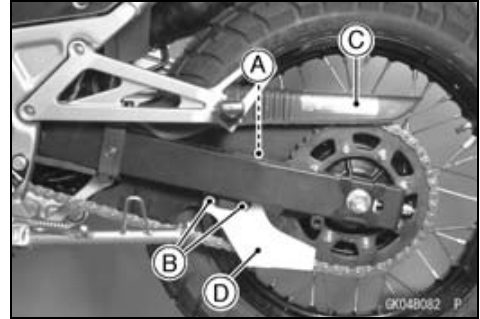


### Drive Chain Replacement

#### NOTE

- Since the drive chain is installed through the swingarm, the chain cannot be removed other than by cutting it. Prepare the new link pin, link plate, O-ring, and tools for rejoining the chain.

- Remove:  
Engine Sprocket Cover  
Drive Chain Guide
- Using the chain joint “ZJ” tool [A], cut the drive chain by removing the link pins [B]

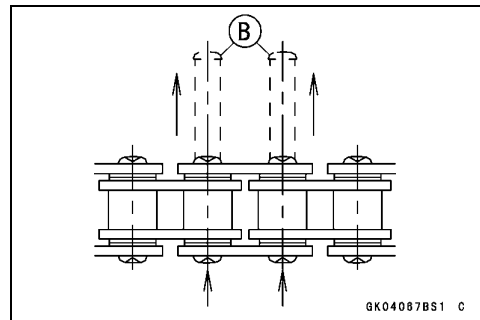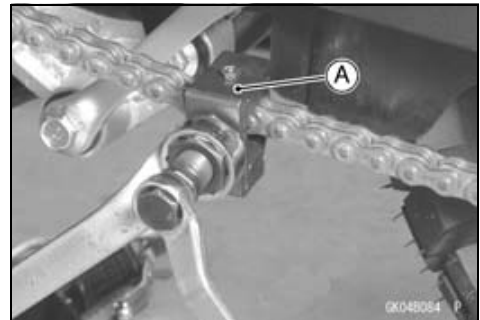

### Recommended Tool

#### DID Chain Joint “ZJ”

Type: DID KASHIMARU

Make: DAIDO KOGYO

Pin Holder [A]


U type Holder [B]

Plate Holder [C]

Cutting and Rivetting Pin [D]

Adjusting Pin [E]

Aligning Mark [F]

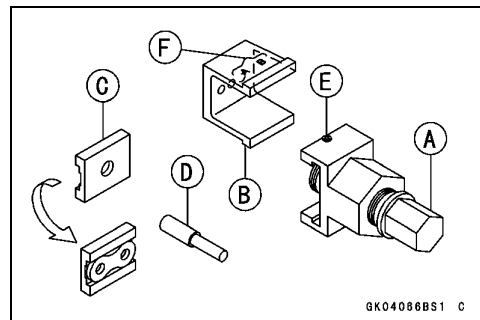



## 11-8 FINAL DRIVE

### Drive Chain


#### Drive Chain Installation

- Replace the link pin, link plate and grease seals.
- Apply grease to the link pins [A] and grease seals.
- Engage the drive chain on the engine and rear sprockets through the swingarm.
- Install the grease seals [B] on the link pins.
- Insert the link pins in the drive chain ends.
- Install:
  - Grease Seals [C]
  - Link Plate [D]

○ Install the link plate so that the mark [A] faces out.

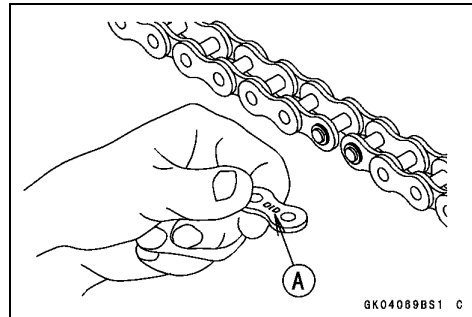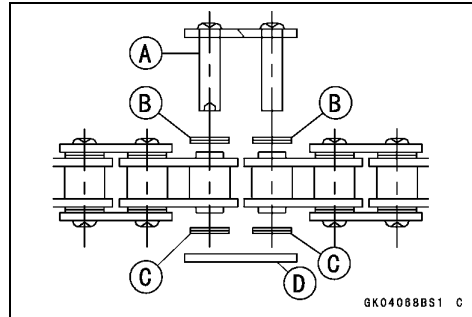

- Using the chain joint “ZJ” tool [A], press in the link plate to the link pins after aligning the adjusting pin with the “A” mark on the U type holder.

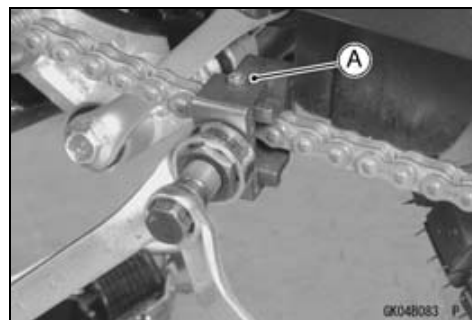

- Using the chain joint “ZJ” tool [A], stake the link pin ends projecting from the plate after aligning the adjusting pin with the “B” mark on the U type holder.



- After staking, measure the outside diameter [A] of the link pin and link plates width [B].


#### Link Pin Outside Diameter

Standard: 5.5 ~ 5.8 mm ( 0.217~ 0.228 in.)

#### Link Plates Outside Width

Standard: 17.9 ~ 18.1 mm ( 0.705 ~ 0.713 in.)


- ★ If the reading exceeds the specified length, cut and rejoin the chain again.
- Check:
  - Movement of the Rollers
- Adjust the chain slack after installing the chain (See Drive Chain Slack Inspection in the Periodic Maintenance chapter).

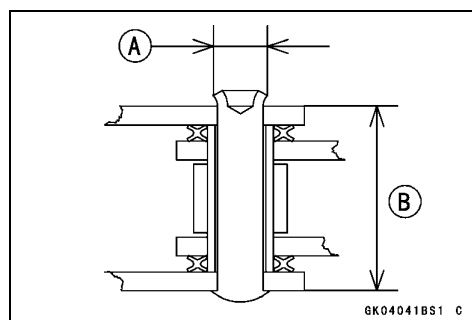

## Sprocket, Coupling

### Engine Sprocket Removal


- Remove the bolts [A].
- Pull the engine sprocket cover [B].

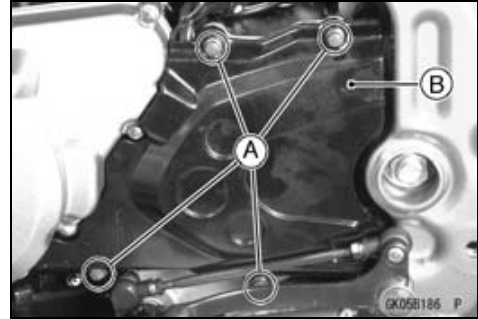


- Flatten out the bended washer [A].
- Remove the engine sprocket nut [B] and washer.

### NOTE

○When loosening the engine sprocket nut, hold the rear brake on.

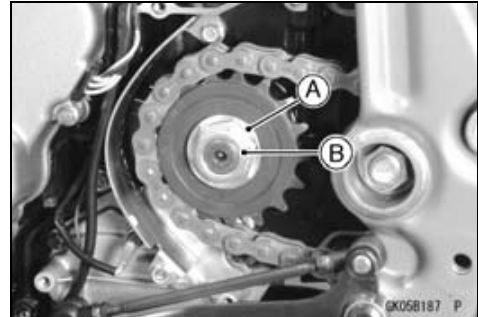


- Loosen the drive chain (see Drive Chain Slack Inspection in the Periodic Maintenance chapter).
- Pull the engine sprocket [A] off the output shaft along with the chain.
- Remove the engine sprocket.

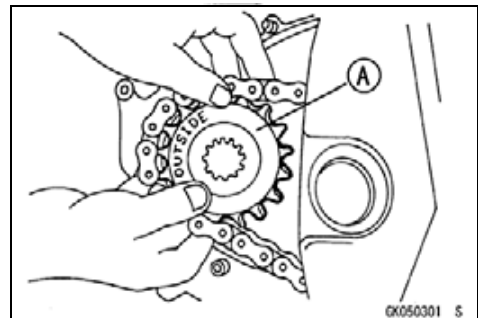

### Engine Sprocket Installation

- Replace the sprocket washer with a new one.
- Install the engine sprocket so that the "OUTSIDE" mark [A] faces out.
- Be sure to fit the sprocket washer onto the output shaft splines.

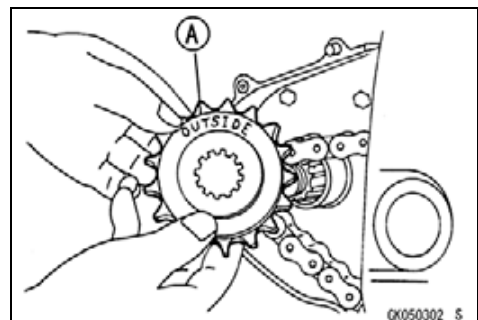


- Apply oil to the threads of the output shaft [C] and the seating surface of the engine sprocket nut.
- After torquing the engine sprocket nut [A], bend the one side [B] of the washer over the nut.

### NOTE

○Tighten the nut while applying the rear brake.

**Torque - Engine Sprocket Nut: 127 N·m (13.0 kgf·m, 94 ft·lb)**

- Install the engine sprocket cover.
- Adjust the drive chain slack after installing the sprocket (see Drive Chain Slack Inspection in the Periodic Maintenance chapter).

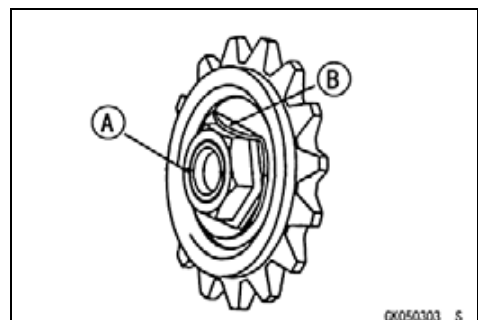


## 11-10 FINAL DRIVE

### Sprocket, Coupling

#### Rear Sprocket Removal

- Remove the rear wheel (see Rear Wheel Removal in the Wheels/Tires chapter).
- Remove the rear sprocket nuts [A].
- Remove the rear sprocket [B].

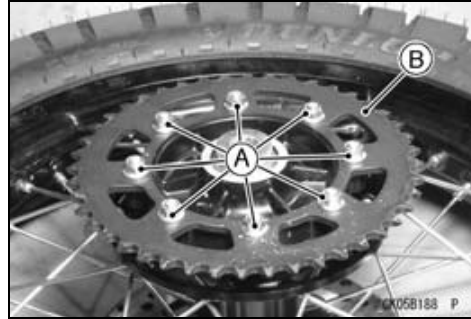


#### Rear Sprocket Installation

- Install the sprocket facing the tooth number marking [A] outward.
- Tighten the rear sprocket nuts.

**Torque - Rear Sprocket Nuts: 33 N·m (3.4 kgf·m, 24 ft·lb)**

- Install the rear wheel (see Rear Wheel Installation in the Wheels/Tires chapter).
- Adjust the drive chain slack after installing the sprocket (see Drive Chain Slack Inspection in the Periodic Maintenance chapter).

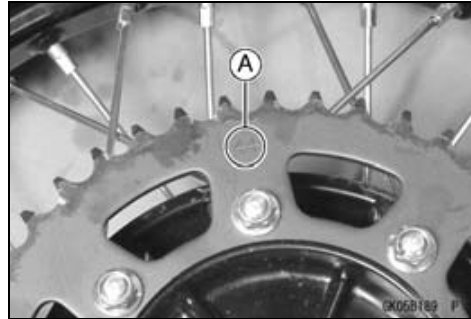


#### Sprocket Wear Inspection

- Visually inspect the engine and rear sprocket teeth for wear and damage.
- ★ If the teeth are worn as illustrated, replace the sprocket with a new one, and inspect the drive chain wear (see Drive Chain Wear Inspection in the Periodic Maintenance chapter).

[A] Worn Tooth (Engine Sprocket)

[B] Worn Tooth (Rear Sprocket)

[C] Direction of Rotation

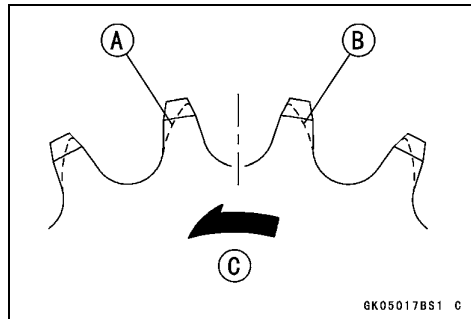


#### NOTE

○ If a sprocket requires replacement, the chain is probably worn also. When replacing a sprocket, inspect the chain.

#### Rear Sprocket Warp Inspection

- Raise the rear wheel off the ground so that it will turn freely.
- Set a dial gauge [A] against the rear sprocket [B] near the teeth as shown, and rotate [C] the rear wheel to measure the sprocket runout (warp). The difference between the highest and lowest dial gauge readings is the amount of runout (warp).
- ★ If the runout exceeds the service limit, replace the rear sprocket.

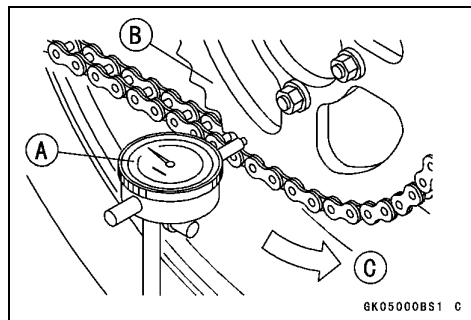

#### Rear Sprocket Warp

**Standard: less than 0.4 mm (0.016 in.)**


**Service Limit: 0.5 mm (0.020 in.)**




## Sprocket, Coupling

### Coupling Bearing Removal

- Remove:
  - Coupling [A]
  - Collar [B]
  - Sleeve [C]
  - Circlip [D]

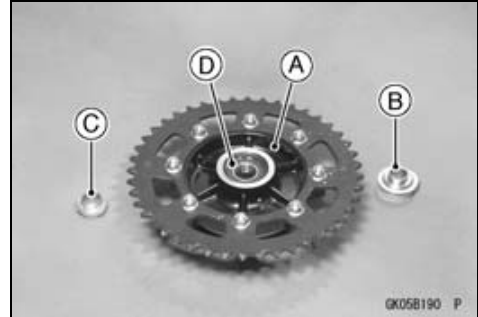

- Remove the bearing by tapping from the hub side.  
**Special Tool - Bearing Driver Set: 57001-1129 [A]**

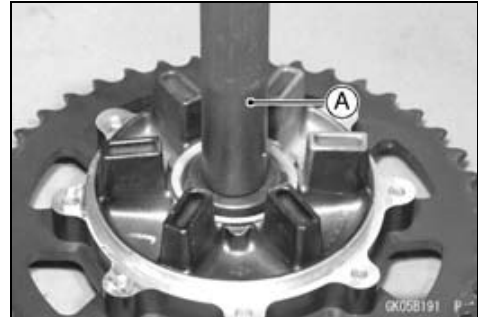


### Coupling Bearing Installation

- Replace the bearing with a new one.
- Press in the bearing until it is bottomed.  
**Special Tool - Bearing Driver Set: 57001-1129 [A]**
- Pack the bearing with high temperature grease.
- Replace the circlip with a new one.  
**Special Tool - Inside Circlip Pliers: 57001-143**



### Coupling Installation

- Grease the following and install the coupling.
  - Coupling Internal Surface [A]
  - Ball Bearing [B]

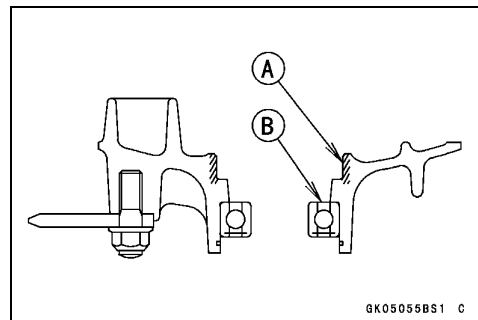

### Coupling Bearing Inspection and Lubrication


#### NOTE

- It is not necessary to remove the coupling bearing for inspection and lubrication. If the bearing is removed, it will need to be replaced with a new one.

## 11-12 FINAL DRIVE

### Sprocket, Coupling

- Spin [A] the bearing by hand to check its condition.
- ★ If it is noisy, does not spin smoothly, or has any rough spots, it must be replaced.
- Examine the bearing seal [B] for tears or leakage.
- ★ If the seal is torn or is leaking, replace the bearing.
- Pack the bearing with good quality bearing grease. Turn the bearing around by hand a few times to make sure the grease is distributed uniformly inside the bearing.

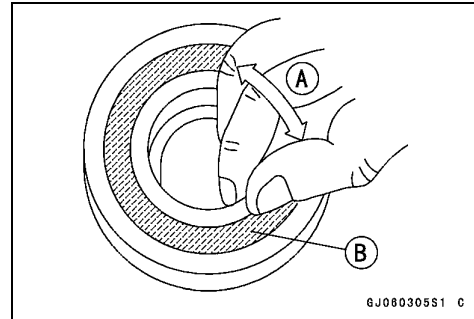


# Brakes

## Table of Contents

Exploded View .....	12-2	Master Cylinder .....	12-17
Specifications .....	12-6	Front Master Cylinder Removal ...	12-17
Special Tool .....	12-7	Front Master Cylinder Installation	12-17
Brake Lever and Brake Pedal.....	12-8	Rear Master Cylinder Removal....	12-17
Brake Lever Position Adjustment.	12-8	Rear Master Cylinder Installation.	12-18
Brake Pedal Position Inspection .	12-8	Front Master Cylinder	
Brake Pedal Position Adjustment	12-8	Disassembly.....	12-18
Brake Pedal and Shaft Removal..	12-8	Rear Master Cylinder	
Brake Pedal and Shaft		Disassembly.....	12-19
Installation .....	12-9	Master Cylinder Assembly .....	12-19
Caliper .....	12-10	Master Cylinder Inspection (Visual	
Front Caliper Removal .....	12-10	Inspection).....	12-20
Front Caliper Installation .....	12-10	Brake Disc .....	12-21
Rear Caliper Removal.....	12-10	Brake Disc Removal .....	12-21
Rear Caliper Installation.....	12-11	Brake Disc Installation .....	12-21
Caliper Disassembly .....	12-11	Brake Disc Wear .....	12-21
Caliper Assembly .....	12-13	Brake Disc Warp .....	12-21
Caliper Fluid Seal and Dust Seal		Brake Fluid .....	12-22
Inspection.....	12-14	Brake Fluid Level Inspection.....	12-22
Caliper Dust Boot and Friction		Brake Fluid Change .....	12-22
Boot Damage .....	12-14	Bleeding the Brake Line.....	12-22
Piston and Cylinder Damage .....	12-14	Brake Hose.....	12-23
Caliper Holder Shaft Wear .....	12-15	Brake Hoses and Connections	
Brake Pads .....	12-16	Inspection.....	12-23
Brake Pad Removal .....	12-16	Brake Hose Replacement.....	12-23
Brake Pad Installation .....	12-16	Front Brake Hose Removal.....	12-23
Brake Pad Wear Inspection .....	12-16	Brake Hose Installation Note .....	12-23

# 12-2 BRAKES

## Exploded View

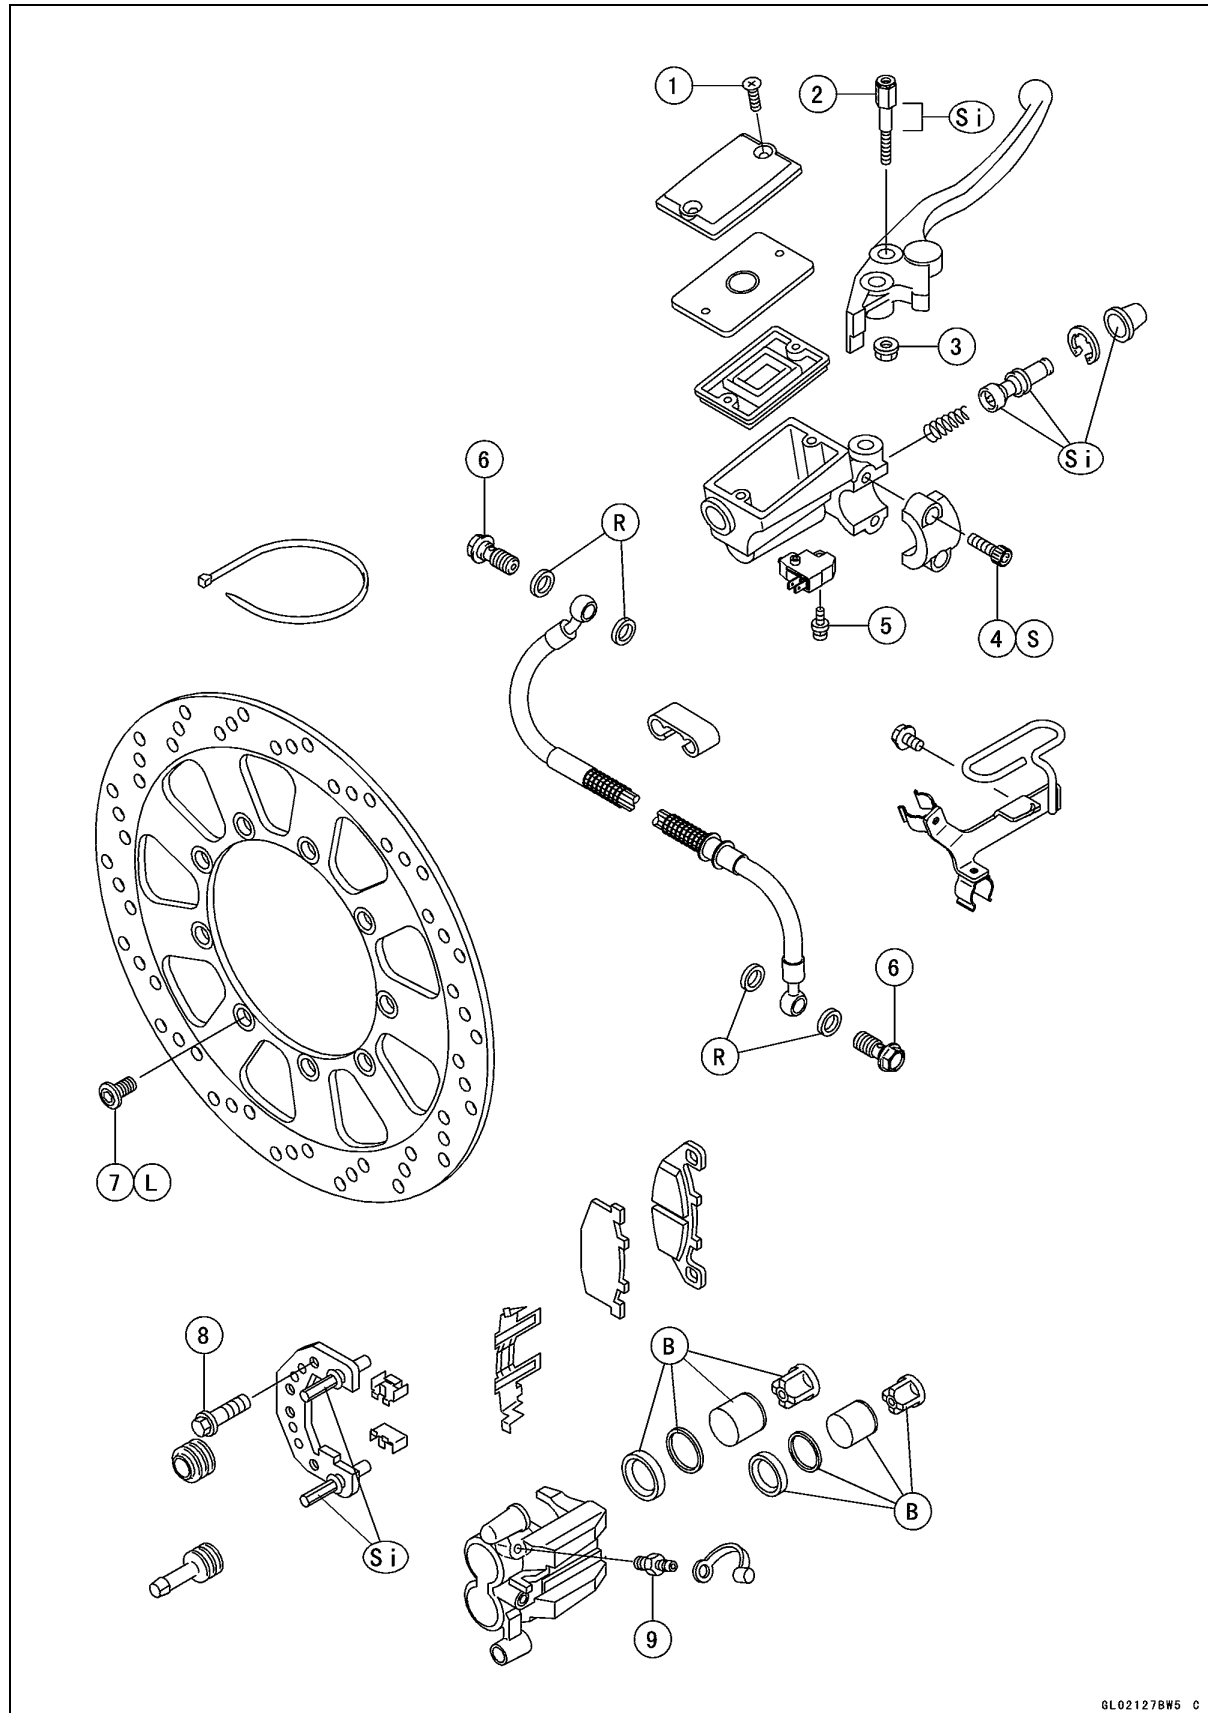

GL02127BW5 C

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Front Reservoir Cap Screws	1.5	0.15	13 in·lb	
2	Brake Lever Pivot Bolt	1.0	0.10	9 in·lb	
3	Brake Lever Pivot Locknut	5.9	0.60	52 in·lb	
4	Front Master Cylinder Clamp Bolts	11	1.1	95 in·lb	S
5	Front Brake Light Switch Mounting Screw	1.2	0.12	10 in·lb	
6	Brake Hose Banjo Bolts	34	3.5	25	
7	Brake Disc Mounting Bolts	23	2.3	16.5	L
8	Front Caliper Mounting Bolts	34	3.5	25	
9	Caliper Bleed Valve	7.8	0.80	69 in·lb	

B: Apply brake fluid.

L: Apply a non-permanent locking agent.


R: Replacement parts

S: Follow the specific tightening sequence.

Si: Apply silicone grease, or PBC grease.

# 12-4 BRAKES

## Exploded View

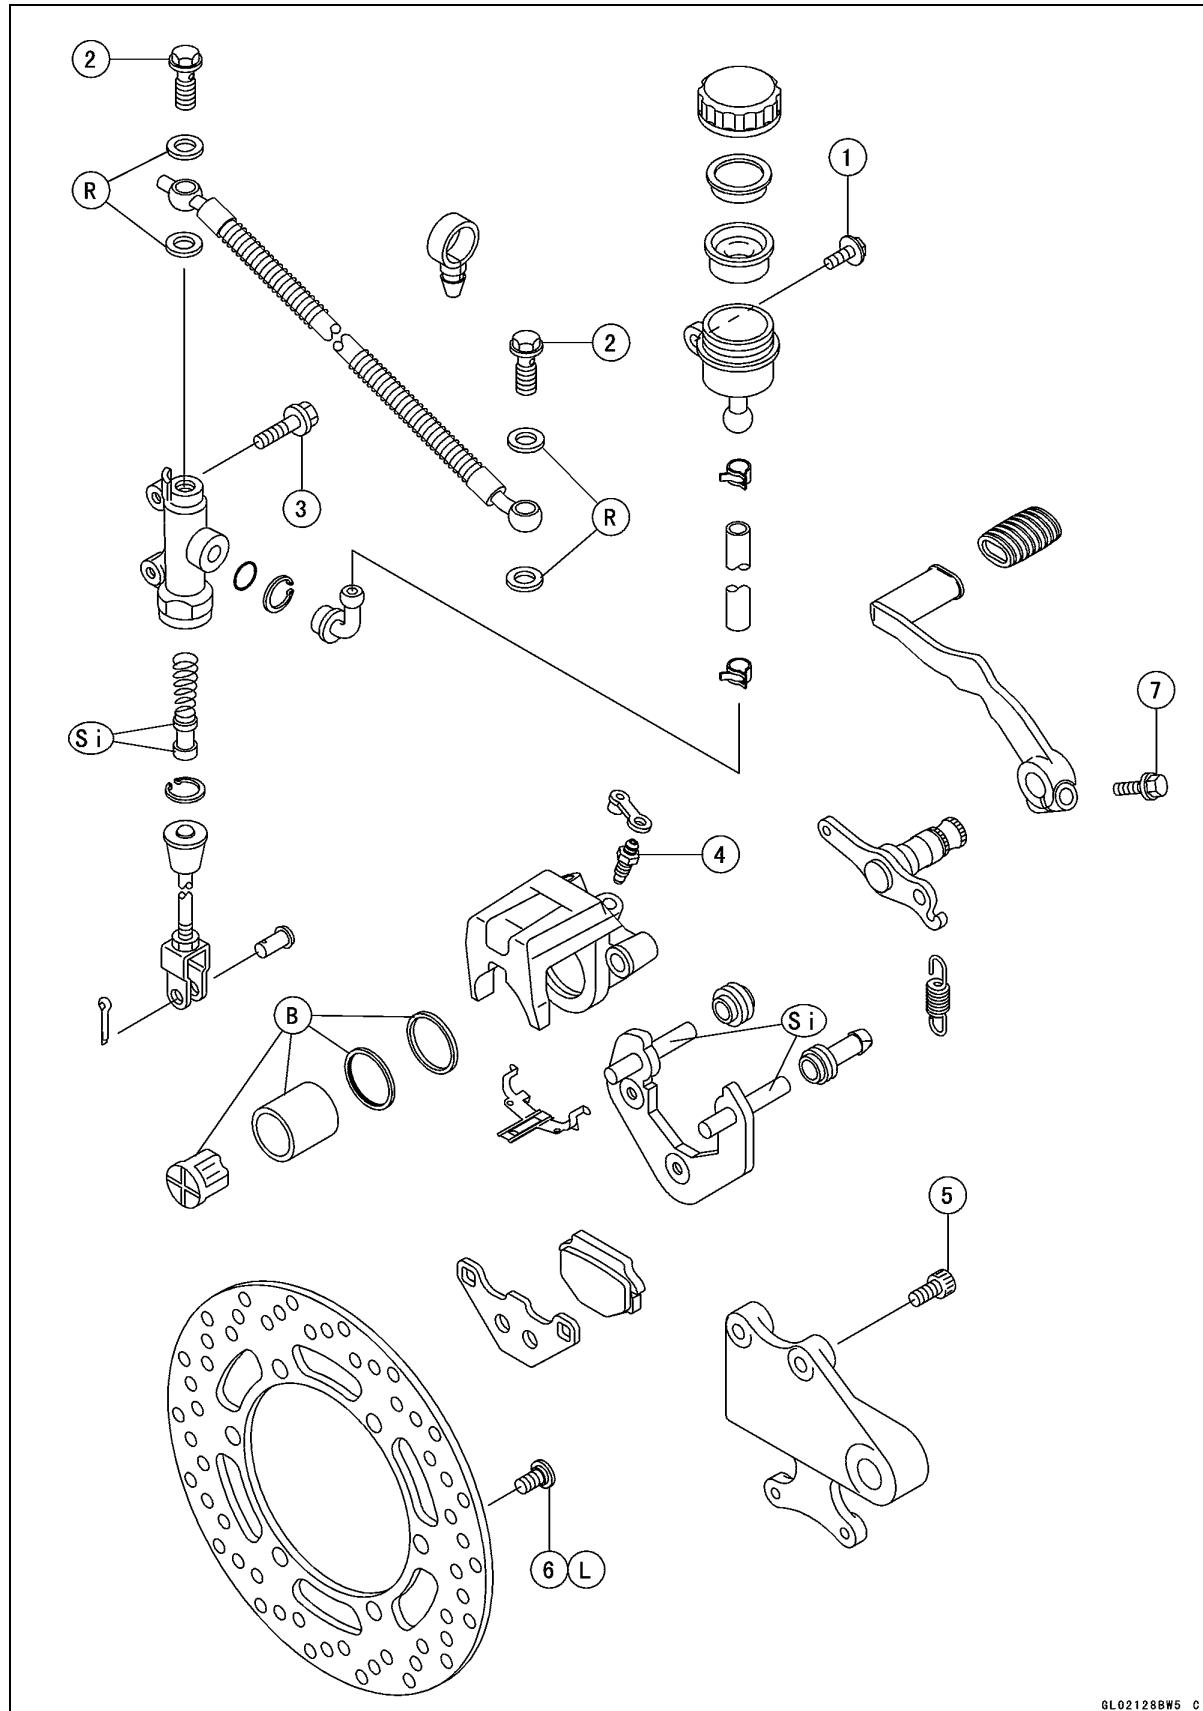

GL021288W5 C

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Rear Reservoir Mounting Bolt	5.9	0.60	52 in·lb	
2	Brake Hose Banjo Bolts	34	3.5	25	
3	Rear Master Cylinder Mounting Bolts	25	2.5	18	
4	Caliper Bleed-Valve	7.8	0.80	69 in·lb	
5	Rear Caliper Mounting Bolts	25	2.5	18	
6	Brake Disc Mounting Bolts	23	2.3	16.5	
7	Brake Pedal Bolt	25	2.5	18	

B: Apply brake fluid.

L: Apply a non-permanent locking agent.

R: Replacement parts

Si: Apply silicone grease, or PBC grease.

## 12-6 BRAKES

### Specifications

Item	Standard	Service Limit
<b>Brake Lever, Brake Pedal</b>		
Brake Lever Position	4-way adjustable (to suit rider)	— — —
Brake Pedal Position	30 ~ 40 mm (1.2 ~ 1.6 in.) below footpeg top	— — —
Free Play	Non-adjustable	— — —
<b>Brake Pad Thickness</b>		
Front	5.5 mm (0.22 in.)	1 mm (0.04 in.)
Rear	4.5 mm (0.18 in.)	1 mm (0.04 in.)
<b>Brake Disc Thickness</b>		
Front	4.8 ~ 5.1 mm (0.19 ~ 0.20 in.)	4.5 mm (0.18 in.)
Rear	4.8 ~ 5.1 mm (0.19 ~ 0.20 in.)	4.5 mm (0.18 in.)
<b>Brake Disc Runout</b>	0.1 mm (0.004 in.)	0.2 mm (0.008 in.)
<b>Brake Fluid</b>		
Grade	DOT4	




---

**Special Tool**

---

**Inside Circlip Pliers:  
57001-143**

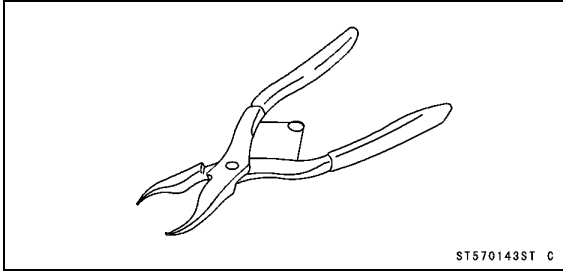


## 12-8 BRAKES

### Brake Lever and Brake Pedal

#### Brake Lever Position Adjustment

The adjuster has 4 positions so that the brake lever position can be adjusted to suit the operator's hand.

- Push the lever forward and turn the adjuster [A] to align the number with the Arrow mark [B] on the lever holder.
- The distance from the grip to the released lever is minimum at Number 4 and maximum at number 1.

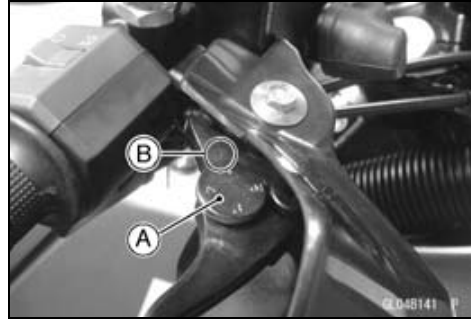

#### Brake Pedal Position Inspection

- With the brake pedal [A] in the correct position, inspect the brake pedal position [B] as shown.

Footpeg [C]

#### Pedal Position

**Standard:** 30 ~ 40 mm (1.2 ~ 1.6 in.) below footpeg (from Top of the footpeg to Top of the brake Pedal)

- ★ If it is incorrect, adjust the brake pedal position.




#### Brake Pedal Position Adjustment

##### NOTE


○ Usually it is not necessary to adjust the pedal position, but always adjust it when push rod locknut has been loosened.

- Loosen the locknut [A], and turn the push rod [B] in or out to adjust the brake pedal position.
- Tighten the locknut.
- After adjusting brake pedal position, check the rear brake light switch timing, and adjust them if necessary (see Brake Light Switch Operation Inspection in the Periodic Maintenance chapter).

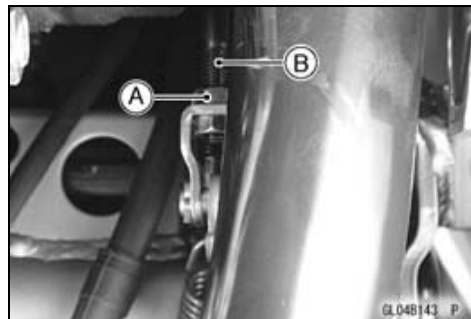

#### Brake Pedal and Shaft Removal

- Remove the front right footpeg bolt [A].
- Remove the brake pedal bolt [B], and remove the brake pedal.
- Remove the cotter pin [C], and pull out the pin [D] to separate the brake pedal shaft and master cylinder brake rod.

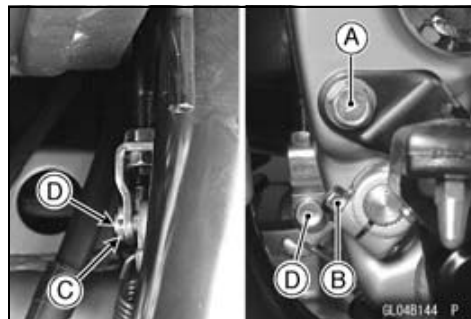


---

**Brake Lever and Brake Pedal**

---

- Remove brake light switch spring [A] and shaft spring [B].

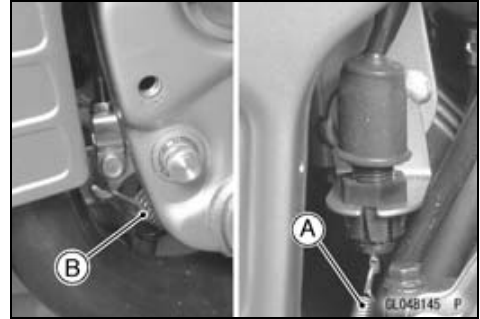***Brake Pedal and Shaft Installation***

- Install the brake shaft and connect the brake rod and brake shaft with pin.
- Install the new cotter pin and bend the end of it surely.
- Connect the rear brake light switch spring.
- Install the brake pedal aligning the punch marks [A] on the brake lever and brake shaft.



## 12-10 BRAKES


### Caliper

#### Front Caliper Removal

- Drain the brake fluid.
- Loosen the banjo bolt [A] at the brake hose lower end, and tighten it loosely.
- Unscrew the caliper mounting bolts [B], and detach the caliper [C] from the disc.
- Unscrew the banjo bolt and remove the brake hose [D] from the caliper.

#### NOTE

- If the caliper is to be disassembled after removal and if compressed air is not available, remove the piston using the following steps before disconnecting the brake hose from the caliper.
- Remove the pads (see Pad Removal).
- Pump the brake lever to remove the caliper piston.

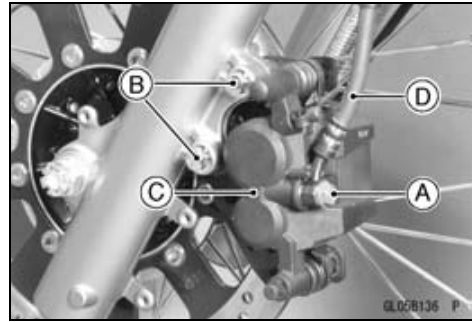

#### CAUTION

**Immediately wash away any brake fluid that spills.**

#### Front Caliper Installation

- Install the caliper and brake hose lower end.
- Replace the washers that are on each side of hose fitting with new ones.
- Tighten the caliper mounting bolts and banjo bolt.

**Torque - Caliper Mounting Bolts: 34 N·m (3.5 kgf·m, 25 ft·lb)**  
**Brake Hose Banjo Bolt: 34 N·m (3.5 kgf·m, 25 ft·lb)**


- Check the fluid level in the brake reservoir, and bleed the brake line (see Bleeding the Brake Line).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

#### Rear Caliper Removal

- Drain the brake fluid.
- Loosen the banjo bolt [A] at the caliper side, and tighten it loosely.
- Unscrew the caliper mounting bolts [B], and detach the caliper [C] from the disc.
- Unscrew the banjo bolt and remove the brake hose [D] from the caliper.

#### NOTE

- If the caliper is to be disassembled after removal and if compressed air is not available, remove the piston using the following steps before disconnecting the brake hose from the caliper.
- Remove the pad (see Pad Removal).
- Pump the brake lever to remove the caliper piston.

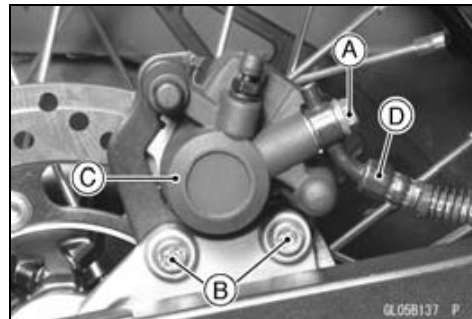

#### CAUTION

**Immediately wash away any brake fluid that spills.**

---

## Caliper

---

### *Rear Caliper Installation*

- Install the caliper and rear side brake hose.
- Replace the washers that are on each side of hose fitting with new ones.
- Tighten the caliper mounting bolts and banjo bolt.
  - Torque - Caliper Mounting Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**
  - Brake Hose Banjo Bolt: 34 N·m (3.5 kgf·m, 25 ft·lb)**
- Check the fluid level in the brake reservoir, and bleed the brake line (see Bleeding the Brake Line).
- Check the brake for good braking power, no brake drag, and no fluid leakage.

### **⚠ WARNING**

**Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brakes will not function on the first application of the lever if this is not done.**

### *Caliper Disassembly*

- Loosen the banjo bolt at the brake hose lower end, and tighten it loosely.
- Remove the caliper by taking off the mounting bolts and banjo bolt.

### **CAUTION**

**Immediately wash away any brake fluid that spills.**




- Remove the pads.

## 12-12 BRAKES


### Caliper

Remove:

- Anti-rattle spring [A]
- Caliper Mounting Bolts [B]
- Piston [C]
- Dust Seal [D]
- Fluid Seal [E]
- Front Caliper [F]
- Rear Caliper [G]

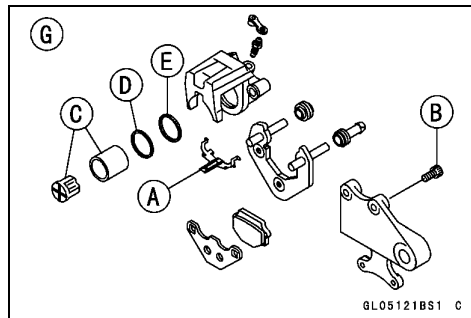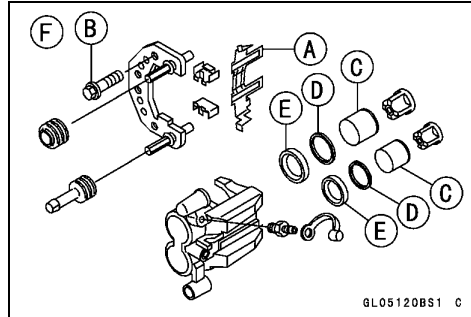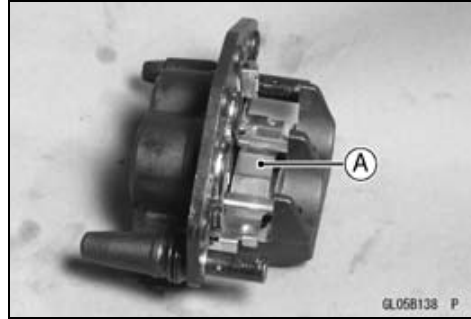

- The pistons can be removed by compressed air as follows.
  - Remove the banjo bolt and take off the caliper.
  - Remove the pads and spring (see Pad Removal).
  - Insert a wooden board [A] 5 mm thick inside the caliper opening.
  - Lightly apply compressed air [B] to the hose joint opening until the pistons hit the wooden board.
  - Remove the board and pull out the pistons by hand.

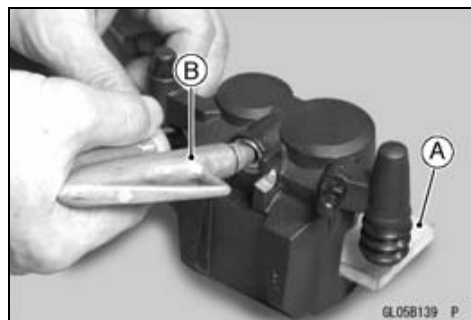

#### **⚠ WARNING**

**To avoid serious injury, never place your fingers or palm inside the caliper opening. If you apply compressed air into the caliper, the piston may crush your hand or fingers.**

#### **CAUTION**

**Immediately wash away any brake fluid that spills.**

## Caliper




### Caliper Assembly

- Clean the caliper parts except for the pads.

#### CAUTION

**For cleaning the parts, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol.**

- Install the bleed valve and rubber cap.
  - Torque - Caliper Bleed Valve: 7.8 N·m (0.8 kgf·m, 69 in·lb)**
- Replace the fluid seal [A] with a new ones.
  - Apply brake fluid to the fluid seal, and install it into the cylinder by hand.
- Replace the dust seal [B] with a new one if it is damaged.
  - Apply brake fluid to the dust seal, and install it into the cylinder by hand.
- Apply brake fluid to the outside of the piston, and push the piston into the cylinder by hand. Take care that neither the cylinder nor the piston skirt get scratched.
- Replace the shaft rubber friction boot [A] and dust cover [B] with new ones if they are damaged.
- Apply a thin coat of PBC (Poly Butyl Cuprysil) grease to the caliper holder shafts [C] and holder holes [D] (PBC is a special high temperature, water-resistant grease).
- Install the anti-rattle spring [A] in the caliper body as shown.
- Install the piston insulator.
- Install the pads.
- Wipe up any spilled brake fluid on the caliper with wet cloth.

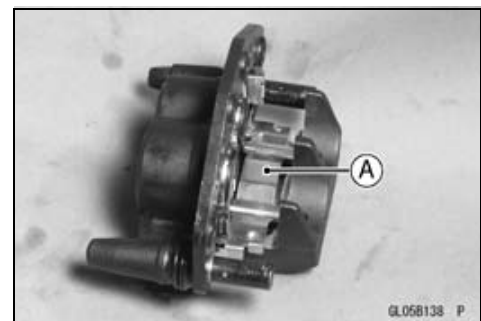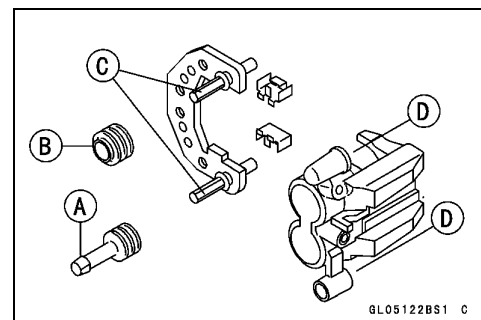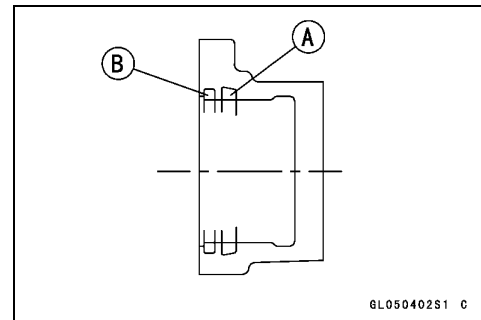

## 12-14 BRAKES

### Caliper

#### Caliper Fluid Seal and Dust Seal Inspection



##### Fluid Seal Damage

The fluid seal [A] around the piston maintains the proper pad/disc clearance. If this seal is not satisfactory, pad wear will increase, and constant pad drag on the disc will raise brake and brake fluid temperature.

- Replace the fluid seal under any of the following conditions:
  - Fluid leakage around the pad.
  - Brakes overheat.
  - There is a large difference in left and right pad wear.
  - The seal is stuck to the piston.
- ★ If the fluid seal is replaced, replace the dust seal as well.



##### Dust Seal Damage

- Check that the dust seal [B] is not cracked, worn, swollen, or otherwise damaged.
- ★ If it shows any damage, replace it.

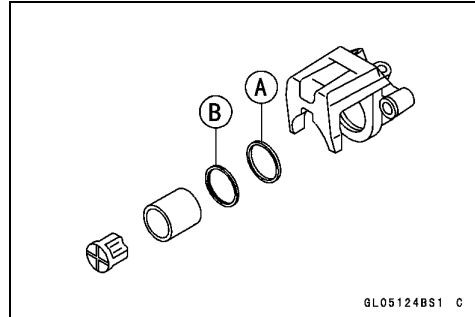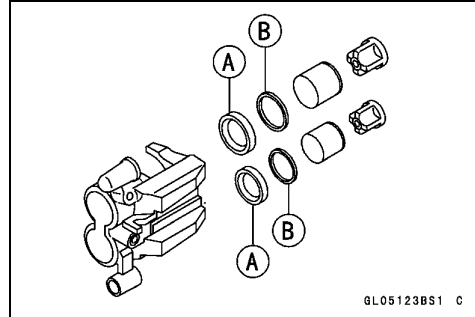

#### Caliper Dust Boot and Friction Boot Damage

- Check that the dust boot [A] and friction boot [B] are not cracked, worn, swollen or otherwise damaged.
- ★ If they show any damage, replace it.

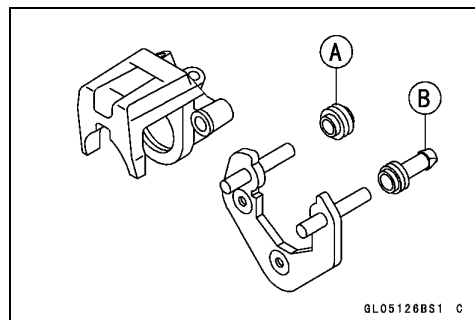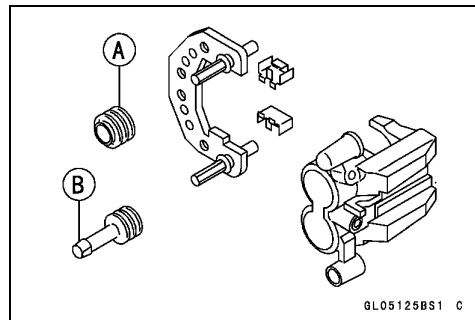

#### Piston and Cylinder Damage

- Visually inspect the piston and cylinder surfaces.
- ★ Replace the cylinder and piston if they are badly scored or rusty.





## Caliper

### *Caliper Holder Shaft Wear*

The caliper body must slide smoothly on the caliper holder shafts [A]. If the body does not slide smoothly, one pad will wear more than the other, pad wear will increase, and constant drag on the disc will raise brake and brake fluid temperature.

- Check to see if the caliper holder shafts are not badly worn or stepped, or rubber friction boot are not damaged.
- ★ If the shafts and rubber friction boot are damaged, replace the rubber friction boot and the caliper holder.

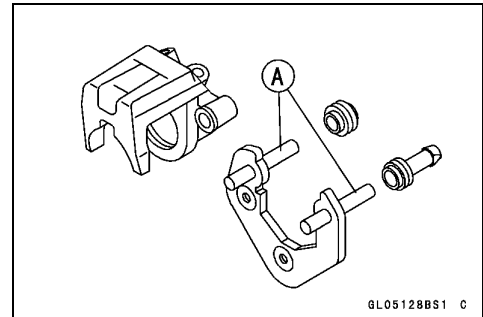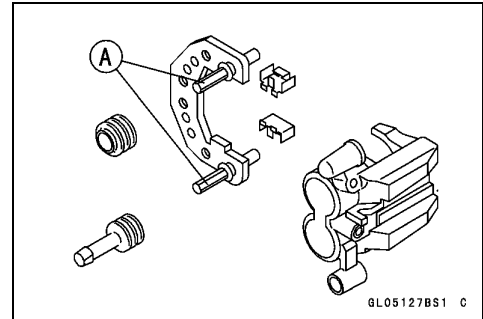

## 12-16 BRAKES


### Brake Pads

#### *Brake Pad Removal*

- Remove the caliper [A] with the hose installed.
- Remove the pads pushing the caliper holder at both side holding the caliper body, so, the inner pad can be removed first and then outer pad.



- Remove the caliper [B] (see caliper Removal).
  - Remove the pads [A] pushing the caliper at both side holding the caliper body, so, the inner pad can be removed first and then outer pad.
- In case of removing the caliper, the bleeding of the brake line is required, and do not attempt to drive the motorcycle until a full brake lever (pedal) is obtained by pumping the brake lever (pedal) .

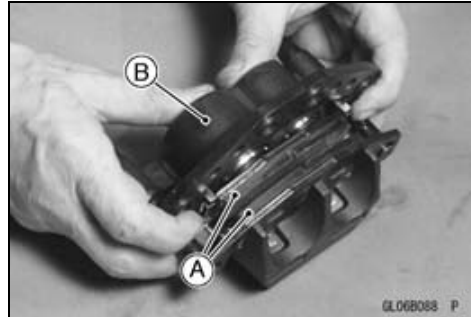

#### *Brake Pad Installation*

- Push the caliper piston in by hand as far as it will go.
- Install the anti-rattle spring in place.
- Install the brake pads.
- Be sure to install the pad pin clip.
- Install the caliper (see Caliper Installation).

#### **⚠ WARNING**

**Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.**

#### *Brake Pad Wear Inspection*

- Refer to the Brakes Pad Wear Inspection in the Periodic Maintenance chapter.

## Master Cylinder

### Front Master Cylinder Removal

- Disconnect the front brake switch connectors [A].
- Remove the banjo bolt [B] to disconnect the upper brake hose end from the master cylinder [C]. There is a flat washer on each side of the hose fitting.
- Remove the clamp bolts [D] and take off the master cylinder as an assembly with the reservoir, brake lever, and brake switch installed.

### CAUTION

Immediately wipe up any brake fluid that spills.

### Front Master Cylinder Installation

- Apply grease to the extreme end of the clamp bolts.
- Install the master cylinder clamp so that the upper mating surface [A] of the clamp is aligned with the punch mark [B] on the handlebar.
- Tighten the upper clamp bolt first, and then the lower clamp bolt. There will be a gap at the lower part of the clamp after tightening.

**Torque - Master Cylinder Clamp Bolts: 8.8 N·m (0.9 kgf·m, 78 in·lb)**

- Use a new flat washer on each side of the brake hose fitting.
- Tighten the banjo bolt.

**Torque - Brake Hose Banjo Bolt: 34 N·m (3.5 kgf·m, 25 ft·lb)**




- Bleed the brake line after master cylinder installation (see Bleeding the Brake Line).
- Check the brake for weak braking power, brake drag, and fluid leakage.

### ⚠ WARNING

Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.

### Rear Master Cylinder Removal


- Remove the right side cover.
- Remove the muffler cover bolts [A] and muffler cover [B].

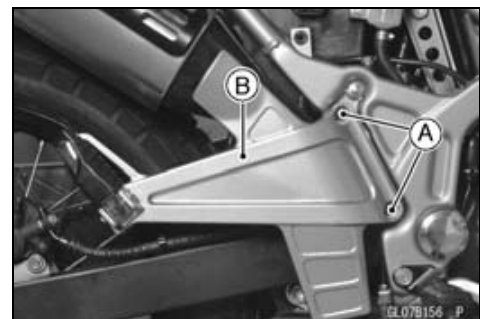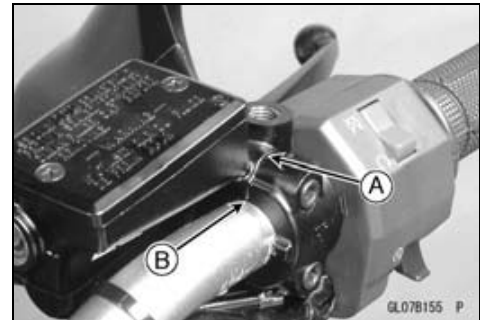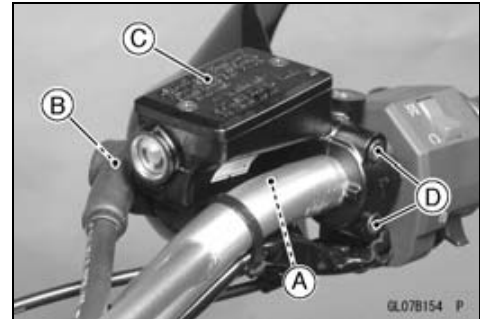


## 12-18 BRAKES

### Master Cylinder

- Pull out the cotter pin [A] from the pin [B] fixing the pin so that it does not turn, and remove the pin.

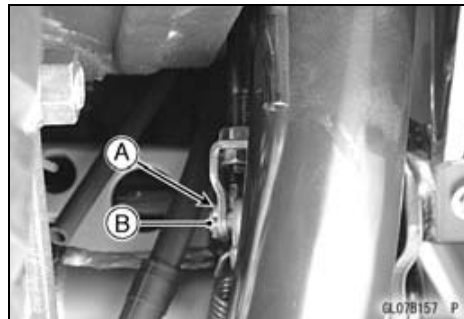

- Remove the reservoir mounting bolt [A].
- Remove the brake hose banjo bolt [B].
- Remove the rear master cylinder mounting bolts [C] and pull up the master cylinder with the reservoir tank.

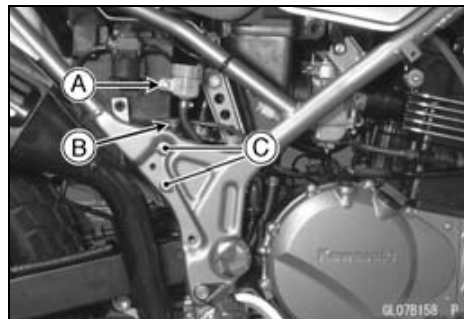

#### CAUTION

Immediately wipe up any brake fluid that spills.

#### Rear Master Cylinder Installation

- Install the removed parts in order to the reverse of removal.
- Install the new cotter pin and bend it the end of it enough after connecting the connecting rod and pin.

**Torque - Brake Hose Banjo Bolt: 34 N·m (3.5 kgf·m, 25 ft·lb)**

**Rear Master Cylinder Mounting Bolts: 25 N·m (2.5 kgf·m, 188 in·lb)**

- Bleed the brake line after master cylinder installation (see Bleeding the Brake Line).

#### ⚠ WARNING


Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.

#### Front Master Cylinder Disassembly

- Remove the master cylinder from the handlebar.
- Remove the reservoir cap and diaphragm, and pour the brake fluid into a container.
- Remove the locknut and pivot bolt, and remove the brake lever.
- Push the dust cover [A] out of place, and remove the circlip [B].

**Special Tool - Inside Circlip Pliers: 57001-143**

- Pull out the piston assembly [C] and return spring [G].  
Piston [D]  
Secondary Cup [E]  
Primary Cup [F]

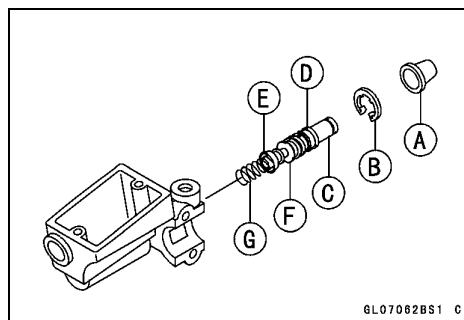

#### CAUTION

Do not remove the secondary cup from the piston since removal will damage it.

## Master Cylinder

### Rear Master Cylinder Disassembly

#### NOTE

○ Do not remove the push rod clevis for master cylinder disassembly since removal requires brake pedal position adjustment.


- Remove the rear master cylinder (see Rear Master Cylinder Removal).
- Slide the dust cover on the push rod out of place, and remove the circlip.

**Special Tool - Inside Circlip Pliers: 57001-143**

- Pull out the push rod with the piston stop.
- Take off the piston [A], secondary cup [B], primary cup [C], and return spring [D].

#### CAUTION

**Do not remove the secondary cup from the piston since removal will damage it.**

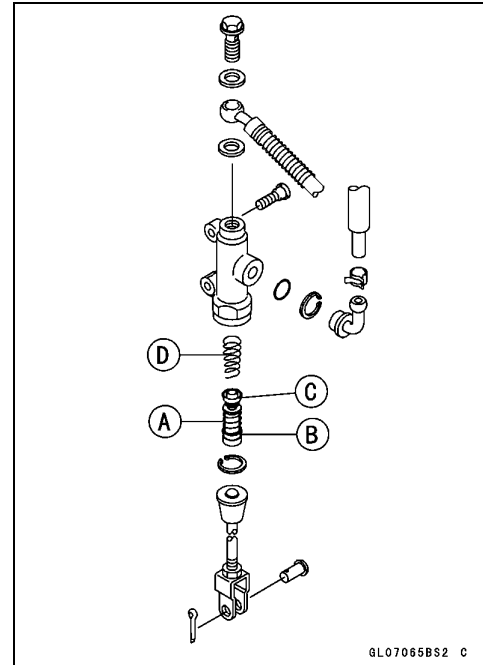

GL07065BS2 C

### Master Cylinder Assembly

- Before assembly, clean all parts including the master cylinder with brake fluid or alcohol.

#### CAUTION

**Except for the disc pads and disc, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol, for cleaning brake parts. Do not use any other fluid for cleaning these parts. Gasoline, engine oil, or any other petroleum distillate will cause deterioration of the rubber parts. Oil spilled on any part will be difficult to wash off completely, and will eventually deteriorate the rubber used in the disc brake.**

- Apply brake fluid to the removed parts and to the inner wall of the cylinder.
- Take care not to scratch the piston or the inner wall of the cylinder.
- Tighten the brake lever pivot bolt and locknut.

**Torque - Brake Lever Pivot Bolt: 1.0 N·m (0.1 kgf·m, 9 in·lb)**



**Brake Lever Pivot Nut: 5.9 N·m (0.60 kgf·m, 52 in·lb)**

## 12-20 BRAKES

### Master Cylinder

#### Master Cylinder Inspection (Visual Inspection)

- Disassemble the master cylinder (see Front/Rear Master Cylinder Disassembly).
- Check that there are no scratches, rust or pitting on the inner wall of the master cylinder [A] and on the outside of the piston [B].
- ★ If the master cylinder or piston shows any damage, replace them.
- Inspect the primary [C] and secondary [D] cups.
- ★ If a cup is worn, damaged, softened (rotted), or swollen, the piston assembly should be replaced to renew the cups.
- ★ If fluid leakage is noted at the brake lever, the piston assembly should be replaced to renew the cups.
- Check the dust cover [E] for damage.
- ★ If it is damaged, replace it.
- Check that the relief [F] and supply [G] ports are not plugged.
- ★ If the relief port becomes plugged, the brake pads will drag on the disc. Blow the ports clean with compressed air.
- Check the piston return spring [H] for any damage.
- ★ If the spring is damaged, replace it.

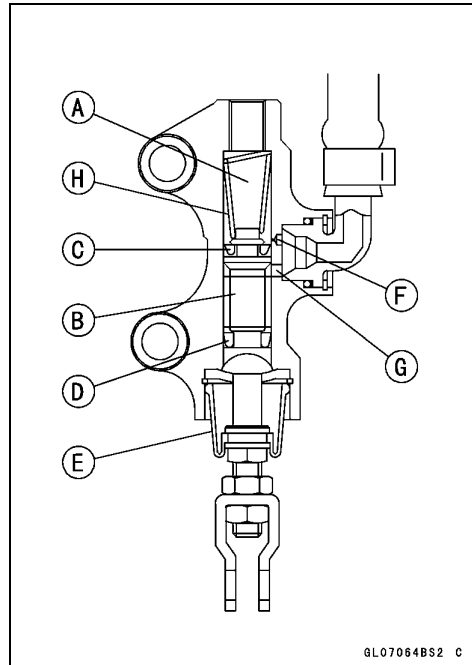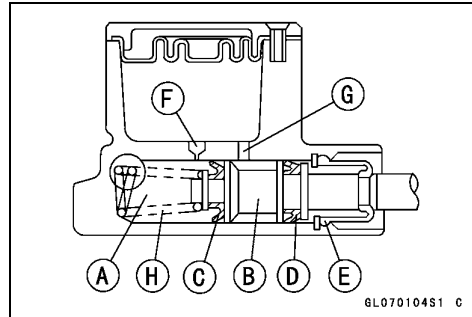

## Brake Disc

### Brake Disc Removal

- Remove the wheel (see Front Wheel Rear Wheel Removal in the Wheels/Tires chapter).
- Unscrew the mounting Allen bolts [A], and take off the disc [B].



### Brake Disc Installation

- Install the brake disc on the wheel so that the marked side [A] faces out.
- Tighten the mounting Allen bolts.

**Torque - Brake Disc Mounting Bolts: 23 N·m (2.3 kgf·m, 16.5 ft·lb)**




### Brake Disc Wear

- Measure the thickness of the disc at the point where it has worn the most.
- ★ Replace the disc [A] if it has worn past the service limit. Measuring Area [B]

#### Disc Thickness

**Standard: 4.8 ~ 5.1 mm (0.19 ~ 0.20 in.)**

**Service Limit: 4.5 mm (0.18 in.)**

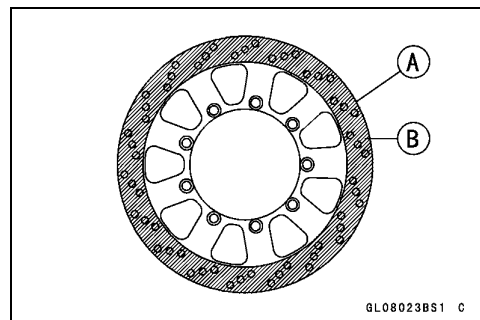

### Brake Disc Warp

- Jack up the motorcycle so that the front wheel is off the ground.


**Special Tool - Jack: 57001-1238**

- Turn the handlebar fully to one side.
- Set up a dial gauge against the disc [A] as shown and measure disc runout.
- Turn [B] the wheel by hand.
- ★ If runout exceeds the service limit, replace the disc.

#### Disc Runout

**Standard: Less than 0.1 mm (0.004 in.)**

**Service Limit: 0.2 mm (0.008 in.)**

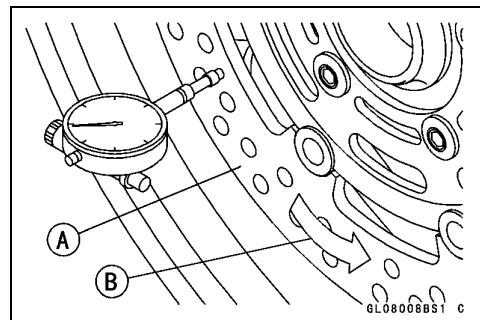



## 12-22 BRAKES

### Brake Fluid

#### *Brake Fluid Level Inspection*

- Refer to the Brake Fluid Level Inspection in the Periodic Maintenance chapter.

#### *Brake Fluid Change*

- Refer to the Brake Fluid Change in the Periodic Maintenance chapter.

#### *Bleeding the Brake Line*

- Refer to the Bleeding the Brake Line in the Periodic Maintenance chapter.

### **WARNING**

**When working with the disc brake, observe the precautions listed below.**

1. Never reuse old brake fluid.
2. Do not use fluid from a container that has been left unsealed or that has been open for a long time.
3. Do not mix two types and brands of fluid for use in the brake. This lowers the brake fluid boiling point and could cause the brake to be ineffective. It may also cause the rubber brake parts to deteriorate.
4. Don't leave the reservoir cap off for any length of time to avoid moisture contamination of the fluid.
5. Don't change the fluid in the rain or when a strong wind is blowing.
6. Except for the disc pads and disc, use only disc brake fluid, isopropyl alcohol, or ethyl alcohol for cleaning of brake parts. Do not use any other fluid for cleaning of these parts. Gasoline, engine oil, or any other petroleum distillate will cause deterioration of the rubber parts. Oil spilled on any part will be difficult to wash off completely and will eventually deteriorate the rubber used in the disc brake.
7. When handling the disc pads or disc, be careful that no disc brake fluid or any oil gets on them. Clean off any fluid or oil that inadvertently gets on the pads or disc with a high flash-point solvent. Do not use one which will leave an oily residue. Replace the pads with new ones if they cannot be cleaned satisfactorily.
8. Brake fluid quickly ruins painted surfaces; any spilled fluid should be completely wiped up immediately.
9. If any of the brake line fittings or the bleed valve is opened at any time, the **AIR MUST BE BLED FROM THE BRAKE.**



## Brake Hose

### *Brake Hoses and Connections Inspection*

- Refer to the Brakes Hoses and Connections in the Periodic Maintenance chapter.

### *Brake Hose Replacement*


- Refer to the Brakes Hoses Replacement in the Periodic Maintenance chapter.

### *Front Brake Hose Removal*


- Cut the brake hose bands binded to the left front fork.
- Remove brake hose clamp bolts [A].



- Remove the brake hose clamp bolts [A] at steering stem.

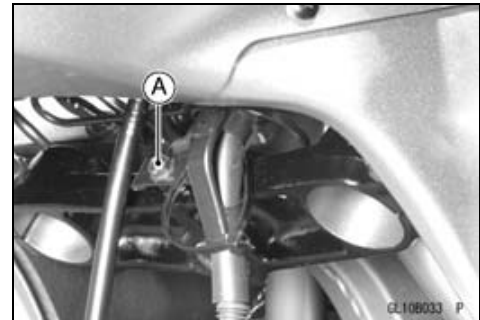

- Remove the waster cylinder banjo bolt [A] .
- Remove the caliper banjo bolt [B] .

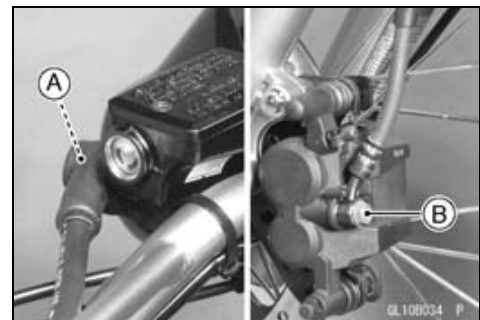

### CAUTION

Immediately wipe up any brake fluid that spills.

### ⚠ WARNING

Do not attempt to drive the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.

### *Brake Hose Installation Note*

- Replace the both washers with new one.
- Install the brake hose with a specified torque.

**Torque - Brake Hose Banjo Bolts: 34 N·m (3.5 kgf·m, 25 ft·lb)**




# Suspension

## Table of Contents

Exploded View .....	13-2
Specifications .....	13-6
Special Tools and Sealant .....	13-7
Front Fork .....	13-8
Front Fork Oil Change .....	13-8
Front Fork Removal .....	13-9
Front Fork Installation .....	13-9
Front Fork Disassembly .....	13-10
Front Fork Assembly .....	13-11
Inner Tube, Outer Tube Inspection .....	13-12
Dust Seal Inspection .....	13-12
Spring Tension .....	13-12
Rear Shock Absorber .....	13-13
Spring Preload Adjustment .....	13-13
Rear Shock Absorber Removal .....	13-13
Rear Shock Absorber Installation .....	13-14
Rear Shock Absorber Wear .....	13-14
Bushing Wear .....	13-14
Rear Shock Absorber Oil Leak Inspection .....	13-14
Swingarm .....	13-15
Swingarm Removal .....	13-15
Swingarm Sleeve and Needle Bearing Wear .....	13-15
Swingarm Installation .....	13-16
Swingarm Disassembly/Assembly .....	13-16
Swingarm Bearing Installation .....	13-16
Swingarm Needle Bearing Lubrication .....	13-16
Tie-Rod, Rocker Arm .....	13-17
Tie-Rod Removal .....	13-17
Tie-Rod Installation .....	13-17
Rocker Arm Removal .....	13-17
Rocker Arm Installation .....	13-18
Rocker Arm Bearing, Sleeve Inspection .....	13-18
Rocker Arm Lubrication .....	13-18

# 13-2 SUSPENSION

## Exploded View

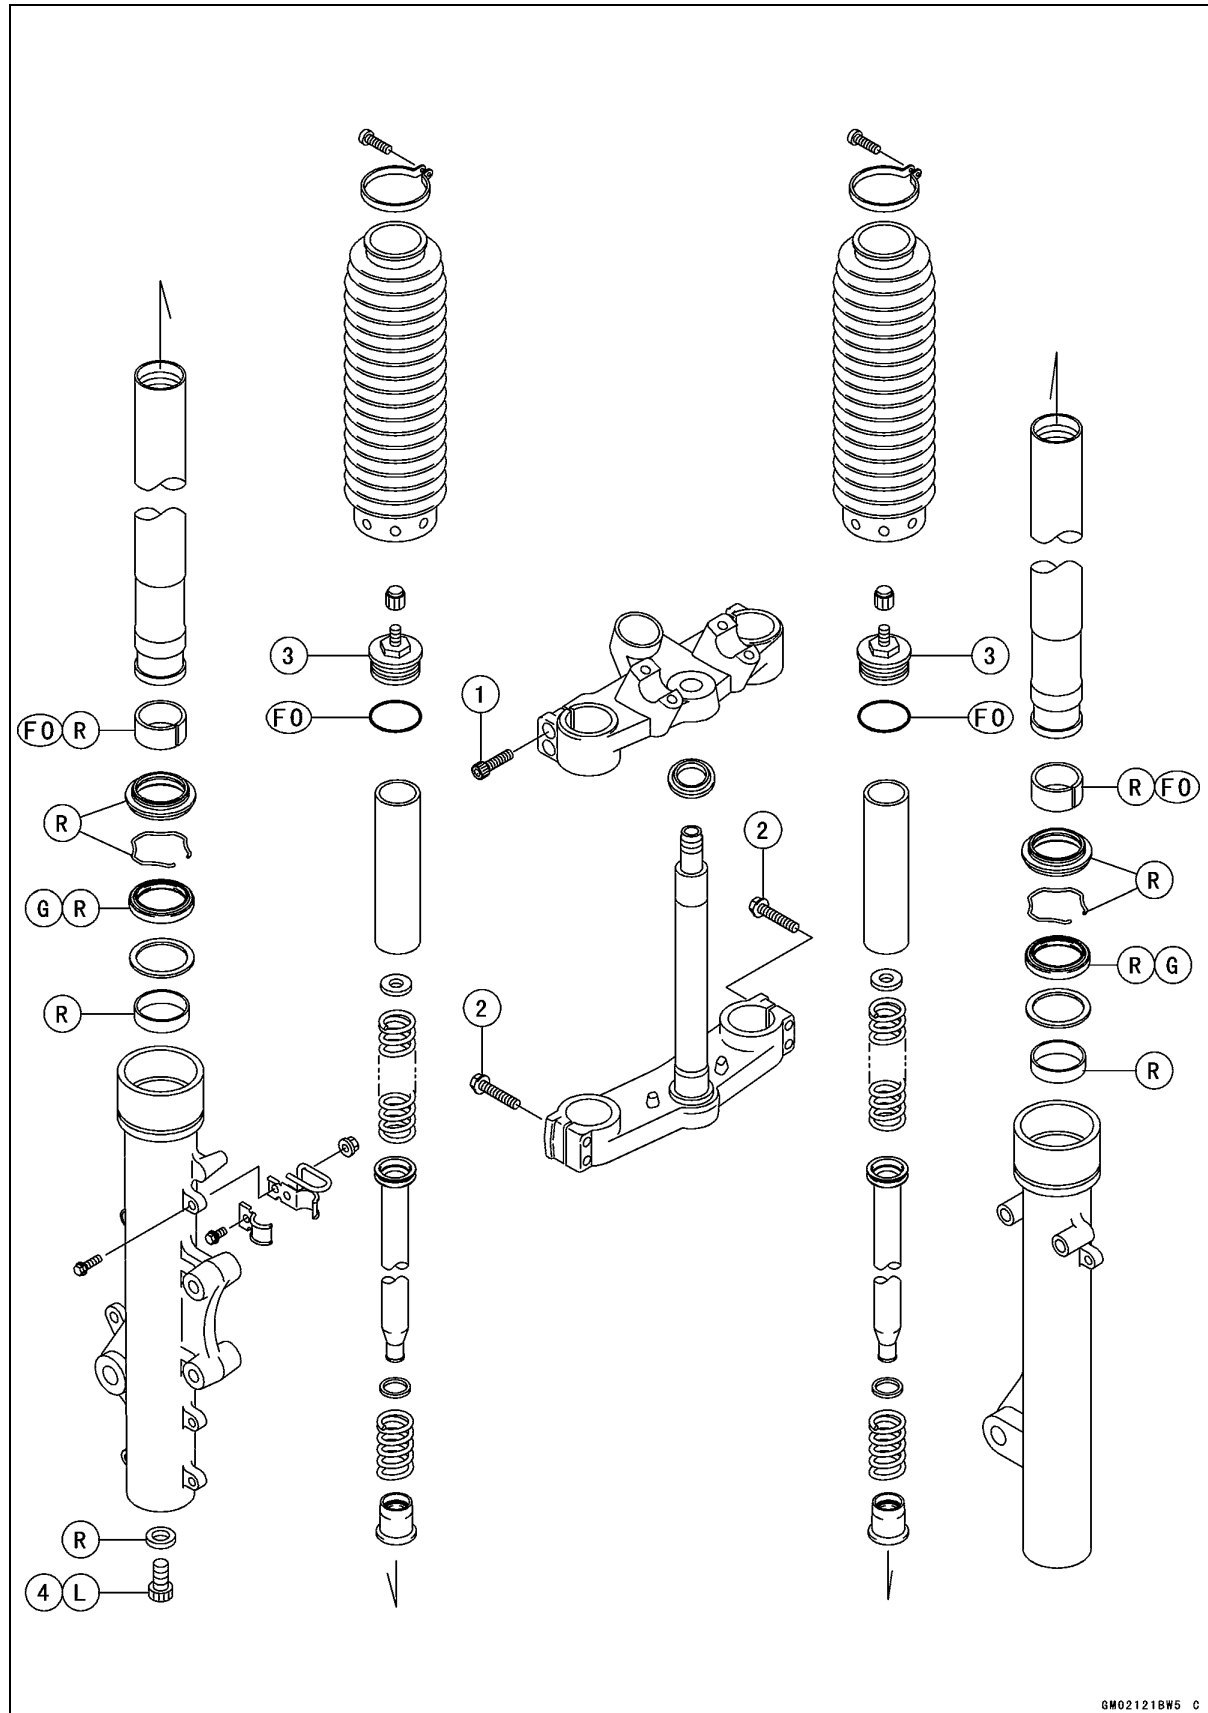

GM02121BW5 C

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Front Fork Upper Clamp Bolts	25	2.5	18	S
2	Front Fork Lower Clamp Bolts	23	2.3	16.5	
3	Front Fork Top Bolts	30	3.1	22	
4	Front Fork Bottom Allen Bolts	30	3.1	22	L

FO: Apply front oil.

G: Apply grease.

L: Apply a non-permanent locking agent.


R: Replacement Parts

S: Follow the specific tightening sequence.

SS: Apply Silicone Sealant.

# 13-4 SUSPENSION

## Exploded View

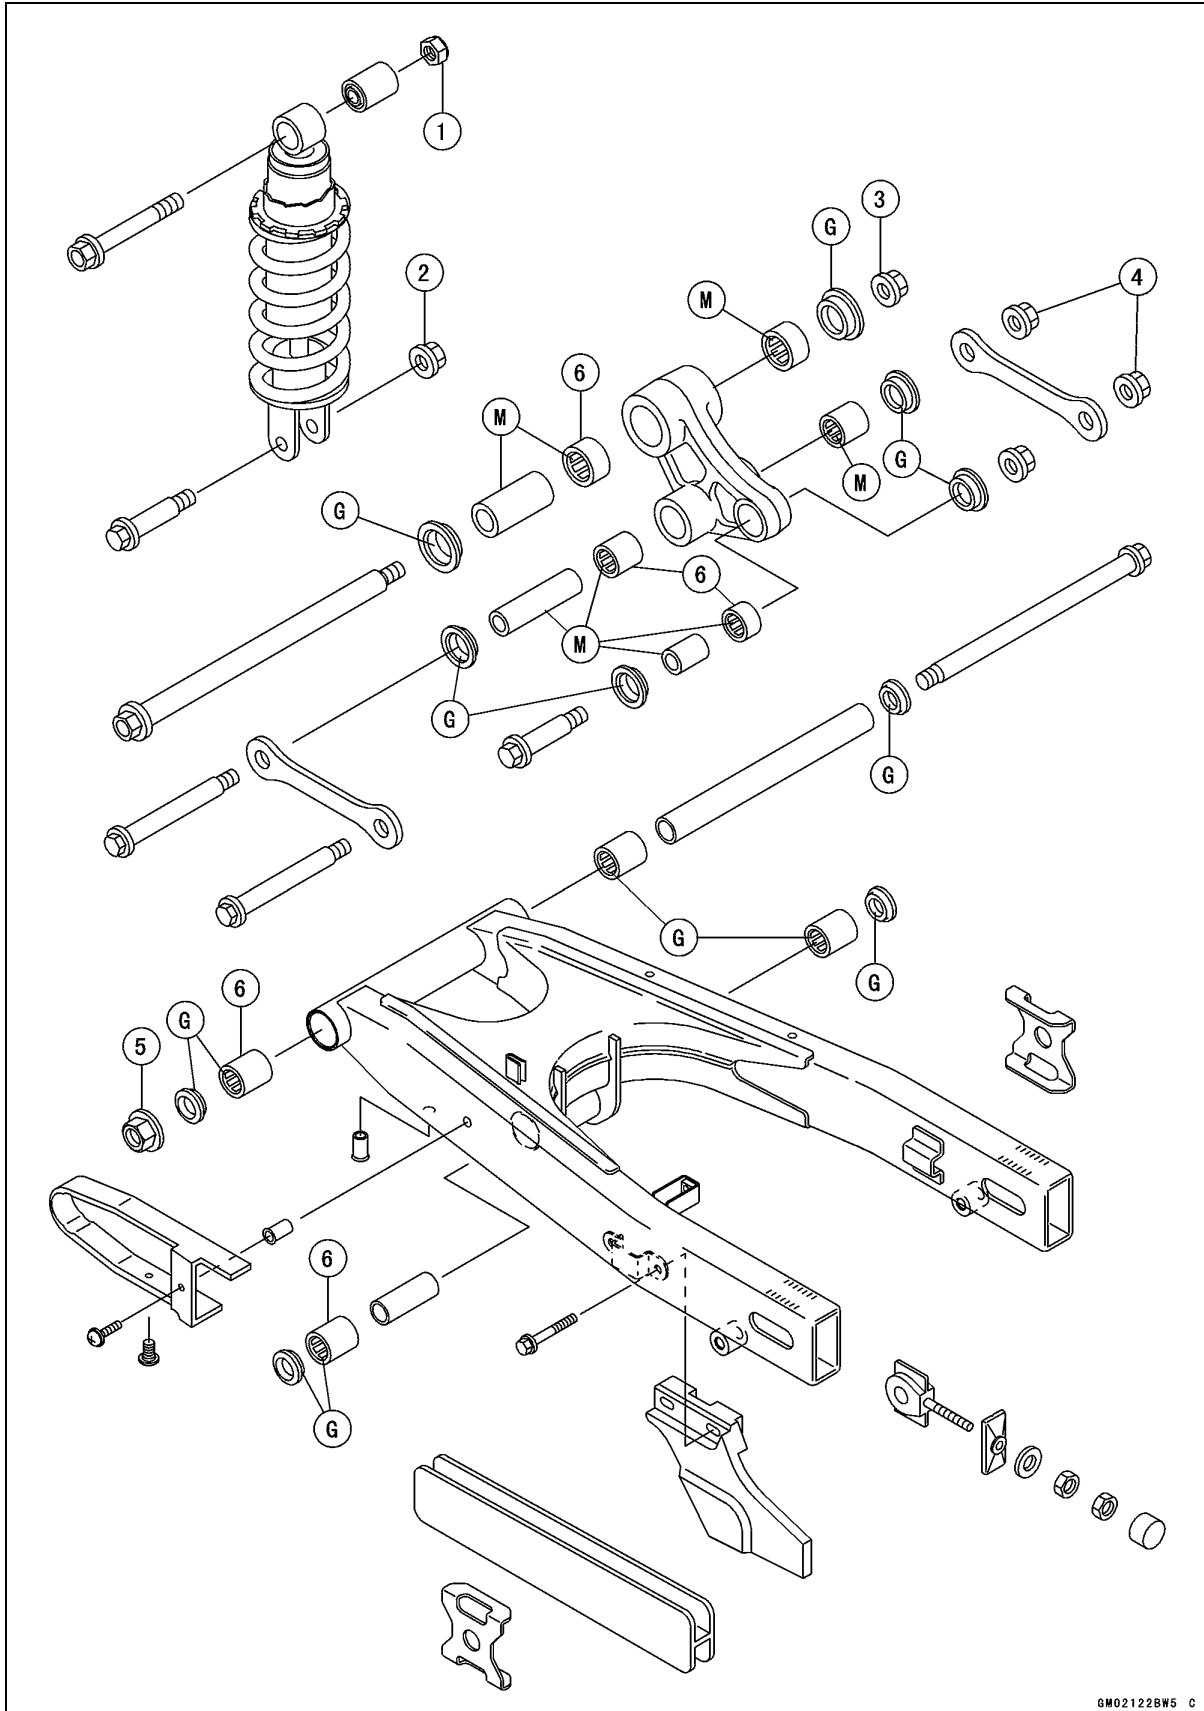

GM02122BW5 C

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Rear Shock Absorber Upper Mounting Nut	59	6.0	43	
2	Rear Shock Absorber Lower Mounting Nut	98	10	72	
3	Rocker Arm Pivot Nut	98	10	72	
4	Tie-rod Mounting Nuts	98	10	72	
5	Swingarm Pivot Nut	118	12	87	

6. Needle Bearings: Face the mark side of it to outside.

G: Apply grease.

M: Apply molybdenum disulfide grease.

## 13-6 SUSPENSION


### Specifications

Item	Standard	Service Limit
<b>Front Fork (per one unit)</b>		
Fork Inner Tube Diameter	φ41 mm (1.61 in.)	---
Fork Spring Setting	Non-adjustable	---
Air Pressure	0 kPa (Adjustable)	---
Rebound Damper Setting	Non-adjustable	---
Compression Damper Setting	Non-adjustable	---
Fork Oil Viscosity	KAYABA KHL34-G10 or equivalent	---
Fork Oil Capacity:		
Completely Dry	530 ±4 mL (17.91 ±0.14 US oz.)	---
When Changing Oil	approx. 453 mL (5.31 US oz.)	---
Fork Oil Level	Fully compressed, without fork spring, below from inner tube top 194 ±2 mm (7.64 ±0.08 in.)	---
Fork Spring Free Length	522.5 mm (20.57 in.)	512 mm (20.16 in.)
<b>Rear Shock Absorber</b>		
Rebound Damper Set	Non-adjustable	---
Compression Damper Set	Non-adjustable	---
Spring Setting Position	No. 2 of 5 positions	---
Gas Pressure	980 kPa (10 kgf/cm <sup>2</sup> )	---




**Special Tools and Sealant**


**Fork Cylinder Holder Handle:**  
57001-183

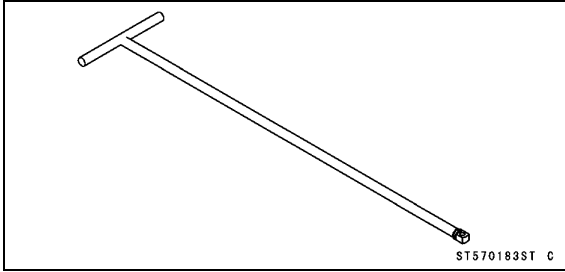


**Fork Outer Tube Weight:**  
57001-1218

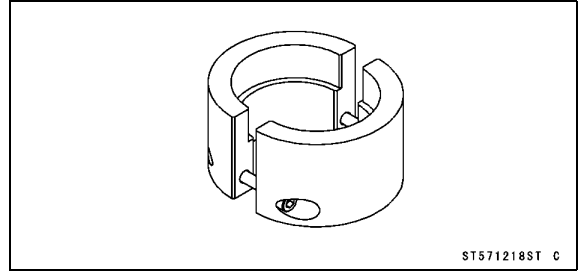


**Fork Cylinder Holder Adapter:**  
57001-1057

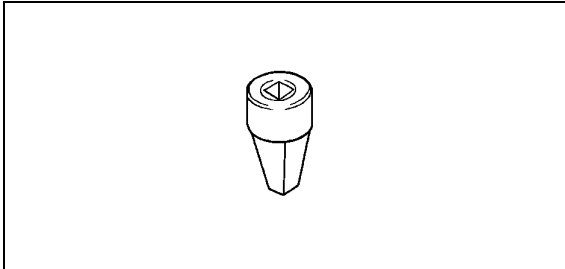


**Front Fork Oil Seal Driver:**  
57001-1219

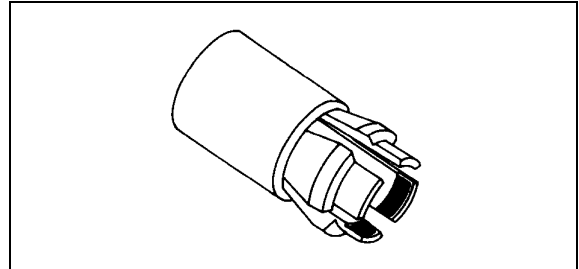


**Oil Seal & Bearing Remover:**  
57001-1058

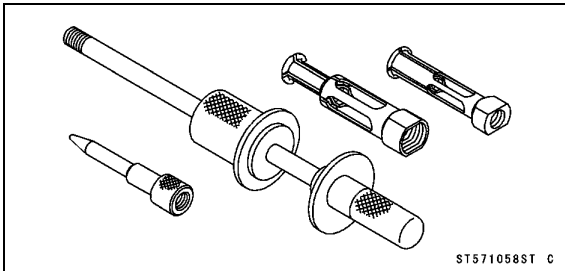


**Jack:**  
57001-1238

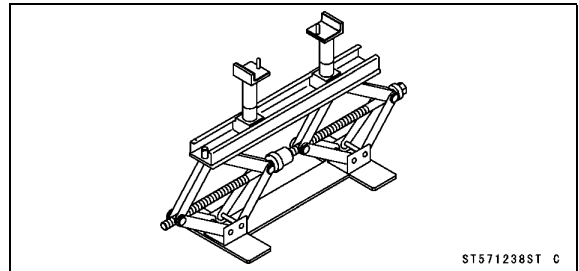


**Hook Wrench R37.5, R42:**  
57001-1101

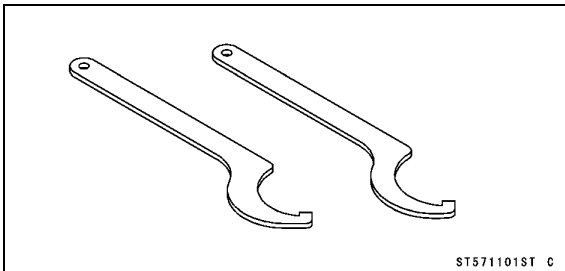

**Fork Oil Level Gauge:**  
57001-1290

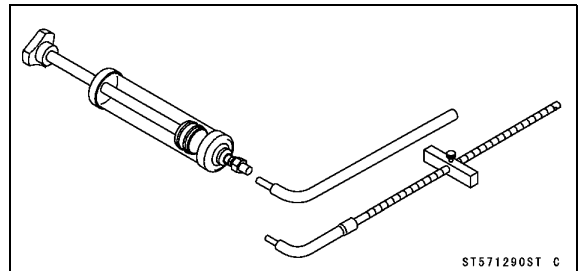

**Bearing Driver Set:**  
57001-1129

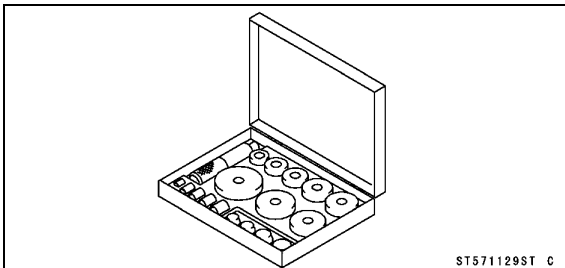


## 13-8 SUSPENSION

### Front Fork

#### Front Fork Oil Change


- Remove the front fork (see Front Fork Removal).
- Remove the fork boot from the front fork.
- Hold the outer tube vertically in a vise.
- Remove:
  - Top Bolt [A] and O-ring [B]
  - Spacer [C]
  - Fork Spring Seat [D]
  - Fork Spring [E]

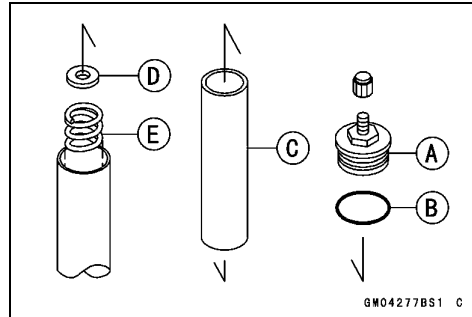

- Pour out the fork oil [A] with the fork upside down.
- Fill the front fork with the specified oil.

**Fork Oil Viscosity: KAYABA KHL34-G10 or equivalent**

**Fork Oil Capacity (when changing oil):  
Approx. 453 mL (15.31 US oz.)**

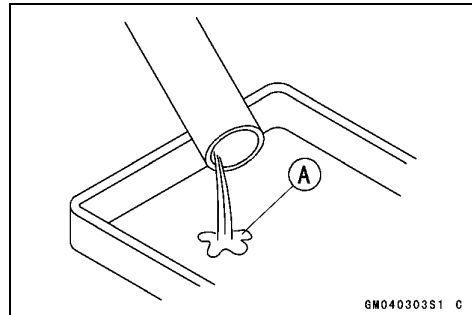


- Wait for about five minutes so that any suspended air bubbles can surface.
- Measure the oil level, using the fork oil level gauge [A].

**Special Tool - Fork Oil Level Gauge: 57001-1290**

- Set the gauge stopper [B] so that its lower side shows the oil level distance specified [C].
- Insert the gauge tube into the inner tube [D] and position the stopper across the top of the inner tube [E].
- Pull the handle slowly to draw out the excess oil until no more oil comes up the tube.
- ★ If no oil is drawn out, there is not enough oil in the fork. Pour in some more oil, then draw out the excess.

**Front Fork Oil Level (Fully compressed without fork spring)**


**Standard: 194 ±2 mm (7.64 ±0.08 in.)**

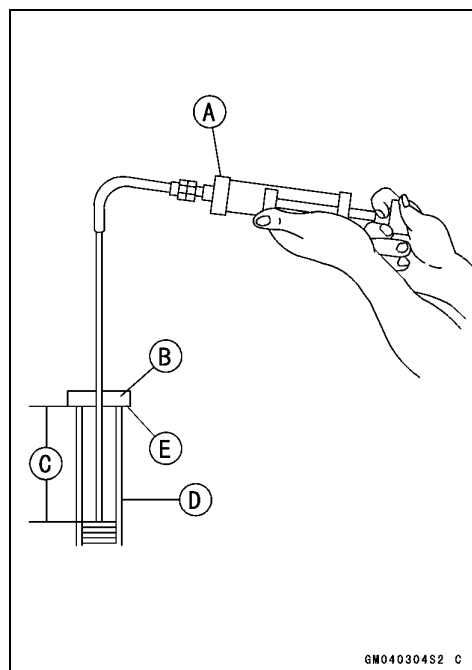

- Install the fork spring with the smaller diameter end [A] facing down.
- Install:
  - Fork Spring Seat
  - Spacer
- Install the top bolt with a specified torque.

**Torque - Front Fork Top Bolt: 30 N·m (3.1 kgf·m, 22 ft·lb)**


- Install the fork boot to the front fork.
- Install the front fork (see Front Fork Installation).
- Repeat the same procedure for another front fork.

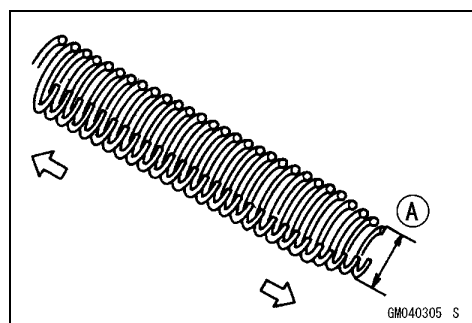

## Front Fork

### Front Fork Removal

- Remove:
  - Brake Hose Clamps (Left Front Fork only)
  - Front Wheel (see Front Wheel Removal in the Wheels/Tires chapter)
  - Front Fender (see Front Fender Removal in the Frame chapter)
  - Front Brake Caliper Mounting Bolts
  - Front Brake Hose Clamp Mounting Bolt
  - Speedometer Cable Clamp Mounting Bolt
- Loosen the upper [A] and lower [B] fork clamp bolts.
- It is necessary to loosen the front fork top bolt, if the front fork shall be disassembled.
- With a twisting motion, work the fork leg down and out.

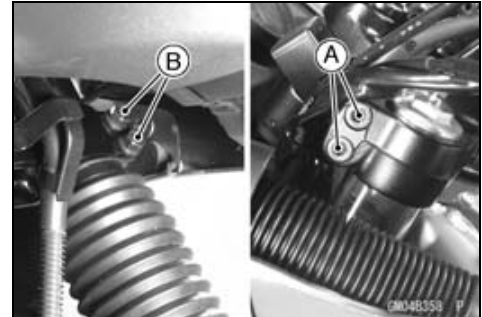

### Front Fork Installation

- Install the fork tube so that the top of the fork inner tube [A] is aligned with the upper surface of the steering stem head [B].

#### NOTE

- Tighten the two clamp bolts alternately two times to ensure even tightening torque.

- Run the cables, wires, and hoses as shown in the Cable, Wire and Hose Routing in the Appendix chapter.
- Install the front wheel (see Front Wheel Installation in the Wheels/Tires chapter).

**Torque - Upper Fork Clamp Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

**Lower Fork Clamp Bolts: 23 N·m (2.3 kgf·m, 16.5 ft·lb)**


**Brake Caliper Mounting Bolts: 34 N·m (3.5 kgf·m, 25 ft·lb)**

- Check the front brake effectiveness after installation.

#### **WARNING**

**Do not attempt to ride the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brake will not function on the first application of the lever if this is not done.**

- Install the fork boot to the front fork.

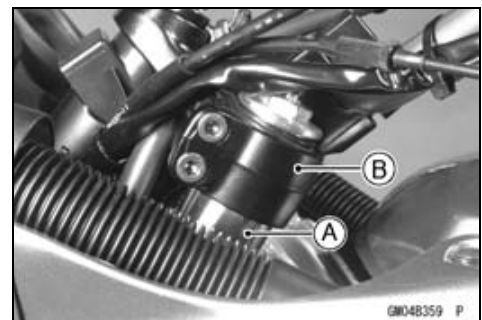

## 13-10 SUSPENSION

### Front Fork

#### Front Fork Disassembly

- Remove the front fork (see Front Fork Removal).
- Drain the fork oil (see Front Fork Oil Change).
- The following parts are removed during draining the fork oil.
  - Top Bolt and O-ring
  - Spacer
  - Fork Spring Seat
  - Fork Spring

- Hold the front fork horizontally in a vise [A].
- Stop the cylinder unit [B] from turning by using the special tools.
- Unscrew the Allen bolt [C], and take the gasket out of the bottom of the outer tube.

**Special Tools - Fork Cylinder Holder Handle: 57001-183 [D]**  
**Fork Cylinder Holder Adapter: 57001-1057 [E]**





- Take the cylinder unit out of the inner tube.
- Separate the inner tube from the outer tubes as follows:
  - Remove the dust seal [A] from the outer tube.
  - Remove the retaining ring [B] from the outer tube.

- Use the fork outer tube weight [A] to separate the outer tube [B] from the inner tube [C]. Holding the inner tube by hand, pull the outer tube several times to pull out the inner tube.

**Special Tool - Fork Outer Tube Weight: 57001-1218**

- Take out the cylinder base out of the outer tube.


- Remove the guide bushings [A], outer tube guide bushing [B], washer [C], and oil seal [D] from the inner tube.

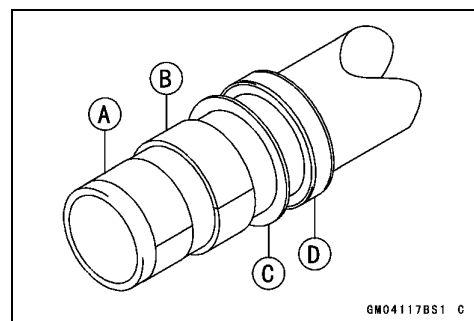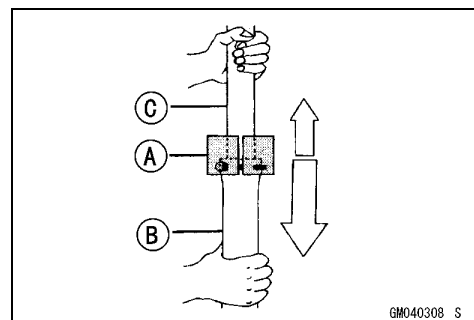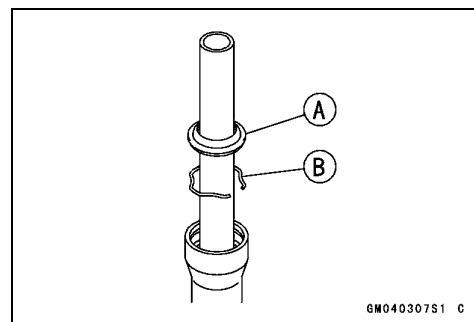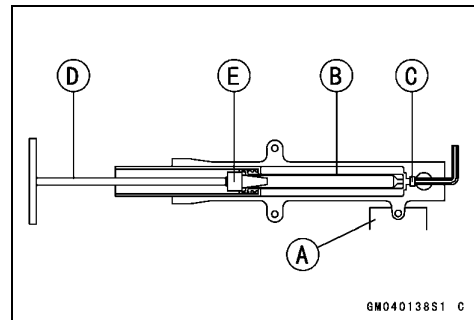


**Front Fork**

*Front Fork Assembly*

- Replace the following parts with new ones after removal.
  - Dust Seal [A]
  - Retaining Ring [B]
  - Oil Seal [C]
  - Inner Guide Bushing [D]
  - Outer Guide Bushing [E]
  - Bottom Allen Bolt Gasket [F]

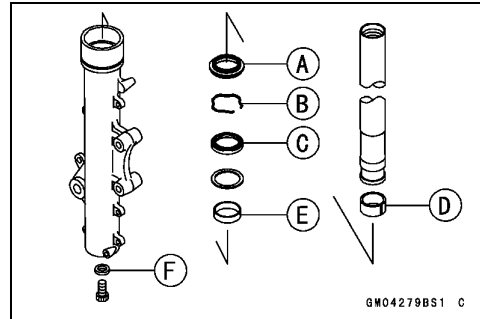


- Put the cylinder unit [A] with the spring into the inner tube [B] protruding from the inner tube, and install the cylinder base [C] onto the bottom end of the cylinder unit.
- Install the cylinder base with the tapered end [D] up.
- Install the inner tube, cylinder unit, and cylinder base as a set into the outer tube.

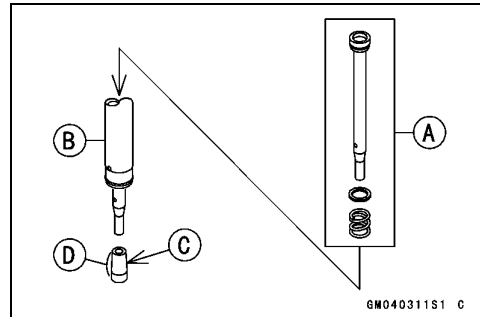

- Install the new guide bushing [A] with a used guide bushing [B] on it by tapping the used guide bushing with the fork oil seal driver [C] until it stops.
- The split [D] of the bushing should face toward the side of the vehicle.


**Special Tool - Front Fork Oil Seal Driver: 57001-1219**

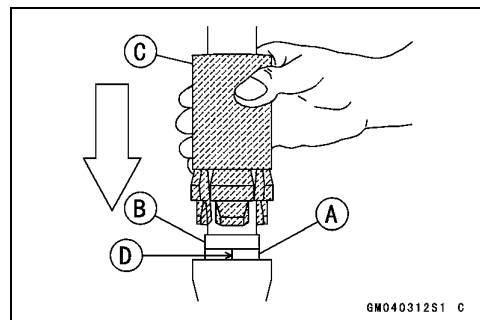

- Apply grease to the oil seal lips and install the washer and the oil seal [A] into the outer tube.

**Special Tool - Front Fork Oil Seal Driver: 57001-1219 [B]**


- Install:
  - Retaining Ring
  - Dust Seal

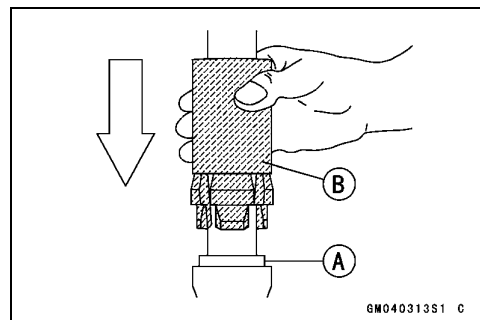

- Hold the front fork horizontally in a vise [A].
- Apply a non-permanent locking agent to the threads of the Allen bolt and screw the Allen bolt into the bottom of the outer tube.
- Hold the cylinder unit [B] with the special tools and tighten the Allen bolt [C].

**Special Tools - Fork Cylinder Holder Handle: 57001-183 [D]**  
**Fork Cylinder Holder Adapter: 57001-1057 [E]**

**Torque - Bottom Allen Bolt: 30 N·m (3.1 kgf·m, 22 ft·lb)**

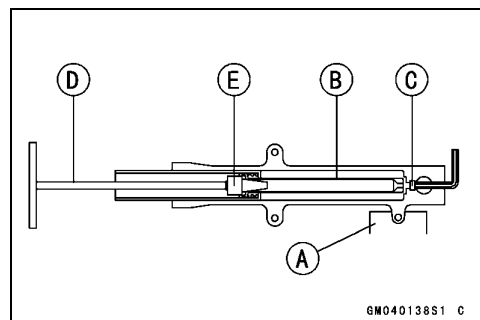

## 13-12 SUSPENSION

### Front Fork

- Pour in the specified type of oil and install the parts removed (see Front Fork Oil Change).

**Fork Oil Viscosity:** KAYABA KHL34-G10 or equivalent

**Fork Oil Capacity (completely dry):**

**530 ±4 mL (17.91 ±0.14 US oz.)**

#### Inner Tube, Outer Tube Inspection

- Visually inspect the inner tube [A] for scoring or scratches on the outer surface of it and repair any damage.
- Nick or rust damage can sometimes be repaired by using a wet-stone to remove sharp edges or raised areas which cause seal damage.
- ★ If the damage is not repairable, replace the inner tube. Since damage to the inner tube damages the oil seal, replace the oil seal whenever the inner tube is repaired or replaced.

#### CAUTION

**If the inner tube is badly bent or creased, replace it. Excessive bending, followed by subsequent straightening, can weaken the inner tube.**

- Temporarily assemble the inner and outer tubes, and pump them back and forth manually to check for smooth operation.
- ★ If you feel binding or catching, the inner and outer tubes must be replaced.

#### ⚠ WARNING

**A straightened inner or outer fork tube [B] may fail in use, possibly, causing an accident. Replace a badly bent or damaged inner or outer tube, and inspect the other tube carefully before reusing it.**

#### Dust Seal Inspection

- ★ Inspect the dust seal [A] for any signs of deterioration or damage.
- ★ Replace them if necessary.





#### Spring Tension

- Since the spring becomes shorter as it weakens, check its free length [A] to determine its condition.
- ★ If the spring of either fork leg is shorter than the service limit, it must be replaced.
- ★ If the length of a replacement spring and that of the remaining spring vary greatly, the remaining spring should also be replaced in order to keep the fork legs balanced for motorcycle stability.

#### Spring Free Length

**Standard:** 522.5 mm (20.57 in.)

**Service Limit:** 512 mm (20.16 in.)

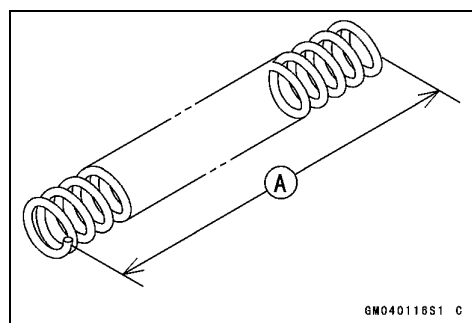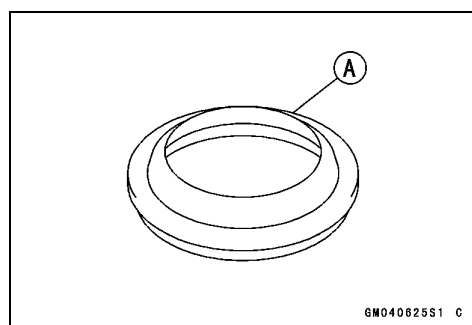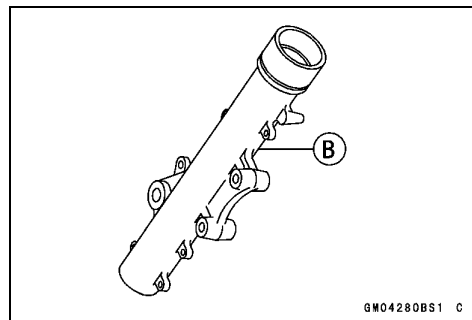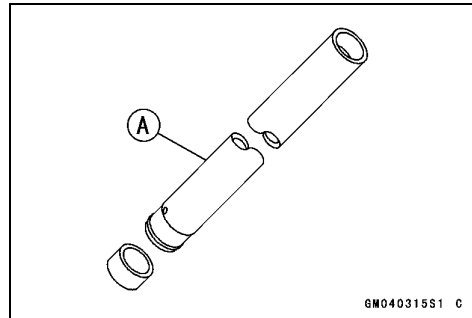

## Rear Shock Absorber

### Spring Preload Adjustment

The spring preload adjuster on the rear shock absorber has 5 positions so that the spring tension can be adjusted for different road and loading conditions.

- Using the hook wrench [A], turn the adjuster to adjust the spring tension.

**Special Tool - Hook Wrench: 57001-1101**

○ The standard adjuster position for an average-build rider of 68 kg (150 lb) with no passenger and no accessories is 2nd step from the weakest position.

- ★ If the spring action feels too soft or too stiff, adjust it in accordance with the following table.

### Spring Preload Adjustment

Position	Spring Force	Setting	Load	Road	Speed
1	Strong	Soft	Light	Good	Low
2	↑	↑	↑	↑	↑
3	⋮	⋮	⋮	⋮	⋮
4	↓	↓	↓	↓	↓
5	Weak	Hard	Heavy	Bad	High

### Rear Shock Absorber Removal

- Squeeze the brake lever slowly and hold it with a band [A].
- Set the jack under the engine and raise the rear wheel.

**Special Tool - Jack: 57001-1238**

- Remove the seat (see Seat Removal in the Frame chapter).
- Remove the Side Covers (see Side Cover Removal in the Frame chapter).
- Remove the upper tie-rod bolt [A] and nut.
- Remove the mounting bolts [B] and pull off the rear shock absorber [C].







## 13-14 SUSPENSION

### Rear Shock Absorber

- Remove the upper tie-rod bolt [A] and nut.
- Remove the mounting bolts [B] and pull off the rear shock absorber [C].

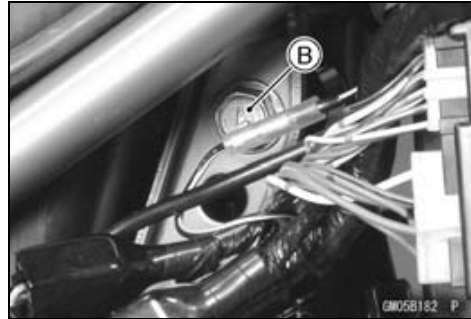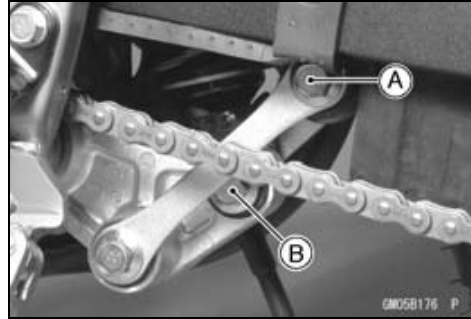

#### *Rear Shock Absorber Installation*


- Tighten the mounting bolts.
  - Torque - Rear Shock Absorber Upper Mounting Nut: 59 N·m (6.0 kgf·m, 43 ft·lb)**
  - Rear Shock Absorber Lower Mounting Nut: 98 N·m (10 kgf·m, 72 ft·lb)**
- Adjust the rear shock absorber position (see Rear Shock Absorber Adjustment).

#### *Rear Shock Absorber Wear*

- Remove the rear shock absorbers (see Rear Shock Absorber Removal).
- Compress each rear shock absorber.
- Visually inspect the following items.
  - Compression Stroke
  - Oil Leakage
  - Other Damage
- ★ If there is any damage to the rear shock absorber, replace the shock absorbers.

#### *Bushing Wear*

- Visually inspect the rubber bushing [A].
- ★ If it shows any signs of damage, replace it.

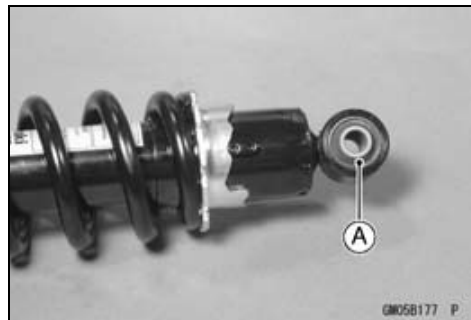

#### *Rear Shock Absorber Oil Leak Inspection*

- Refer to the Rear Shock Absorber Oil Leak Inspection in the Periodic Maintenance chapter.



## Swingarm

### CAUTION

**Do not tap the swingarm pivot shaft when removing or installing. Push or pull the pivot shaft while turning the shaft. Tapping on the shaft could damage the needle bearings in the swingarm.**

### Swingarm Removal




- Remove:
  - Rear Wheel (see Rear Wheel Removal in the Wheels/Tires chapter)
  - Upper Tie Rod Bolt and Nut
  - Rear Brake Hose Clamps [A]
  - Rear Shock Absorber Lower Mounting Bolts and Nut
  - Chain Cover [B] and Chain Guide
  - Pivot Shaft Caps

- Remove the pivot shaft nut [A], and pull out the pivot shaft from right side.

- Move back [A] the swingarm [B] and take off the swingarm.

### NOTE

- Make sure the swingarm does not catch the Rear Brake Switch.

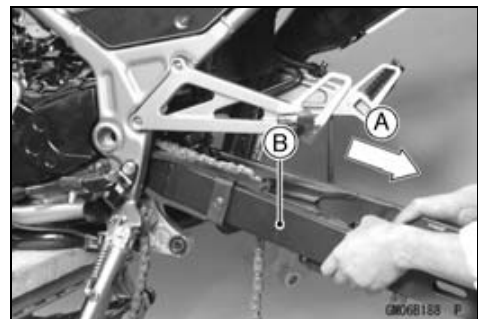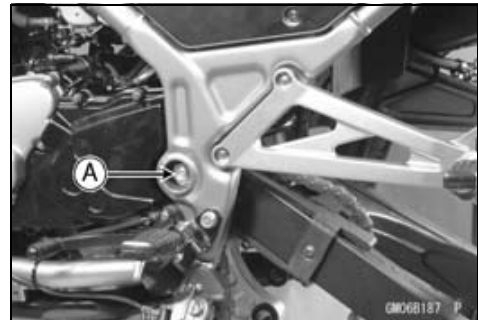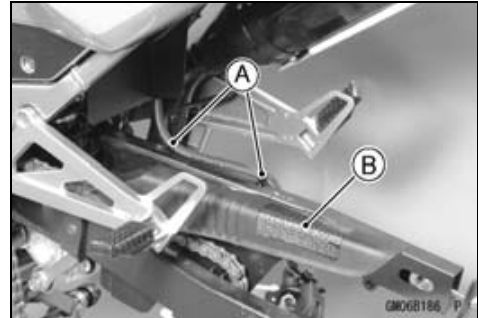

### Swingarm Sleeve and Needle Bearing Wear

### CAUTION

**Do not remove the bearings for inspection. Removal may damage them.**

- The rollers in a needle bearing normally wear very little, and wear is difficult to measure. Instead of measuring, inspect the bearing in the swingarm for abrasion, color change, or other damage.
- ★ If there is any doubt as to the condition of any of the needle bearings or sleeve, replace the sleeve, and needle bearing as a set.

## 13-16 SUSPENSION


### Swingarm

#### Swingarm Installation

- Installation is the reverse of removal.

#### NOTE

- Loosen the rocker arm pivot nut while installing the pivot shaft.
- Tighten the pivot shaft nut.  
**Torque - Swingarm Pivot Nut: 118 N·m (12 kgf·m, 87 ft·lb)**
- Tighten the torque link nut.  
**Torque - Torque Link Nut: 34 N·m (3.5 kgf·m, 25 ft·lb)**
- Move the swingarm up and down [A] to check for abnormal friction.

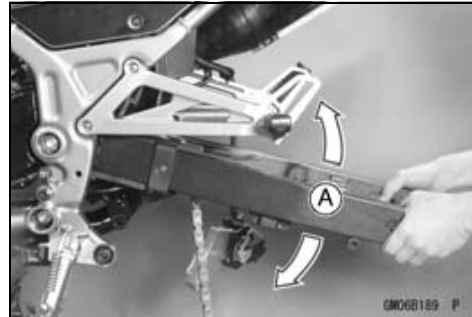

#### Swingarm Disassembly/Assembly

- Remove the needle bearing using the oil seal and bearing remover.  
**Special Tool - Oil Seal & Bearing Remover: 57001-1058**
- Insert the needle bearing using the bearing driver set so that the marked side faces outside.  
**Special Tool - Bearing Driver Set: 57001-1129**
- Apply a thin coat of a the grease to the lips of the grease seals.


#### Swingarm Bearing Installation

- Apply plenty of grease to the new needle bearings, and sleeve.
- Be sure to install the needle bearings so that the manufacturer's marks are faced out. This prevents bearing damage.
- Position the bearings as shown, using a suitable bearing driver in the bearing driver set.  
7 mm (0.28 in.) [A]

**Special Tool - Bearing Driver Set: 57001-1129**

#### Swingarm Needle Bearing Lubrication

- Refer to the Swingarm Needle Bearing Lubrication in the Periodic Maintenance chapter.

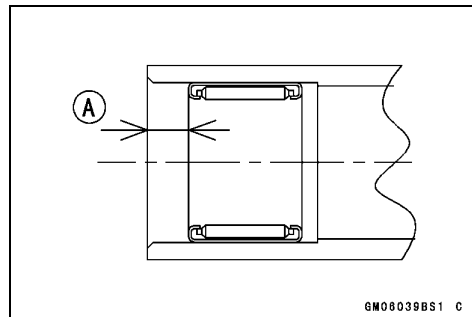


## Tie-Rod, Rocker Arm

### Tie-Rod Removal

- Squeeze the brake lever slowly and hold it with a band [A].



- Using the jack, raise the rear wheel off the ground.  
**Special Tool - Jack: 57001-1238**
- Remove the upper tie-rod bolt [A] pushing the rocker arm sleeve and swingarm sleeve for upper tie-rod a little in after removing the nut.
- Remove:  
Lower Tie-rod Bolt and Nut [B]  
Tie-Rods [C]

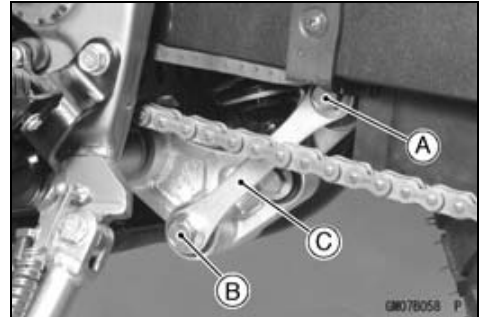

### Tie-Rod Installation

- Install the tie-rods so that the chamfered side faces the bolts and nuts.
- Tighten:  
**Torque - Tie-Rod Nuts: 98 N·m (10 kg·m, 72 ft·lb)**

### Rocker Arm Removal

- Squeeze the brake lever slowly and hold it with a band [A].
- Using the jack, raise the rear wheel off the ground.  
**Special Tool - Jack: 57001-1238**




- Remove:  
Left and Right Front Footpeg

### NOTE

○Loosen the swingarm pivot nut when installing the rocker arm bolt.

- Lower Tie-Rod Bolt and Nut [A]
- Lower Rear Shock Absorber Bolt and Nut [B]
- Rocker Arm Bolt and Nut [C]
- Rocker Arm [D]

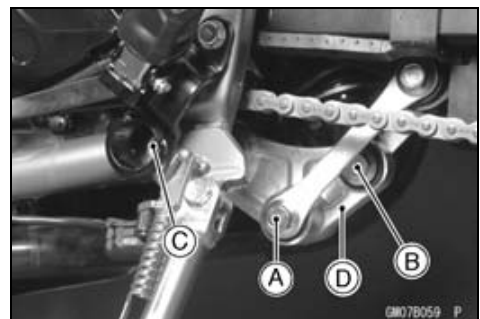

## 13-18 SUSPENSION

### Tie-Rod, Rocker Arm

#### *Rocker Arm Installation*


- Apply grease to the inside of the needle bearings grease seals.
- Tighten:
  - Torque - Rocker Arm Pivot Nut: 98 N·m (10 kg·m, 72 ft·lb)
  - Tie-Rod Nut: 98 N·m (10 kg·m, 72 ft·lb)
  - Rear Shock Absorber Lower Mounting Nut: 98 N·m (10 kg·m, 72 ft·lb)
  - Front Footpeg Brackets Bolts: 34 N·m (3.5 kgf·m, 25 ft·lb)

#### *Rocker Arm Bearing, Sleeve Inspection*

<b>CAUTION</b>
----------------

<b>Do not remove the bearings for inspection. Removal may damage them.</b>
--

- Visually inspect the rocker arm grease seals, sleeves and needle bearings [A].
- The rollers in a needle bearing normally wear very little, and wear is difficult to measure. Instead of measuring, inspect the bearing for abrasion, color change, or other damage.
- ★ If there is any doubt as to the condition of any of the needle bearings or sleeve, replace the sleeve, and needle bearings as a set.

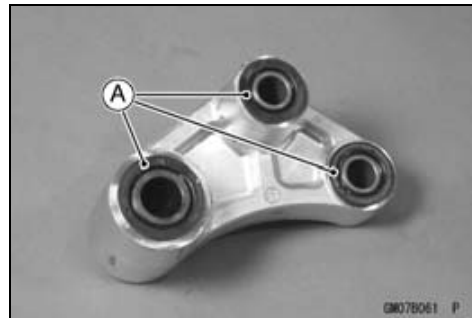

#### *Rocker Arm Lubrication*

- Refer to the Rocker Arm Bearings and Sleeves Lubrication in the Periodic Maintenance chapter.

---

---


# Steering

## Table of Contents

Exploded View .....	14-2
Special Tools .....	14-4
Handlebar .....	14-6
Handlebar Removal .....	14-6
Handlebar Installation .....	14-6
Rear View Mirror Removal .....	14-7
Rear View Mirrors (Left and Right) Installation .....	14-7
Steering .....	14-8
Steering Play Inspection .....	14-8
Steering Stem .....	14-9
Steering Stem Removal .....	14-9
Steering Stem Installation .....	14-9
Steering Stem Warp .....	14-11
Steering Stem Bearing .....	14-12
Stem Bearing Removal .....	14-12
Stem Bearing Installation .....	14-12
Stem Bearing Lubrication .....	14-13
Stem Bearing Wear, Damage .....	14-13

# 14-2 STEERING

## Exploded View

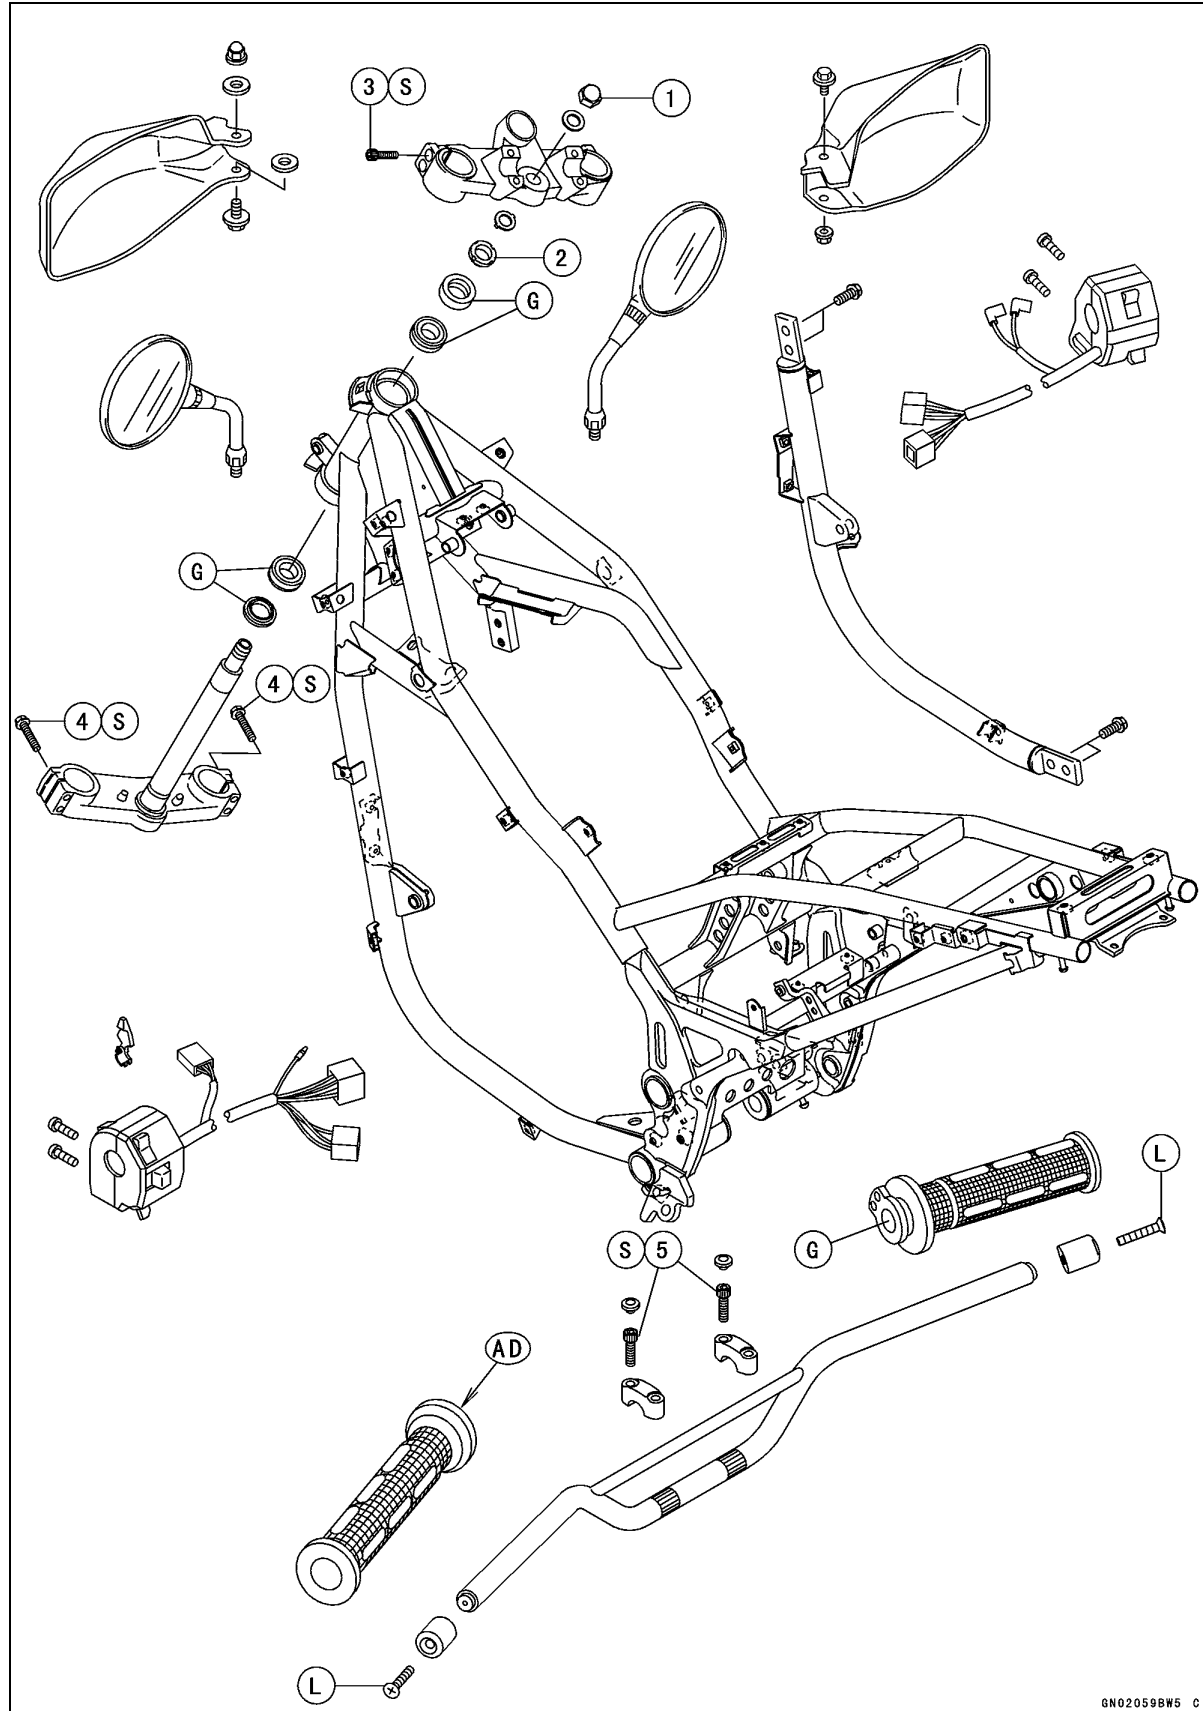

GN02059BW5 C

**Exploded View**

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Steering Stem Head Nut	39	4.0	29	
2	Steering Stem Locknut	Hand Tighten (about 4.9)	Hand Tighten (about 0.5)	Hand Tighten (about 43 in ·lb)	
3	Front Fork Upper Clamp Allen Bolts	25	2.5	18	S
4	Front Fork Lower Clamp Bolts	23	2.3	16.5	S
5	Handlebar Clamp Bolts	25	2.5	18	S

AD: Apply adhesive.

G: Apply grease.


L: Apply a non-permanent locking agent.

S: Follow the specific tightening sequence.


# 14-4 STEERING

## Special Tools


**Steering Stem Bearing Driver:**  
57001-137

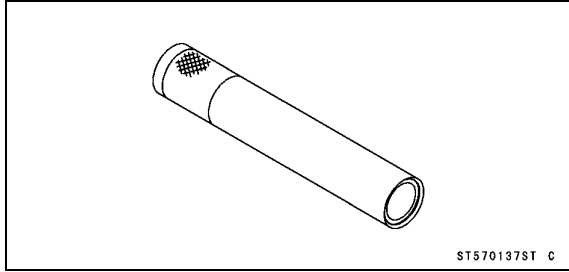


**Head Pipe Outer Race Driver,  $\phi 51.5$ :**  
57001-1076

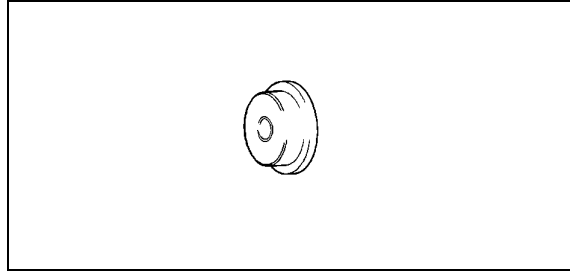


**Bearing Puller:**  
57001-158

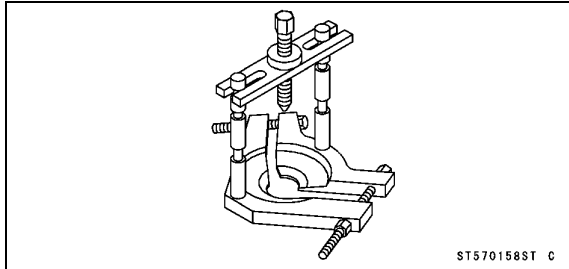


**Steering Stem Nut Wrench:**  
57001-1100

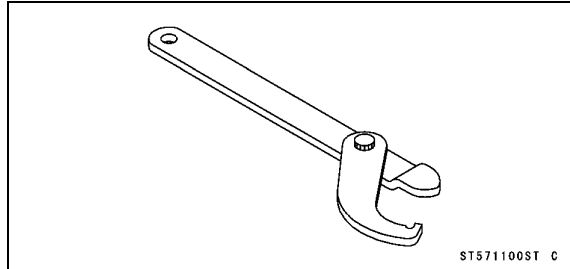


**Bearing Puller Adapter:**  
57001-317

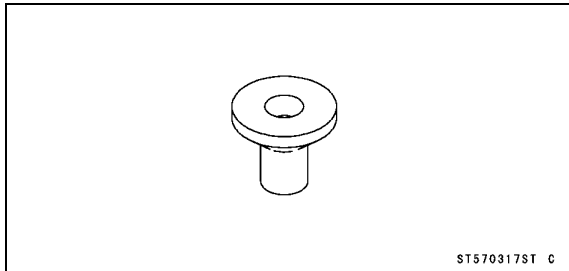


**Head Pipe Outer Race Driver,  $\phi 46.5$ :**  
57001-1106

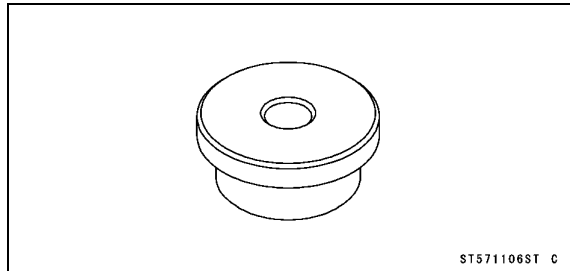


**Steering Stem Bearing Driver Adapter,  $\phi 34.5$ :**  
57001-1074

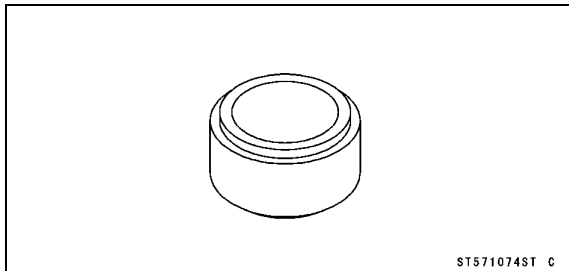


**Head Pipe Outer Race Remover ID > 37 mm:**  
57001-1107

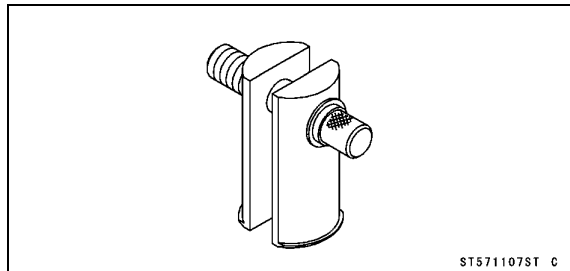

**Head Pipe Outer Race Press Shaft:**  
57001-1075

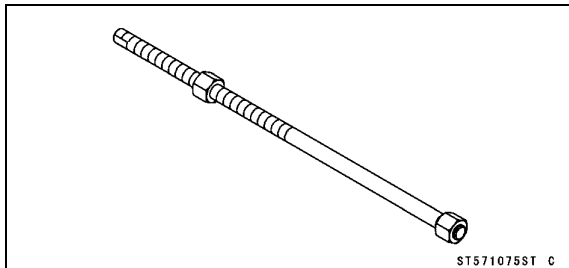

**Jack:**  
57001-1238

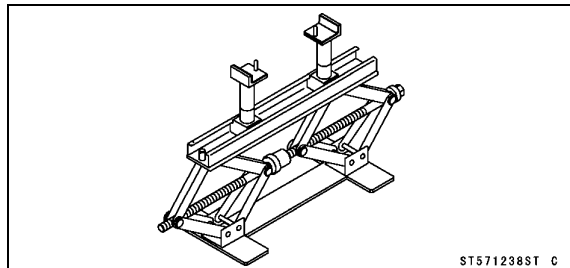




---

**Special Tools**

---

**Bearing Puller:**  
**57001-1575**

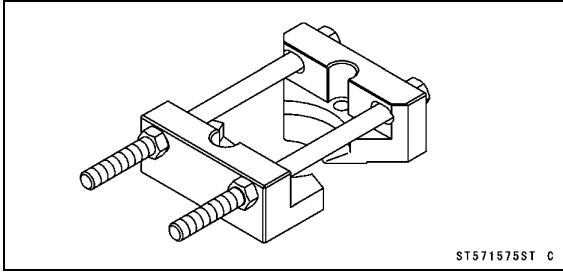


## 14-6 STEERING

### Handlebar


#### Handlebar Removal

- Remove:
  - Plugs
  - Clutch Lever (see Clutch Lever Removal in the Clutch chapter)
  - Right and Left Handlebar Switch Housing
  - Throttle Grip
  - Front Brake Master Cylinder (see Front Brake Master Cylinder Removal in the Brakes chapter)
- Unscrew the handlebar mounting bolts [A] and remove the handlebar [B] and clamp [C].

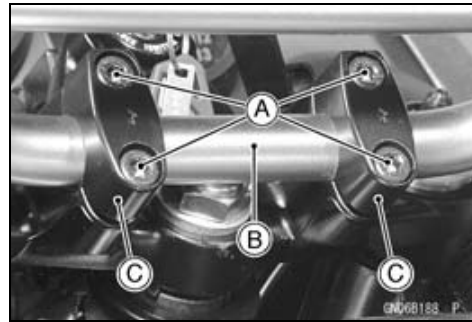


#### Handlebar Installation

- Install the handlebar clamps so that the arrow [A] on the clamp points to the front.
- Set the handlebar to match its punched mark [B] to the lower mating face [C] of the clamp rear part.

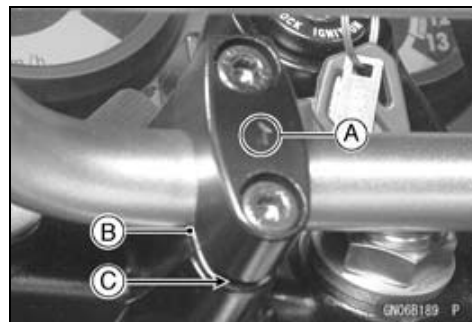


- Tighten the front clamp bolts first, and then the rear clamp bolts. There will be a gap [A] at the rear part of the clamp after tightening.

**Torque - Handlebar Clamp Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

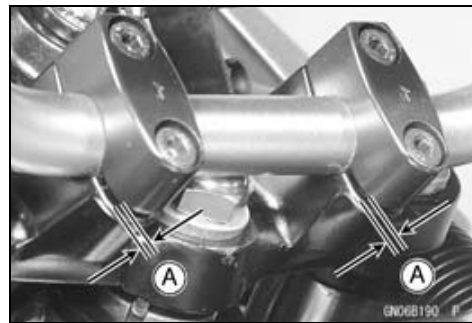

- The front half of the right and left switch housings [A] has a small projection [B]. Fit the projection into the small hole [C] in the handlebar.
- Install the handlebar switch housing.
- Install:
  - Front Master Cylinder (see Front Brake Master Cylinder Installation in the Brakes chapter)
  - Clutch Lever (see Clutch Lever Installation in the Clutch chapter)

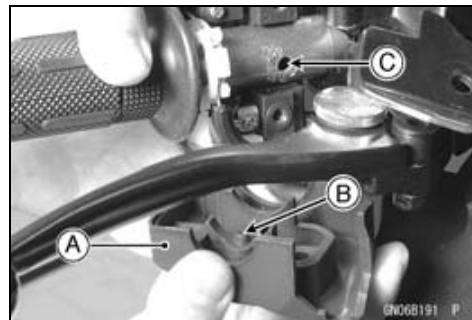


---

**Handlebar**

---

*Rear View Mirror Removal*

- Slide the rubber cap [A] up.
- Loosen the adapter nut [B] for tightening to remove the rear view mirror from the holder.

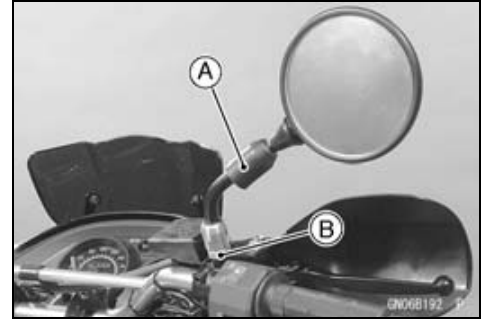*Rear View Mirrors (Left and Right) Installation*

- Screw the rear view mirror into the holder all the way, and tighten the adapter nut securely.
- Slide back the rubber cap in place.

## 14-8 STEERING

---

### Steering

---


#### *Steering Play Inspection*

- Refer to the Steering Play Inspection in the Periodic Maintenance chapter.


## Steering Stem

### Steering Stem Removal

- Remove the handlebar [A] (see Handlebar Removal).
- Loosen the stem head nut [B].
- Remove the front fork [C] (see Front Fork Removal in the Suspension chapter).

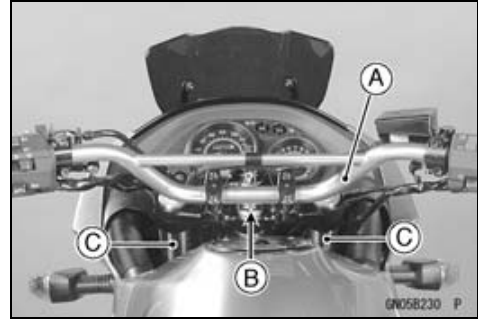


- Remove:  
Front Brake Hose and Speedometer Cable Clamp Mounting Bolt [A]

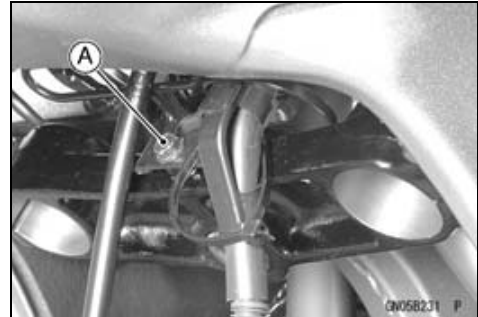

- Remove the stem head nut [A], washer and lift up the steering stem head [B].



- Remove the toothed washer.
  - Push up the steering stem [A] from underside, and remove the steering stem nut [B] using the steering stem nut wrench [C], then remove the steering stem base.
- Special Tool - Steering Stem Nut Wrench: 57001-1100**
- Remove the oil seals and tapered roller bearings from upper head pipe and steering stem.

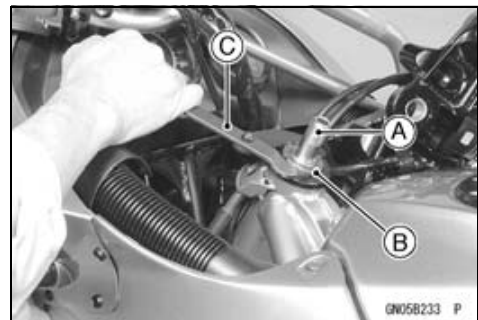

### Steering Stem Installation

- Route the cables, wires, and hoses as shown in the Cable, Wire, and Hose Routing in the Appendix chapter.

## 14-10 STEERING


### Steering Stem

- Install the oil seals [A] and tapered roller bearing inner races [B] to the upper and lower head pipe.
- Install the stem through the head pipe, and hand tighten the stem nut [C].

**Torque - Steering Stem Nut: 4.9 N·m (0.50 kgf·m, 43 in·lb, for reference)**

#### NOTE

- *Install the steering stem nut so that the recess side [D] faces down.*

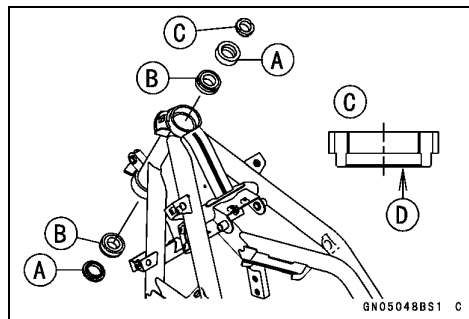

- Install the front fork (see Front Fork Installation in the Suspension chapter).

#### NOTE

- *Tighten the fork upper clamp bolts first, next the stem head bolt, last the fork lower clamp bolts.*

**Torque - Front Fork Upper Clamp Allen Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

**Steering Stem Head Nut: 39 N·m (4.0 kgf·m, 29 ft·lb)**

**Front Fork Lower Clamp Bolts: 23 N·m (2.3 kgf·m, 16.5 ft·lb)**

#### NOTE

- *Tighten the two clamp bolts alternately two times to ensure even tightening torque.*

- Install:
  - Front Wheel (see Front Wheel Installation in the Wheels/Tires chapter)
- Check and adjust the following items after installation.
  - Steering
  - Throttle Cables (see Throttle Cable Inspection in the Periodic Maintenance chapter)
  - Choke Cable
  - Headlight Aim (see Headlight Aiming Inspection in the Periodic Maintenance chapter)
  - Rear View Mirrors
- Check the front brake effectiveness.


#### **⚠ WARNING**

**Do not attempt to ride the motorcycle until a full brake lever is obtained by pumping the brake lever until the pads are against the disc. The brakes will not function on the first application of the lever if this is not done.**

## Steering Stem

### *Steering Stem Warp*

- Whenever the steering stem is removed, or if the steering cannot be adjusted for smooth action, check the steering stem for straightness.
- ★ If the steering stem shaft [A] is bent, replace the steering stem.

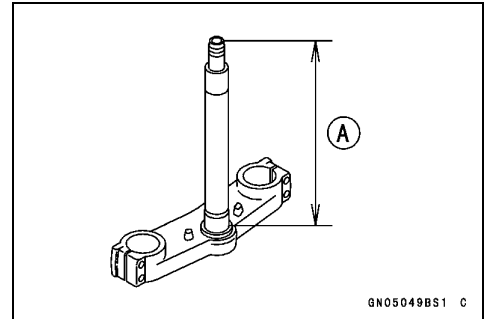

## 14-12 STEERING

### Steering Stem Bearing

#### Stem Bearing Removal

- Remove the steering stem (see Steering Stem Removal).
- Drive out the bearing outer races from the head pipe.
- Remove the outer races pressed into the head pipe using the head pipe outer race remover [A], and hammer the head pipe outer race remover to drive it out.



**Special Tool - Head Pipe Outer Race Remover ID > 37 mm: 57001-1107**

#### NOTE

○ If either steering stem bearing is damaged it is recommended that both the upper and lower bearing (including outer races) should be replaced with new ones.

- Remove the lower inner race [A] (with its grease seal) which is pressed onto the steering stem, with the steering stem bearing puller [B], [C] and adapter [D].


**Special Tools - Bearing Puller: 57001-158**  
**Bearing Puller Adapter: 57001-317**  
**Bearing Puller: 57001-1575**

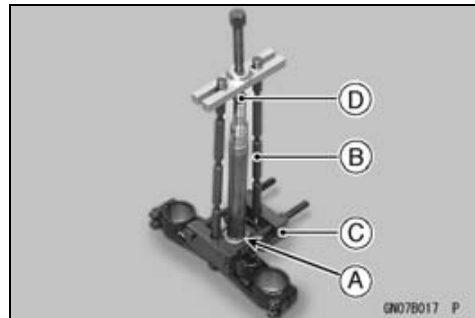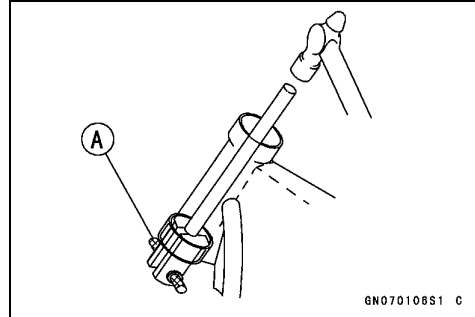

#### Stem Bearing Installation


- Replace the outer races with new ones.
- Apply grease to the outer race, and drive them into the head pipe using the drivers and press shaft [A].

**Special Tools - Head Pipe Outer Race Press Shaft: 57001-1075 [A]**  
**Head Pipe Outer Race Driver,  $\phi 46.5$ : 57001-1106 [B]**  
**Head Pipe Outer Race Driver,  $\phi 51.5$ : 57001-1076 [C]**

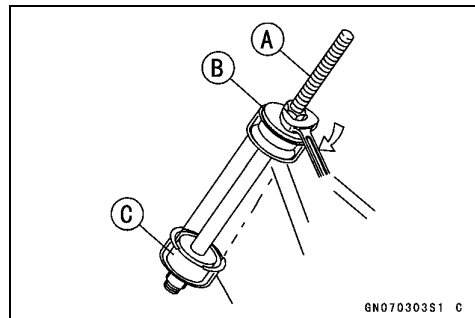

- Replace the inner races with new ones.
- Apply grease to the lower inner race [A], and drive it onto the stem using the driver and adapter.


**Special Tools - Steering Stem Bearing Driver: 57001-137 [B]**  
**Steering Stem Bearing Driver Adapter,  $\phi 34.5$ : 57001-1074 [C]**

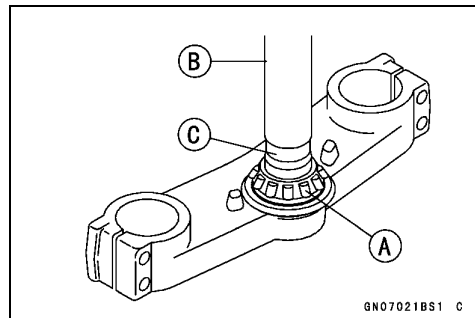



## Steering Stem Bearing

- Apply grease to the upper [A] and lower [B] bearings.
- Apply grease to the upper inner race, and install it in the head pipe.

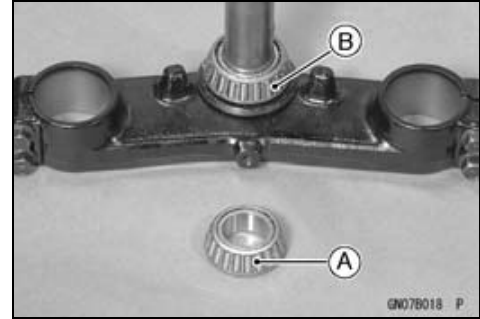

- Install the steering stem through the head pipe and upper bearing, and hand tighten the stem nut [A] while pushing up the steering stem.



- Settle the inner races in place as follows.
  - Using the steering stem nut wrench, tighten the stem nut **39 N·m (4.0 kgf·m, 29 ft·lb)** of torque. To tighten the steering stem nut to the specified torque, hook the wrench on the stem nut, and pull the wrench at the hole by **220 N (22 kgf, 49 lb)** of force [B] in the direction shown.

**Special Tool - Steering Stem Nut Wrench: 57001-1100 [A]**

- Check that there is no play and the steering stem turns smoothly without rattles. If not, the steering stem bearings may be damaged.
- Back out the stem nut a fraction of a turn until it turns lightly.
- Turn the steering stem nut lightly clockwise until it just becomes hard to turn. Do not overtighten, or the steering will be too tighten.


**Torque - Steering Stem Nut: 4.9 N·m (0.50 kgf·m, 43 in·lb, for reference)**

### Stem Bearing Lubrication

- Refer to the Stem Bearing Lubrication in the Periodic Maintenance chapter.

### Stem Bearing Wear, Damage

- Using a high-flash point solvent, wash the upper and lower tapered roller in the cages, and wipe the upper and lower outer races which are pressed into the frame head pipe, clean off grease and dirt.
- Visually check the outer races and rollers.
- ★ If they show the damage, replace the bearing assemblies with new ones.

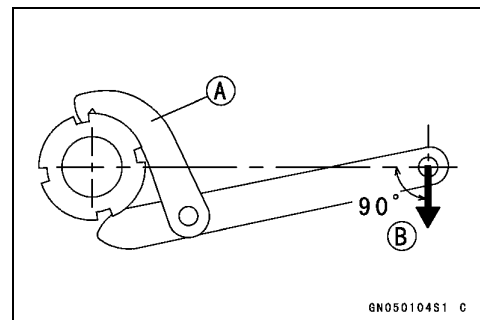




# Frame

## Table of Contents

Exploded View .....	15-2
Specifications .....	15-5
Seat .....	15-6
Seat Removal .....	15-6
Seat Installation .....	15-6
Fairing.....	15-7
Lower Fairings Removal .....	15-7
Lower Fairings Installation .....	15-7
Upper Fairing Removal .....	15-7
Air Duct Removal .....	15-7
Side Covers .....	15-8
Right Side Cover Removal .....	15-8
Right Side Cover Installation.....	15-8
Left Side Cover Removal .....	15-8
Left Side Cover Installation .....	15-8
Fenders .....	15-9
Front Fender Removal .....	15-9
Rear Fender Removal.....	15-9
Fender Installation Note.....	15-10
Frame .....	15-11
Frame Inspection .....	15-11
Guard, Carrier.....	15-12
Engine Guard Removal.....	15-12
Carrier Removal.....	15-12
Carrier Installation.....	15-12

# 15-2 FRAME

## Exploded View

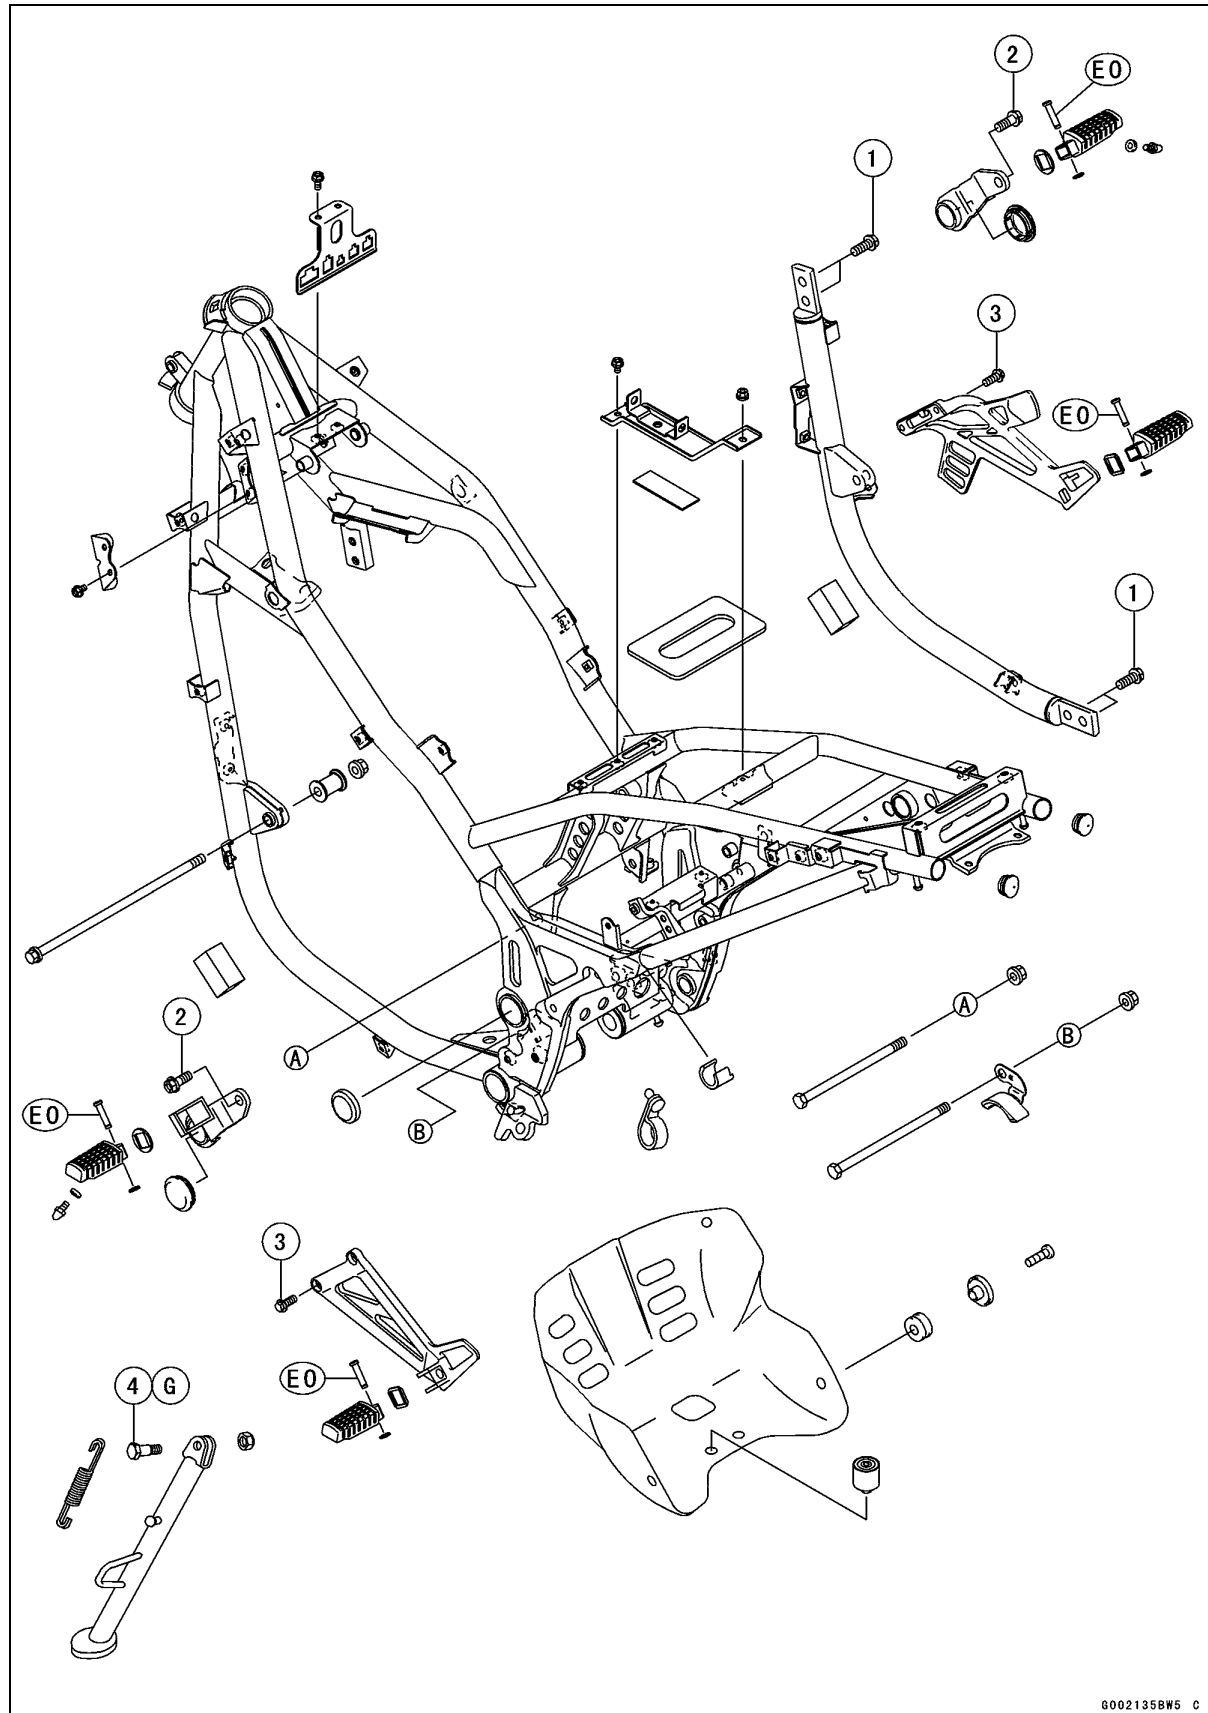

G002135BW5 C

**Exploded View**


No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Frame Down Tube Mounting Bolts	44	4.5	33	
2	Front Footpeg Bracket Bolts	34	3.5	25	
3	Rear Footpeg Bracket Bolts	25	2.5	18	
4	Sidestand Bolt and Nut	44	4.5	33	

EO: Apply engine oil.

G: Apply grease.

# 15-4 FRAME

## Exploded View

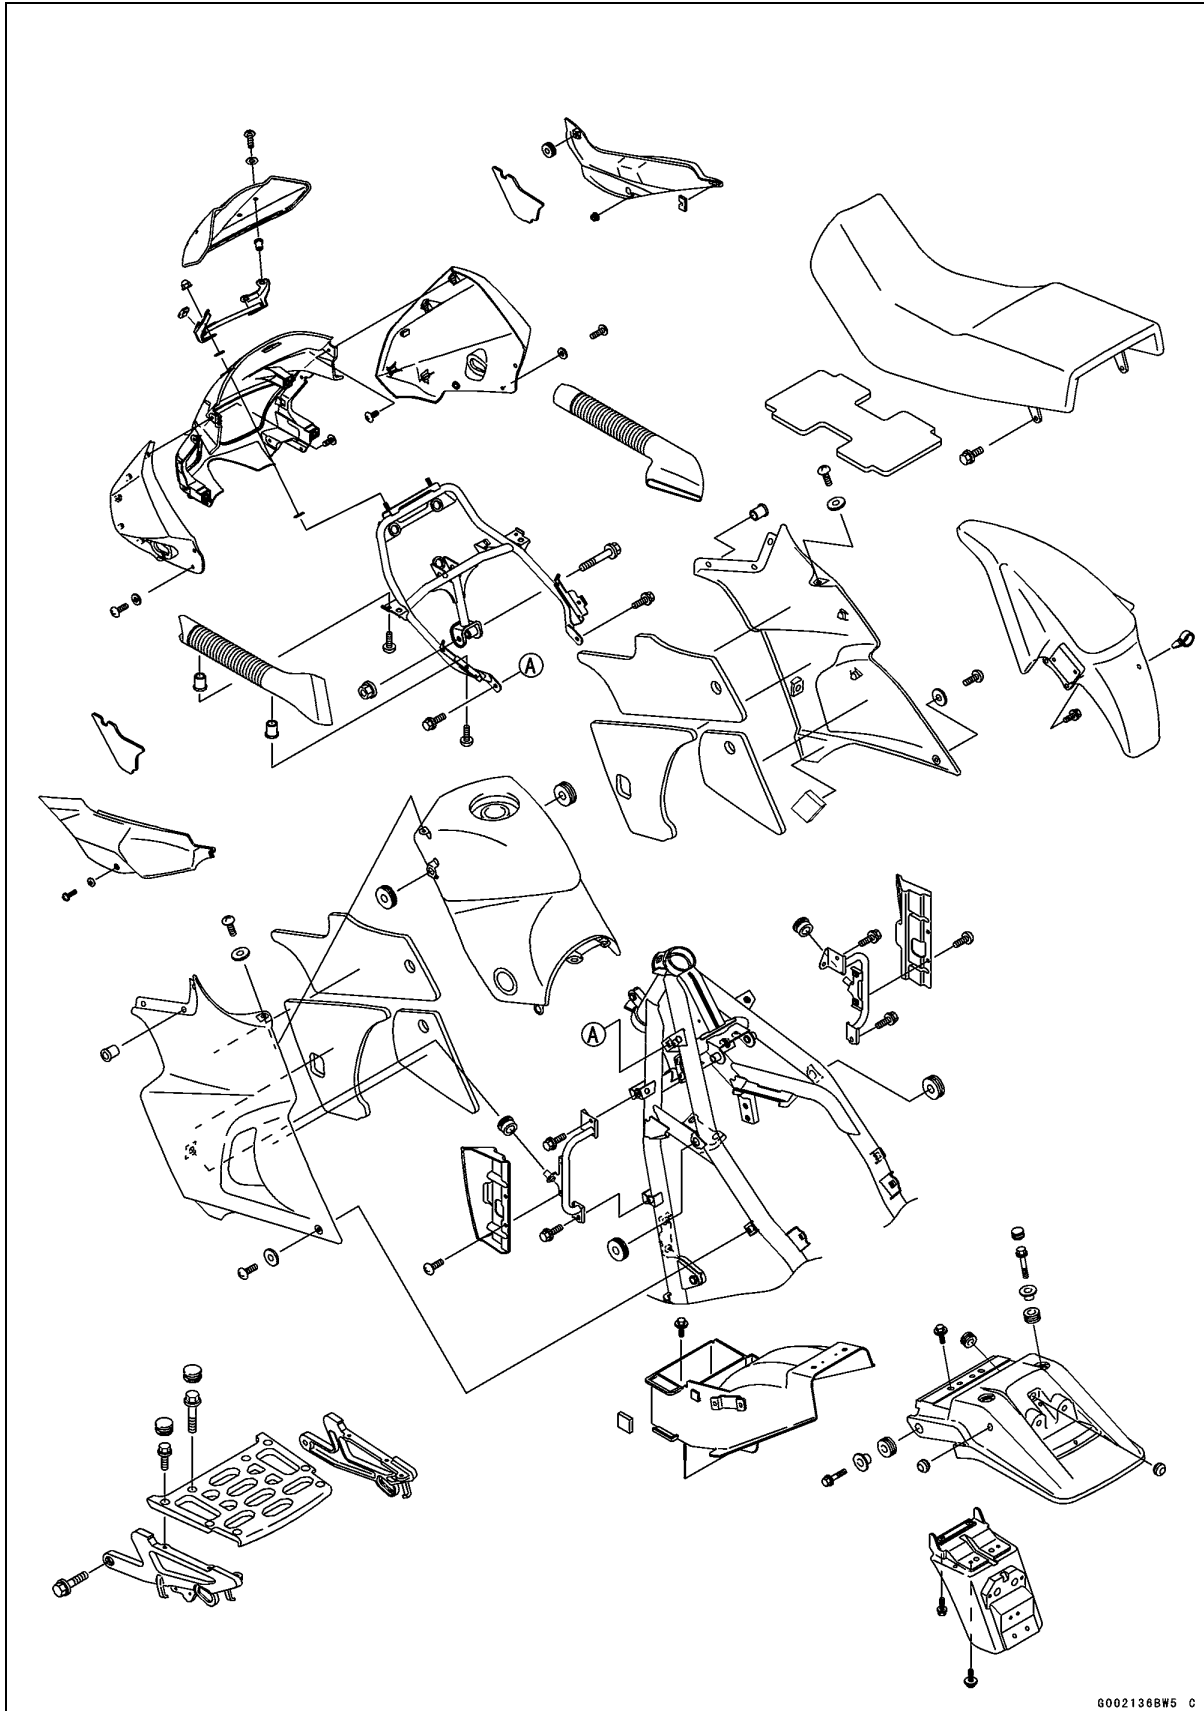


G002136BW5 C

---

## Specifications

---

Jack:  
57001-1238

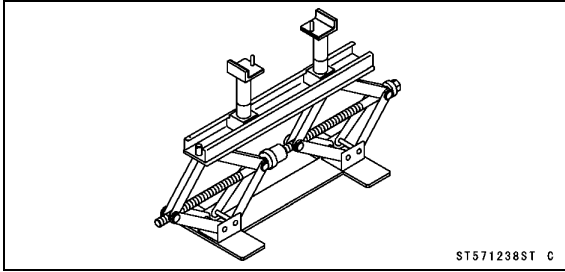


## 15-6 FRAME

### Seat


#### *Seat Removal*

- Remove the side covers (see Side Cover Removal).
- Remove the seat mounting bolts [A].

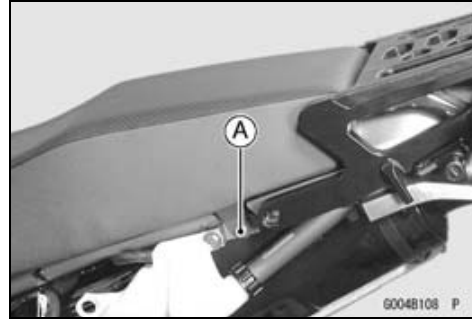

#### *Seat Installation*

- Slip the hook [A] of the seat under the brace [B] on the fuel tank.

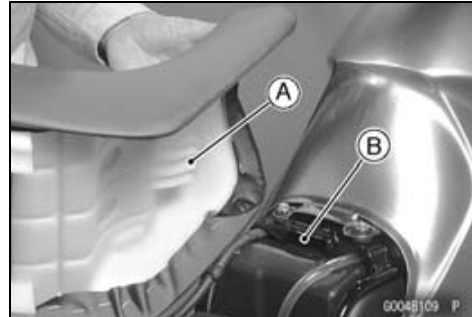


- Install the seat mounting bolts.
- Install the side covers (see Side Cover Installation).



## Fairing

### Lower Fairings Removal

- Remove the fairing mounting screws [A] in both side.

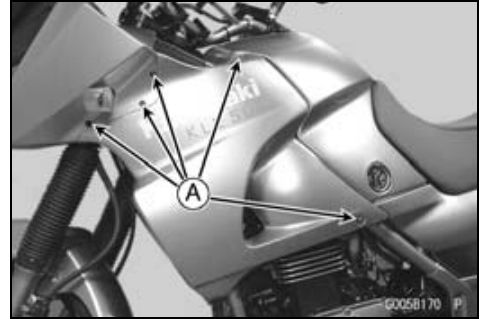


- Pull the rear side [A] of the fairing a little to outside to clear the stoppers [B] and then remove the fairing pushing [C] it to forward.




### Lower Fairings Installation

- Insert the fairing hole [A] into the drawing mounting bracket pipe [B] from front side, and push the fairing from outside to inside to fit the stoppers [C].
- Install the screws.

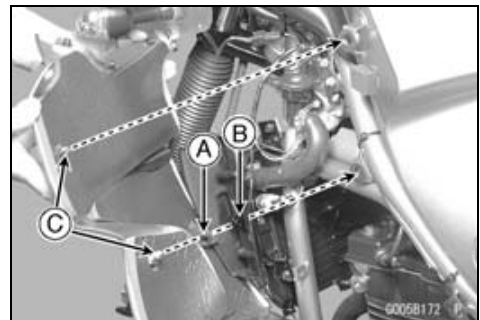


### Upper Fairing Removal

- Remove the headlight unit/housing (see Headlight Unit/Housing Removal in the Electrical System chapter).
- Remove the screws [A], and separate the left [B], center [C] and right [D] upper fairing each other.

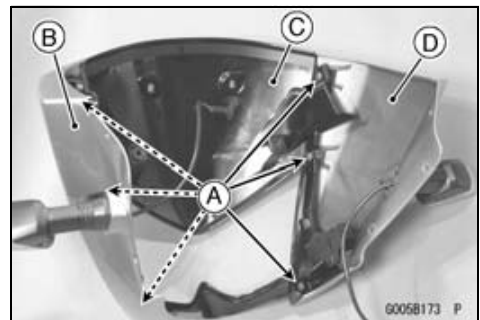

### Air Duct Removal

- Remove the headlight unit/housing (see Headlight Unit/Housing Removal in the Electrical System chapter).
- Remove the air duct mounting screws [A], and remove the air ducts [B].

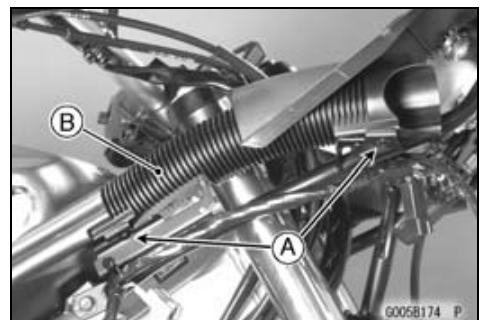


## 15-8 FRAME

### Side Covers


#### *Right Side Cover Removal*

- Insert the ignition switch key [A] into the seat lock.
- Turn the ignition switch key clockwise and pull the front of side cover outward to clear the stopper [B].
- Remove the right side cover [C] pulling it forward.

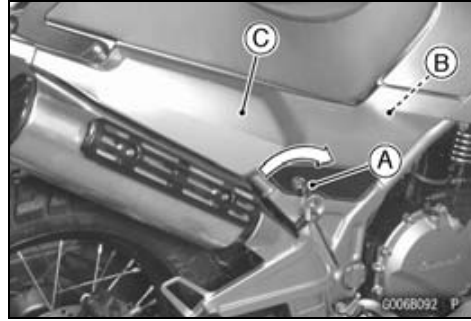


#### *Right Side Cover Installation*

- Align the projection [A] of the sidecover to the notch [B] of the frame, and push it to backward and then insert the stopper.
- Turn the ignition switch key counterclockwise to lock the seat lock.

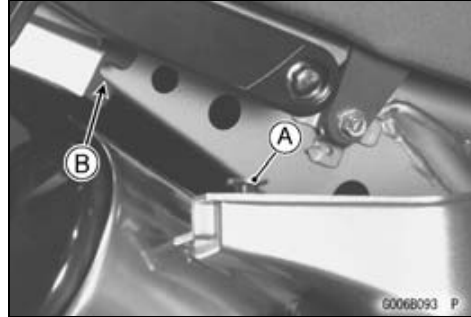


#### *Left Side Cover Removal*

- Remove the screw [A] and pull the front of side cover outward to clear the stopper [B].
- Remove the left side cover [C] pulling it forward.

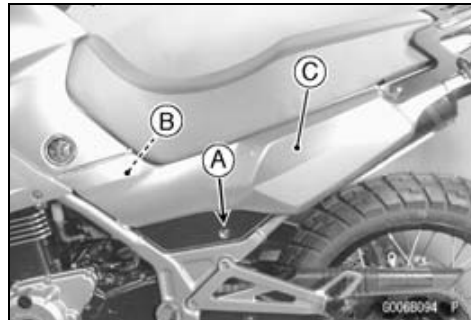

#### *Left Side Cover Installation*


- Align the projection [A] of the side cover to the notch [B] of the frame, and push it to backward and then insert the stopper.
- Screw in the side cover mounting screw.

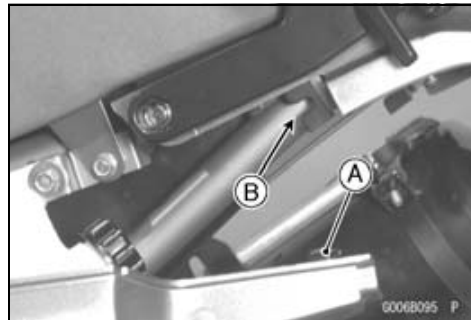

## Fenders


### Front Fender Removal

- Remove the speedometer clamp from front fender.
- Remove the bolts [A] and take off the front fender [B] upward from rearward.

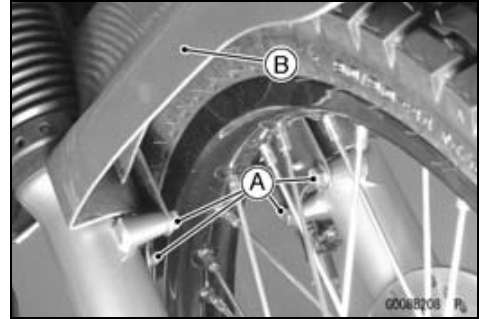


### Rear Fender Removal


- Remove:
  - Side Covers (see Side Cover Removal)
  - Seat (see Seat Removal)
  - Carrier (see Carrier Removal)
- Remove the rear fender mounting bolts [A].
- Disconnect the license light lead connector, and remove the rear fender rear [B].

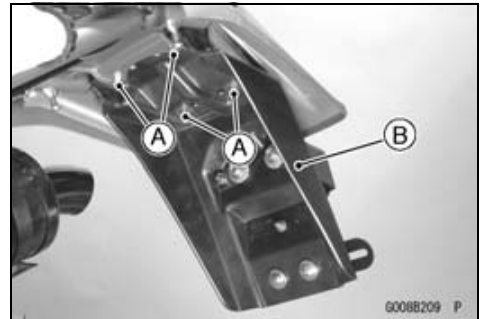

- Disconnect the tail/brake light plugs [A].
- Remove the fender mounting bolts [B], and remove the rear fender [C] with tail/brake light.

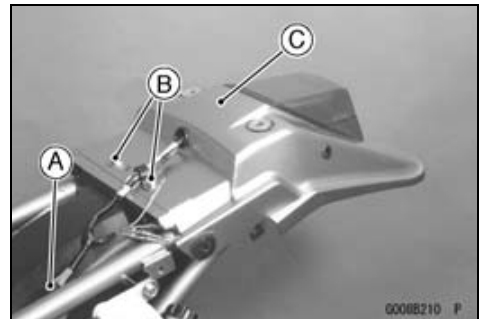


- Remove:
  - IC Igniter [A]
  - Battery Pusher Plate [B]
  - Battery [C]
  - Junction Box [D]
  - Turn Signal Relay [E]
  - Coolant Reserve Tank [F]
  - Regulator/Rectifier [G]
  - Starter Relay
  - Rear Brake Reservoir

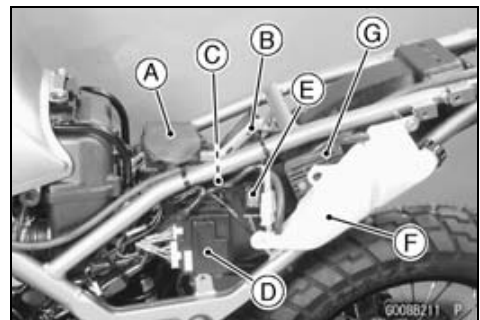

## 15-10 FRAME

### Fenders

- Remove the fender mounting bolts [A], and remove the rear fender front [B] backward.

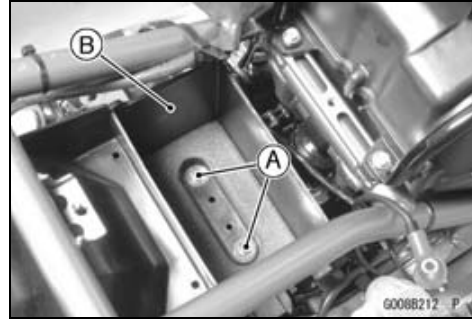

#### *Fender Installation Note*

- Fender installation is the reverse of removal.
- Connect the tail/brake light leads and licence light lead correctly.

---

**Frame**


---

*Frame Inspection*

- Visually inspect the frame [A] for cracks, dents, bending, or warp.
- ★ If there is any damage to the frame, replace it.

**⚠ WARNING**

**A repaired frame may fail in use, possibly causing an accident. If the frame is bent, dented, cracked, or warped, replace it.**

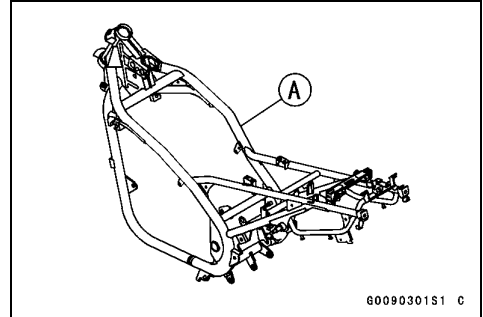


## 15-12 FRAME

### Guard, Carrier


#### *Engine Guard Removal*

- Remove the engine guard mounting bolts [A], and remove the engine guard [B].

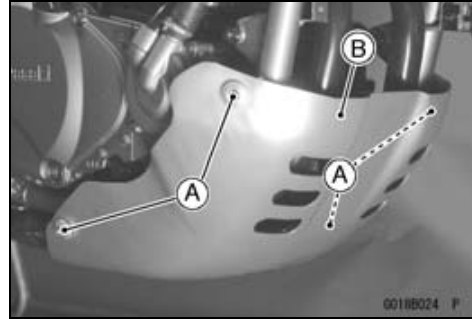

#### *Carrier Removal*

- Remove the seat (see Seat Removal).
- Disconnect the turn signal connectors [A].
- Remove the carrier mounting bolts [B], and remove the carrier [C] with the turn signals installed to the carrier stays [D].

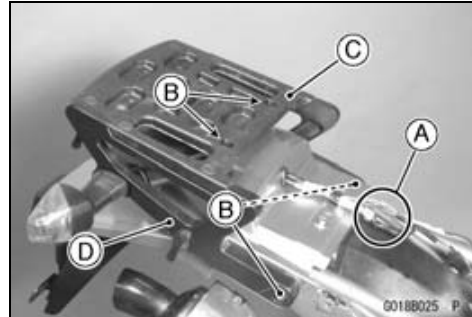

#### *Carrier Installation*

- Connect the turn signal lead correctly as follows.

**Left Turn Signal Leads – BK/Y-BK/Y  
G-G**

**Right Turn Signal Leads – BK/Y-BK/Y  
G-GY**

**Torque - Carrier Stay Mounting Bolts: 25 N·m (2.5 kgf·m, 18 ft·lb)**

# Electrical System

## Table of Contents

Parts Location.....	16-3	Starter Motor Assembly .....	16-45
Exploded View.....	16-4	Brush Inspection .....	16-46
Specifications .....	16-10	Brush Spring Inspection.....	16-46
Special Tools and Sealant.....	16-12	Commutator Cleaning and	
KLE500-B1 Wiring Diagram .....	16-14	Inspection.....	16-46
Precautions.....	16-16	Armature Inspection.....	16-47
Electrical Wiring.....	16-18	Brush Plate Inspection.....	16-47
Wiring Inspection .....	16-18	Starter Chain Guide Wear.....	16-47
Battery .....	16-19	Starter Relay Inspection.....	16-48
Battery Removal/Installation .....	16-19	Lighting System.....	16-49
Battery Activation .....	16-19	Headlight Beam Horizontal	
Precautions.....	16-21	Adjustment .....	16-49
Interchange.....	16-22	Headlight Beam Vertical	
Charging Condition Inspection .....	16-22	Adjustment .....	16-49
Refreshing Charge .....	16-23	Headlight Bulb Replacement .....	16-50
Charging System.....	16-24	Headlight Unit/Housing Removal .....	16-50
Alternator Rotor/Starter Clutch		Headlight Unit/Housing	
Removal.....	16-24	Installation .....	16-51
Starter Clutch Sprocket Removal.....	16-25	City Light Bulb Replacement.....	16-51
Starter Clutch Sprocket		Tail/Brake Light Bulb	
Installation .....	16-25	Replacement.....	16-51
Alternator Rotor/Starter Clutch		Tail/Brake Light Lens	
Installation .....	16-26	Removal/Installation.....	16-52
Alternator Stator Removal.....	16-26	Turn Signal Light Bulb	
Alternator Stator Installation.....	16-27	Replacement.....	16-52
Alternator Inspection .....	16-27	Turn Signal Relay Inspection .....	16-52
Regulator/Rectifier Removal .....	16-28	Radiator Fan System .....	16-54
Regulator/Rectifier Output		Fan System Circuit Inspection .....	16-54
Voltage Inspection.....	16-28	Fan Motor Inspection .....	16-54
Regulator/Rectifier Inspection.....	16-29	Meter Unit .....	16-55
Ignition System.....	16-33	Meter Unit Removal .....	16-55
Crankshaft Sensor Removal .....	16-34	Meter Unit Disassembly.....	16-55
Crankshaft Sensor Installation.....	16-34	Tachometer Inspection.....	16-56
Crankshaft Sensor Inspection.....	16-34	Bulb Replacement.....	16-56
Ignition Coil Removal/Installation.....	16-35	Water Temperature Warning	
Ignition Coil Inspection.....	16-35	System Inspection.....	16-57
Ignition Timing Inspection .....	16-36	Switches and Sensors .....	16-59
Spark Plug Removal/Installation .....	16-36	Brake Light Switch Inspection.....	16-59
Spark Plug Gap Inspection .....	16-36	Switch Inspection .....	16-59
IC Igniter Removal .....	16-37	Radiator Fan Switch Inspection .....	16-60
IC Igniter Inspection .....	16-37	Water Temperature Switch	
Diodes Inspection .....	16-41	Inspection.....	16-61
Electric Starter System.....	16-43	Junction Box.....	16-62
Starter Motor Removal.....	16-44	Junction Box Fuse Circuit	
Starter Motor Installation.....	16-44	Inspection.....	16-62
Starter Motor Disassembly.....	16-44		


## 16-2 ELECTRICAL SYSTEM

---

Starter Circuit/Headlight Relay		30 A Main Fuse Removal.....	16-65
Inspection.....	16-62	Junction Box Fuse Removal .....	16-65
Diode Circuit Inspection .....	16-63	Junction Box Fuse Installation .....	16-65
Fuses.....	16-65	Fuse Inspection.....	16-65



## Parts Location

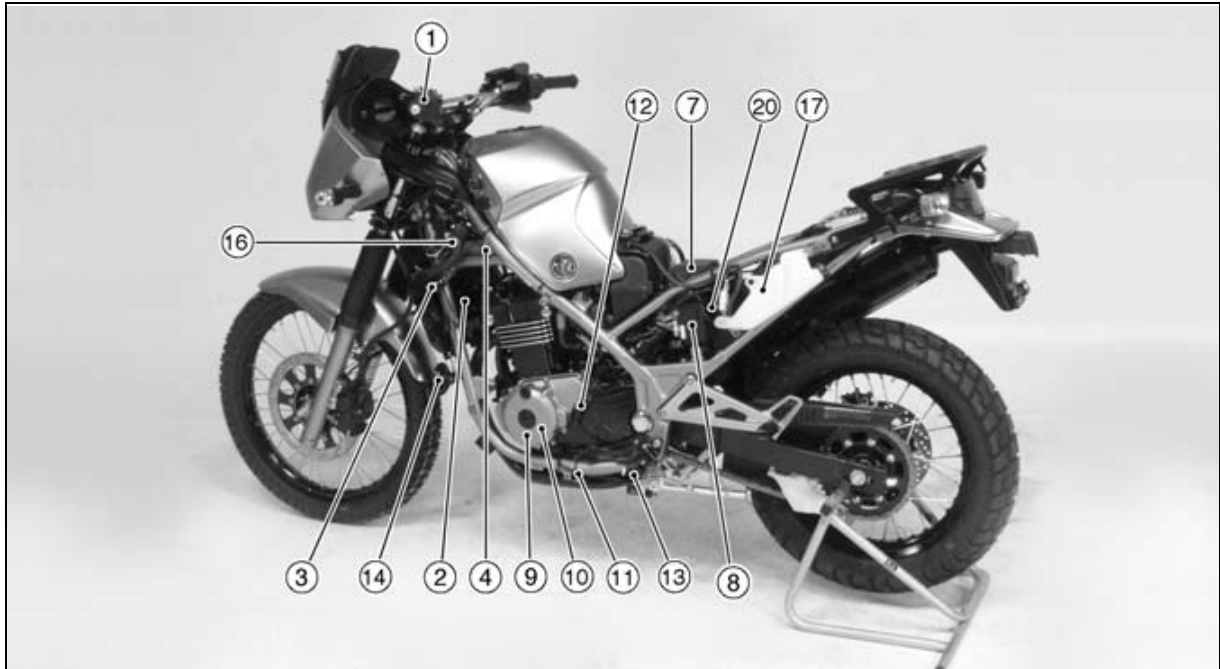


GPO4B110 P

- |                           |                              |
|---------------------------|------------------------------|
| 1. Starter Lockout Switch | 13. Sidestand Switch         |
| 2. Radiator Fan           | 14. Horn                     |
| 3. Radiator Fan Switch    | 15. Spark Plugs              |
| 4. #1 Ignition Coil       | 16. Water Temperature Switch |
| 5. Starter Motor          | 17. Regulator/Rectifier      |
| 6. Sealed Battery         | 18. Main Fuse 30 A           |
| 7. IC Igniter             | 19. Starter Relay            |
| 8. Junction Box           | 20. Turn Signal Relay        |
| 9. alternator             | 21. Rear Brake Light Switch  |
| 10. Crankshaft Sensor     | 22. Front Brake Light Switch |
| 11. Oil Pressure Switch   | 23. Ignition Switch          |
| 12. Neutral Switch        | 24. #2 Ignition Coil         |

# 16-4 ELECTRICAL SYSTEM

## Exploded View

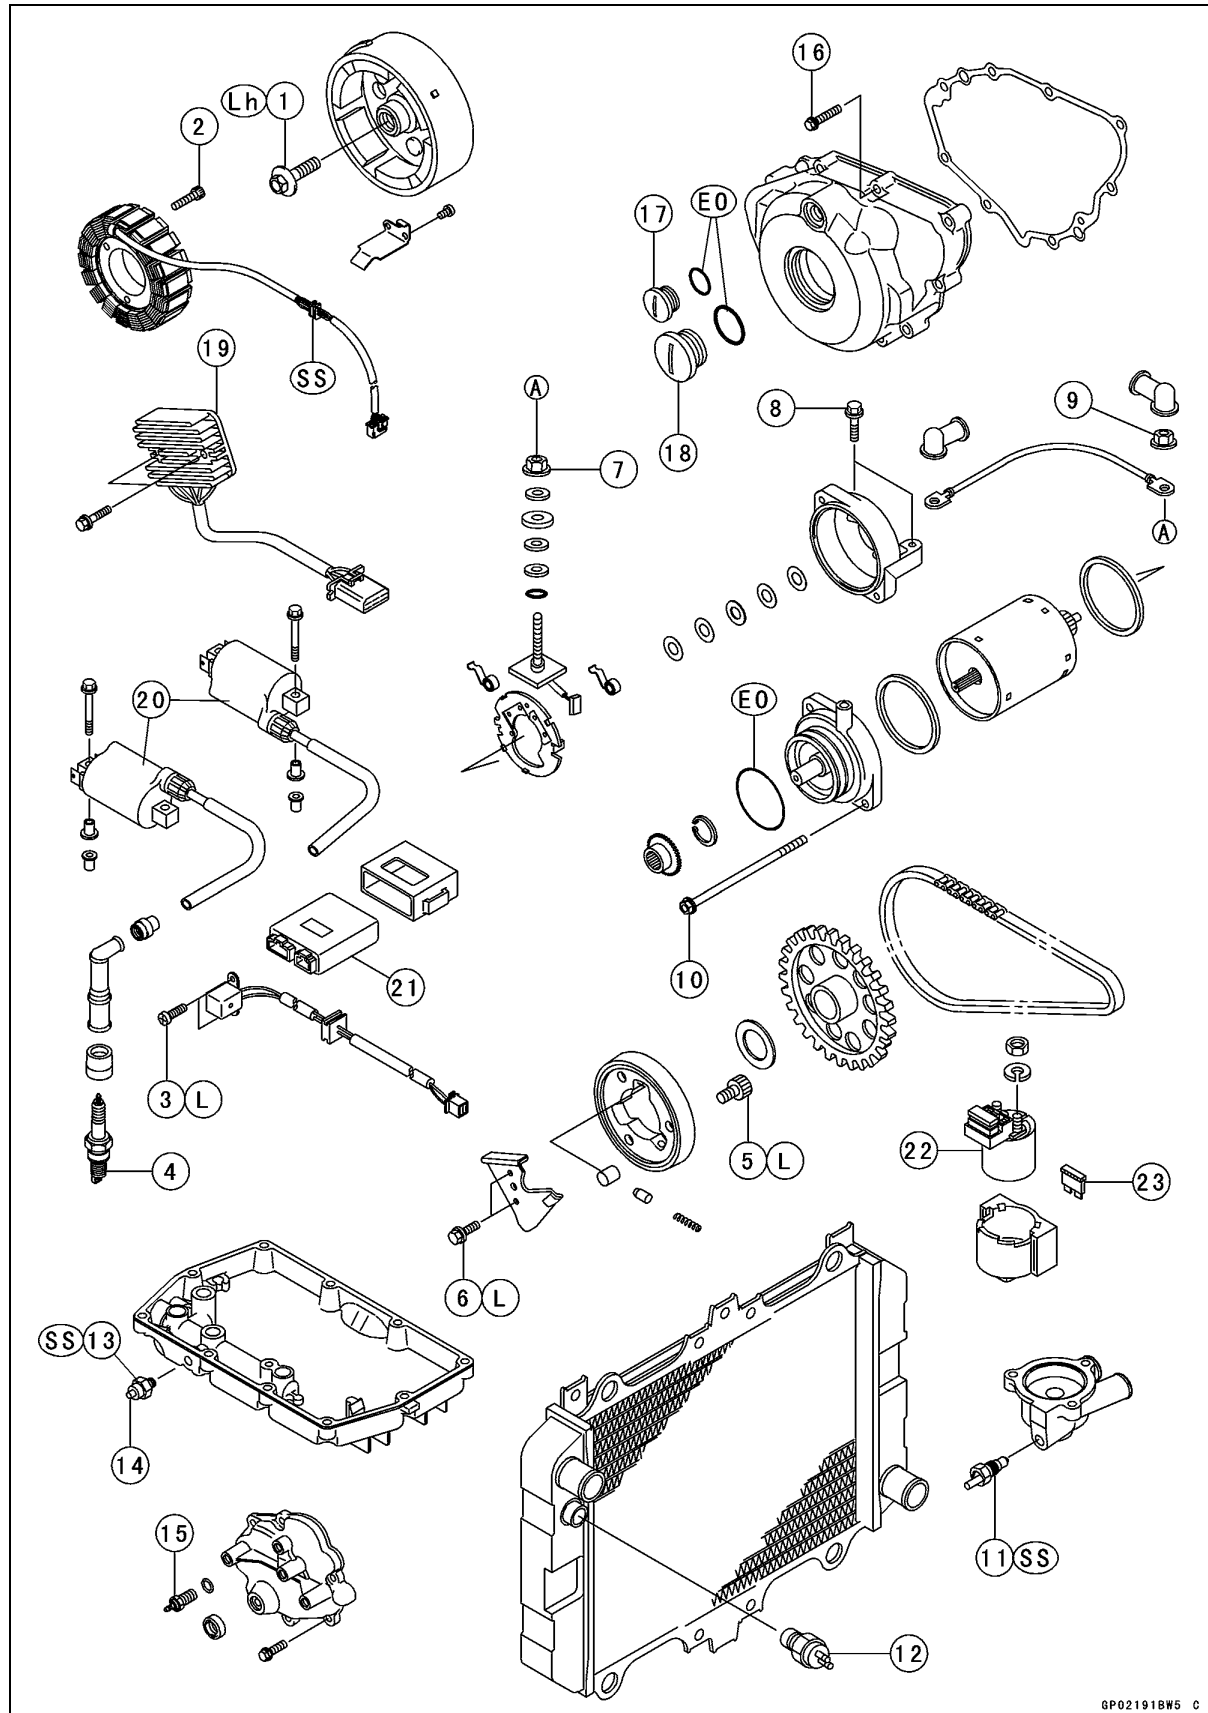

GP021918W5 C

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Alternator Rotor Bolt	69	7.0	51	Lh
2	Alternator Stator Allen Bolts	12	1.2	104 in·lb	
3	Crankshaft Sensor Mounting Screws	8.3	0.85	74 in·lb	L
4	Spark Plugs	14	1.4	10	
5	Starter Clutch Allen Bolts	34	3.5	25	L
6	Starter Chain Guide Bolts	4.9	0.5	43 in·lb	L
7	Starter Motor Terminal Nut	4.9	0.5	43 in·lb	
8	Starter Motor Mounting Bolts	11	1.1	95 in·lb	
9	Starter Motor Lead Clamp Nut	4.9	0.5	43 in·lb	
10	Starter Motor Through Bolts	6.9	0.7	65 in·lb	
11	Water Temperature Switch	7.8	0.8	69 in·lb	SS
12	Radiator Fan Switch	18	1.8	13	
13	Oil Pressure Switch	15	1.5	11	SS
14	Oil Pressure Switch Terminal Bolt	1.5	0.15	13 in·lb	
15	Neutral Switch	15	1.5	11	
16	Alternator Cover Bolts	11	1.1	95 in·lb	
17	Timing Inspection Plug	2.5	0.25	22 in·lb	
18	Alternator Rotor Bolt Plug	1.5	0.15	13 in·lb	

19. Regulator/Rectifier

20. Ignition Coils

21. IC Igniter

22. Starter Relay

23. Main Fuse 30 A

EO: Apply engine oil.


L: Apply a non-permanent locking agent.

Lh: Left-hand Thread

SS: Apply Silicone Sealant.

# 16-6 ELECTRICAL SYSTEM

## Exploded View

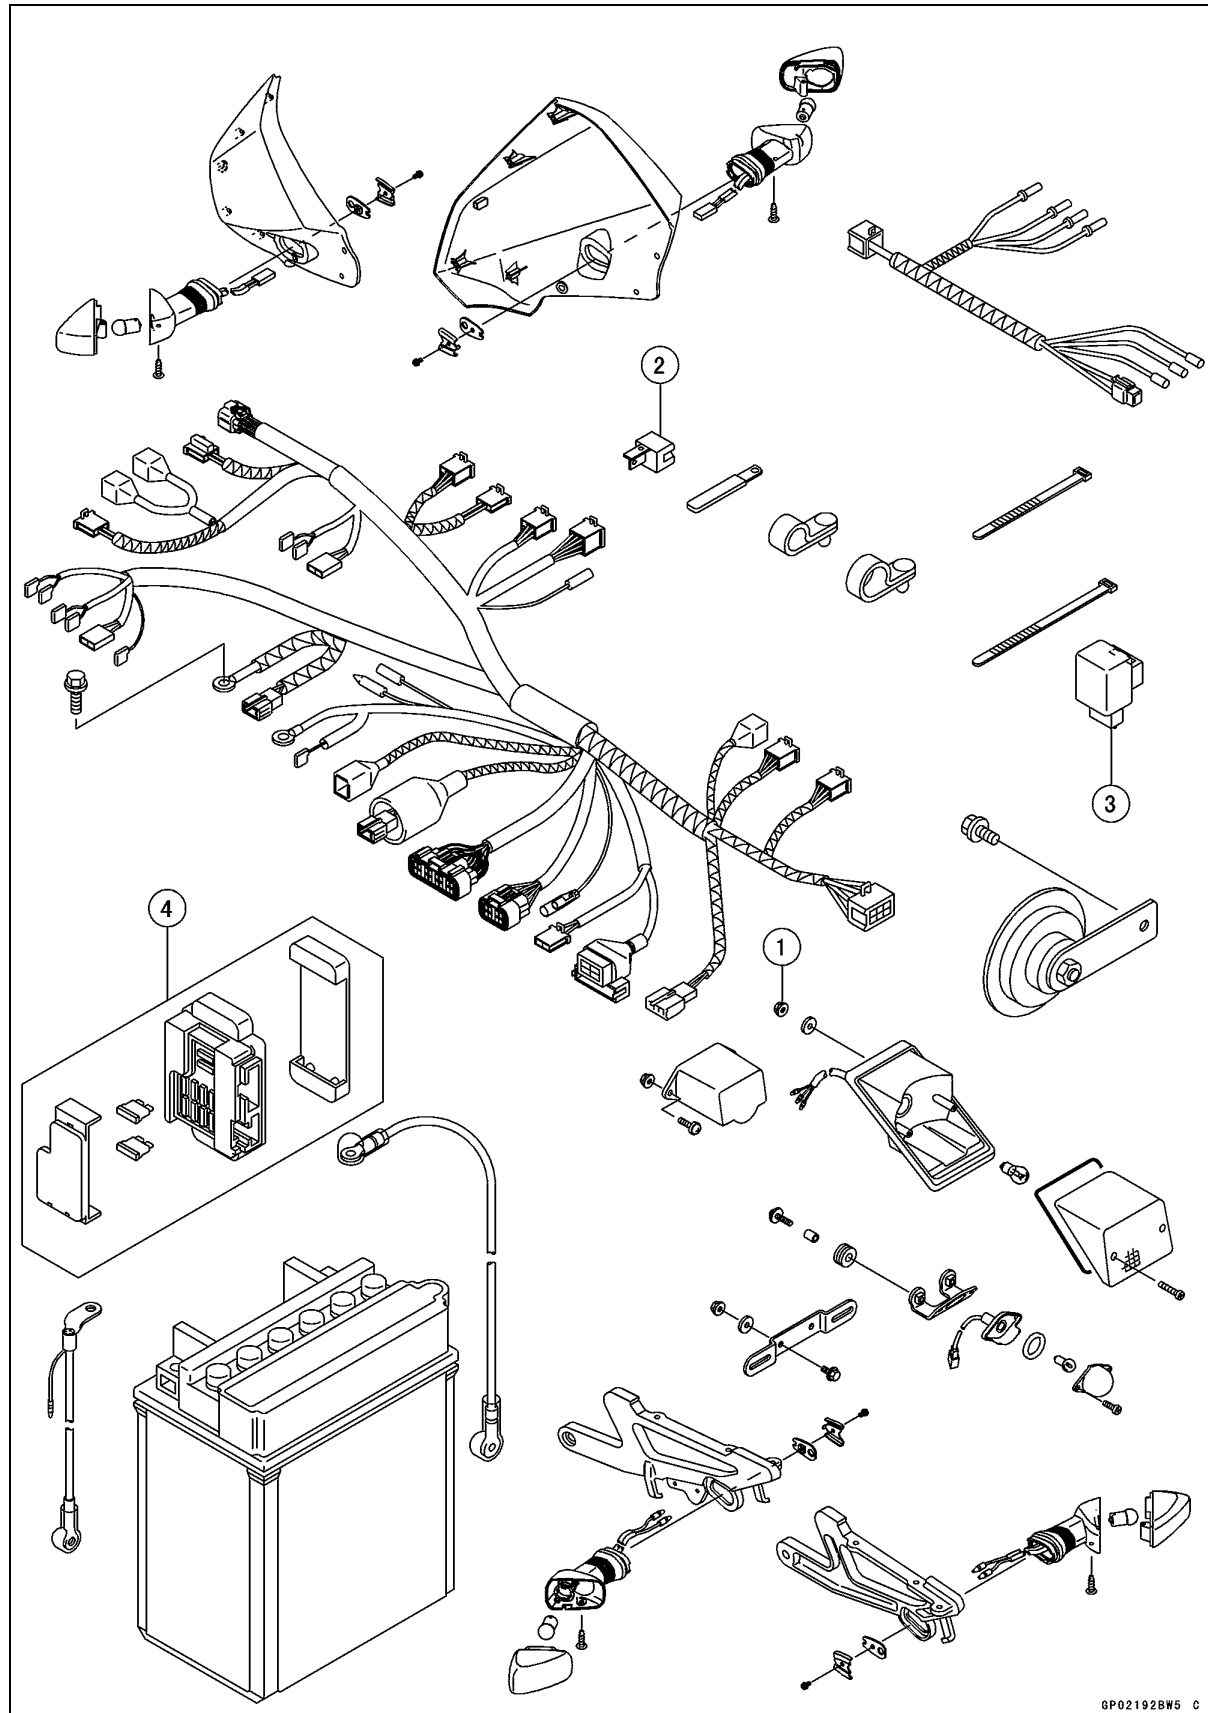

GP02192BW5 C

## ELECTRICAL SYSTEM 16-7


### Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Tail Light Mounting Nuts	5.9	0.6	52 in·lb	

2. Rectifier
3. Turn Signal Relay
4. Junction Box

# 16-8 ELECTRICAL SYSTEM

## Exploded View

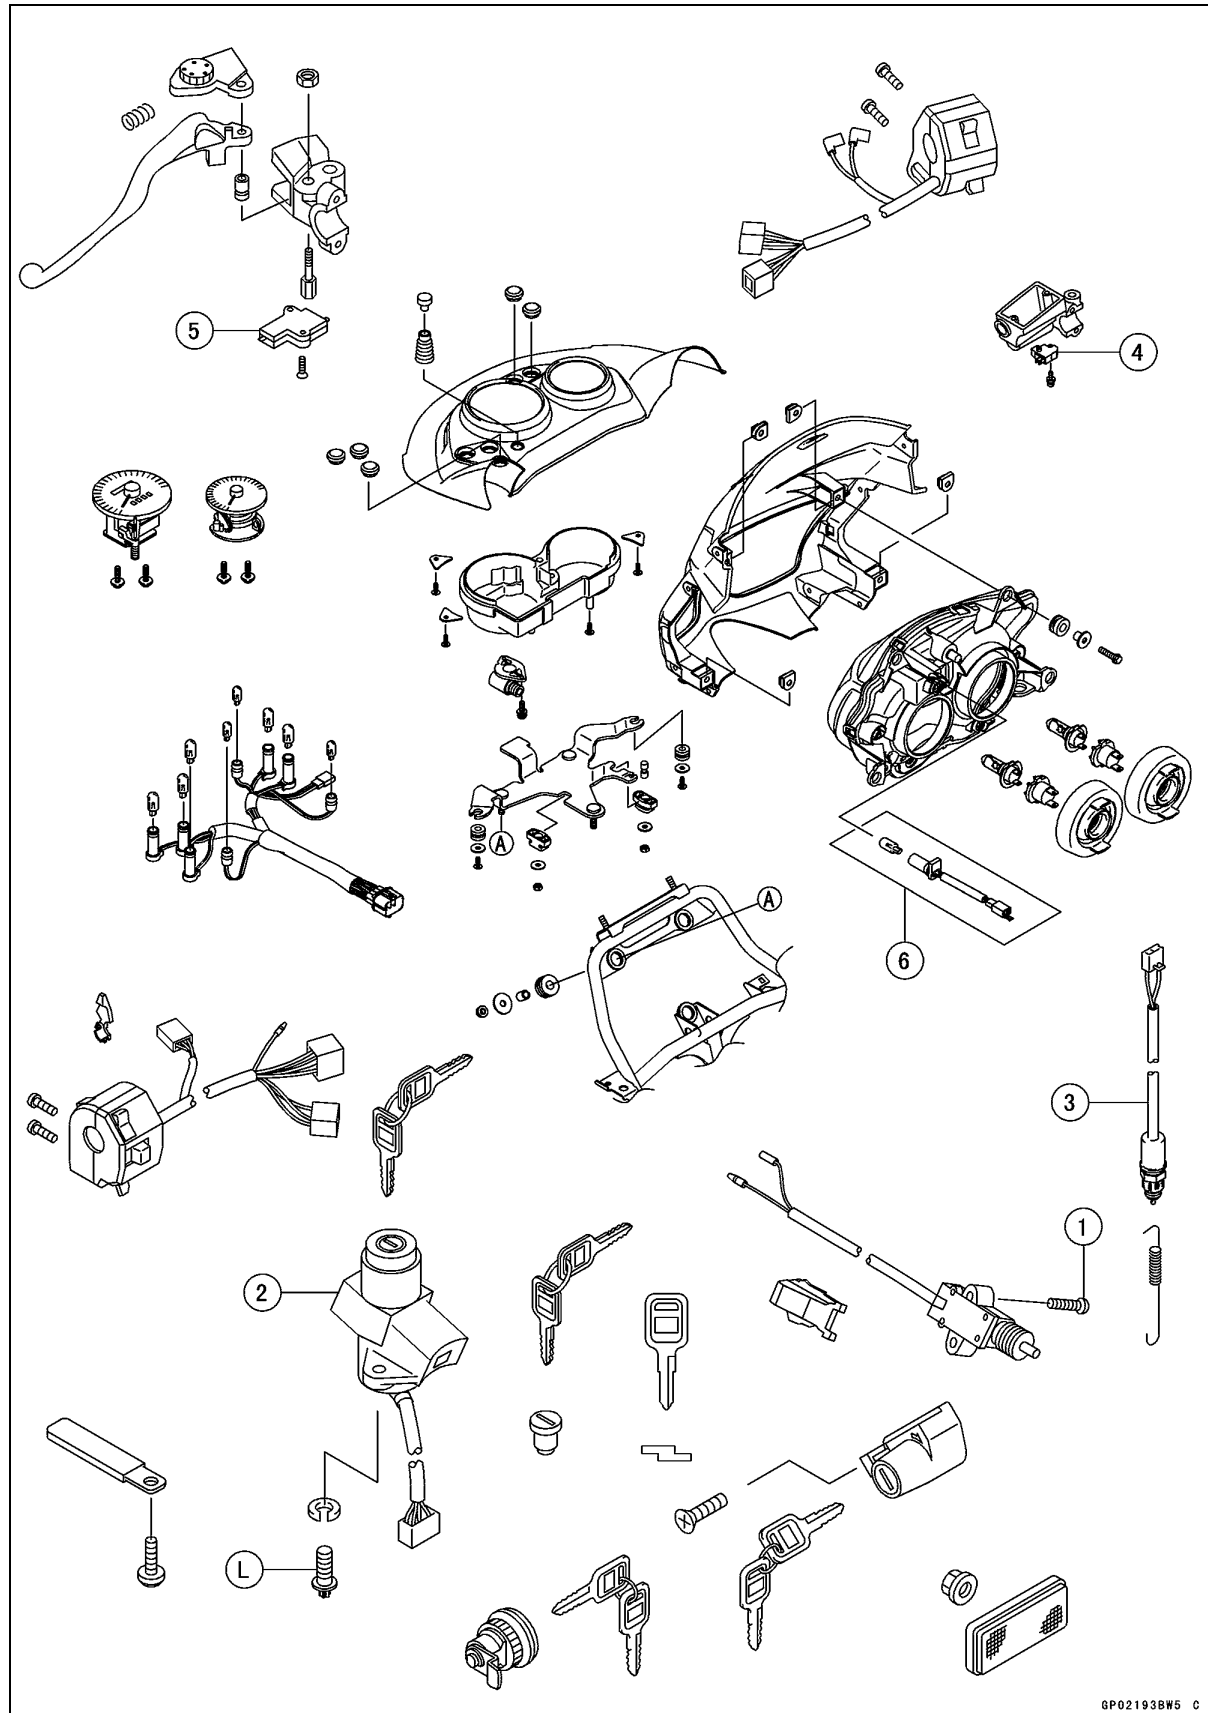

GP02193BW5 C

## Exploded View

No.	Fastener	Torque			Remarks
		N·m	kgf·m	ft·lb	
1	Side Stand Switch Mounting Screw	3.9	0.4	35 in·lb	L

2. Ignition Switch

3. Rear Brake Light Switch

4. Front Brake Light Switch

5. Starter Lockout Switch

6. City Light

L: Apply a non-permanent locking agent.

## 16-10 ELECTRICAL SYSTEM

### Specifications

Item	Standard	Service Limit
<b>Battery</b>		
Type	Sealed Battery	---
Capacity	12 V 10 Ah	---
Voltage	12.8 V or more	---
<b>Charging System</b>		
Alternator Type	Three-phase AC	---
DC Battery Charging Voltage	14 ~ 15 V @4 000 r/min (rpm)	---
Alternator Output Voltage	46 ~ 64 V @4 000 r/min (rpm)	---
Stator Coil Resistance	0.37 ~ 0.46 $\Omega$ ( $\times$ 1 $\Omega$ )	---
Regulator/rectifier		
Type	Load dumping regulator with full-wave rectifier	---
Resistance	in the text	---
<b>Ignition System</b>		
Crankshaft Sensor Resistance	113 ~ 139 $\Omega$ ( $\times$ 100 $\Omega$ )	---
Crankshaft Sensor Peak Voltage	3 V or more	---
Ignition Coil:		
3 Needle Arcing Distance	8 mm (0.32 in.) or more	---
Primary Winding Resistance	2.6 ~ 3.1 $\Omega$ ( $\times$ 1 $\Omega$ )	---
Secondary Winding Resistance	13.5 ~ 16.5 k $\Omega$ ( $\times$ 1 k $\Omega$ )	---
Primary Peak Voltage	100 V or more	---
Spark Plug:		
Standard	NGKDR9EA, NDX27ESR-U	---
Spark Plug Gap	0.6 ~ 0.7 mm (0.024 ~ 0.028 in.)	---
Spark Plug Cap Resistance	3.0 ~ 7.5 k $\Omega$ ( $\times$ 1 k $\Omega$ )	---
<b>Electric Starter System</b>		
Starter Motor:		
Brush Length	12.0 ~ 12.5 mm (0.47 ~ 0.49 in.)	8.5 mm (0.34 in.)
Commutator Diameter	28 mm (1.10 in.)	27 mm (1.06 in.)
<b>Switch and Sensor</b>		
Front Brake Light Switch Timing	ON after about 10 mm (0.39 in.) lever travel	---
Rear Brake Light Switch Timing	ON after about 15 mm (0.59 in.) pedal travel	---
Engine Oil Pressure Switch	When engine is stopped: ON	---
Connections	When engine is running: OFF	---
Radiator Fan Switch connections:		
Rising Temperature	From OFF to ON @96 ~ 100°C (205 ~ 212°F)	---
Falling Temperature	From ON to OFF @91°C (196°F) ~ temperature less than ON temperature	---
ON: less than 0.5 $\Omega$		
OFF: More than 1 M $\Omega$		
Water Temperature Switch		
Connections:		
Rising Temperature	From OFF to ON @113 ~ 117°C (235 ~ 243°F)	---



## ELECTRICAL SYSTEM 16-11


### Specifications

Item	Standard	Service Limit
Falling Temperature	From ON to OFF @108°C (226°F) ~ temperature less than ON ON: Less than 0.5 $\Omega$ OFF: More than 1 M $\Omega$	- - -


# 16-12 ELECTRICAL SYSTEM

## Special Tools and Sealant


**Outside Circlip Pliers:**  
57001-144

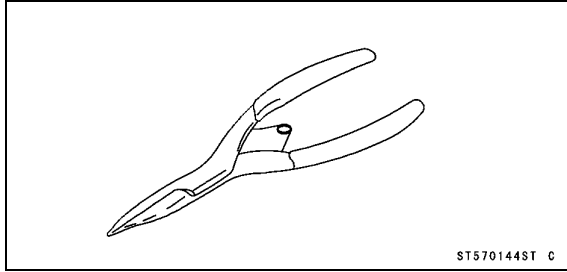


**Harness Adapter #1:**  
57001-1381

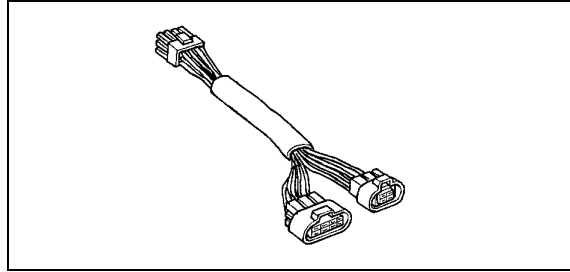


**Spark Plug Wrench, Hex 18:**  
57001-1024

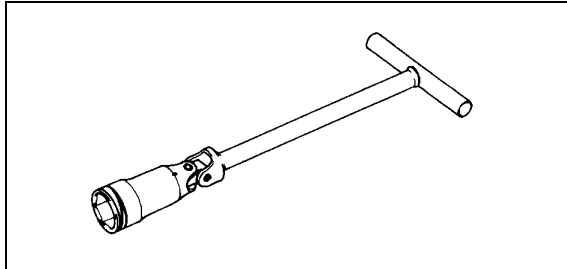


**Hand Tester:**  
57001-1394

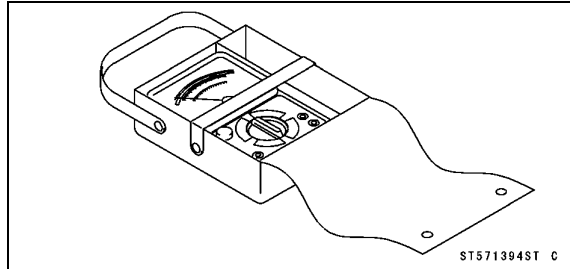


**Rotor Puller, M16/M18/M20/M22 x 1.5:**  
57001-1216

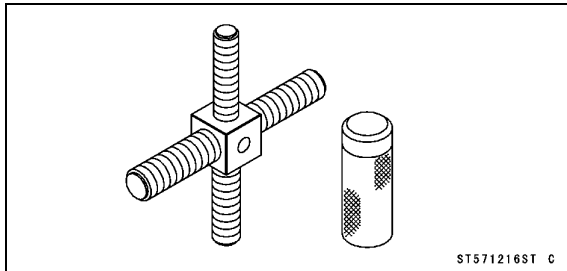


**Flywheel Holder:**  
57001-1410

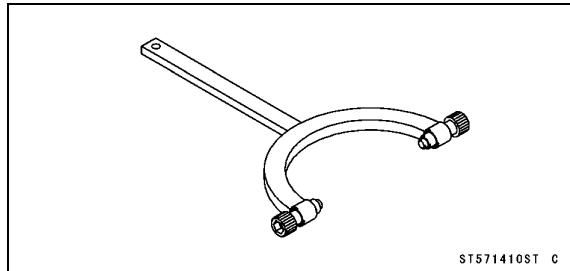


**Timing Light:**  
57001-1241

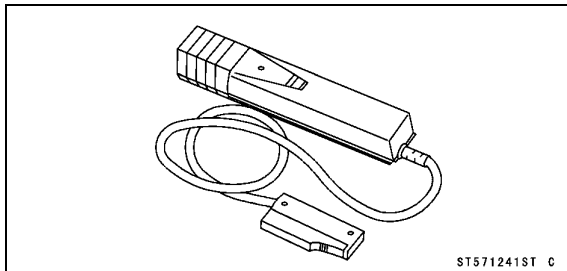


**Peak Voltage Adapter:**  
57001-1415

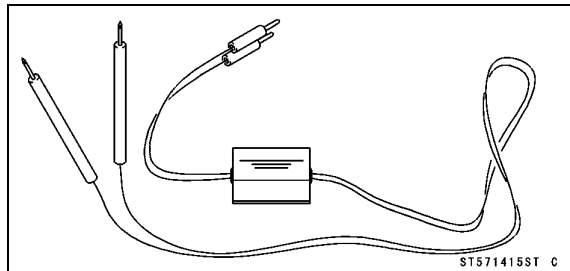

**Igniter Checker Assembly:**  
57001-1378

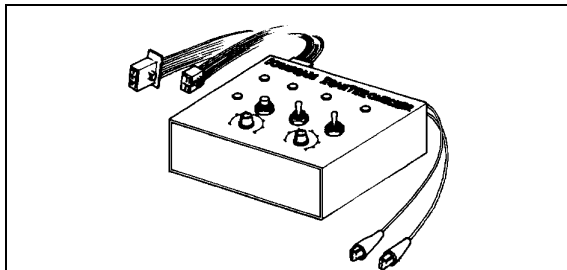


**Filler Cap Driver:**  
57001-1454

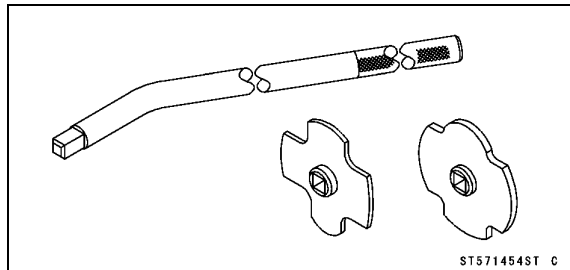


**Special Tools and Sealant**


**Needle Adapter Set:  
57001-1457**

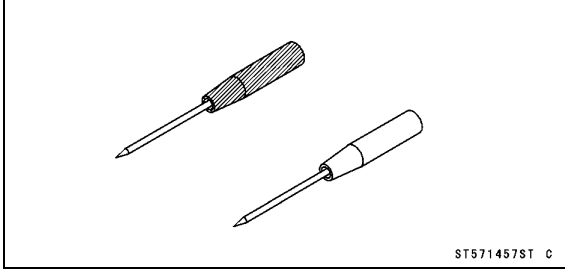

**Kawasaki Bond (Liquid Gasket - Gray):  
92104-1063**

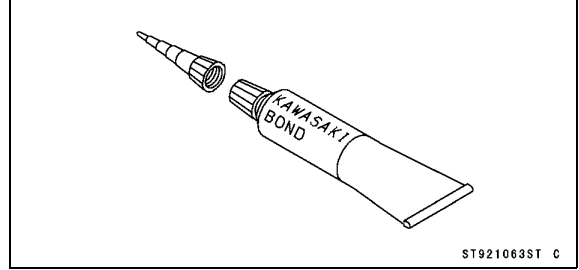


**Kawasaki Bond (Silicone Sealant):  
56019-120**

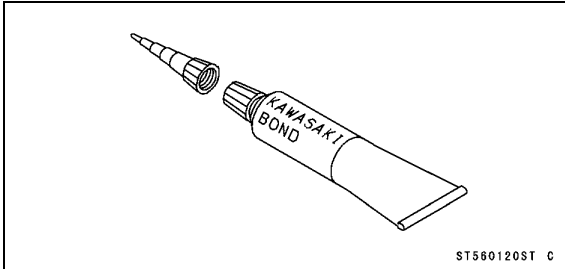


# 16-14 ELECTRICAL SYSTEM

## KLE500-B1 Wiring Diagram

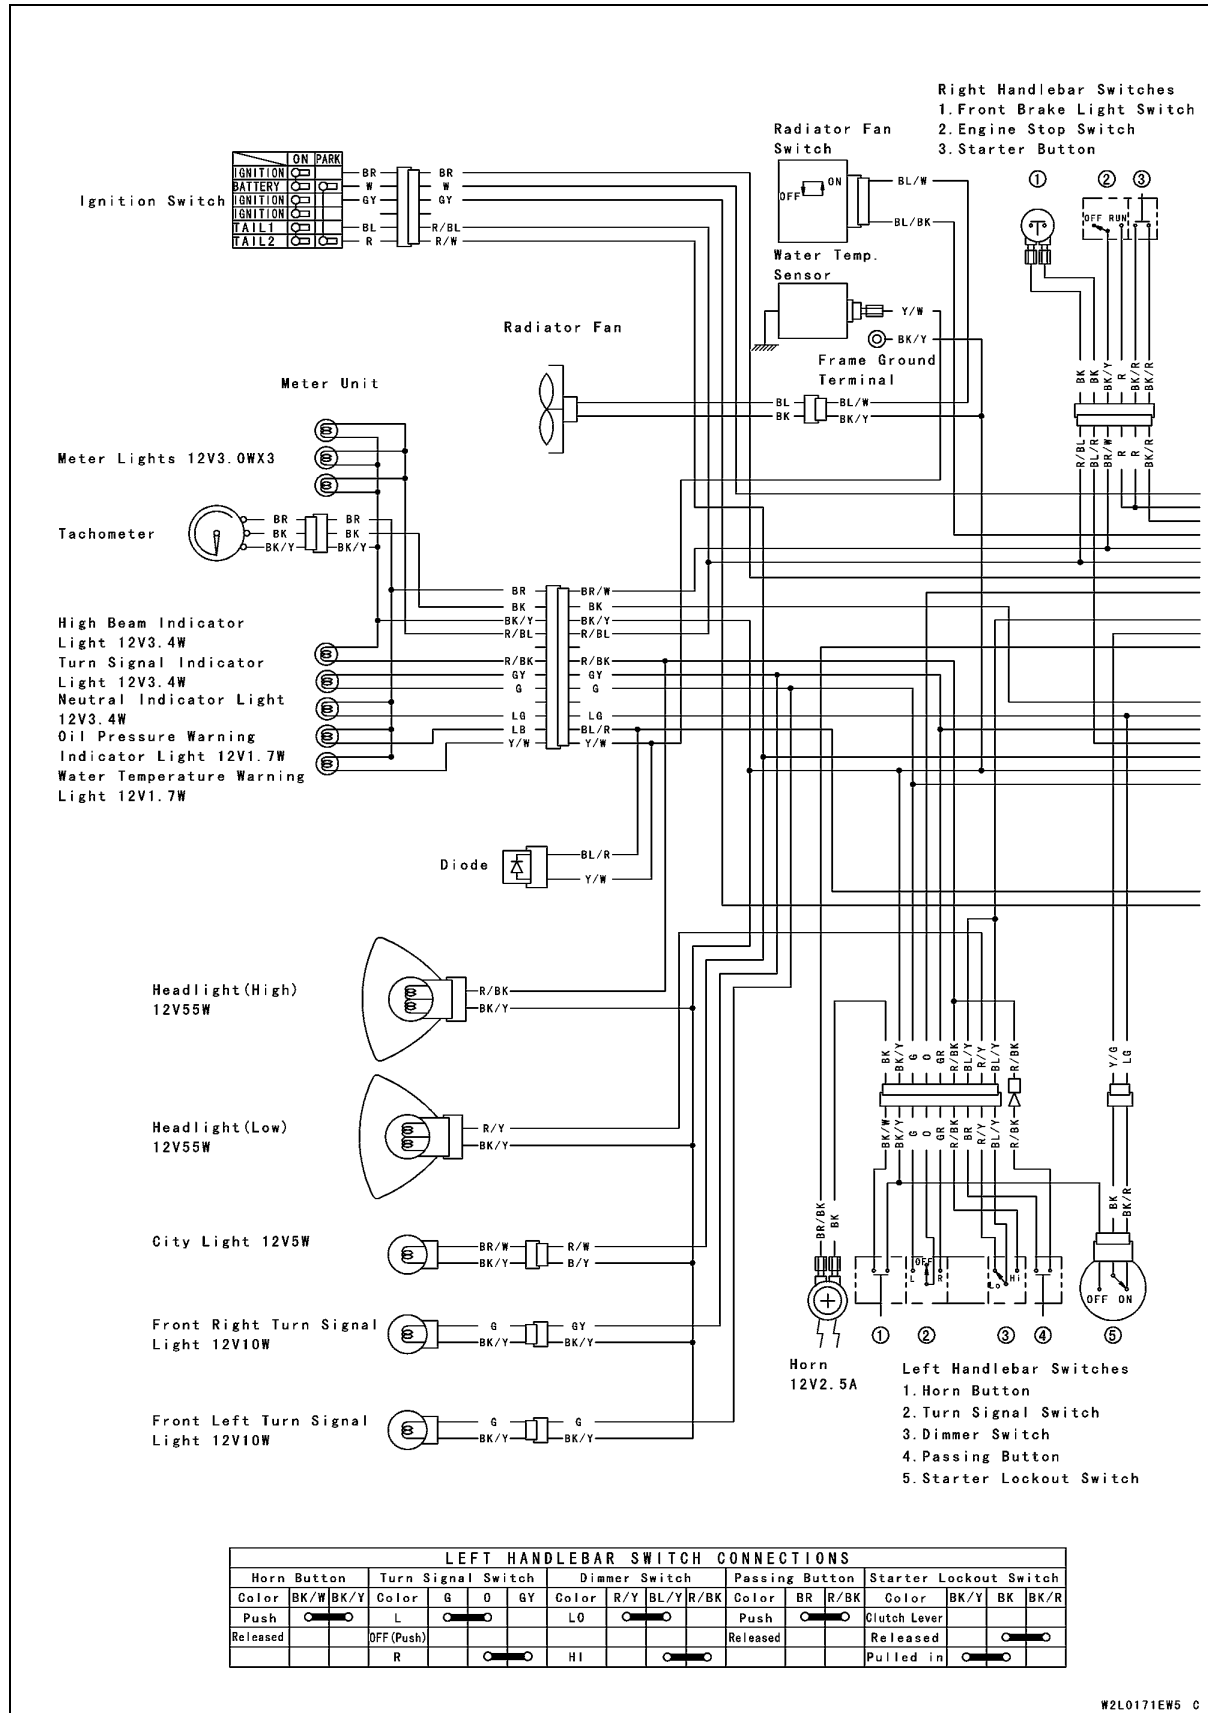

## KLE500-B1 Wiring Diagram

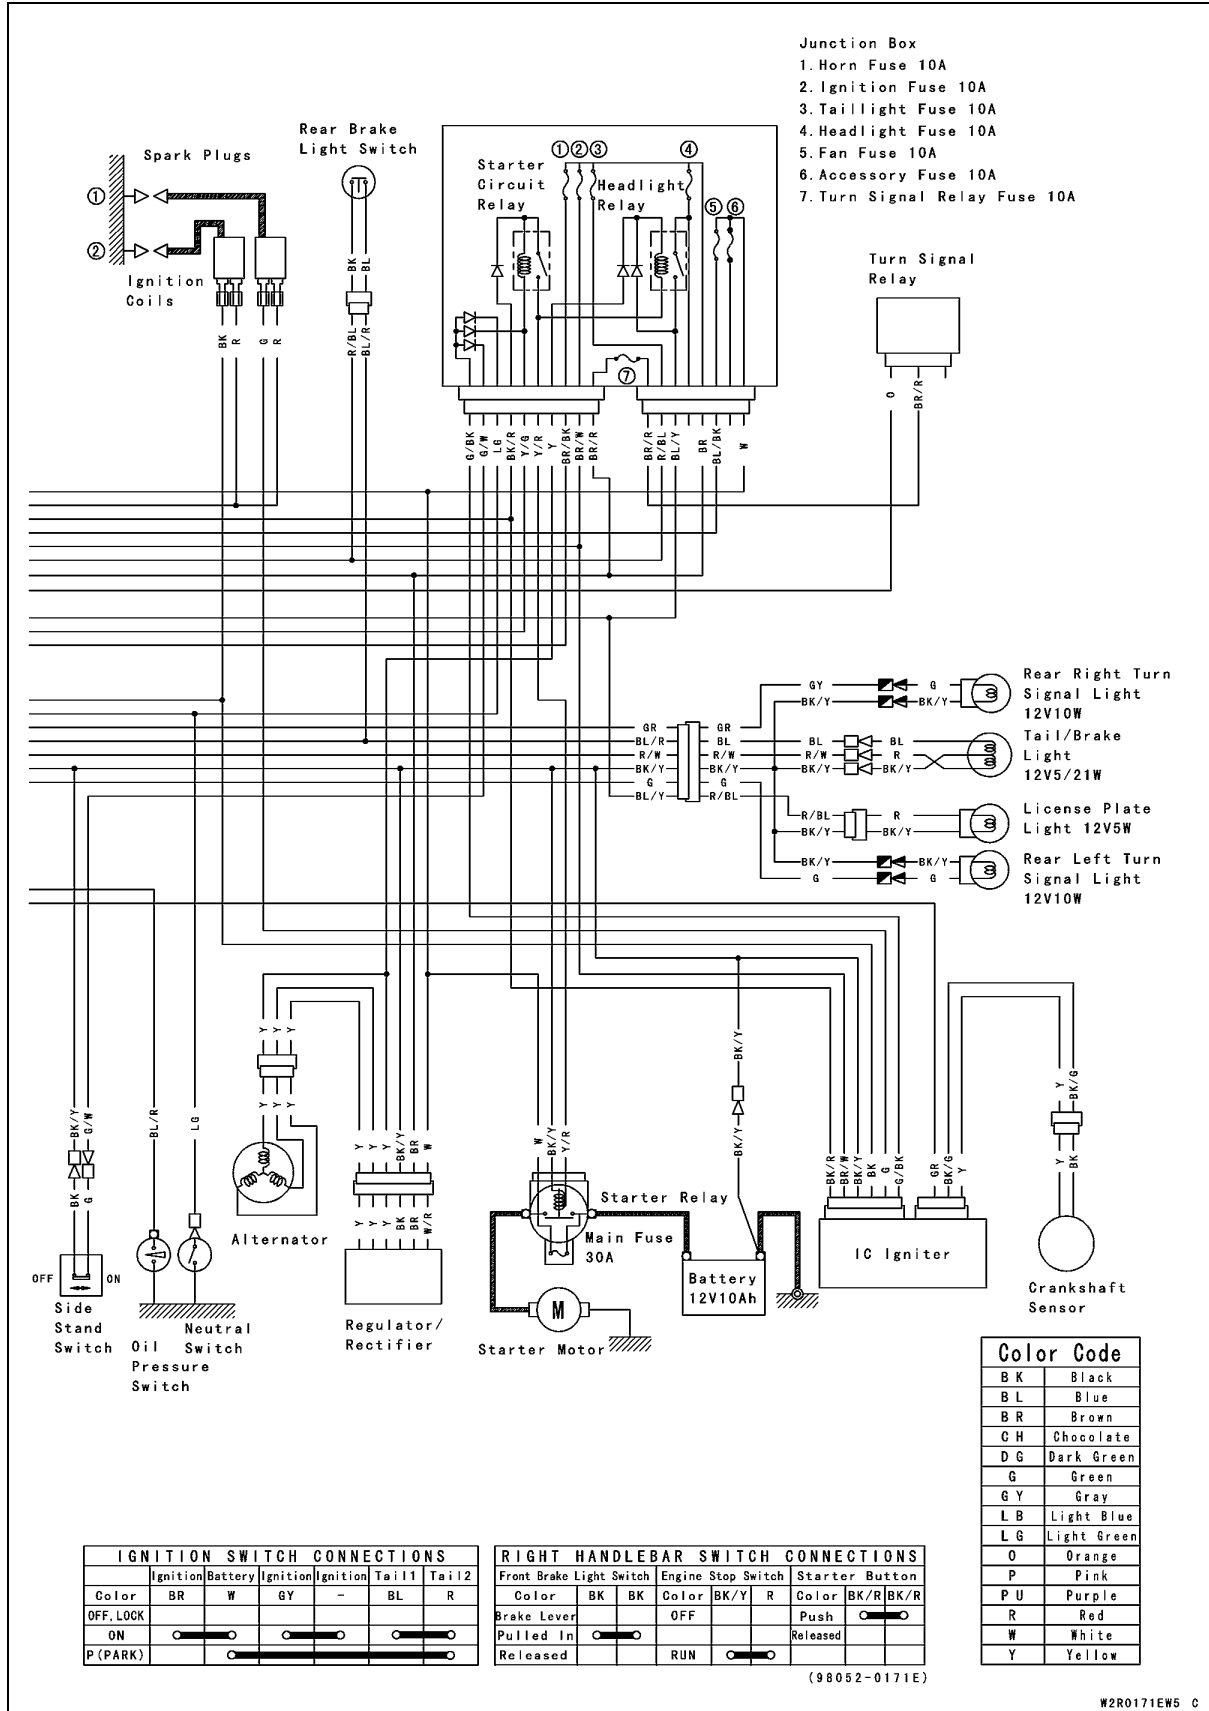

## 16-16 ELECTRICAL SYSTEM

### Precautions

There are a number of important precautions that are musts when servicing electrical systems. Learn and observe all the rules below.


- Do not reverse the battery lead connections. This will burn out the diodes in the electrical parts.
- Always check battery condition before condemning other parts of an electrical system. A fully charged battery is a must for conducting accurate electrical system tests.
- The electrical parts should never be struck sharply, as with a hammer, or allowed to fall on a hard surface. Such a shock to the parts can damage them.
- To prevent damage to electrical parts, do not disconnect the battery leads or any other electrical connections when the ignition switch is on, or while the engine is running.
- Because of the large amount of current, never keep the starter button pushed when the starter motor will not turn over, or the current may burn out the starter motor windings.
- Do not use a meter illumination bulb rated for other than voltage or wattage specified in the wiring diagram, as the meter or gauge panel could be warped by excessive heat radiated from the bulb.
- Take care not to short the leads that are directly connected to the battery positive (+) terminal to the chassis ground.
- Troubles may involve one or in some cases all items. Never replace a defective part without determining what CAUSED the failure. If the failure was caused by some other item or items, they too must be repaired or replaced, or the new replacement will soon fail again.
- Make sure all connectors in the circuit are clean and tight, and examine wires for signs of burning, fraying, etc. Poor wires and bad connections will affect electrical system operation.
- Measure coil and winding resistance when the part is cold (at room temperature).

#### ○ Color Codes

BK: Black	G: Green	P: Pink
BL: Blue	GY: Gray	PU: Purple
BR: Brown	LB: Light blue	R: Red
CH: Chocolate	LG: Light green	W: White
DG: Dark green	O: Orange	Y: Yellow


#### ○ Electrical Connectors

##### Female Connectors [A]

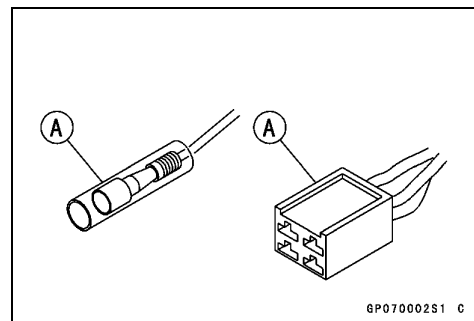

**Precautions**

Male Connectors [B]

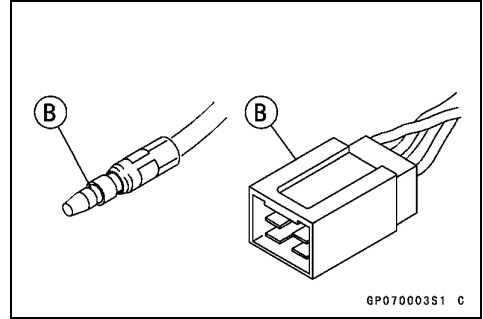


## 16-18 ELECTRICAL SYSTEM

### Electrical Wiring

#### *Wiring Inspection*

- Visually inspect the wiring for signs of burning, fraying, etc.
- ★ If any wiring is in poor condition, replace the damaged wiring.
- Pull each connector [A] apart and inspect it for corrosion, dirt, and damage.
- ★ If the connector is corroded or dirty, clean it carefully. If it is damaged, replace it.
- Check the wiring for continuity.
- Use the wiring diagram to find the ends of the lead which is suspected of being a problem.
- Connect an ohmmeter between the ends of the leads.
- Set the meter to the  $\times 1 \Omega$  range, and read the meter.
- ★ If the meter does not read  $0 \Omega$ , the lead is defective. Replace the lead or the wiring harness [B], [C] if necessary.



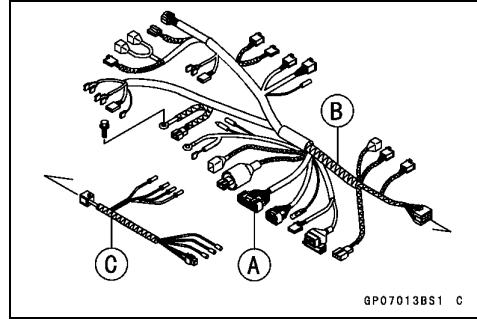




## Battery

### Battery Removal/Installation

- Remove:
    - Seat (see Seat Removal in the Frame Chapter)
  - Remove the rubber IC igniter cover [A] with the igniter connected.
  - Remove the battery pusher [B] by taking off the bolt [C] and nut [D].
- 
- Remove the negative (-) lead [A] from the battery first.
  - Remove the positive (+) lead [B] from the battery and pull out the battery.

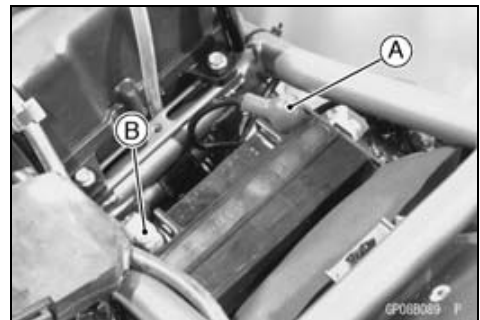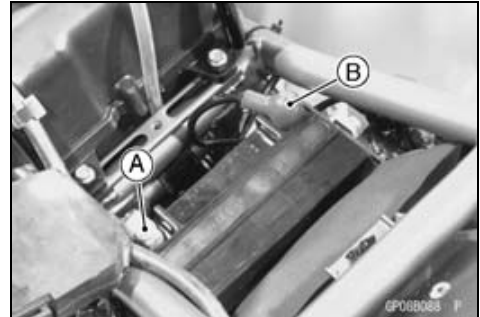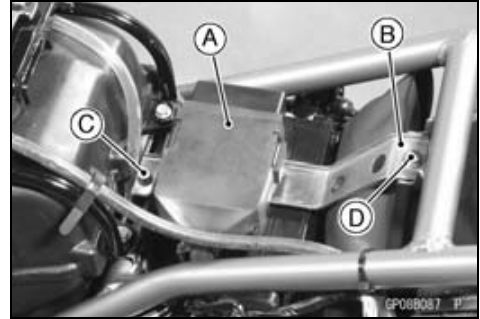

- When installing, connect the positive (+) lead first [A], then the negative (-) lead [B] to the battery.

### Battery Activation


#### Electrolyte Filling

- Make sure that the model name [A] of the electrolyte container matches the model name [B] of the battery. These names must be the same.

**Battery Model Name for LE500B: YTX12-BS**

#### CAUTION

Be sure to use the electrolyte container with the same model name as the battery since the electrolyte volume and specific gravity vary with the battery type. This is to prevent overfilling of the electrolyte, shorting the battery life, and deterioration of the battery performance.

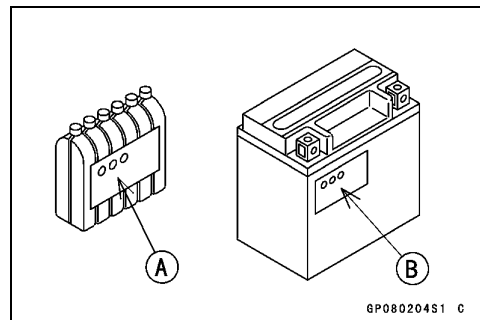

# 16-20 ELECTRICAL SYSTEM

## Battery

### CAUTION

Do not remove the aluminum sealing sheet [A] from the filler ports [B] until just prior to use. Be sure to use the dedicated electrolyte container for correct electrolyte volume.

- Place the battery on a level surface.
- Check to see that the sealing sheet has no peeling, tears, or holes in it.
- Remove the sealing sheet.

### NOTE

○The battery is vacuum sealed. If the sealing sheet has leaked air into the battery, it may require a longer initial charge.

- Remove the electrolyte container from the vinyl bag.
- Detach the strip of caps [A] from the container and set aside, these will be used later to seal the battery.

### NOTE

○Do not pierce or otherwise open the sealed cells [B] of the electrolyte container. Do not attempt to separate individual cells.

- Place the electrolyte container upside down with the six sealed cells into the filler ports of the battery. Hold the container level, push down to break the seals of all six cells. You will see air bubbles rising into each cell as the ports fill.





### NOTE

○Do not tilt the electrolyte container

- Check the electrolyte flow.
- ★If no air bubbles [A] are coming up from the filler ports, or if the container cells have not emptied completely, tap the container [B] a few times.
- Keep the container in place for **20** minutes or more. Don't remove the container from the battery until it's empty, the battery requires all the electrolyte from the container for proper operation.

### CAUTION

Removal of the container before it is completely empty can shorten the service life of the battery. Do not remove the electrolyte container until it is completely empty and 20 minutes have elapsed.

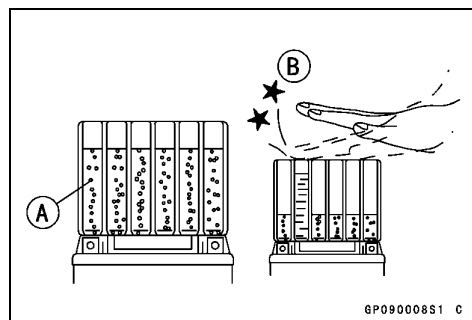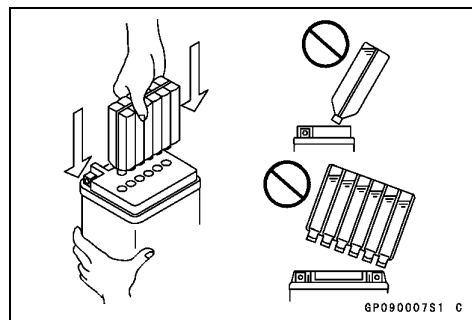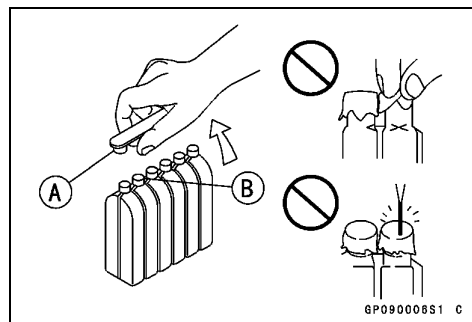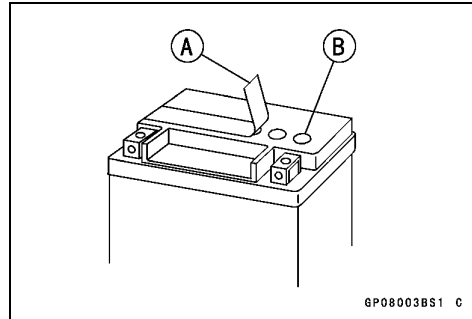

## Battery

- Gently remove the container from the battery.
- Let the battery sit for **60** minutes prior to charging to allow the electrolyte to permeate into the plates for optimum performance.

### NOTE

- *Charging the battery immediately after filling can shorten service life. Let the battery sit for at least **60** minutes after filling.*

### Initial Charge

- Place the strip [A] of caps loosely over the filler ports.
- Newly activated sealed batteries require an initial charge.

**Standard Charge**      **1.2 A × 5 ~ 10 hours**

- ★ If using a recommended battery charger, follow the charger's instructions for newly activated sealed battery.

#### Kawasaki-recommended chargers:

**Optimate III**

**Yuasa 1.5 Amp Automatic Charger**

**Battery Mate 150-9**

- ★ If the above chargers are not available, use equivalent one.

### NOTE

- *Charging rates will vary depending on how long the battery has been stored, temperature, and the type of charger used. Let battery sit 30 minutes after initial charge, then check voltage using a voltmeter. If it is not at least 12.8 volts, repeat charging cycle.*

- After charging is completed, press down firmly with both hands to seat the strip of caps [A] into the battery (don't pound or hammer). When properly installed, the strip of the caps will be level with the top of the battery.

### CAUTION



**Once the strip of the caps [A] is installed onto the battery, never remove the caps, nor add water or electrolyte to the battery.**

### NOTE

- *To ensure maximum battery life and customer satisfaction, it is recommended the battery be load tested at three times its amp-hour rating for 15 seconds. Re-check voltage and if less than 12.8 volts repeat the charging cycle and load test. If still below 12.8 volts, the battery is defective.*

### Precautions

- 1) No need of topping-up  
No topping-up is necessary in this battery until it ends its life under normal use. Forcibly prying off the seal cap to add water is very dangerous. Never do that.
- 2) Refreshing charge  
If an engine will not start, a horn sounds weak, or lights are dim, it indicates the battery has been discharged. Give refresh charge for 5 to 10 hours with charge current shown in the specification (see Refreshing Charge).

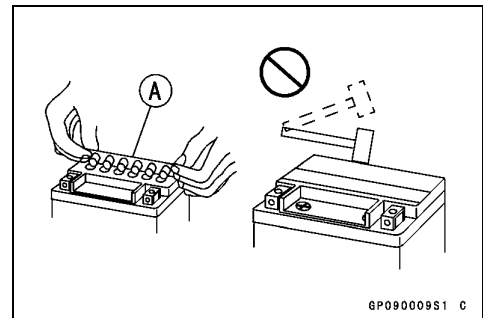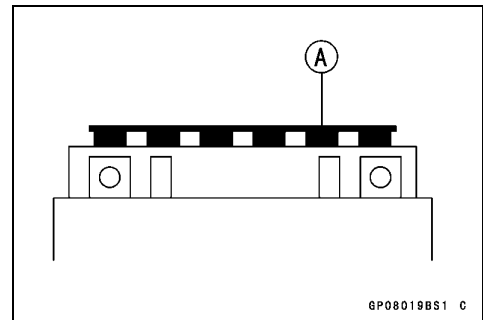

## 16-22 ELECTRICAL SYSTEM

### Battery

When a fast charge is inevitably required, do it following precisely the maximum charge current and time conditions indicated on the battery.

#### CAUTION

**This battery is designed to sustain no unusual deterioration if refresh-charged according to the method specified above.**

**However, the battery's performance may be reduced noticeably if charged under conditions other than given above.**

**Never remove the seal cap during refresh charge.**

**If by chance an excessive amount of gas is generated due to overcharging, the safety valve operates to keep the battery safe.**

- 3) When you do not use the motorcycle for months:  
Give a refresh charge before you store the motorcycle and store it with the negative lead removed.  
Give a refresh charge once a month during storage.
- 4) Battery life:  
If the battery will not start the engine even after several refresh charges, the battery has exceeded its useful life. Replace it. (Provided, however, the vehicle's starting system has no problem.)

#### ⚠ WARNING

**Keep the battery away from sparks and open flames during charging, since the battery gives off an explosive gas mixture of hydrogen and oxygen. When using a battery charger, connect the battery to the charger before turning on the charger. This procedure prevents sparks at the battery terminals which could ignite any battery gases.**

**No fire should be drawn near the battery, or no terminals should have the tightening loosened.**

**The electrolyte contains sulfuric acid. Be careful not to have it touch your skin or eyes. If touched, wash it off with liberal amount of water. Get medical attention if severe.**

#### Interchange

The sealed battery can fully display its performance only when combined with a proper vehicle electric system. Therefore, replace the sealed battery only on a motorcycle which was originally equipped with the sealed battery.

Be careful, if a sealed battery is installed on a motorcycle which had an ordinary battery as original equipment, the sealed battery's life will be shortened.

#### Charging Condition Inspection

Battery charging condition can be checked by measuring battery terminal voltage.

- Remove the seat (see Seat Removal in the Frame chapter).
- Disconnect the battery terminals.

#### CAUTION

**Be sure to disconnect the negative terminal first.**

- Measure the battery terminal voltage.



#### NOTE

○ Measure with a digital voltmeter [A] which can be read one decimal place voltage.

- ★ If the reading is below the specified, refreshing charge is required.

#### Battery Terminal Voltage

**Standard: 12.8 V or more**

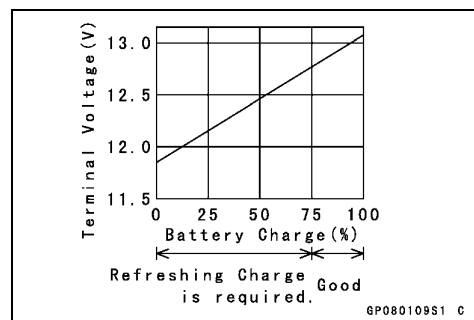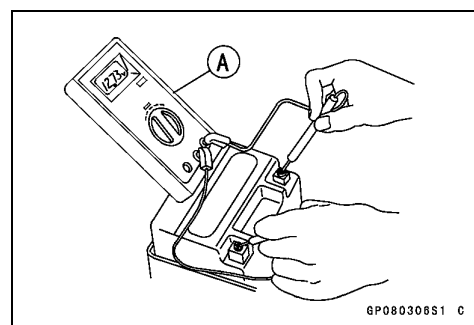


**Battery**

*Refreshing Charge*


- Disconnect the battery terminals (see Charging Condition Inspection).
- Remove the battery [A].
- Do refresh-charge by following method according to the battery terminal voltage.

**⚠ WARNING**

**This battery is sealed type. Never remove seal cap [B] even at charging. Never add water. Charge with current and time as stated below.**

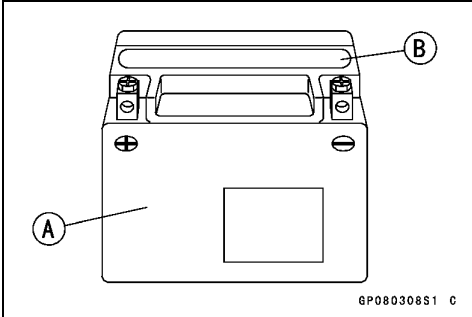

**Terminal Voltage: 11.5 ~ less than 12.8 V**  
**Standard Charge**  
 1.2 A × 5 ~ 10 h (see following chart)  
**Quick Charge**  
 5.0 A × 1.0 h

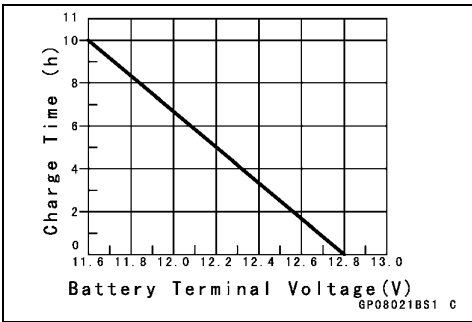


**CAUTION**

**If possible, do not quick charge. If the quick charge is done due to unavoidable circumstances, do standard charge later on.**

**Terminal Voltage: less than 11.5 V**  
**Charging Method 1.2 A × 20 h**

**NOTE**

○ If the current does not flow when charging, raise the voltage initially (25 V as maximum), and let down the voltage to charge when the current starts to flow as a yardstick. If ammeter shows no change in current after 5 minutes, you need a new battery. The current, if it can flow into the battery, tends to become excessive. Adjust the voltage as often as possible to keep the current at standard value (1.2 A).

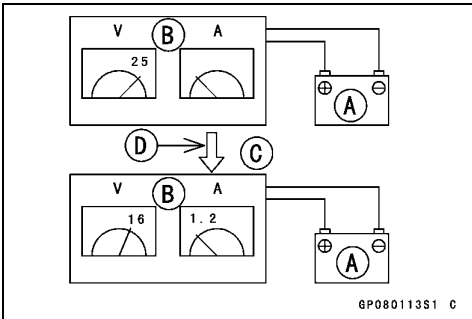

- Battery [A]
- Battery Charger [B]
- Standard Value [C]
- Current starts to flow [D]

- Determine battery condition after refreshing charge.
- Determine the condition of the battery 30 minutes after completion of the charge by measuring the terminal voltage according to the table below.


Criteria	Judgement
12.8 V or higher	Good
12.0 ~ less than 12.8 V	Charge insufficient → Recharge.
less than 12.0 V	Unserviceable → Replace

## 16-24 ELECTRICAL SYSTEM

### Charging System

#### Alternator Rotor/Starter Clutch Removal

- Remove the engine sprocket cover (see Engine Sprocket Removal in the Final Drive chapter).
- Remove the engine guard (see Engine Guard Removal in the Frame chapter).
- Remove the shift pedal.
- Remove the circlip and washer from the shift shaft.
- Remove the left side cover.
- Slide the air cleaner housing.
- Disconnect the alternator lead connectors.
- Place an oil pan beneath the alternator cover.
- Remove the alternator cover bolts [A], and pull off the alternator cover [B] and gasket. There are two knock pins in the cover mating surface.

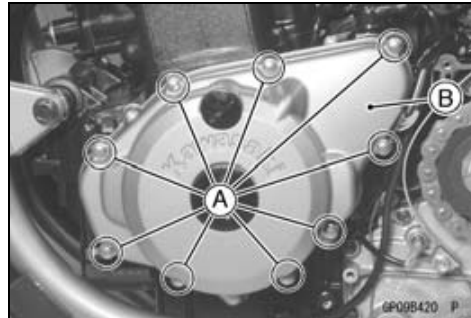


- Hold the alternator rotor [A] steady with the flywheel holder [B], and remove the rotor bolt.

**Special Tool - Flywheel Holder: 57001-1410**


#### NOTE

- *The rotor bolt has left-handed threads, therefore it must be turned clockwise in removing.*

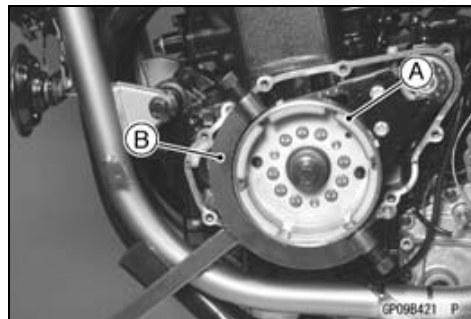

- Using the rotor puller [A], remove the alternator rotor and starter clutch assembly from the crankshaft. There is a spacer between the starter clutch sprocket and the alternator rotor. The woodruff key may come out with the alternator rotor and starter clutch assembly.

**Special Tool - Rotor Pulier, M16/M18/M20/M22 × 1.5: 57001-1216**

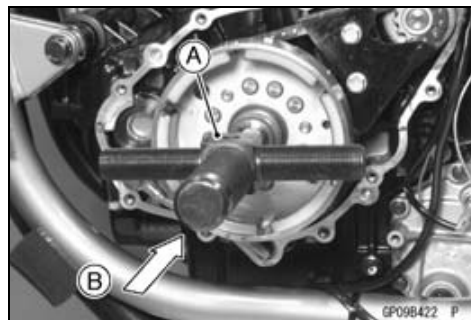


#### CAUTION

**If the rotor is difficult to remove, turn the puller shaft using a wrench while tapping [B] the head of the puller shaft with a hammer. Do not attempt to strike the grab bar or the alternator rotor itself. Striking the bar or the rotor can cause the bar to bend or the magnets to lose their magnetism.**




## Charging System

- Remove the rollers [A], springs [B], and spring caps [C] from the starter clutch [D].

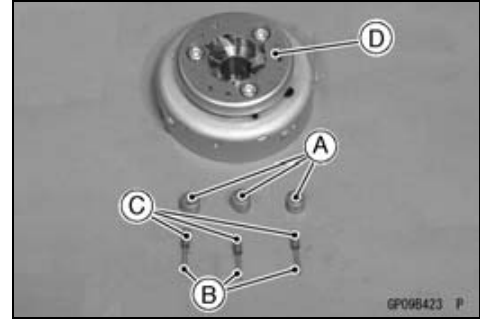


- Holding the rotor [A] steady, remove the Allen bolts [B] to separate the rotor and starter clutch [C].

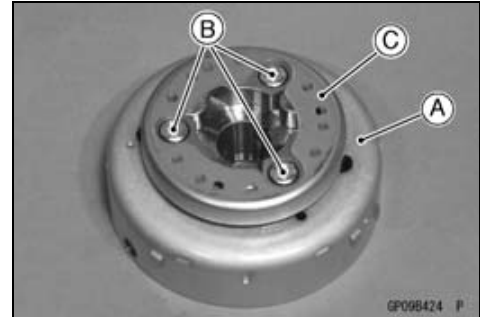

### Starter Clutch Sprocket Removal

- Remove:
  - Alternator cover (see Alternator Rotor/Starter Clutch Removal)
  - Alternator rotor with Starter Clutch (see Alternator Rotor/Starter Clutch Removal)
- Remove the woodruff key [A] and spacer [B].
- Remove the starter chain guide [C].
- Remove the starter clutch sprocket [D], starter motor sprocket [E] and starter chain [F] as a set.
- In case that the starter motor has been removed, do the following:
  - Remove the starter motor sprocket.
  - Remove the alternator rotor with the starter clutch, starter clutch sprocket and starter chain as a set.

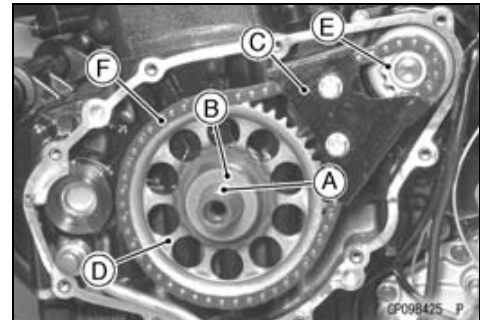

### Starter Clutch Sprocket Installation

- Apply a thin coat of molybdenum disulfide grease to the frictional surface between the crankshaft and the starter clutch sprocket.
- If the starter motor has been removed, install it first.
- Install the starter clutch sprocket, starter motor sprocket and starter chain as a set.
- Install the alternator rotor with the starter clutch and alternator cover.

**Torque - Alternator Rotor Bolt: 69 N·m (7.0 kgf·m, 51 ft·lb)**  
**Alternator Cover Bolt: 11 N·m (1.1 kgf·m, 95 in·lb)**

## 16-26 ELECTRICAL SYSTEM

### Charging System


#### Alternator Rotor/Starter Clutch Installation

- Apply a non-permanent locking agent to the threads of the starter clutch Allen bolts, and tighten them to the specified torque in assembling the starter clutch onto the alternator rotor.

**Torque - Starter Clutch Allen Bolts: 34 N·m (3.5 kgf·m, 25 ft·lb)**

- Be careful that the rollers do not drop out of the starter clutch during assembly.

- Using a high flash-point solvent, clean off any oil or dirt that may be on the crankshaft taper [A] and rotor tapered hole [B].
- Fit the woodruff key securely in the slot [C] in the crankshaft before installing the rotor assembly on the crankshaft.

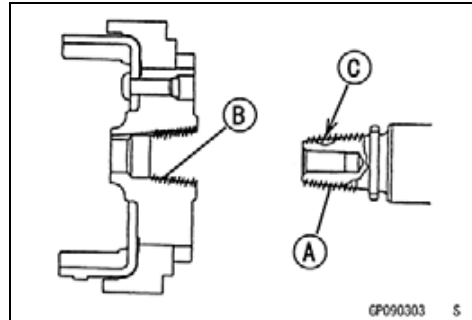

- Tighten the rotor bolt while holding the rotor steady with the flywheel holder, and turn the rotor bolt counterclockwise to install it.

**Torque - Alternator Rotor Bolt: 69 N·m (7.0 kgf·m, 51 ft·lb)**

**Special Tool - Flywheel Holder: 57001-1410**

- Apply silicone sealant to the area [A] where the mating surface ends of the crankcase touch the alternator cover gasket.

**Sealant - Kawasaki Bond (Silicone Sealant): 56019-120**


- Apply silicone sealant around the circumference of the wiring grommets before setting it in the notch in the alternator cover.

**Sealant - Kawasaki Bond (Liquid Gasket): 92104-1063**

- Check that knock pins [B] are in place on the crankcase.
- Tighten the alternator cover bolts.

**Torque - Alternator Cover Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

- Install the other removed parts.
- Check the engine oil level, and add if necessary (see Engine Oil Level Inspection in the Engine Lubrication System chapter).

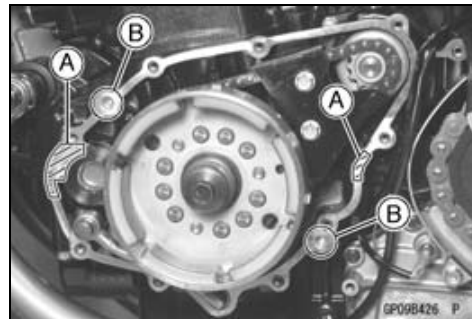

#### Alternator Stator Removal


##### NOTE

- To keep the loss of engine oil to a minimum, set the motorcycle vertically.
- Remove the alternator cover (see Alternator Rotor and Starter Clutch Removal).



## Charging System

- Remove the screws [A] and the holding plate [B] for the stator wiring.
- Unscrew the Allen bolts [C] and remove the stator [D].
- Remove the grommet for the crankshaft sensor lead.

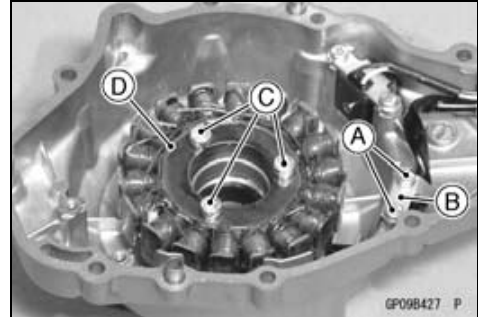


### Alternator Stator Installation

- Apply silicone sealant [A] around the circumference of the wiring grommets before setting them in the notch in the alternator cover.

**Sealant - Kawasaki Bond (Liquid Gasket): 92104-1063**

- Install the grommet for the stator wiring and crankshaft sensor lead in this order.

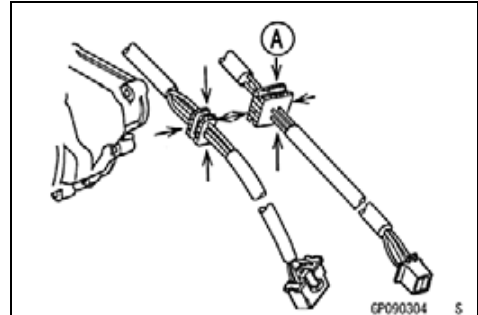

### CAUTION

**The stator wiring has to be installed along the alternator cover without rising away from its surface. If the wires touch the rotor, they will be damaged.**

- Tighten the Allen bolts.
- Torque - Alternator Stator Allen Bolts: 12 N·m (1.2 kgf·m, 8.5 ft·lb)**
- Install the alternator cover (see Alternator Rotor/Starter Clutch Installation).

### Alternator Inspection

There are three types of alternator failures: short, open (wire burned out), or loss in rotor magnetism. A short or open in one of the coil wires will result in either a low output or no output at all. A loss in rotor magnetism, which may be caused by dropping or hitting the alternator, by leaving it near an electromagnetic field, or just by aging, will result in low output.

- To check the alternator output voltage, do the following procedures. Refer to the appropriate chapters and Charging System Wiring Diagram.
  - Turn off the ignition switch.
  - Remove the left side cover.
  - Disconnect the alternator lead connector [A].
  - Connect the hand tester as shown in the table 1.

**Special Tool - Hand Tester: 57001-1394**

- Start the engine.
- Run it at the rpm given in the table 1.
- Note the voltage readings (total 3 measurements).



## 16-28 ELECTRICAL SYSTEM

### Charging System

#### Voltage

Tester Range	Connectings		Reading @4 000 rpm
	Tester (+) to	Tester (-) to	
250 V AC	One yellow lead	Another yellow lead	About 60 V

★ If the output voltage shows the value in the table 1, the alternator operates properly and the regulator/rectifier is damaged. A much lower reading than that given in the table indicates that the alternator is defective.

- Check the stator coil resistance as follows:
  - Stop the engine.
  - Connect the hand tester as shown in the table 2.
  - Note the readings (total 3 measurements).

**Table 2 Stator Coil Resistance**


Tester Range	Connectings		Reading
	Tester (+) to	Tester (-) to	
$\times 1\Omega$	One yellow lead (Connector 3)	Another yellow lead (Connector 3)	0.37 ~ 0.46 $\Omega$

★ If there is more resistance than shown in the table, or no meter reading (infinity) for any two leads, the stator has an open lead and must be replaced. Much less than this resistance means the stator is shorted, and must be replaced.

- Using the highest resistance range of the hand tester, measure the resistance between each of the yellow leads and chassis ground. Any hand tester reading less than infinity ( $\infty$ ) indicates a short, necessitating stator replacement.
- ★ If the stator coil has normal resistance, but the voltage check shows the alternator to be defective; then the rotor magnets have probably weakened, and the rotor must be replaced.

#### *Regulator/Rectifier Removal*

- Remove the left side cover.
- Remove the coolant reserve tank.
- Disconnect the regulator/rectifier connector [A].
- Unscrew two mounting bolts [B] and remove the regulator/rectifier [C] from the battery case.

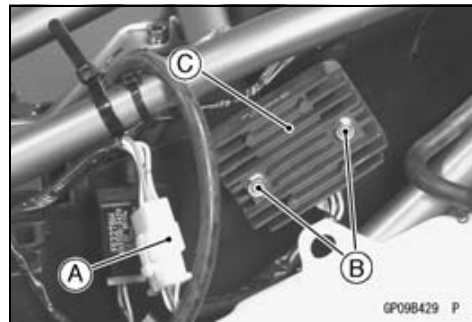

#### *Regulator/Rectifier Output Voltage Inspection*


- Check the battery condition (see Battery section).
- Warm up the engine to obtain actual alternator operating conditions.
- Remove the right side cover (see Side Cover Removal in the Frame chapter).

## Charging System

- Check that the ignition switch is turned off, and connect the hand tester [A] as shown in the table.

**Special Tool - Hand Tester:57001-1394**

- Start the engine, and note the voltage readings at various engine speeds with the headlight turned on and then turned off. The readings should show nearly battery voltage when the engine speed is low, and, as the engine speed rises, the readings should also rise. But they must be kept under the specified voltage.

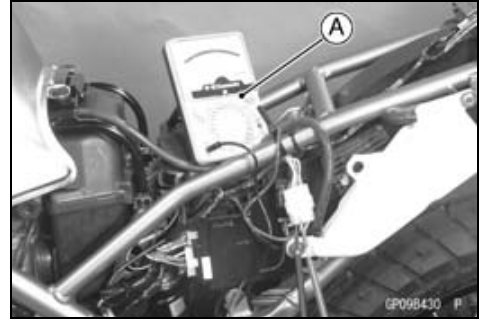

### Regulator/Rectifier Output Voltage

Tester Range	Connectings		Reading
	Tester (+) to	Tester (-) to	
25 V DC	White	Black/Yellow	Battery Voltage 14 ~ 15 V

- Turn off the ignition switch to stop the engine, and disconnect the hand tester.
- ★ If the regulator/rectifier output voltage is kept between the values given in the table, the charging system is considered to be working normally.
- ★ If the output voltage is much higher than the values specified in the table, the regulator/rectifier is defective or the regulator/rectifier leads are loose or open.
- ★ If the battery voltage does not rise as the engine speed increases, the regulator/rectifier is defective or the alternator output is insufficient for the loads. Check the alternator and regulator/rectifier to determine which part is defective.


### Regulator/Rectifier Inspection

#### Rectifier circuit check

- Remove the left side cover (see Side Cover Removal in the Frame chapter).
- Disconnect the regulator/rectifier lead connector [A].



- Brown Lead Terminal [A]
- White/Red Lead Terminal [B]
- Black Lead Terminal [C]
- Yellow 1 Lead Terminal [D]
- Yellow 2 Lead Terminal [E]
- Yellow 3 Lead Terminal [F]

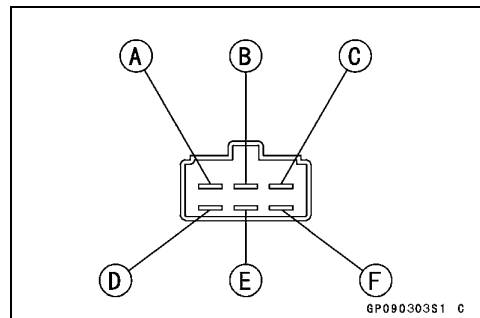

## 16-30 ELECTRICAL SYSTEM

### Charging System

- Connect the hand tester to the regulator/rectifier as shown in the table, and measure the resistance of the respective diodes in both directions, in the sequence in the table.
- ★ The measured resistance should be small in one direction and 10 or more times in the other direction. If the measured resistance of any of the two wires (White/Red or Yellow) is small or large in both directions, the rectifier is damaged; therefore, replace the regulator/rectifier.

#### Rectifier Circuit Inspection

	Connecting terminal		Standard	Tester range	
	Tester positive (+) terminal	Tester negative (-) terminal			
1	Y1	W/R	∞	× 10 Ω or × 100 Ω	
2	Y2				
3	Y3				
4	Y1	BK	Approximately 1/2 of the entire graduation		
5	Y2				
6	Y3				
7	W/R	Y1			
8		Y2			
9		Y3			
10	BK	Y1			∞
11		Y2			
12		Y3			

#### NOTE

- The actual resistance measurement varies with the tester used and the individual diodes. Generally speaking, it is acceptable if the tester's indicator swings approximately halfway.

#### Regulator Circuit Check

- Prepare the following:
  - Test Light Bulb: one 12 V 3.4 W bulb
  - Batteries: three 12 V batteries
  - Wires: six wires of appropriate lengths


<b>CAUTION</b>
<p><b>The test light works as an indicator and also a current limiter to protect the regulator/rectifier from excessive current. Do not use an ammeter instead of a test light.</b></p>

- Check to be sure the rectifier circuit is normal before continuing.

## Charging System


### Regulator Circuit Test-1st Step:

- Connect the test light and the 12 V battery to the regulator/rectifier as shown.
- Check Y1, Y2, and Y3 terminal respectively.
- ★ If the test light turns on, the regulator/rectifier is defective. Replace it.
- ★ If the test light does not turn on, continue the test.

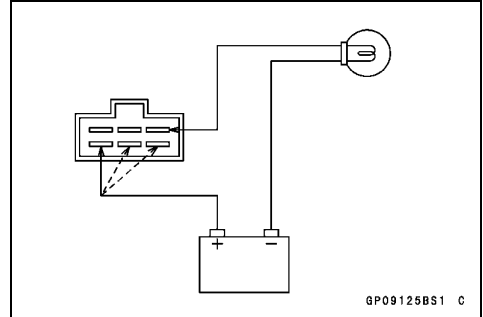

### Regulator Circuit Test-2nd Step:

- Connect the test light and the 12 V battery in the same manner as specified in the "Regulator Circuit Test-1st Step".
- Apply 12 V to the BR (voltage monitoring) terminal.
- Check Y1, Y2, and Y3 terminal respectively.
- ★ If the test light turns on, the regulator/rectifier is defective. Replace it.
- ★ If the test light does not turn on, continue the test.

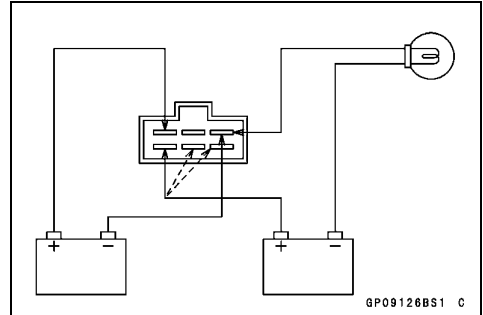


### Regulator Circuit Test-3rd Step:

- Connect the test light and the 12 V battery in the same manner as specified in the "Regulator Circuit Test-1st Step".
- Momentarily apply 24 V to the BR terminal by adding a 12 V battery.
- Check Y1, Y2, and Y3 terminals respectively.

#### CAUTION

**Do not apply more than 24 V to the regulator/rectifier and do not leave the 24 V applied for more than a few seconds, or the unit will be damaged.**


- ★ If the test light did not light when the 24 V was applied momentarily to the BR terminal, the regulator/rectifier is defective. Replace it.
- ★ If the regulator/rectifier passes all of the tests described, it may still be defective. If the charging system still does not work properly after checking all of the components and the battery, test the regulator/rectifier by replacing it with a known good unit.

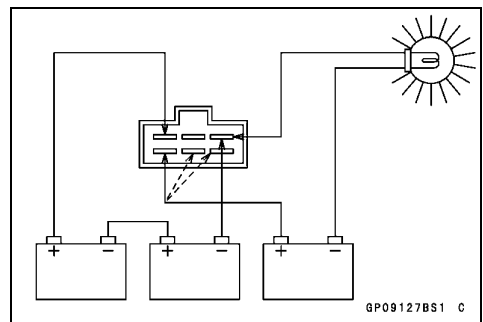

# 16-32 ELECTRICAL SYSTEM

## Charging System


### Charging System Circuit

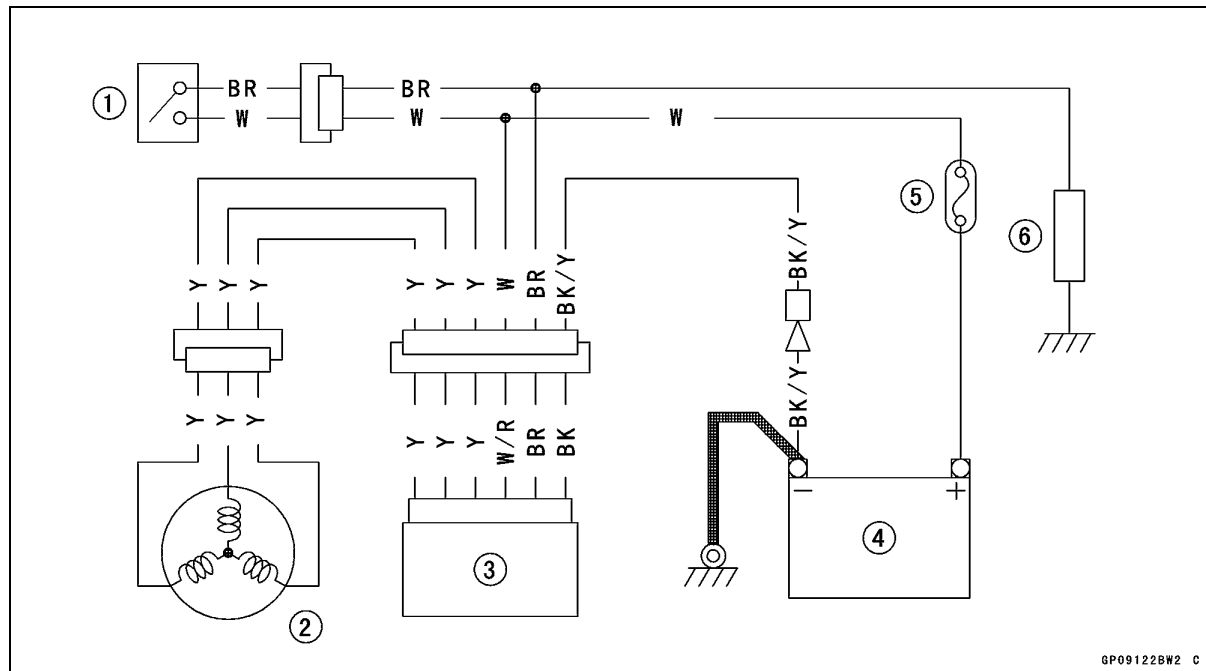

1. Ignition Switch
2. Alternator
3. Regulator/Rectifier
4. Battery
5. Main Fuse 30 A
6. Load

Ignition System

Ignition System Circuit

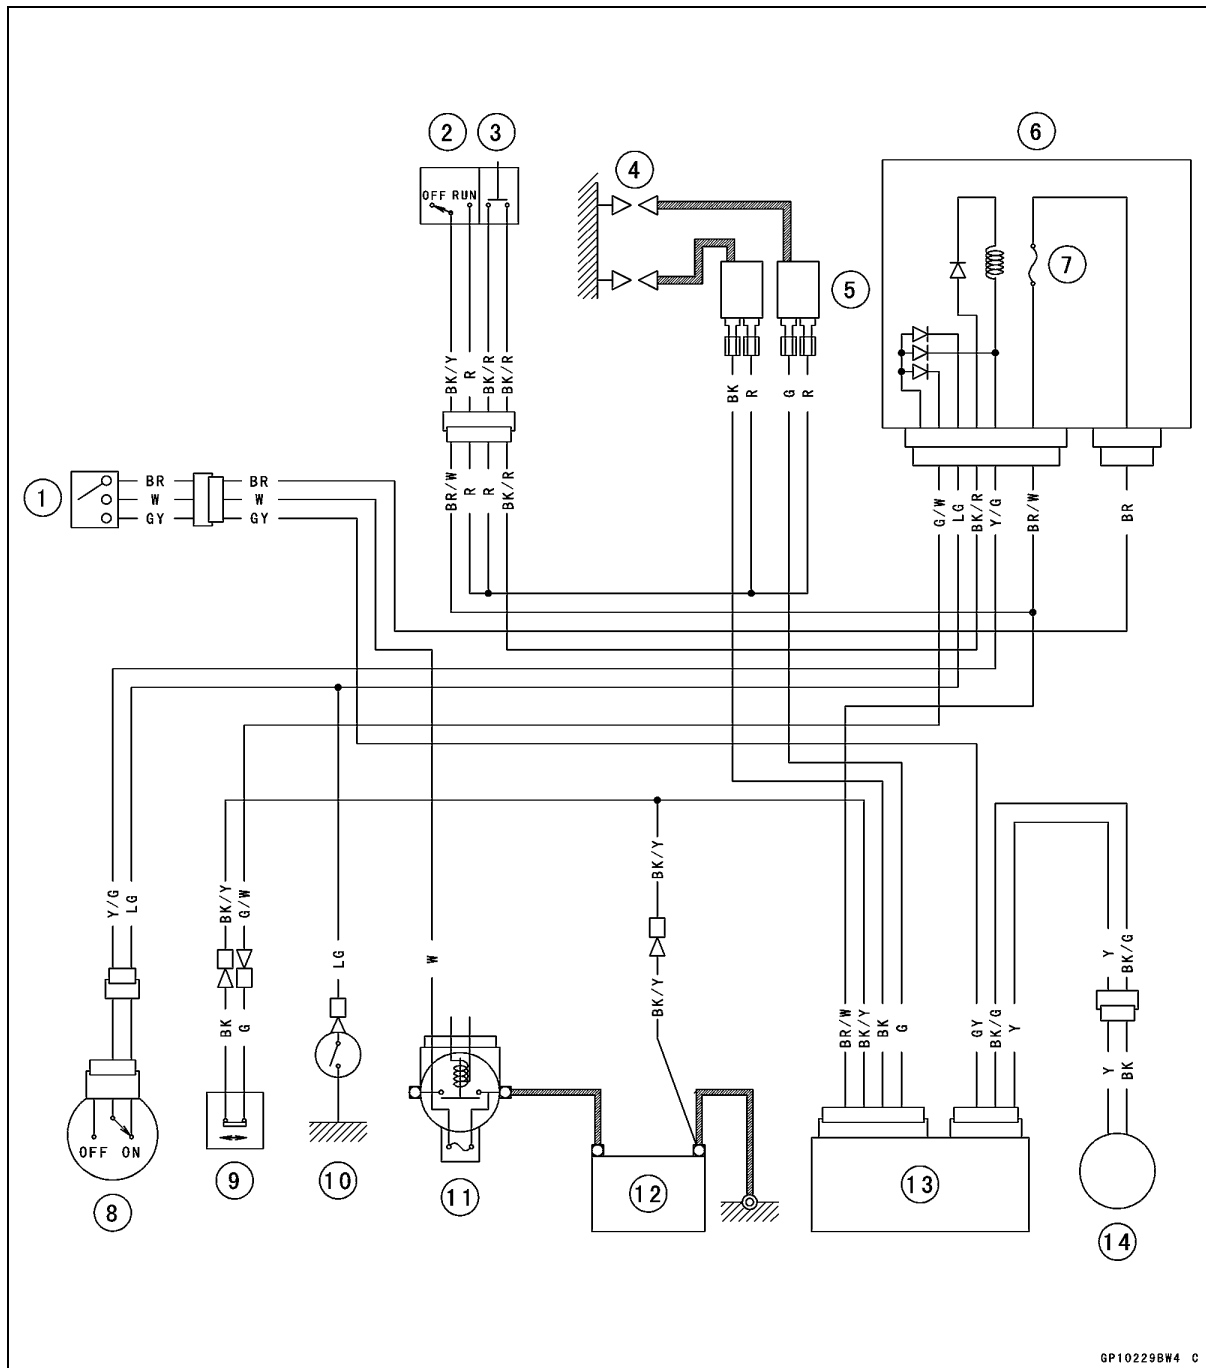

- |                           |                        |
|---------------------------|------------------------|
| 1. Ignition Switch        | 9. Side Stand Switch   |
| 2. Engine Stop Switch     | 10. Neutral Switch     |
| 3. Starter Button         | 11. Main Fuse 30 A     |
| 4. Spark Plugs            | 12. Battery 12 V 10 AH |
| 5. Ignition Coils         | 13. IC Igniter         |
| 6. Junction Box           | 14. Crankshaft Sensor  |
| 7. Ignition Fuse 10 A     |                        |
| 8. Starter Lockout Switch |                        |

## 16-34 ELECTRICAL SYSTEM

### Ignition System

#### **⚠ WARNING**


The ignition system produces extremely high voltage. Do not touch the spark plugs, ignition coils, or spark plug leads while the engine is running, or you could receive a severe electrical shock.

#### **CAUTION**

Do not disconnect the battery leads or any other electrical connections when the ignition switch is on or while the engine is running. This is to prevent IC igniter damage. Do not install the battery backwards. The negative side is grounded. This is to prevent damage to the diodes and IC igniter

#### *Crankshaft Sensor Removal*

- Remove:
  - Alternator Cover (see Alternator Rotor/Starter Clutch Removal)
  - Mounting Screws [A]
  - Crankshaft Sensor [B]

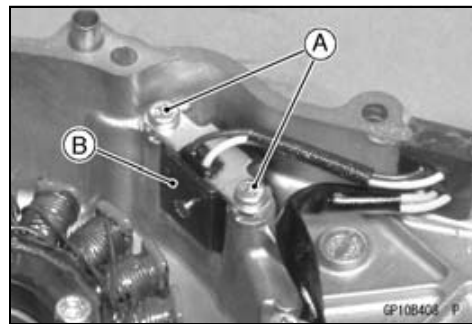

#### *Crankshaft Sensor Installation*

- Tighten the crankshaft sensor screws.
  - Torque - Crankshaft Sensor Screws: 8.3 N·m (0.85 kgf·m, 74 in·lb)**
- Install the crankshaft sensor lead on the alternator cover (see Stator Coil Installation).

#### *Crankshaft Sensor Inspection*

- Disconnect the crankshaft sensor connector [A].
- Set the hand tester to the  $\times 100 \Omega$  range and connect it to the crankshaft sensor leads.
- ★ If there is more resistance than the specified value, the coil has an open lead and must be replaced. Much less than this resistance means the coil is shorted, and must be replaced.

#### **Crankshaft Sensor Resistance**

**113 ~ 139  $\Omega$**

- Using the highest resistance range of the tester, measure the resistance between the crankshaft sensor leads and chassis ground.
- ★ Any tester reading less than infinity ( $\infty$ ) indicates a short, necessitating replacement of the crankshaft sensor assembly.





## Ignition System

### Ignition Coil Removal/Installation

- Remove the Lower Fairings (see Lower Fairing Removal in the Frame chapter).
  - Disconnect the leads and remove the ignition coils.
  - Install the ignition coils. Note the following.
- Connect the primary winding leads to the ignition coiled terminals as shown.
- R Lead → #1 Ignition Coil Terminal  
BK Lead → #1 Ignition Coil Terminal

R Lead → #2 Ignition Coil Terminal [A]  
G Lead → #2 Ignition Coil Terminal [A]




### Ignition Coil Inspection

#### Measuring arcing distance

- Remove the ignition coil (see Ignition Coil Removal/Installation).
- Measure the arcing distance with a suitable commercially available coil tester [A] to check the condition of the ignition coil [B].
- Connect the ignition coil (with the spark plug cap left attached to each end of the spark plug lead) to the tester in the manner prescribed by the manufacturer and measure the arcing distance.

**Ignition Coil Arcing Distance**  
8 mm (0.32 in.) or more

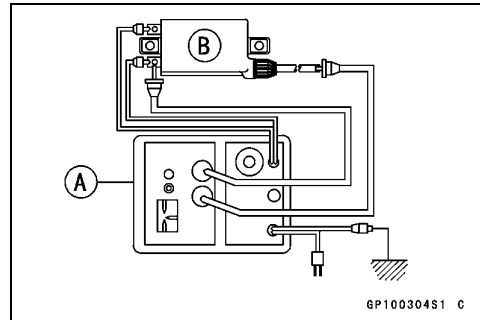

### **⚠ WARNING**

**To avoid extremely high voltage shocks, do not touch the coil or lead.**

- ★ If the distance reading is less than the specified value, the ignition coil or spark plug cap is defective.
- To determine which part is defective, measure the arcing distance again with the spark plug cap removed from the ignition coil.
- ★ If the arcing distance is subnormal as before, the trouble is with the ignition coil itself. If the arcing distance is now normal, the trouble is with the spark plug cap.
- ★ If the arcing tester is not available, the coil can be checked for a broken or badly shorted winding with the hand tester.

## 16-36 ELECTRICAL SYSTEM

### Ignition System

#### NOTE

○The hand tester cannot detect layer shorts and shorts resulting from insulation breakdown under high voltage.

- Disconnect the primary leads from the coil terminals.
- Measure the primary winding resistance [A] as follows:
  - Connect the hand tester between the coil terminals.
  - Set the tester to the  $\times 1\Omega$  range, and read the tester.
- Measure the secondary winding resistance [B] as follows:
  - Pull the spark plug cap off the lead.
  - Connect the hand tester between the spark plug lead and black or green lead terminal.
  - Set the tester to the  $\times 1\text{ k}\Omega$  range, and read the tester.

#### Ignition Coil Winding Resistance

**Primary windings:** 2.6 ~ 3.1  $\Omega$

**Secondary windings:** 13.5 ~ 16.5  $\text{k}\Omega$

- ★ If the tester does not read as specified, replace the coil [C].
- ★ If the tester reads as specified, the ignition coil windings are probably good. However, if the ignition system still does not perform as it should after all other components have been checked, test replace the coil with one known to be good.
- Check the spark plug leads for visible damage.
- ★ If any spark plug lead is damaged, replace the coil.

#### Ignition Timing Inspection

- Remove the ignition timing inspection plug.
- Attach the timing light [A] in the manner prescribed by the manufacturer.

**Special Tool - Timing Light: 57001-1241**

**Filler Cap Driver: 57001-1454**

- Start the engine and aim the timing light at the ignition timing mark on the alternator rotor.
- Run the engine at the speeds specified and note the alignment of the ignition timing marks.

#### Ignition Timing

Engine speed r/min (rpm)	Notch [A] aligns with:
1500 and below	F mark [B] on alternator rotor

#### NOTE

○Do not mix up the ignition timing marks with the top mark "T" [C].



- ★ If the ignition timing is incorrect, inspect the IC igniter and the crankshaft sensor.

#### Spark Plug Removal/Installation

- Refer to the Spark Plug Replacement in Replacement Parts in the Periodic Maintenance chapter.

#### Spark Plug Gap Inspection


- Refer to the Spark Plug Gap Inspection in the Periodic Maintenance chapter.

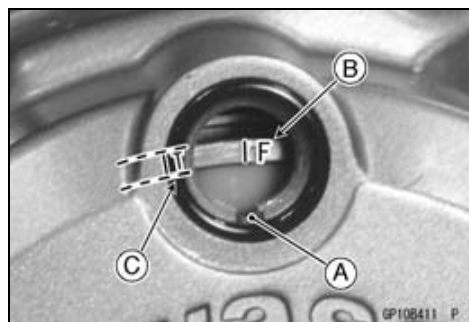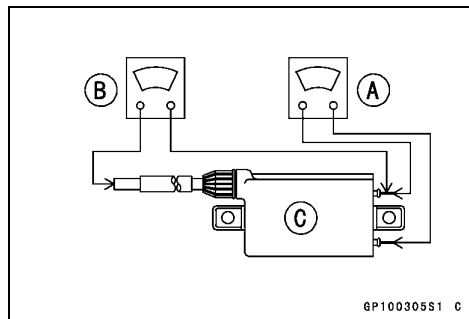

## Ignition System

### IC Igniter Removal


- Remove the seat (see Seat Removal in the Frame chapter).
- Slide the rubber IC igniter cover [A].
- Disconnect the IC igniter connectors [B], and remove the igniter [C].

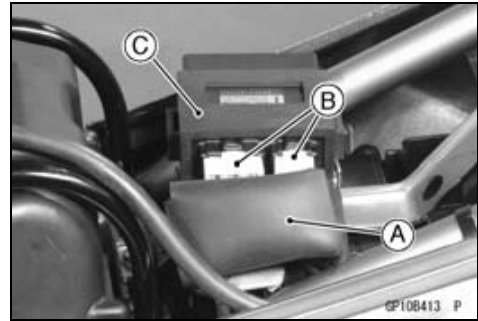

### IC Igniter Inspection

#### CAUTION

When inspecting the IC igniter [A], observe the following to avoid damage to the IC igniter. Do not disconnect the IC igniter with the ignition switch on. This may damage the IC igniter. Do not disconnect the battery leads while the engine is running. This may damage the IC igniter.

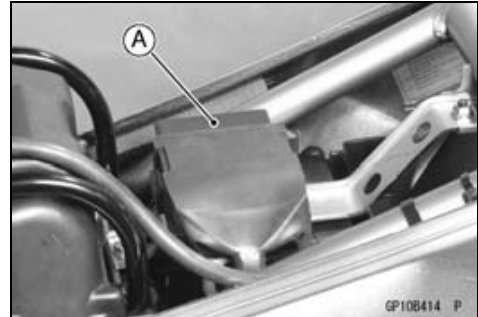

- To examine the condition of the igniter, connect the igniter checker to the igniter as shown.

**Special Tools - Igniter Checker Set: 57001-1378 [A]  
Wiring Harness Adapter, #14: 57001-1381 [C]**

IC Igniter [B]  
Battery [D]

- Set the select knob to position "A".



#### NOTE

- Follow the instructions in the manufacturer's operation manual for the proper procedure for operating the igniter checker.
- The igniter checker can perform inspections by simulating the following dynamic characteristics: the igniter response in relating to the engine speed, interlock circuit signals, tachometer signals, and engine overspeed limiter signals.
- The igniter checker cannot be used for inspecting the conditions of the CDI unit.

- ★ If the igniter is defective, replace it.

### IC Igniter Operation Voltage Check

- Remove the seat (see Seat Removal in the Frame chapter).
- Disconnect the IC igniter connector [A].

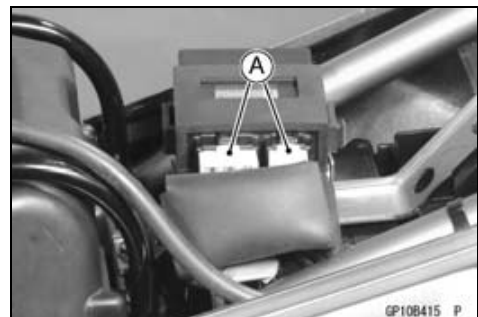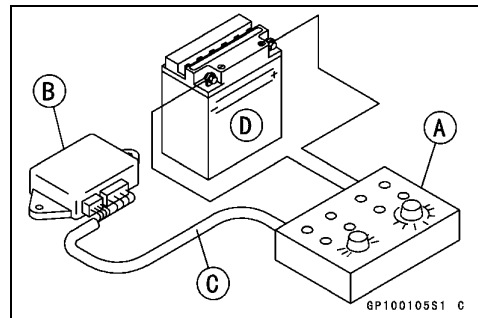

## 16-38 ELECTRICAL SYSTEM

### Ignition System

- Set the Hand Tester [A] to the  $\times 25$  V DC range, and connect it to the connector come from harness side as follows.

Tester (+) terminal [B]  $\rightarrow$  BR/W lead

Tester (-) terminal [C]  $\rightarrow$  BK/Y lead


**Special Tool - Hand Tester: 57001-1394**

**Needle Adapter Set: 57001-1457**

- Turn the ignition switch on , and read the voltage.

**IC Igniter Operation Voltage: Battery Voltage**

- ★ If the tester reading is not specified one, check the battery voltage, ignition switch and ignition fuse.

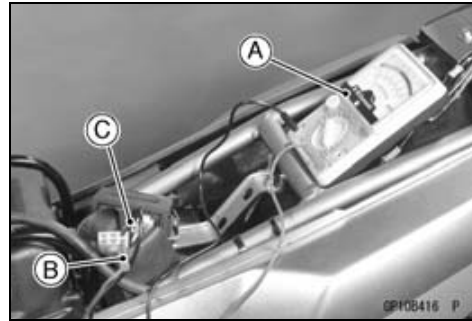

#### Starter Button Operation Check

- Remove the seats (see Seat Removal in the Frame chapter).

- Set the Hand Tester [A] to the  $\times 25$  V DC range, connect it to the IC igniter [B] lead as follows.

Hand Tester (+) Terminal [C]  $\rightarrow$  BK/R Lead

Hand Tester (-) Terminal [D]  $\rightarrow$  Frame Ground


**Special Tool - Hand Tester: 57001-1394**

**Needle Adapter Set: 57001-1457**

- Turn the ignition switch on and push the starter button.
- Read the voltage.

**Starter Button Voltage: Battery Voltage**

- ★ If the tester reading is not specified one, replace the IC igniter.

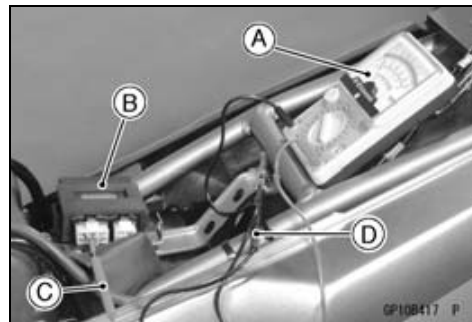

#### Ignition Coil Primary Peak Voltage Inspection

- Remove:
  - Side Covers (see Side Cover Removal in the Frame chapter)
  - Lower Fairings (see Lower Fairing Removal in the Frame chapter)
- Remove the spark plug caps from the spark plugs.
- Attach a good spark plugs to the removed spark plug caps and ground them to the engine.

#### NOTE

- To obtain a correct measurement, the wires as well as the wire connections must be correct. Take the voltage measurement with the proper cylinder compression (with the spark plugs in the cylinder head). Without proper compression, a correct measurement cannot be obtained.

## Ignition System

- Set the tester to the DC 250 V range. Connect the peak voltage adapter [B] to the tester [A], and connect the adapter terminals to the respective terminals of the ignition coil [C].

○ Keep the terminals connected.

**Special Tool - Kawasaki Hand Tester: 57001-1394**  
**Peak Voltage Adapter: 57001-1415**  
**Type: KEK-54-9-B**

### Connect

#1

Adapter's positive (+) → terminal black wire terminal [D]

Adapter's negative (-) → red wire terminal [E] terminal

#2

Adapter's positive (+) → green wire terminal terminal

Adapter's negative (-) → red wire terminal terminal

- Turn the ignition switch ON.
- Shift the gears to neutral, and run the engine stop switch.
- Turn the starter motor for several seconds and read the maximum value on the tester.


### Ignition Coil Primary Peak Voltage

Standard: DC100 V or more

### **⚠ WARNING**

**To avoid high-voltage electrical shocks, do not touch the adapter terminals or leads.**


- ★ If the peak voltage is lower than the standard, refer to the next page.

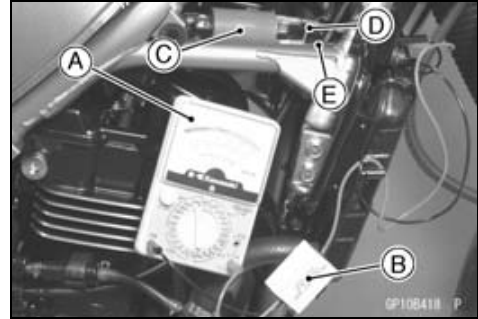

# 16-40 ELECTRICAL SYSTEM

## Ignition System

### Troubleshooting

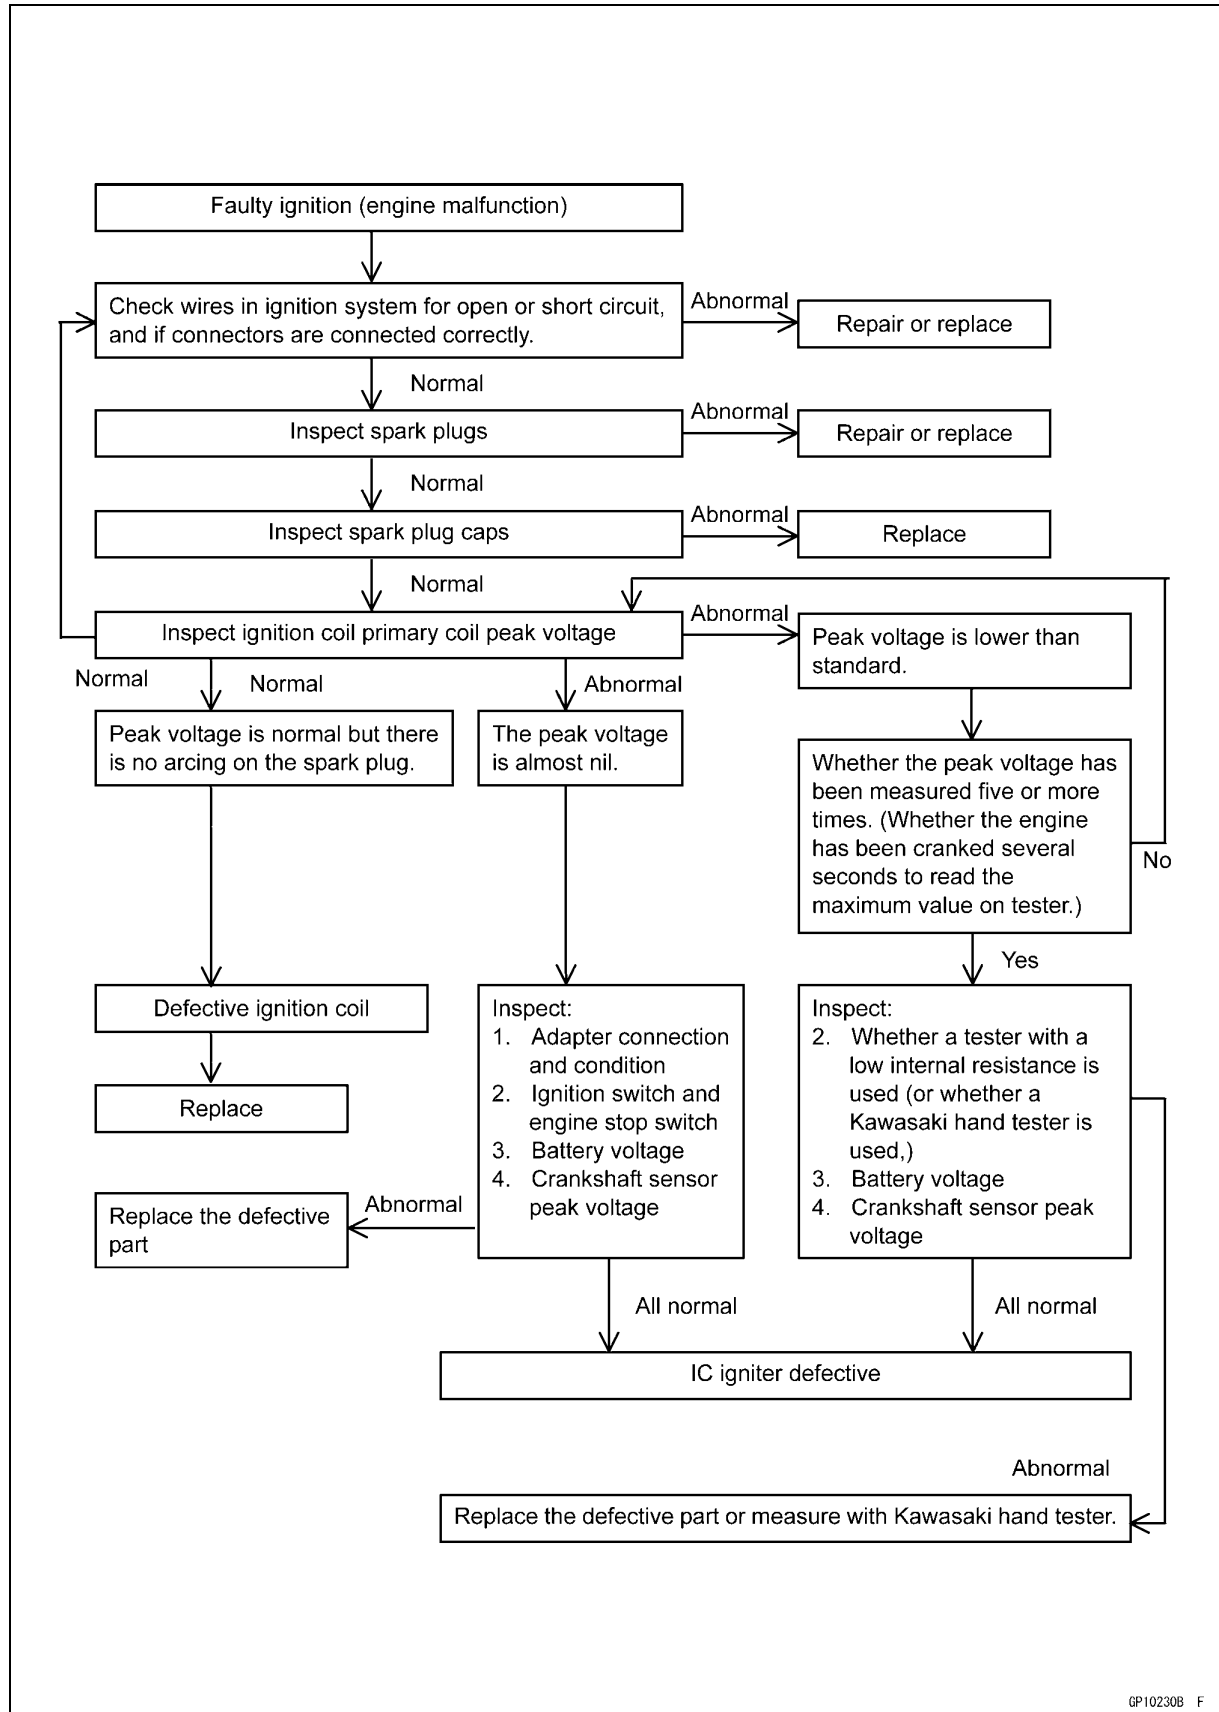



## Ignition System

### Crankshaft Sensor Peak Voltage Inspection

- Measure the peak voltage of the crankshaft sensor as follows:
  - Remove the left side cover.
  - Remove the crankshaft sensor connector [A].

#### NOTE

- *To obtain a correct measurement, the wires as well as the wire connections must be correct. Take the voltage measurement with the proper cylinder compression (with the spark plugs in the cylinder head). Without proper compression, a correct measurement cannot be obtained.*
- Set the tester to the DC10 V range.
- Connect the peak voltage adapter [A] to the tester, and connect the adapter terminal to the crankshaft sensor connector [B] terminal.

**Special Tool - Kawasaki Hand Tester: 57001-1394**  
**Needle Adapter Set: 57001-1457**  
**Peak Voltage Adapter: 57001-1415**  
**Type: KEK-54-9-B**

#### Connect

**Adapter's positive (+) terminal → yellow wire terminal**  
**Adapter's negative (-) terminal → black wire terminal**

- Turn the starter motor for several seconds and read the maximum value on the tester.



#### Crankshaft Sensor Peak Voltage

**Standard: DC 3 V or more**

- ★ If the peak voltage is lower than the standard, inspect the crankshaft sensor.

### Diodes Inspection

- Remove:
  - Lower Right Fairing (see Lower Fairing Removal in the Frame chapter)
- Disconnect the diode assembly [A].
- Zero the hand tester, and connect it to the diode terminal to check the resistance in both directions.
- ★ The resistance should be low in one direction and more than ten times as much in the other direction. If any diode shows low or high in both directions, the diode is defective and the diode assembly must be replaced.

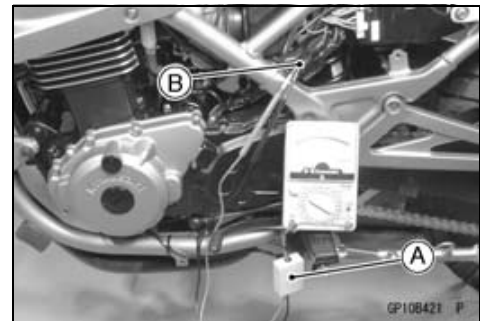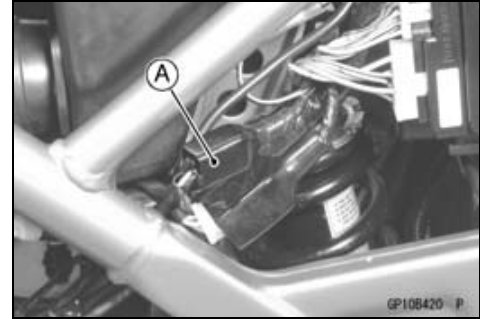


## 16-42 ELECTRICAL SYSTEM

### Ignition System

#### NOTE


- *The actual meter reading varies with the meter used and the individual diode, but, generally speaking, the lower reading should be from zero to one half the scale.*

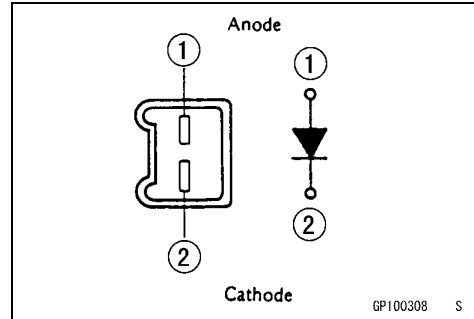



Electric Starter System

Electric Starter Circuit

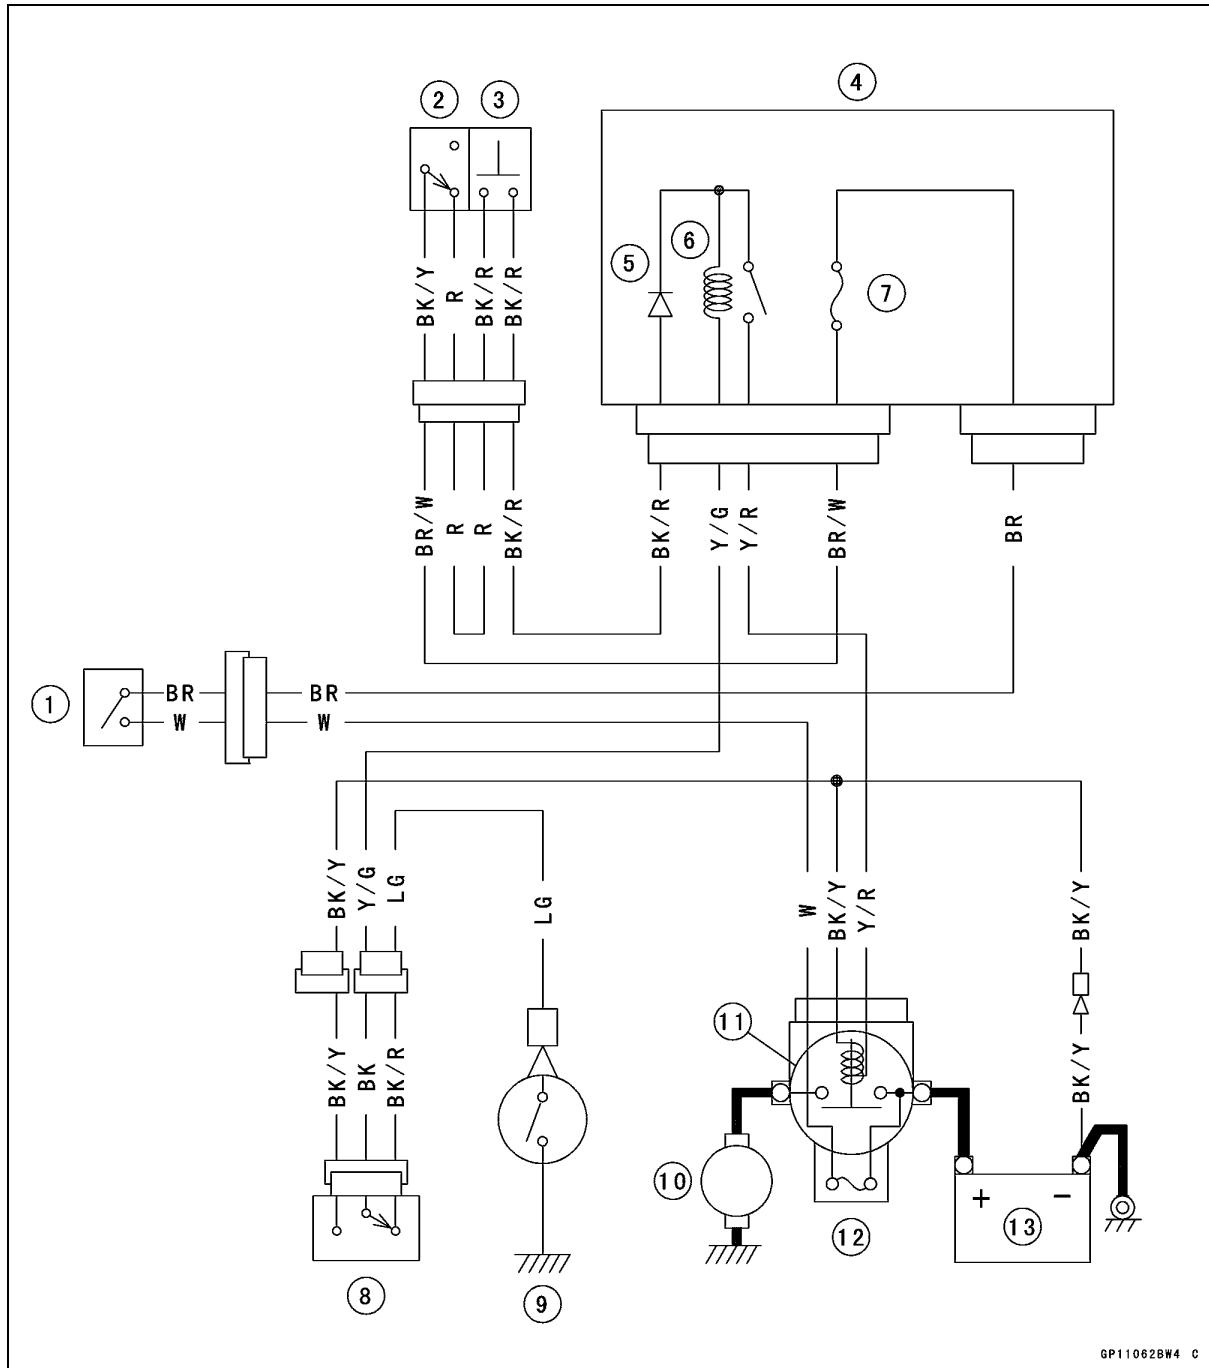

GP11062BW4 C

- 1. Ignition Switch
- 2. Engine Stop Switch
- 3. Starter Button
- 4. Junction Box
- 5. Diode
- 6. Starter Circuit Relay


- 7. Ignition Fuse 10 A
- 8. Starter Lockout Switch
- 9. Neutral Switch
- 10. Starter Motor
- 11. Starter Relay
- 12. Main Fuse 30 A
- 13. Battery 12 V 10 AH

## 16-44 ELECTRICAL SYSTEM


### Electric Starter System

#### Starter Motor Removal

- Remove the alternator cover (see Alternator Cover Removal).
- Remove the starter chain guide bolts [A] and remove the starter chain guide [B].

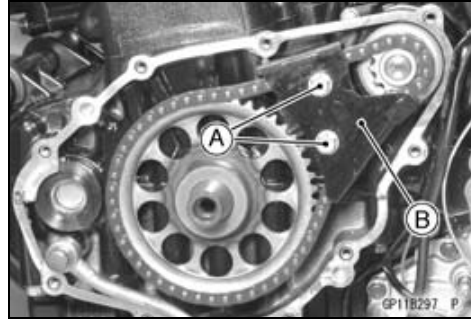

- Disconnect the starter motor lead [A] and negative lead [B].
- Remove the starter motor mounting bolts [C].
- Remove the starter motor to right side.

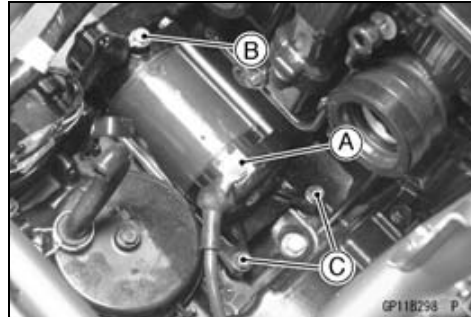


#### Starter Motor Installation

- Install the starter motor in the reverse order of removal.
- Clean the starter motor lugs [A] and crankcase where the starter motor is grounded [B].
- Replace the O-ring with a new one, if it is deteriorated or damaged, and apply a little oil to it.
- Tighten the starter motor mounting bolts with the ground lead.

**Torque - Starter Motor Mounting Bolts: 11 N·m (1.1 kgf·m, 95 in·lb)**

- Pour in the specified type and amount of oil (see Engine Oil Change in the Periodic Maintenance chapter).

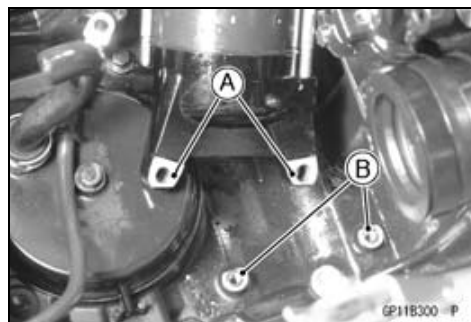


#### Starter Motor Disassembly

- Unscrew the starter motor through bolts [A] and remove the circlip [G].


**Special Tool - Outside Circlip Pliers: 57001-144**

- Pull off the gear cover [B] and the end cover [C].
- Pull the armature [D] out of the yoke housing [E], and remove the end bracket [F].

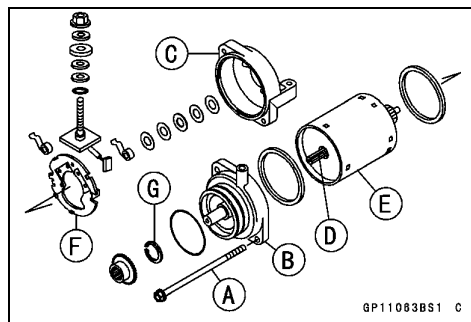

## Electric Starter System

- Remove the terminal nut [A], and take the brush plate [B] off the end cover [C].

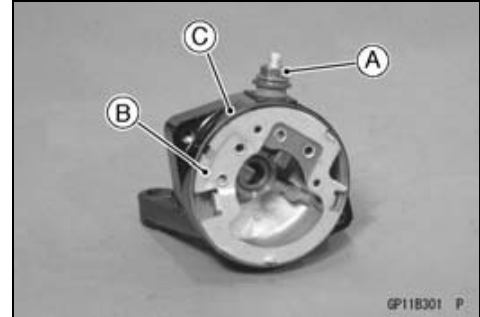


### Starter Motor Assembly


- Replace any O-ring removed with a new one.
- Install the terminal bolt.
- Tighten the terminal nut.

**Torque - Starter Motor Terminal Nut: 6.9 N·m (0.7 kgf·m, 61 in·lb)**


- Install the brush plate on the end cover, align the tab [A] on the plate with the slot [B] in the cover.

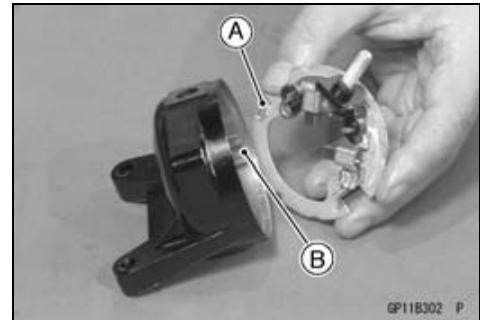

- Insert the armature into the yoke.
- Install the end gear cover [A] and O-ring [C] on the yoke housing [B], and align the projection [D] on the housing with the notches [E] in the gear housing.

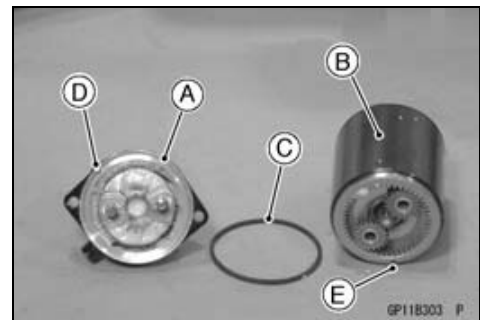

- Install the end cover on the yoke housing, and align the short and wide tab [A] on the brush plate with the notch [B] in the housing.

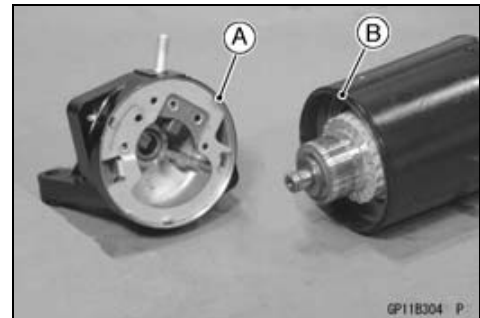


## 16-46 ELECTRICAL SYSTEM

### Electric Starter System

- Make sure that the marks [A] on the covers and yoke housing align with each other.
- Tighten the through bolts.

**Torque - Starter Motor Through Bolts: 6.9 N·m (0.7 kgf·m, 65 in·lb)**

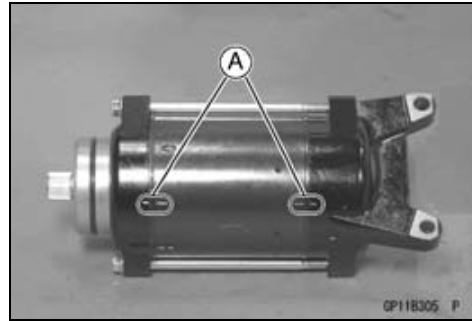


#### *Brush Inspection*

- Measure the length [A] of each brush.
- ★ If any is worn down to the service limit, replace the brush plate assembly [B].

#### **Starter Motor Brush Length**

**Standard: 12.0 ~ 12.5 mm (0.47 ~ 0.49 in.)**

**Service Limit: 8.5 mm (0.34 in.)**

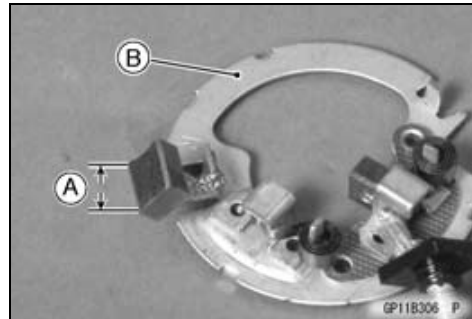


#### *Brush Spring Inspection*

- Check that the brush springs are in place and will snap the brushes firmly into place.
- ★ If not, reinstall or replace the spring.

#### *Commutator Cleaning and Inspection*

- Smooth the commutator surface [A] if necessary with fine emery cloth [B], and clean out the grooves.

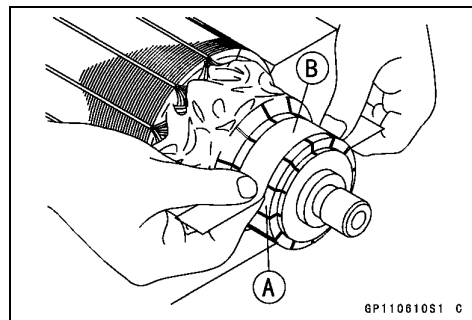


- Measure the diameter [A] of the commutator [B].
- ★ Replace the starter motor with a new one if the commutator diameter is less than the service limit.

#### **Commutator Diameter**

**Standard: 28 mm (1.10 in.)**

**Service Limit: 27 mm (1.06 in.)**

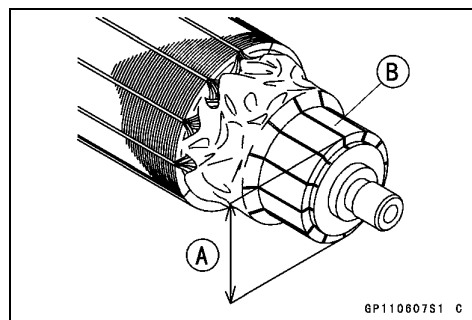

## Electric Starter System

### Armature Inspection




- Using the  $\times 1 \Omega$  hand tester range, measure the resistance between any two commutator segments [A].
- ★ If there is a high resistance or no reading ( $\infty$ ) between any two segments, a winding is open and the starter motor must be replaced.
- Using the highest hand tester range, measure the resistance between the segments and the shaft [B].
- ★ If there is any reading at all, the armature has a short and the starter motor must be replaced.

### NOTE

○ Even if the foregoing checks show the armature to be good, it may be defective in some manner not readily detectable with the hand tester. If all other starter motor and starter motor circuit components check good, but the starter motor still does not turn over or only turns over weakly, replace the starter motor with a new one.

### Brush Plate Inspection

- Using the  $\times 1 \Omega$  hand tester range, measure the resistance between the brush plate [A] and the negative brush [B].
- ★ If there is not close to zero ohm, the brush plate has an open. Replace the brush plate assembly.
- Using the highest hand tester range, measure the resistance between the brush plate and the positive brush holder [C].
- ★ If there is any reading at all, the brush holder has a short. Replace the brush plate assembly.
- Using the  $\times 1 \Omega$  hand tester range, measure the resistance between the terminal bolt [D] and the positive brush [E].
- ★ If there is a high resistance or no reading ( $\infty$ ), a lead is open and the brush plate must be replaced.
- Using the highest hand tester range, measure the resistance between the terminal bolt [A] and the end cover [B].
- ★ If there is any reading at all, the insulation is faulty and the brush plate must be replaced. Replace the terminal assembly.

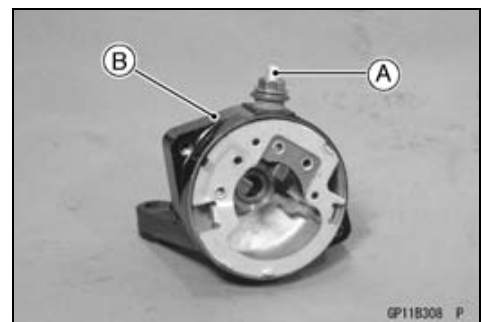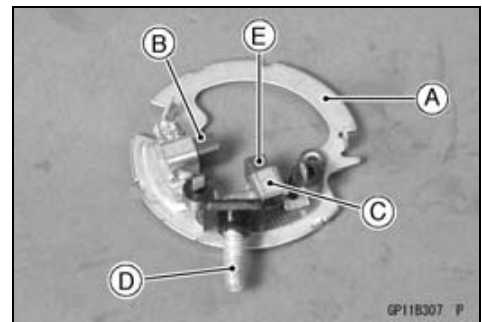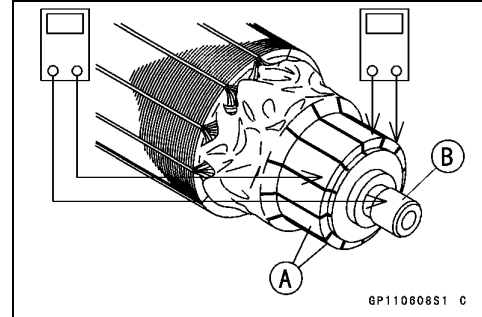

### Starter Chain Guide Wear

- Visually inspect the rubber on the guide.
- ★ If the rubber is cut or damaged in any way, replace the guide.

## 16-48 ELECTRICAL SYSTEM

### Electric Starter System

#### Starter Relay Inspection


- Remove the left side cover (see Side Cover Removal in the Frame chapter).
  - Remove the starter relay.
  - Connect a hand tester [A] and one 12 V battery [B] to the starter relay [C] as shown.
- ★ If the relay does not work as specified, the relay is defective. Replace the relay.

#### Testing Relay

**Meter range:**  $\times 1 \Omega$


**Criteria:** **When battery is connected**  $\rightarrow 0 \Omega$

**When battery is disconnected**  $\rightarrow \infty \Omega$

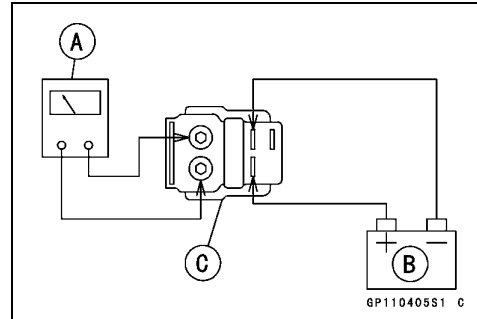

## Lighting System

## Headlight Circuit

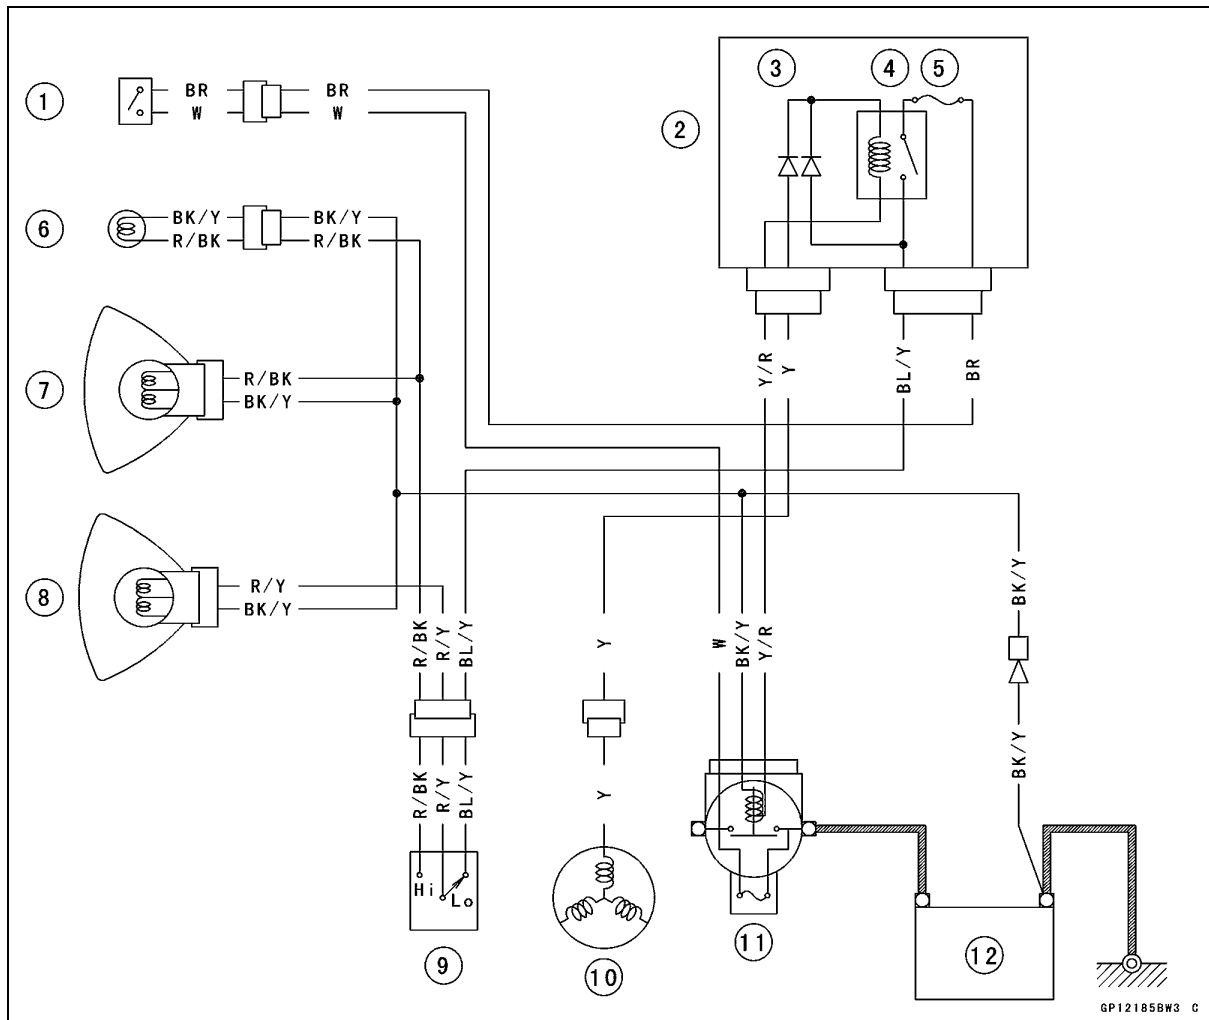

1. Ignition Switch
2. Junction Box
3. Diode
4. Headlight Relay
5. Headlight Fuse 10 A
6. High Beam Indicator Light
7. Headlight (High Beam)
8. Headlight (Low Beam)
9. Dimmer Switch
10. Alternator
11. Main Fuse 30 A
12. Battery 12 V 10 Ah

*Headlight Beam Horizontal Adjustment*

- Refer to the Headlight Aiming Inspection in the Periodic Maintenance chapter.

*Headlight Beam Vertical Adjustment*

- Refer to the Headlight Aiming Inspection in the Periodic Maintenance chapter.

GP121858W3 C

## 16-50 ELECTRICAL SYSTEM

### Lighting System



#### Headlight Bulb Replacement

- Remove the headlight unit with upper fairing (see Headlight Unit/Housing Removal).
- Remove the dust cover.
- Remove the screw [A] and remove the retaining spring [B].
- Remove the headlight bulb [C] and replace it.

#### CAUTION


When handling the quartz-halogen bulb, never touch the glass portion with bare hands. Always use a clean cloth. Oil contamination from hands or dirty rags can reduce bulb life or cause the bulb to explode.

- Fit the dust cover [A] with the marked side downward onto the bulb firmly as shown in the figure.  
Good [B]  
Bad [C]
- After installation, adjust the headlight aim.

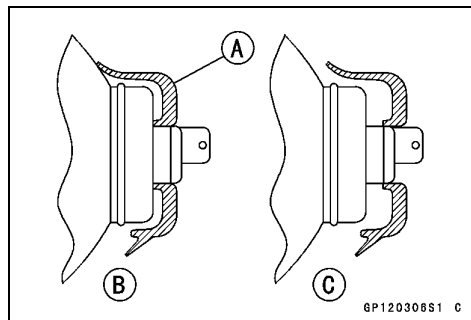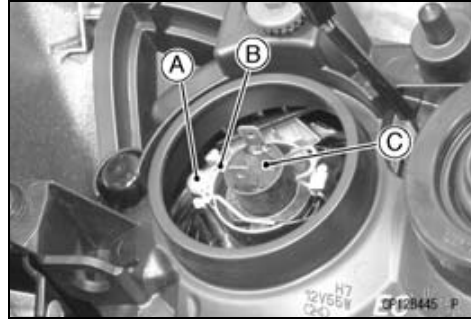


#### Headlight Unit/Housing Removal

- Remove the left and right lower fairing (see Lower Fairing Removal in the Frame chapter).
- Disconnect the left and right turn signal lead connectors [A].
- Remove the wind shield mounting bolts [B] and wind shield [C].

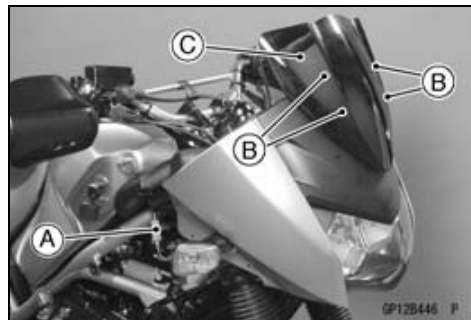


- Remove the wind shield mounting stay nut [A], and remove the mounting stay [B] and headlight unit/housing with the upper fairings [C] installed left and right turn signal lights.

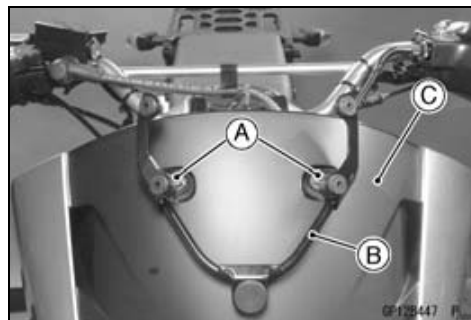




## Lighting System

- Disconnect the headlight lead couplers [A], city light lead connector [B], and free the headlight unit/housing [C] and upper fairings [D] assembly.

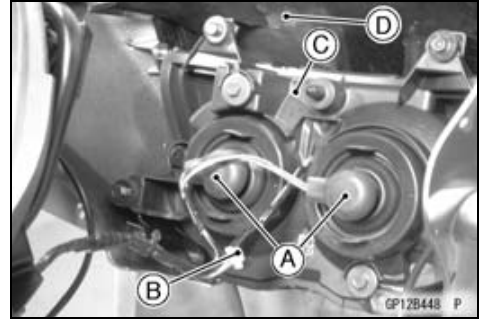

- Remove the 4-bolts [A] and two-screws [B], and separate the headlight unit/housing [C] and upper fairings [D].

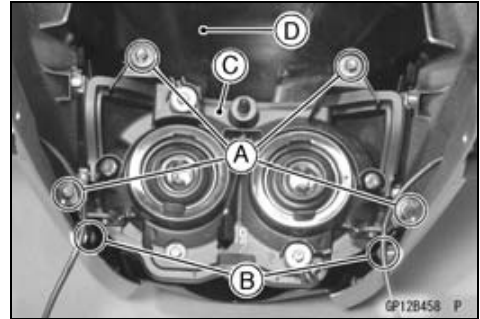


### *Headlight Unit/Housing Installation*

- Headlight unit/housing installation is the reverse of removal


### *City Light Bulb Replacement*

- Remove the headlight unit/housing (see Headlight Unit/Housing Removal).
- Pull out the city light socket [A] with the bulb.
- Remove the bulb and replace it.

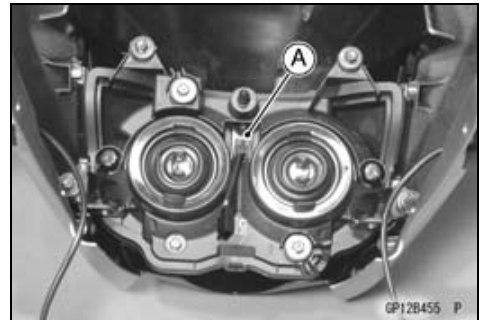

### *Tail/Brake Light Bulb Replacement*


- Remove the tail/brake light lens screws [A] and lens [B].

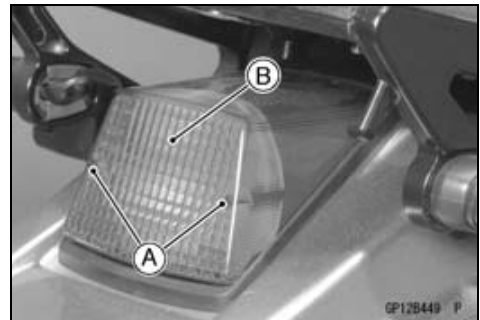

## 16-52 ELECTRICAL SYSTEM

### Lighting System

- Insert the new bulb by aligning the pins [A] with the grooves [B] in the walls of the socket so that the pin closest to the bulb base is to the upper right.
- Turn the bulb clockwise pushing it into the bulb base.

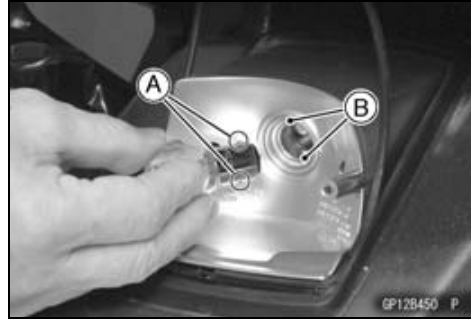

#### Tail/Brake Light Lens Removal/Installation

- Be careful not to overtighten the lens mounting screws.

#### Turn Signal Light Bulb Replacement

- Refer to the Tail/Brake Light Bulb Replacement section.
- Be careful not to overtighten the lens mounting screws.

#### Turn Signal Relay Inspection


- Remove the right side cover (see Side Cover Removal in the Frame chapter).
- Connect one 12 V battery and turn signal lights as indicated in the figure, and count how many times the lights flash for one minute.

Turn Signal Relay [A]

Turn Signal Lights [B]

12 V Battery [C]

- ★ If the lights do not flash as specified, replace the turn signal relay.

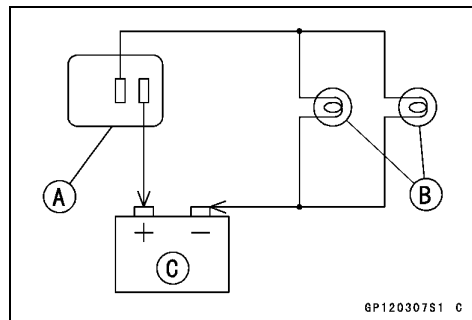

#### Testing Turn Signal Relay


Load		Flashing times (c/m*)
The Number of Turn Signal Lights	Wattage (W)	
1**	10	140 ~ 250
2	20	75 ~ 95

\*: Cycle(s) per minute

\*\* : Corresponds to "light burned out".

## Lighting System

## Turn Signal Light Circuit

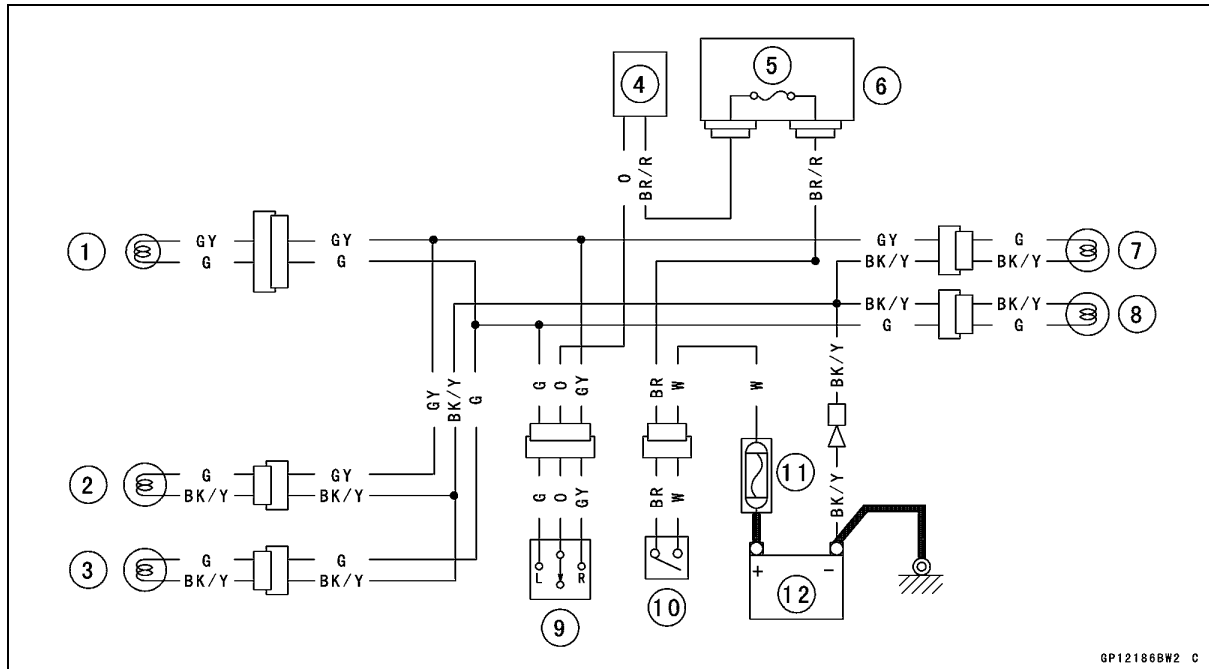


1. Turn Signal Indicator Light
2. Front Right Turn Signal Light
3. Front Left Turn Signal Light
4. Turn Signal Relay 10 W
5. Turn Signal Fuse 10 A
6. Junction Box
7. Rear Right Turn Signal Light
8. Rear Left Turn Signal Light
9. Turn Signal Switch
10. Ignition Switch
11. Main Fuse 30 A
12. Battery 12 V 10 Ah

## 16-54 ELECTRICAL SYSTEM


### Radiator Fan System

#### Fan System Circuit Inspection

- Remove the left lower fairing (see Lower Fairing Removal in the Frame chapter).
  - Disconnect the connector from the radiator fan switch [A].
  - Using an auxiliary wire [B], connect the radiator fan switch connector.
- ★ If the fan turns, inspect the fan switch.  
★ If the fan does not turn, inspect the following.
- Lead and Connectors
  - Main Fuse and Fan Fuse
  - Fan Motor

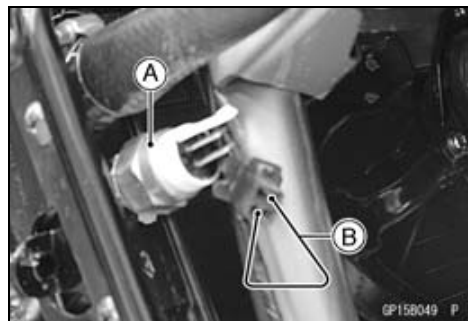

#### Radiator Fan Circuit

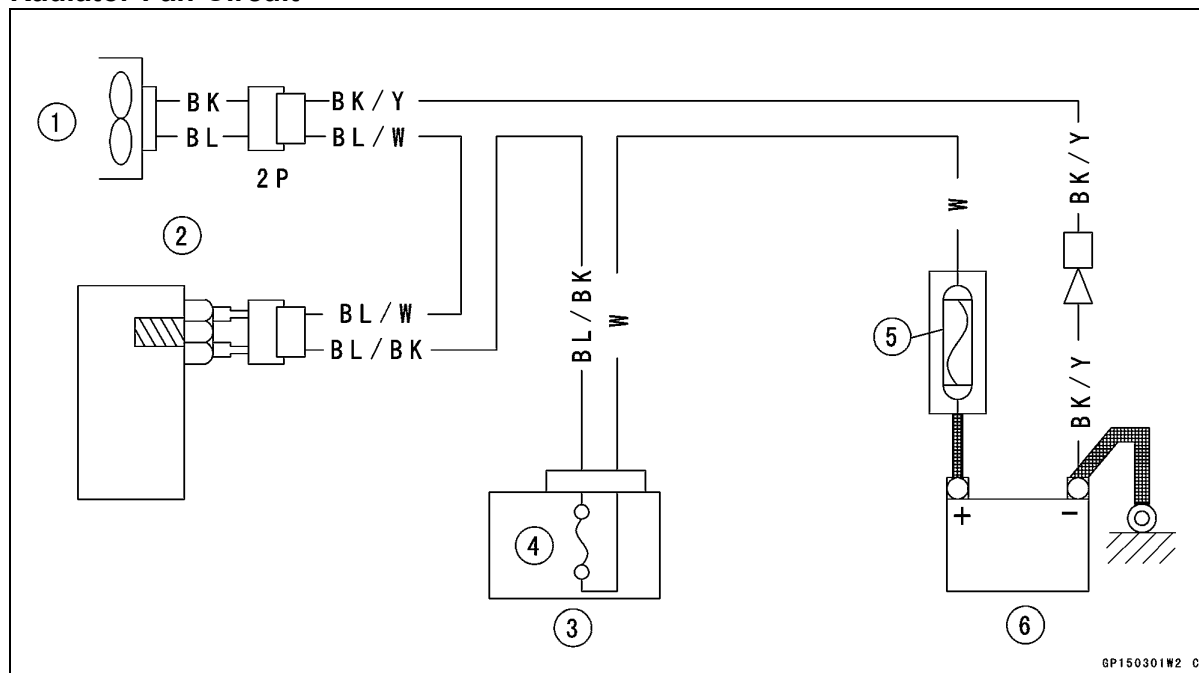

1. Radiator Fan
2. Radiator Fan Switch
3. Junction Box
4. Fan Fuse 10 A
5. Main Fuse 30 A
6. Battery 12 V 10 Ah

#### Fan Motor Inspection


- Remove the left lower fairing (see Lower Fairing Removal in the Frame chapter).
- Disconnect the fan motor lead connector [A].
- Using two auxiliary wires, supply battery power to the fan.

#### Wire Connectors

Blue Lead ↔ Battery (+)

Black Lead ↔ Battery (-)


- ★ If the fan does not turn at this time, the fan is defective and must be replaced.

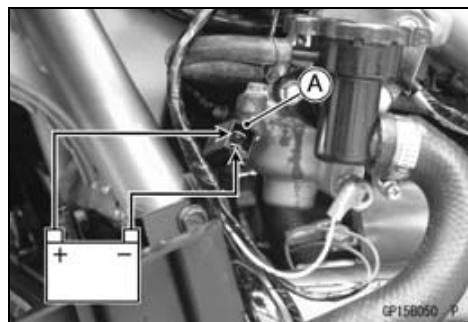

## Meter Unit

### Meter Unit Removal

- Remove the headlight unit and housing (see Headlight Unit/Housing Removal).
- Remove the speedometer cable upper end [A] and the mounting nuts [B].
- Disconnect the meter connectors [C] and take off the meter unit [D].

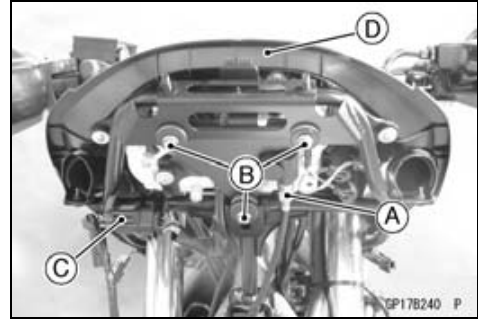


### CAUTION


Place the meter unit so that the face is up. If a meter unit is left upside down or sideways for any length of time, it will malfunction.

### Meter Unit Disassembly


- Remove the meter unit (see Meter Unit Removal).
- Remove the bracket [A] by taking off three nuts [B].

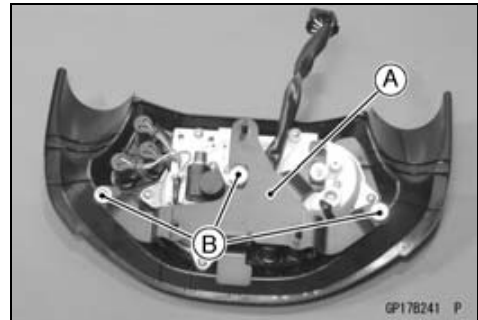

- Remove the following meter indicator leads.
  - Speedometer Lights [A]
  - Tachometer Light [B]
  - Neutral Indicator Light [C]
  - Turn Signal Indicator Light [D]
  - Oil Pressure Warning Light [E]
  - High Beam Indicator Light [F]
  - Water Temperature Warning Light [G]
  - Tachometer Connector [H]

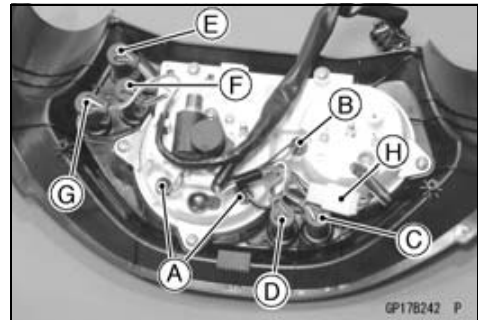

- Remove the screws [A] and take off the front cover [B].

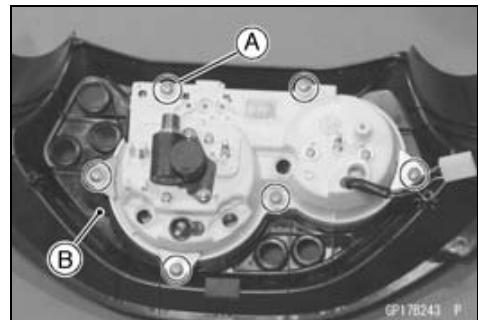


## 16-56 ELECTRICAL SYSTEM

### Meter Unit

- Remove the screws [A] for removal of each unit.
  - Tachometer [B]
  - Speedometer [C]
  - Speedometer Gear [D]


#### NOTE

- Turns out the trip knob counterclockwise before removing the speedometer mounting screws.

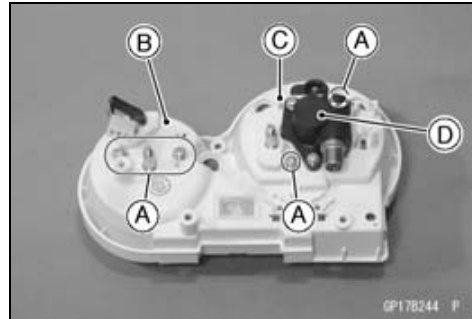

#### Tachometer Inspection

- Check the tachometer circuit wiring (see Wiring Inspection).
- ★ If all wiring and components other than the tachometer unit check out good, the unit is suspect. Check the unit as shown.
- Remove: upper fairing headlight body (see Headlight Unit/Housing Removal).
- Disconnect the tachometer connector [A].
- Connect the tachometer connector using an auxiliary wires for BR [B] and BK/Y [C] leads.
- Turn the ignition switch ON.
- Open and connect the BR lead to the BK tachometer lead repeatedly.

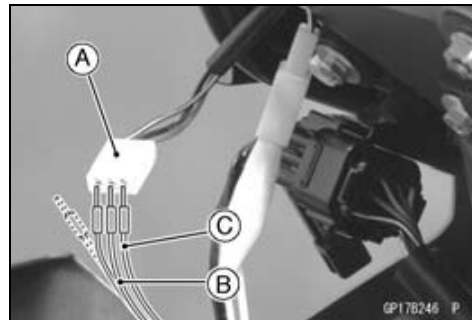

- Then the tachometer needle [A] should flick [B].
- Turn the ignition switch OFF.
- ★ If the needle does not flick, replace the tachometer unit.




#### Bulb Replacement

- To remove the wedge-base type bulb [A], pull the bulb out of the socket [B].


#### CAUTION

Do not turn the bulb. Pull the bulb out to prevent damage to the bulb. Do not use bulb rated for other than voltage or wattage specified in the wiring diagram.

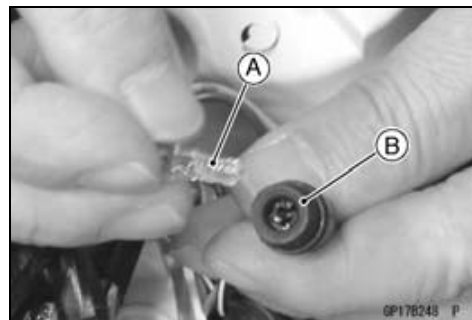

## Meter Unit

## Tachometer Circuit

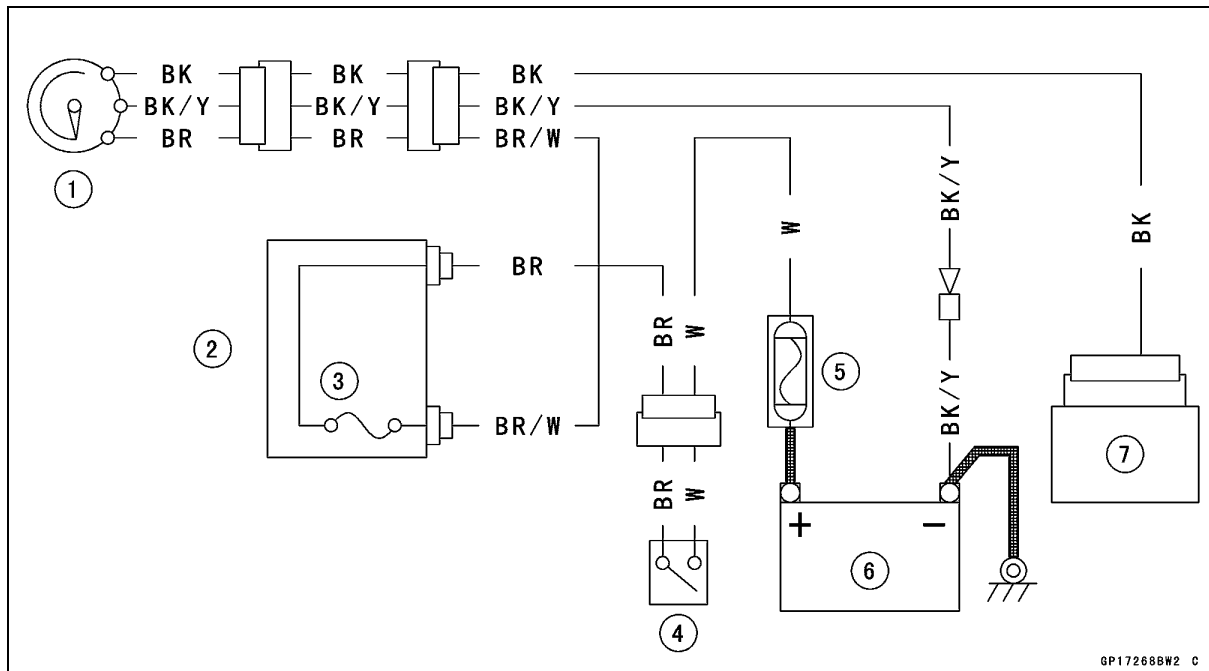


1. Tachometer
2. Junction Box
3. Ignition Fuse 10 A
4. Ignition Switch
5. Main Fuse 30 A
6. Battery 12 V 10 AH
7. IC Igniter

*Water Temperature Warning System Inspection*

The water temperature warning light goes on when the ignition switch is turned on and goes off soon after the engine starts running (oil pressure switch off) to ensure that its circuit functions properly. The warning light also goes on whenever the coolant temperature rises to **113 ~ 117°C (235 ~ 243°F)** when the motorcycles is in operation. If it stays on, stop the engine and check the coolant level in the reserve tank after the engine cools down.

- Inspect the water temperature warning light and the system wiring (see Wiring Inspection).
- Turn on the ignition switch.
- Disconnect the water temperature switch lead [A] and oil pressure switch lead, then ground them together to the frame or engine using auxiliary lead.
- ★ If the warning light is lit, inspect the water temperature switch (see Specifications) and the oil pressure switch [B]. Replace any switch if damaged.
- ★ If the warning light is not lit, check the warning light bulb.

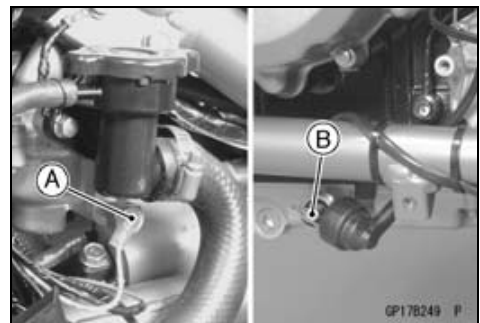


GP178249 P



# 16-58 ELECTRICAL SYSTEM

## Meter Unit

### Water Temperature Warning System

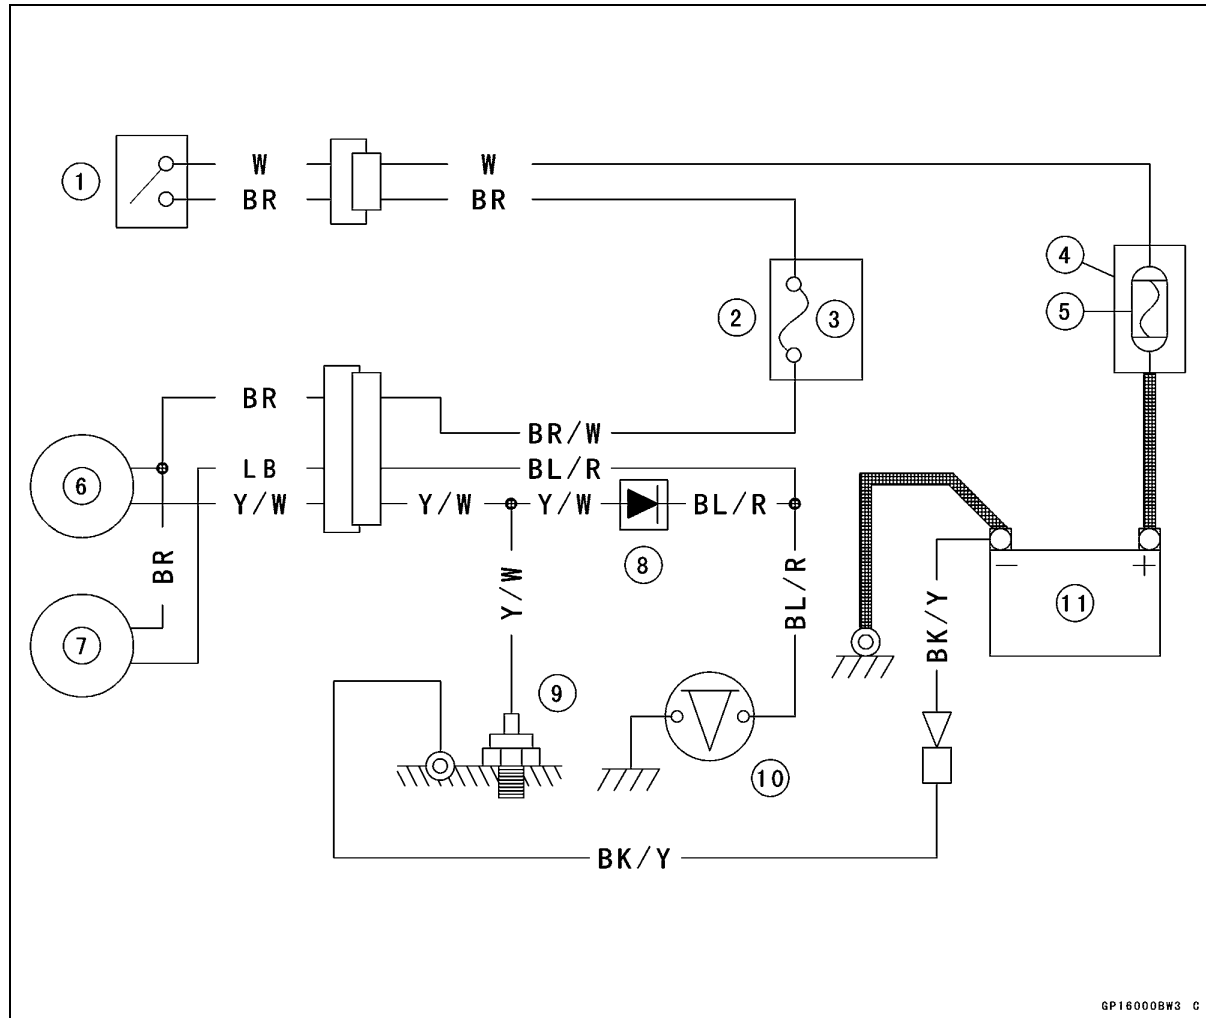

1. Ignition Switch
2. Junction Box
3. Ignition Fuse 10 A
4. Starter Relay
5. Main Fuse 30 A
6. Water Temperature Warning Light
7. Oil Pressure Warning Light
8. Rectifier
9. Water Temperature Switch
10. Oil Pressure Switch
11. Battery 12 V 10 AH

GP16000B3 C



## Switches and Sensors

### Brake Light Switch Inspection



- Refer to the Brake Light Switch Operation Inspection in the Periodic Maintenance chapter.

### Switch Inspection


- Using the hand tester, check to see that only connections shown in the table have continuity (about zero ohm).
- For the handlebar switches and the ignition switch refer to the tables in the Wiring Diagram.
- ★ If the switch has an open or short, repair it or replace it with a new one.

**Special Tool - Hand Tester: 57001-1394**



### Neutral Switch Connections

	SW. Terminal	
When transmission is in neutral		
When transmission is not in neutral		

### Rear Brake Light Switch Connections


	BR	BL
When brake pedal is pushed down		
When brake pedal is released		

### Oil Pressure Switch Connections\*

	SW. Terminal	
When engine is stopped		
When engine is running		

\*: Engine lubrication system is in good condition

### Side Stand Switch Connections\*

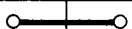	BK/Y	G/W
When side stand is up		
When side stand is down		

## 16-60 ELECTRICAL SYSTEM

### Switches and Sensors

#### Radiator Fan Switch Inspection

- Remove the left lower fairing (see Lower Fairing Removal in the Frame chapter).
- Remove the fan switch (see Radiator Fan Switch Removal in the Cooling System chapter).
- Suspend the switch [A] in a container of coolant so that the temperature-sensing projection and threaded portion are submerged.
- Suspend an accurate thermometer [B] in the coolant so that the sensitive portions [C] are located in almost the same depth.

#### NOTE

- *The switch and thermometer must not touch the container sides or bottom.*
- Place the container over a source of heat and gradually raise the temperature of the water while stirring the water gently.
- Using the hand tester, measure the internal resistance of the switch across the terminals at the temperatures shown in the table.
- ★ If the hand tester does not show the specified values, replace the switch.

#### Radiator Fan Switch Resistance

##### Rising temperature:

From OFF to ON at 96 ~ 100°C (205 ~ 212°F)


##### Falling temperature:

From ON to OFF at 91°C (196°F)

Less than temperature at ON

ON: Less than 0.5 Ω

OFF: More than 1 MΩ

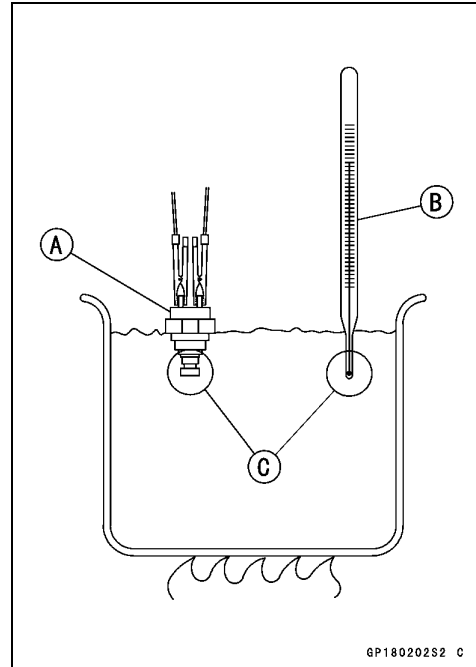


## Switches and Sensors

### Water Temperature Switch Inspection

- Remove the water temperature switch (see Water Temperature Switch Removal in the Cooling System chapter).
- Suspend the switch [A] in a container of coolant so that the temperature sensing projection and threaded portion are submerged.
- Suspend an accurate thermometer [B] in the coolant so that the sensitive portions [C] are located in almost the same depth.

#### NOTE

- The switch and thermometer must not touch the container sides or bottom.
- Place the container over a source of heat and gradually raise the temperature of the coolant while stirring the coolant gently.
- Using the hand tester, measure the internal resistance of the switch across the terminal and the body at the temperatures shown in the table.
- ★ If the hand tester does not show the specified values, replace the switch.

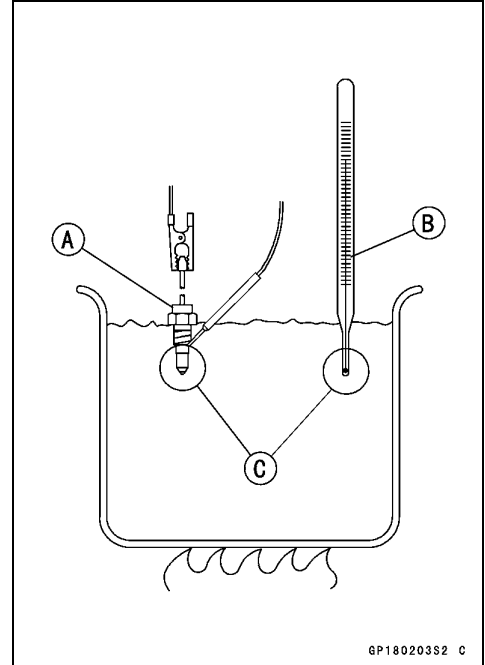

### Water Temperature Switch Connections

#### Rising temperature:

From OFF to ON at 113 ~ 117°C (235 ~ 243°F)

#### Falling temperature:

From ON to OFF at 108°C (226°F) temperature less than ON temperature


ON: Less than 0.5 Ω

OFF: More than 1 MΩ

## 16-62 ELECTRICAL SYSTEM

### Junction Box

The junction box [A] has fuses [B], relays, and diodes. The relays and diodes can not be removed.

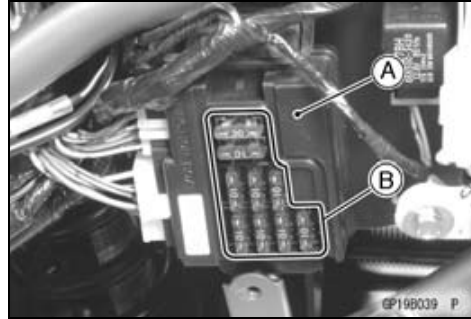

#### *Junction Box Fuse Circuit Inspection*

- Remove the left side cover (see Side Cover Removal in the Frame chapter).
- Remove the junction box.
- Pull off the connectors from the junction box.
- Make sure all connector terminals are clean and tight, and none of them have been bent.
- ★ Clean the dirty terminals, and straighten slightly-bent terminals.
- Check conductivity of the numbered terminals with the hand tester.
- ★ If the tester does not read as specified, replace the junction box.

**Special Tool - Hand Tester: 57001-1394**

#### **Fuse Circuit Inspection**

Tester Connection	Tester Reading ( $\Omega$ )	Tester Connection	Tester Reading ( $\Omega$ )
1 - 1A	0	1A - 8	$\infty$
1 - 2	0	2 - 8	$\infty$
3A - 4	0	3A - 8	$\infty$
6 - 5	0	6 - 2	$\infty$
6 - 10	0	6 - 3A	$\infty$
6 - 7	0	17 - 3A	$\infty$
6 - 17	0		

#### *Starter Circuit/Headlight Relay Inspection*

- Remove the left side cover (see Side Cover Removal in the Frame chapter).
- Remove the junction box.
- Check conductivity of the following numbered terminals by connecting the hand tester and one 12 V battery to the junction box as shown.
- ★ If the tester does not read as specified, replace the junction box.

**Special Tool - Hand Tester: 57001-1394**

## Junction Box

### Relay Circuit Inspection (with the battery disconnected)

	Tester Connection	Tester Reading (Ω)		Tester Connection	Tester Reading (Ω)
Headlight Relay	7-8	∞	Starter Circuit Relay	9 -11	∞
	7-13	∞		12 -13	∞
	(+) (-) 13 -9	Not ∞ *		(+) (-) 13-11	∞
				(+) (-) 12 -11	Not ∞ *

(\*): The actual reading varies with the hand tester used.

(+): Apply tester positive lead.

(-): Apply tester negative lead.

### Relay Circuit Inspection (with the battery connected)

	Battery Connection (+) (-)	Tester Connection	Tester Reading (Ω)
Headlight Relay	9 - 13	7 - 8	0
Starter Circuit Relay	11 - 12	(+) (-) 13 - 11	Not ∞*

(\*): The actual reading varies with the hand tester used.

(+): Apply tester positive lead.

(-): Apply tester negative lead.

### Diode Circuit Inspection

- Remove the left side cover (see Side Cover Removal in the Frame chapter).
- Remove the junction box.
- Check conductivity of the following pairs of terminals.

### Diode Circuit Inspection

Tester Connection	13-8, 13-9, 12-11, 12-14, 15-14, 16-14
-------------------	--

- ★ The resistance should be low in one direction and more than ten times as much in the other direction. If any diode shows low or high in both directions, the diode is defective and the junction box must be replaced.


### NOTE

- The actual meter reading varies with the meter used and the individual diodes, but, generally speaking, the lower reading should be from zero to one half the scale.

# 16-64 ELECTRICAL SYSTEM

## Junction Box

### Junction Box Internal Circuit

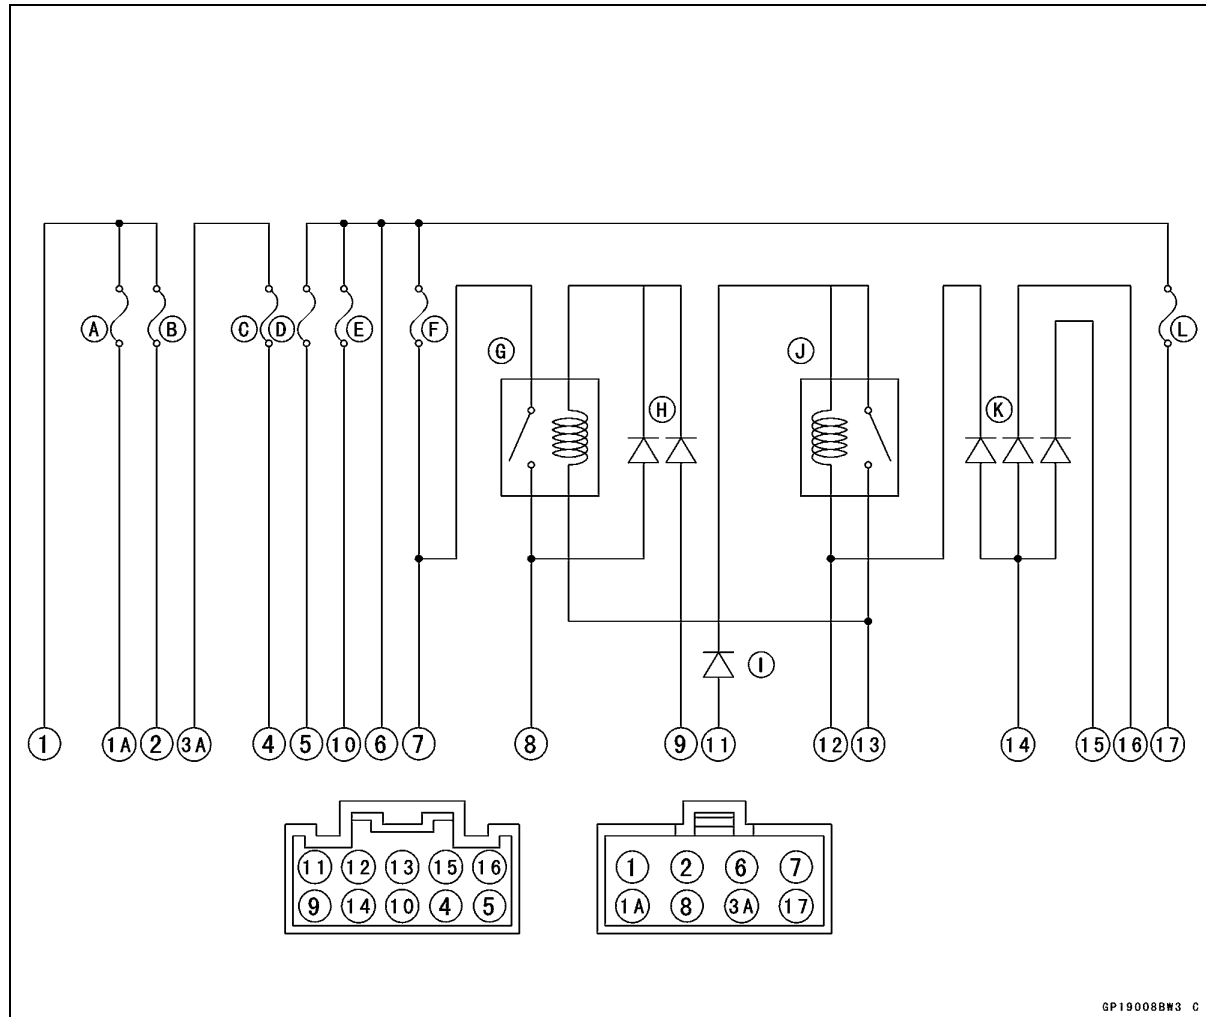

- A: Accessory Fuse 10 A
- B: Radiator Fan Fuse 10 A
- C: Turn Signal Relay Fuse 10 A
- D: Horn Fuse 10 A
- E: Ignition Fuse 10 A
- F: Headlight Fuse 10 A
- G: Headlight Relay
- H: Headlight Diodes
- I: Starter Diode
- J: Starter Circuit Relay
- K: Starter Lock Out Diodes
- L: Taillight Fuse 10 A

## Fuses


### 30 A Main Fuse Removal

- Remove the right side cover (see Side Cover Removal in the Frame chapter).
- Unlock the hook to lift up the lids of the main fuse cover [A].
- Pull up the main fuse cover with the starter relay connector.



### Junction Box Fuse Removal

- Remove the left side cover (see Side Cover Removal in the Frame chapter).
- Unlock the hook to lift up the lid from the junction box.
- Pull the fuses [A] straight up from the junction box with the nose plier.

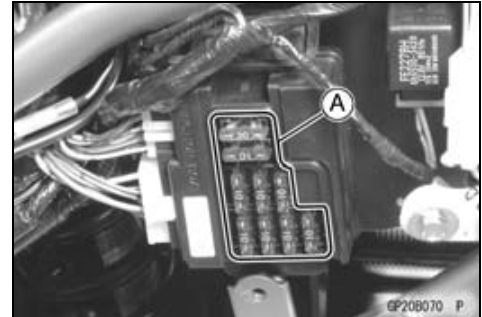

### Junction Box Fuse Installation

- If a fuse fails during operation, inspect the electrical system to determine the cause, and then replace it with a new fuse of proper amperage.
- Install the junction box fuses on the original position as specified on the lid.

### Fuse Inspection


- Remove the fuse.
- Inspect the fuse element.
- If it is blown out, replace the fuse. Before replacing a blown fuse, always check the amperage in the affected circuit. If the amperage is equal to or greater than the fuse rating, check the wiring and related components for a short circuit.

Housing [A]

Fuse Element [B]

Terminals [C]

Blown Element [D]

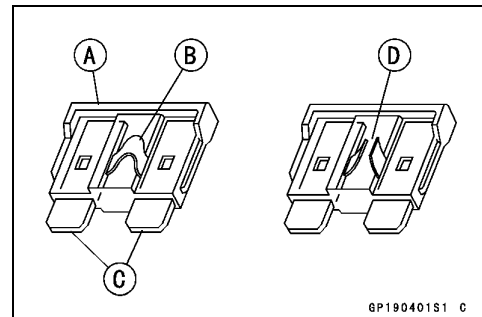

### CAUTION

**When replacing a fuse, be sure the new fuse matches the specified fuse rating for that circuit. Installation of a fuse with a higher rating may cause damage to wiring and components.**






# Appendix

## Table of Contents

Cable, Wire, and Hose Routing .....	17-2
Troubleshooting Guide .....	17-16

# 17-2 APPENDIX

## Cable, Wire, and Hose Routing

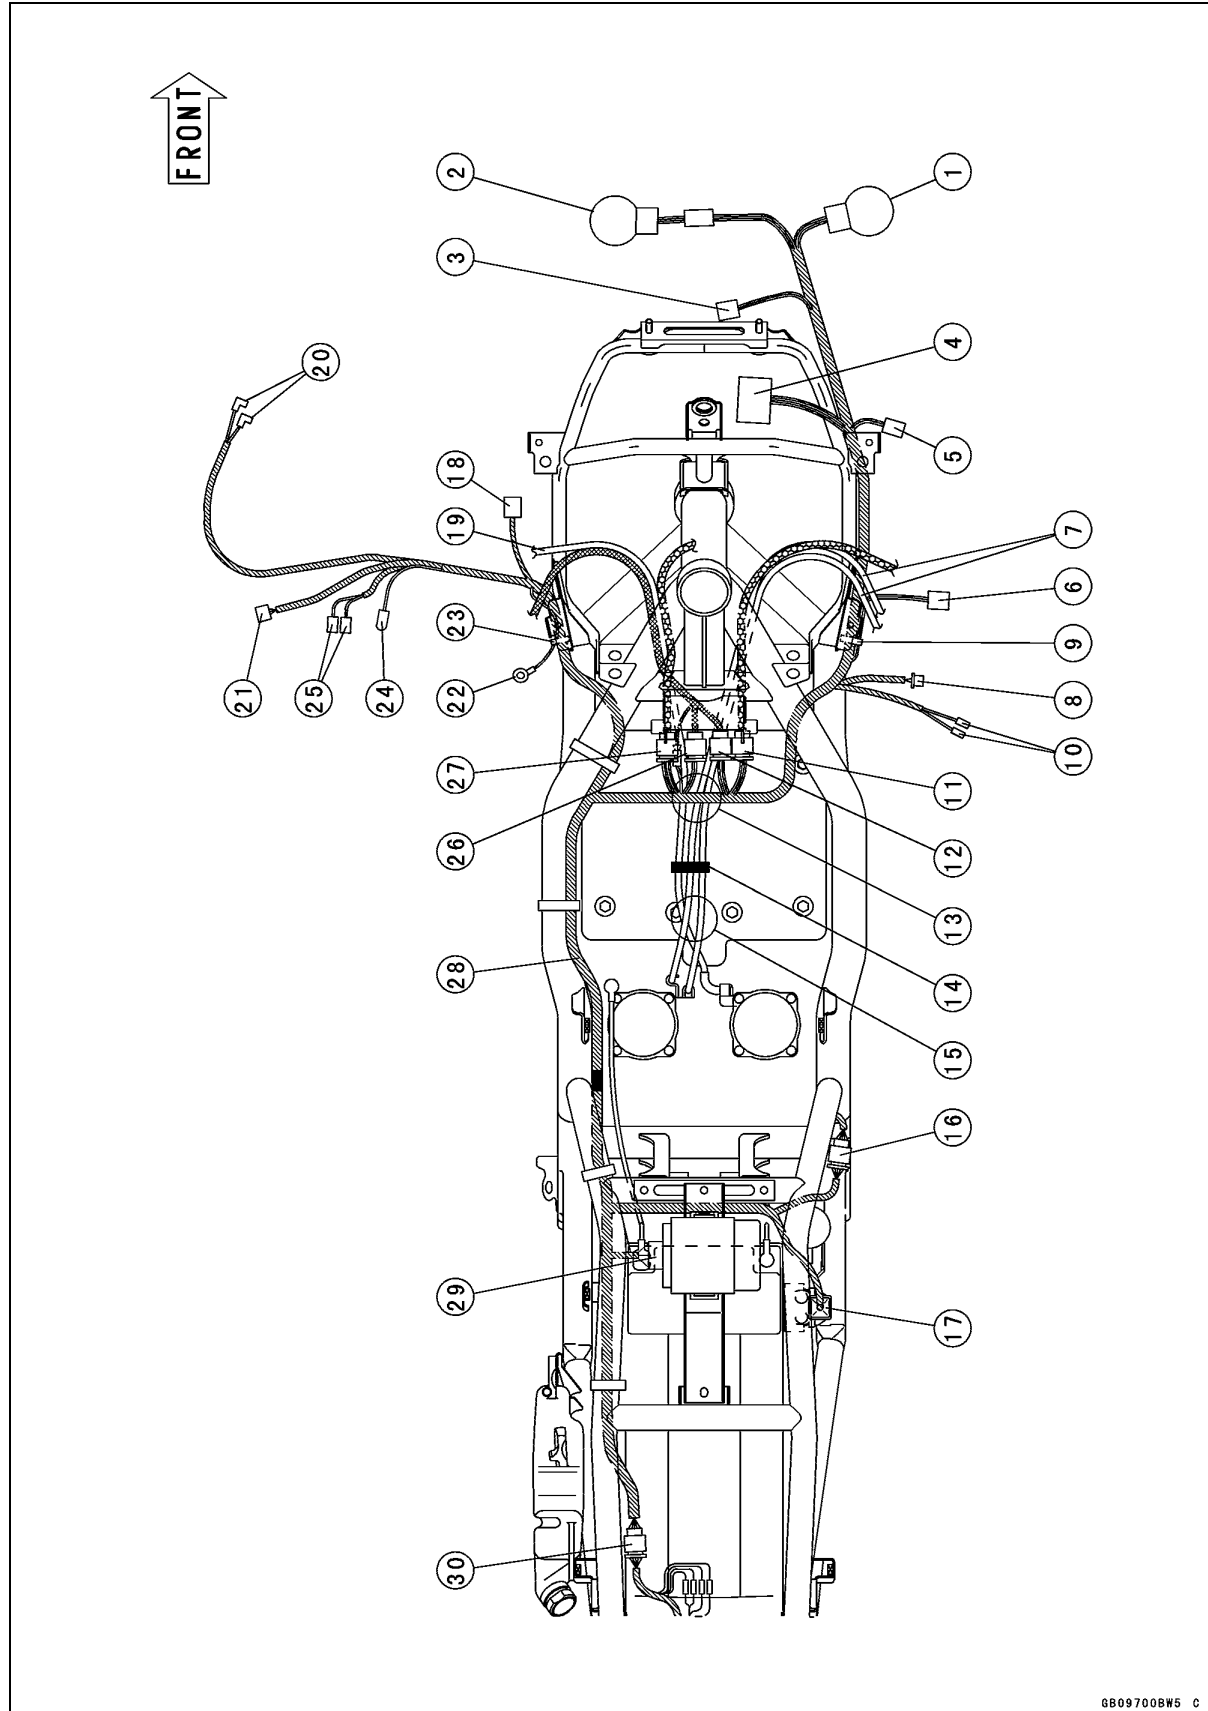

---


**Cable, Wire, and Hose Routing**

---

1. Headlight Lead Connector (High Beam)
2. Headlight Lead Connector (Low Beam)
3. City Light Lead Connector
4. Meter Assembly Connector
5. Rectifier Lead Connector
6. Front Right Turn Signal Light Lead Connector
7. Throttle Cables
8. Radiator Fan Motor Lead Connector
9. Clamp (Clamp the main harness with turn signal light lead)
10. Ignition Coil Lead Connector (Right)
11. Handlebar Switch Lead Connector (Right)
12. Starter Lockout Switch Lead Connector
13. Route the throttle cables under the main harness.
14. Clamp
15. Route the choke cable under the throttle cables.
16. Rear Brake Light Switch Lead Connector
17. Starter Relay Connector
18. Front Left Turn Signal Light Lead Connector
19. Choke Cable
20. Horn Lead Connectors
21. Thermostat Lead Connector
22. Frame Ground Lead Terminal
23. Clamp (Clamp the frame ground lead with the main harness.)
24. Water Temperature Sensor Lead Connector
25. Ignition Coil Lead Connectors (Left)
26. Ignition Switch Lead Connector
27. Handlebar Switch Lead Connector (Left)
28. Main Harness
29. IC Igniter Lead Connector
30. Rear Harness Connector

# 17-4 APPENDIX

## Cable, Wire, and Hose Routing

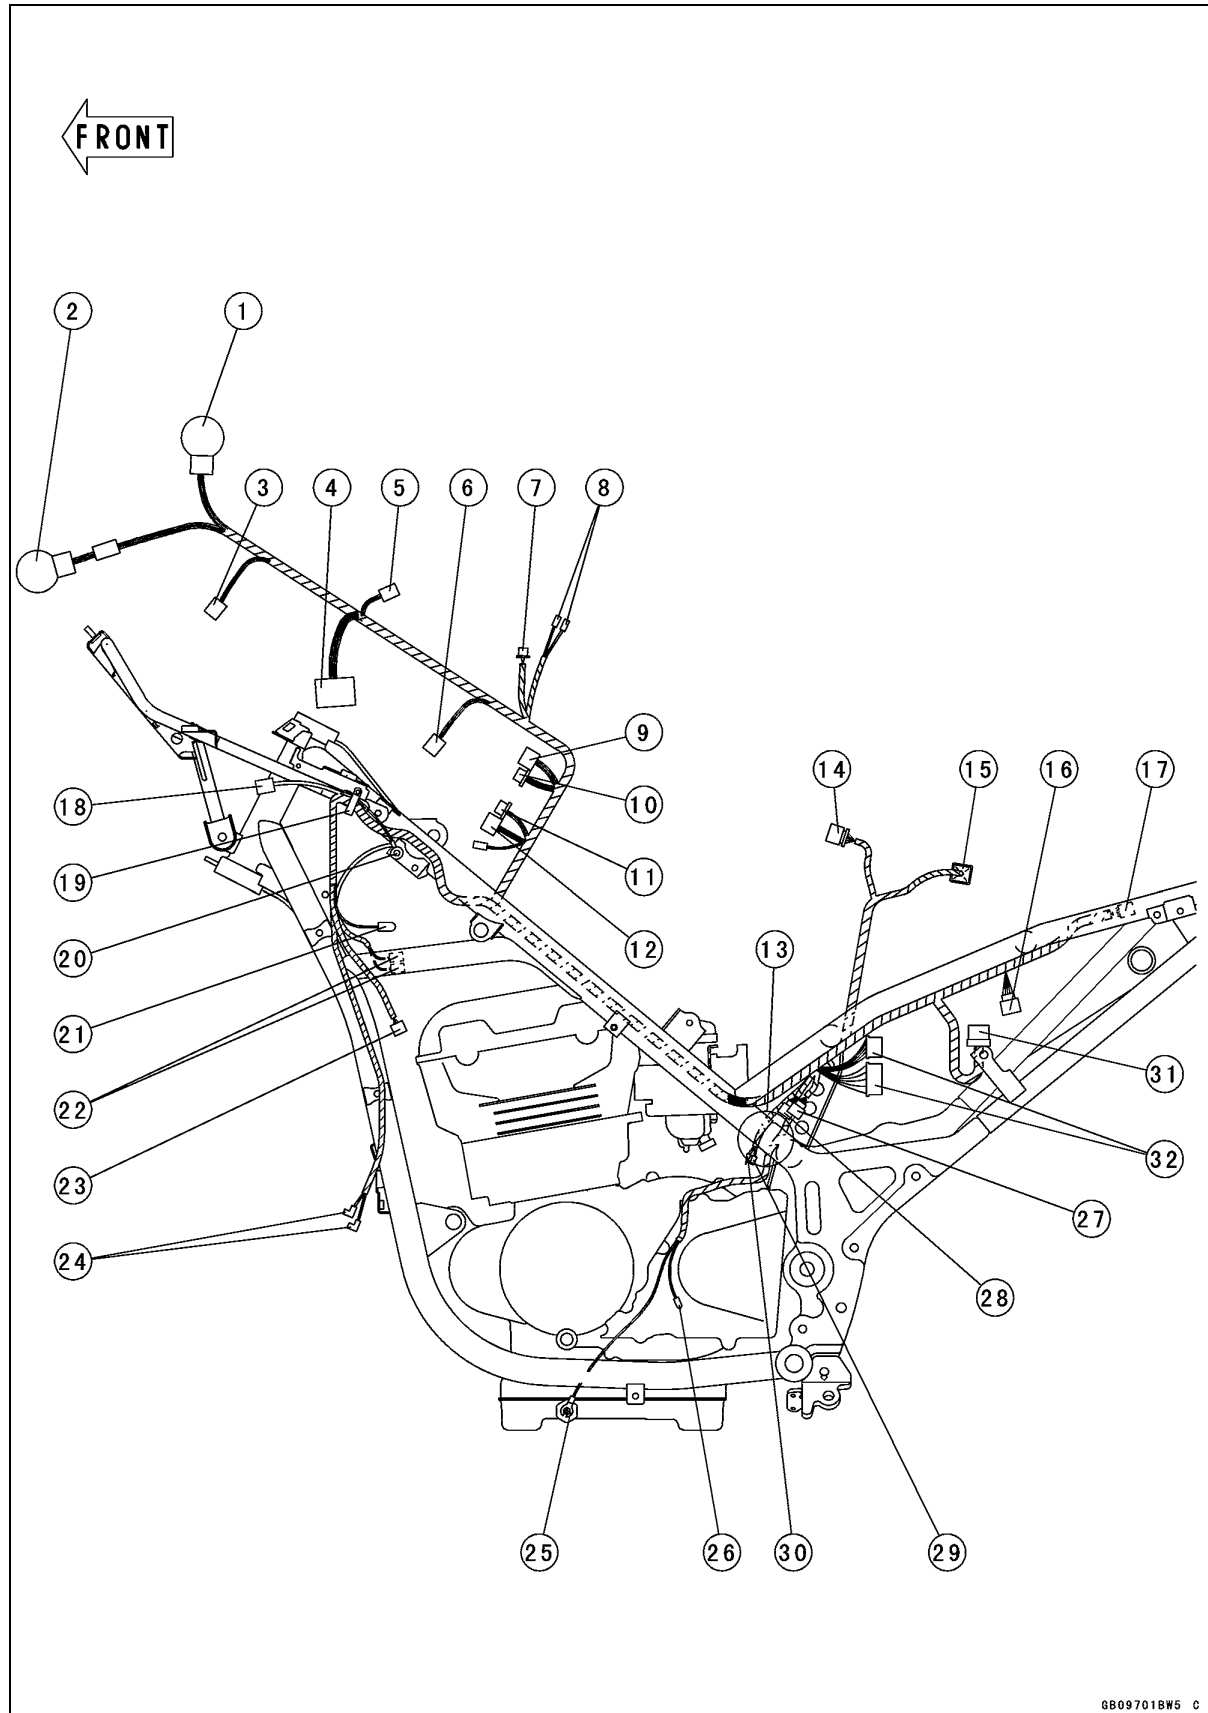

GB09701BW5 C

---


**Cable, Wire, and Hose Routing**

---

1. Headlight Lead Connector (High Beam)
2. Headlight Lead Connector (Low Beam)
3. City Light Lead Connector
4. Meter Assembly
5. Diode Lead Connector
6. Front Right Turn Signal Light Lead Connector
7. Radiator Fan Motor Lead Connector
8. Ignition Coil Lead Connectors (Right)
9. Handlebar Switch Lead (Right)
10. Starter Lockout Switch Lead Connector
11. Ignition Switch Lead Connector
12. Handlebar Switch Lead (Left)
13. Route the leads over the frame cross pipe.
14. Rear Brake Light Switch Lead Connector
15. Starter Relay Lead
16. Regulator/Rectifier Lead Connector
17. Rear Harness
18. Front Left Turn Signal Light Lead Connector
19. Clamp (Clamp the harness with frame ground lead.)
20. Frame Ground Lead Terminal
21. Water Temperature Sensor Lead
22. Ignition Coil Lead Connectors (Left)
23. Radiator Fan Switch Lead
24. Horn Lead Connectors
25. Oil Pressure Switch Lead Terminal
26. Neutral Switch Lead
27. Crankshaft Sensor Lead Connector
28. Alternator Lead Connector
29. Neutral Switch Lead Connector
30. Oil Pressure Switch Lead Connector
31. Turn Signal Relay
32. Junction Box Lead Connectors

# 17-6 APPENDIX

## Cable, Wire, and Hose Routing

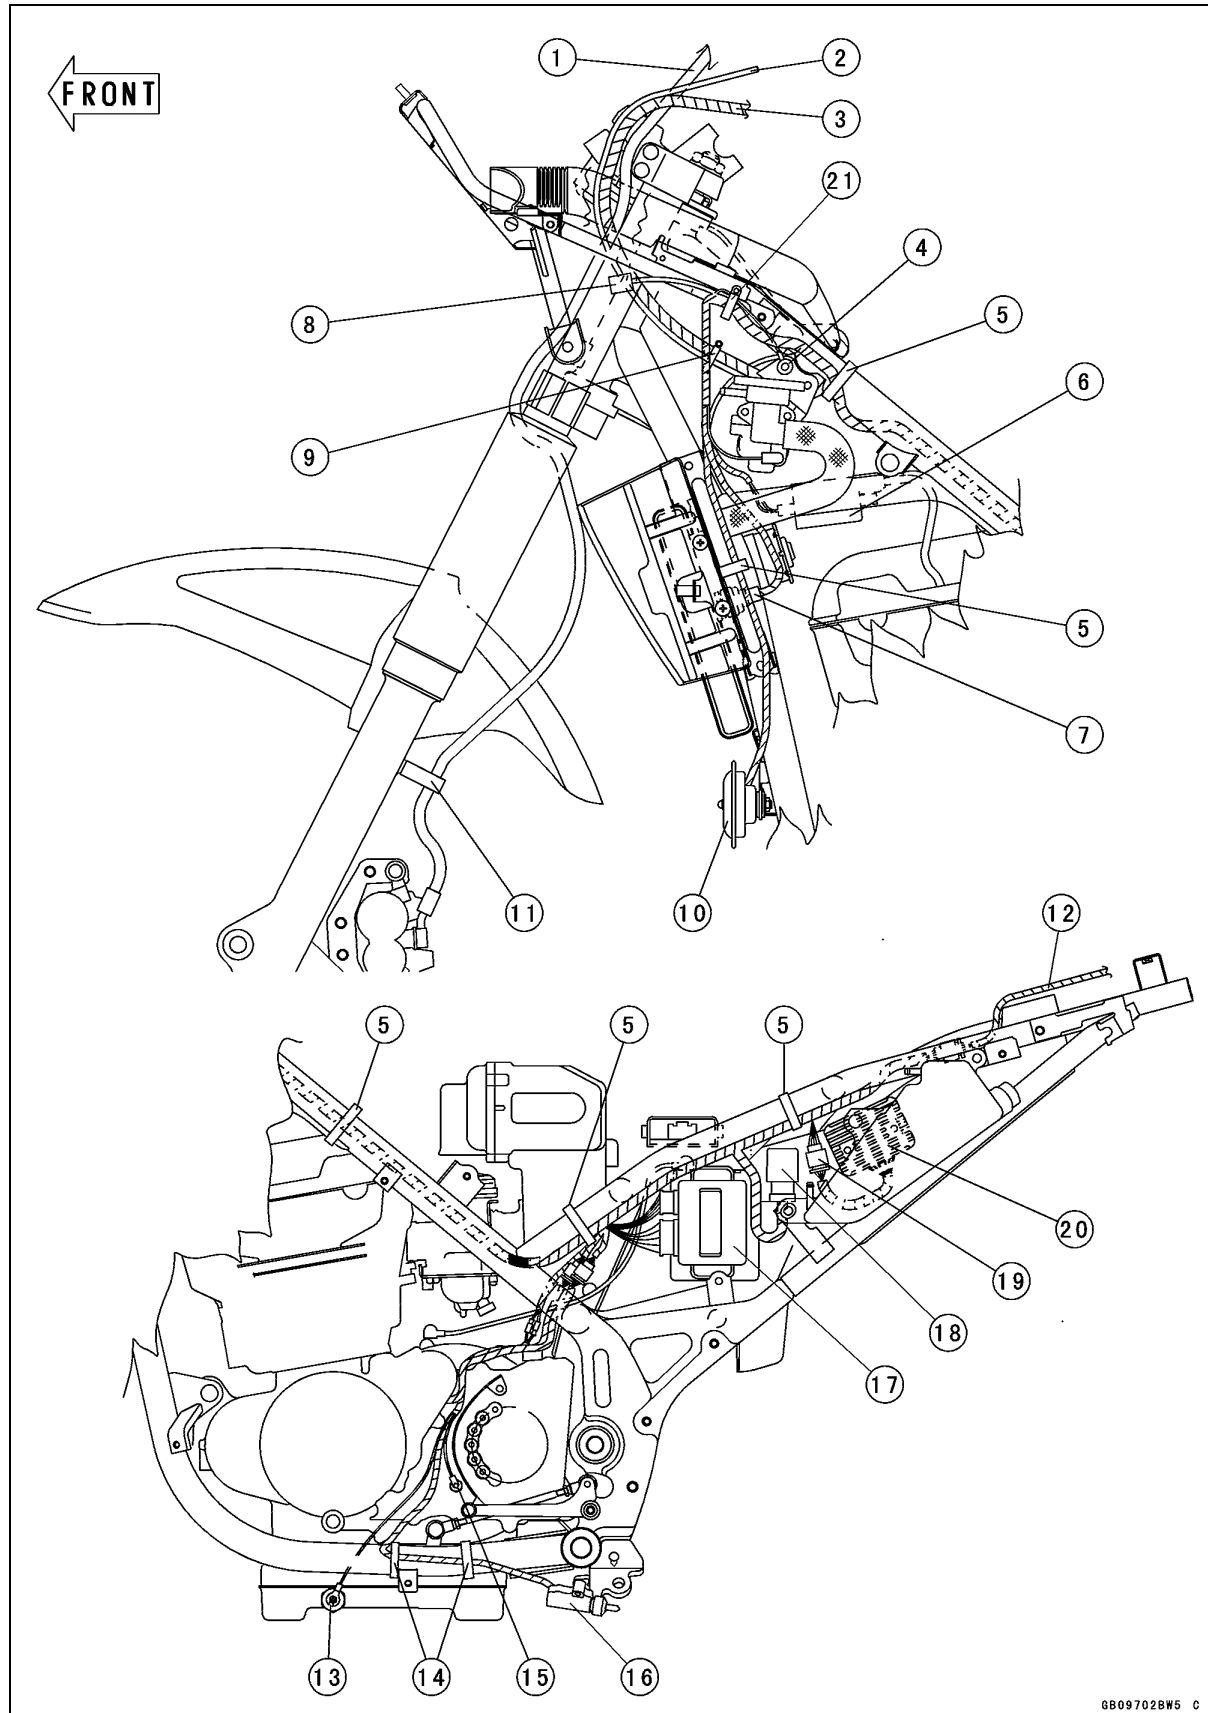

6B09702BW5 C

---


**Cable, Wire, and Hose Routing**

---

1. Front Brake Hose
2. Choke Cable
3. Handlebar Switch Lead (Left)
4. Frame Ground Lead Terminal
5. Band
6. Ignition Coil (Left)
7. Radiator Fan Switch
8. Front Left Turn Signal Light Lead Connector
9. Clamp (Clamp the left handlebar switch lead, choke cable and ignition switch lead.)
10. Horn
11. Front Brake Hose Guide
12. Rear Harness
13. Oil Pressure Switch
14. Bands (Clamp the side stand switch lead so that it does not contact the exhaust pipe)
15. Neutral Switch
16. Side Stand Switch
17. Junction Box (Insert it to the rear fender)
18. Turn Signal Relay
19. Connect the regulator/rectifier lead connector inside of the reserve tank hose.
20. Regulator/Rectifier
21. Clamp (Clamp the left turn signal lead and frame ground lead)

# 17-8 APPENDIX

## Cable, Wire, and Hose Routing

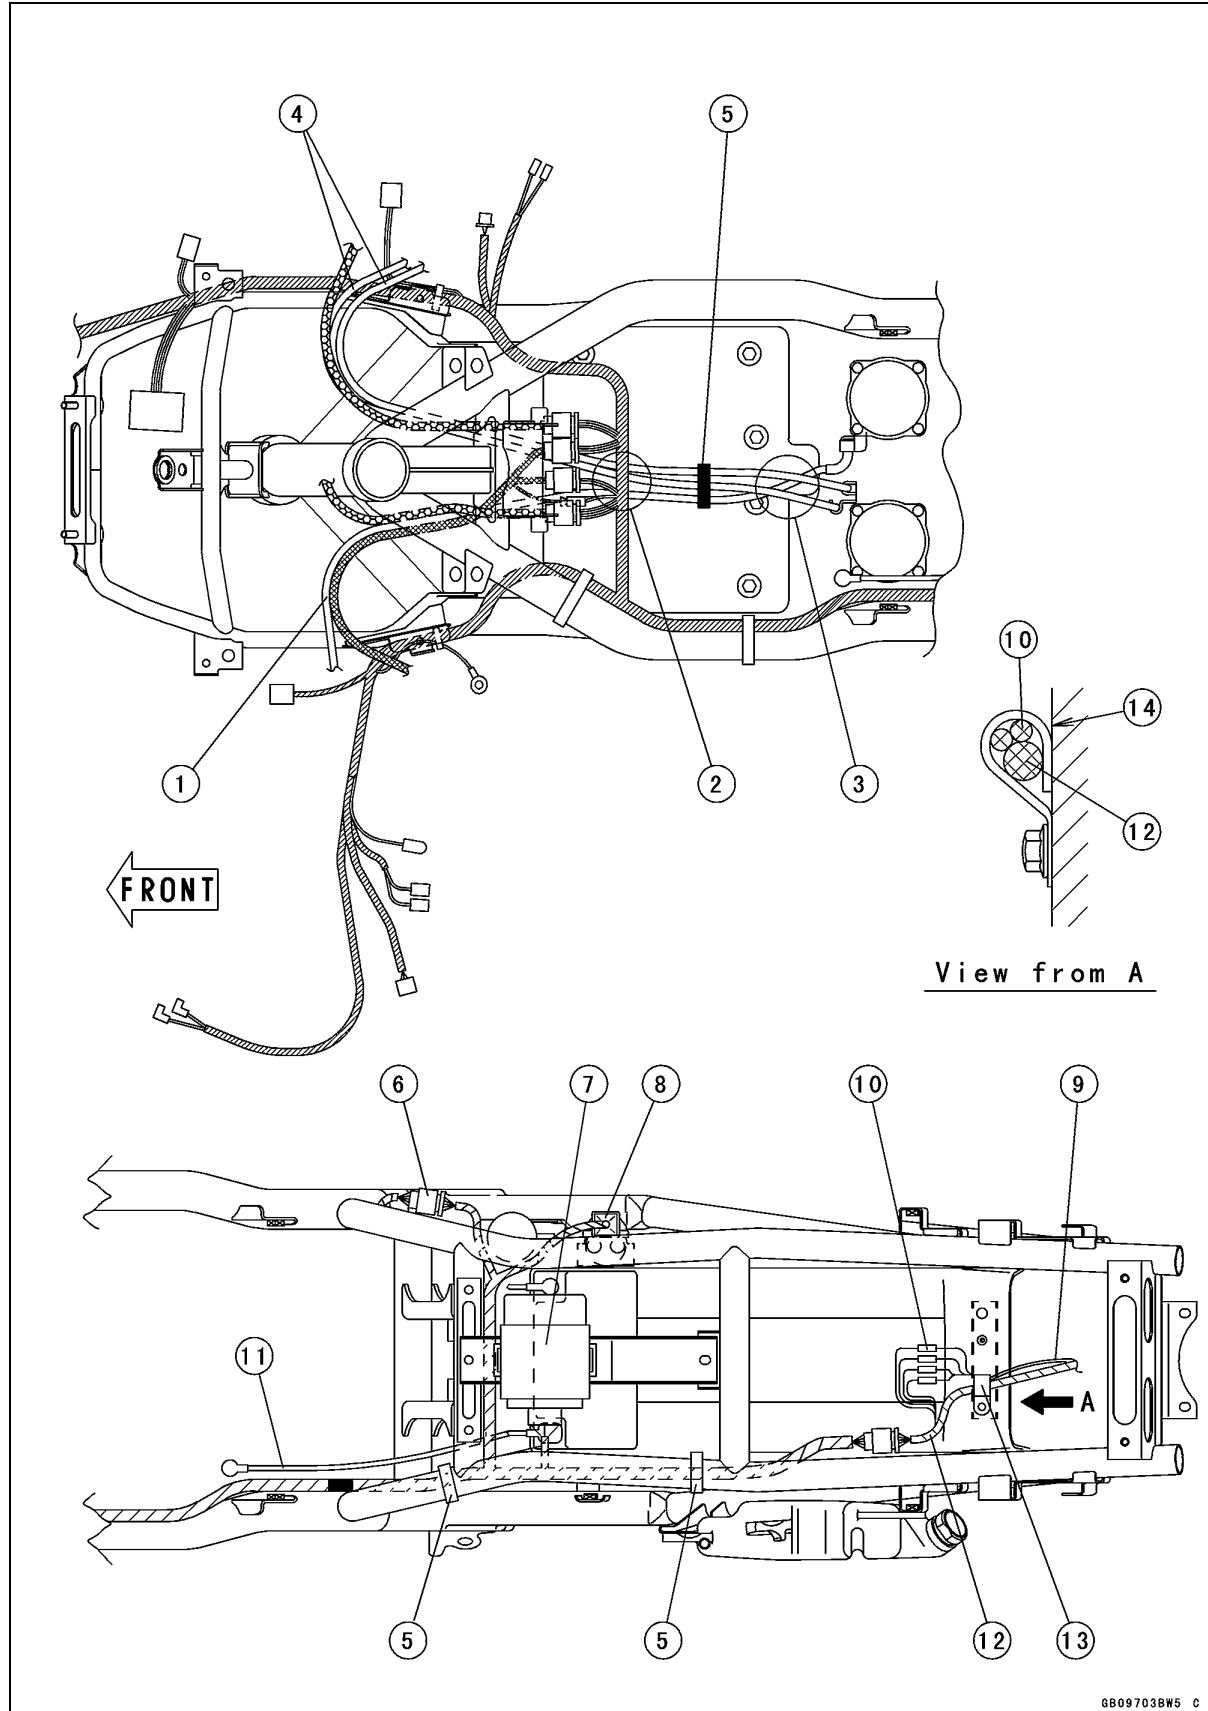

6B09703BW5 C



---


**Cable, Wire, and Hose Routing**

---

1. Choke Cable
2. Route the choke cable and throttle cables under the main harness.
3. Run the choke cable under the throttle cables.
4. Throttle Cables
5. Band
6. Rear Brake Light Switch
7. IC Igniter
8. Starter Relay
9. Route the rear turn signal light lead through the grommet hole of the rear fender.
10. Rear Turn Signal Lead Connectors
11. Battery Negative (-) Lead
12. Rear Harness
13. Clamp (Install the clamp with the rear fender rear)
14. Rear Fender Rear

# 17-10 APPENDIX

## Cable, Wire, and Hose Routing

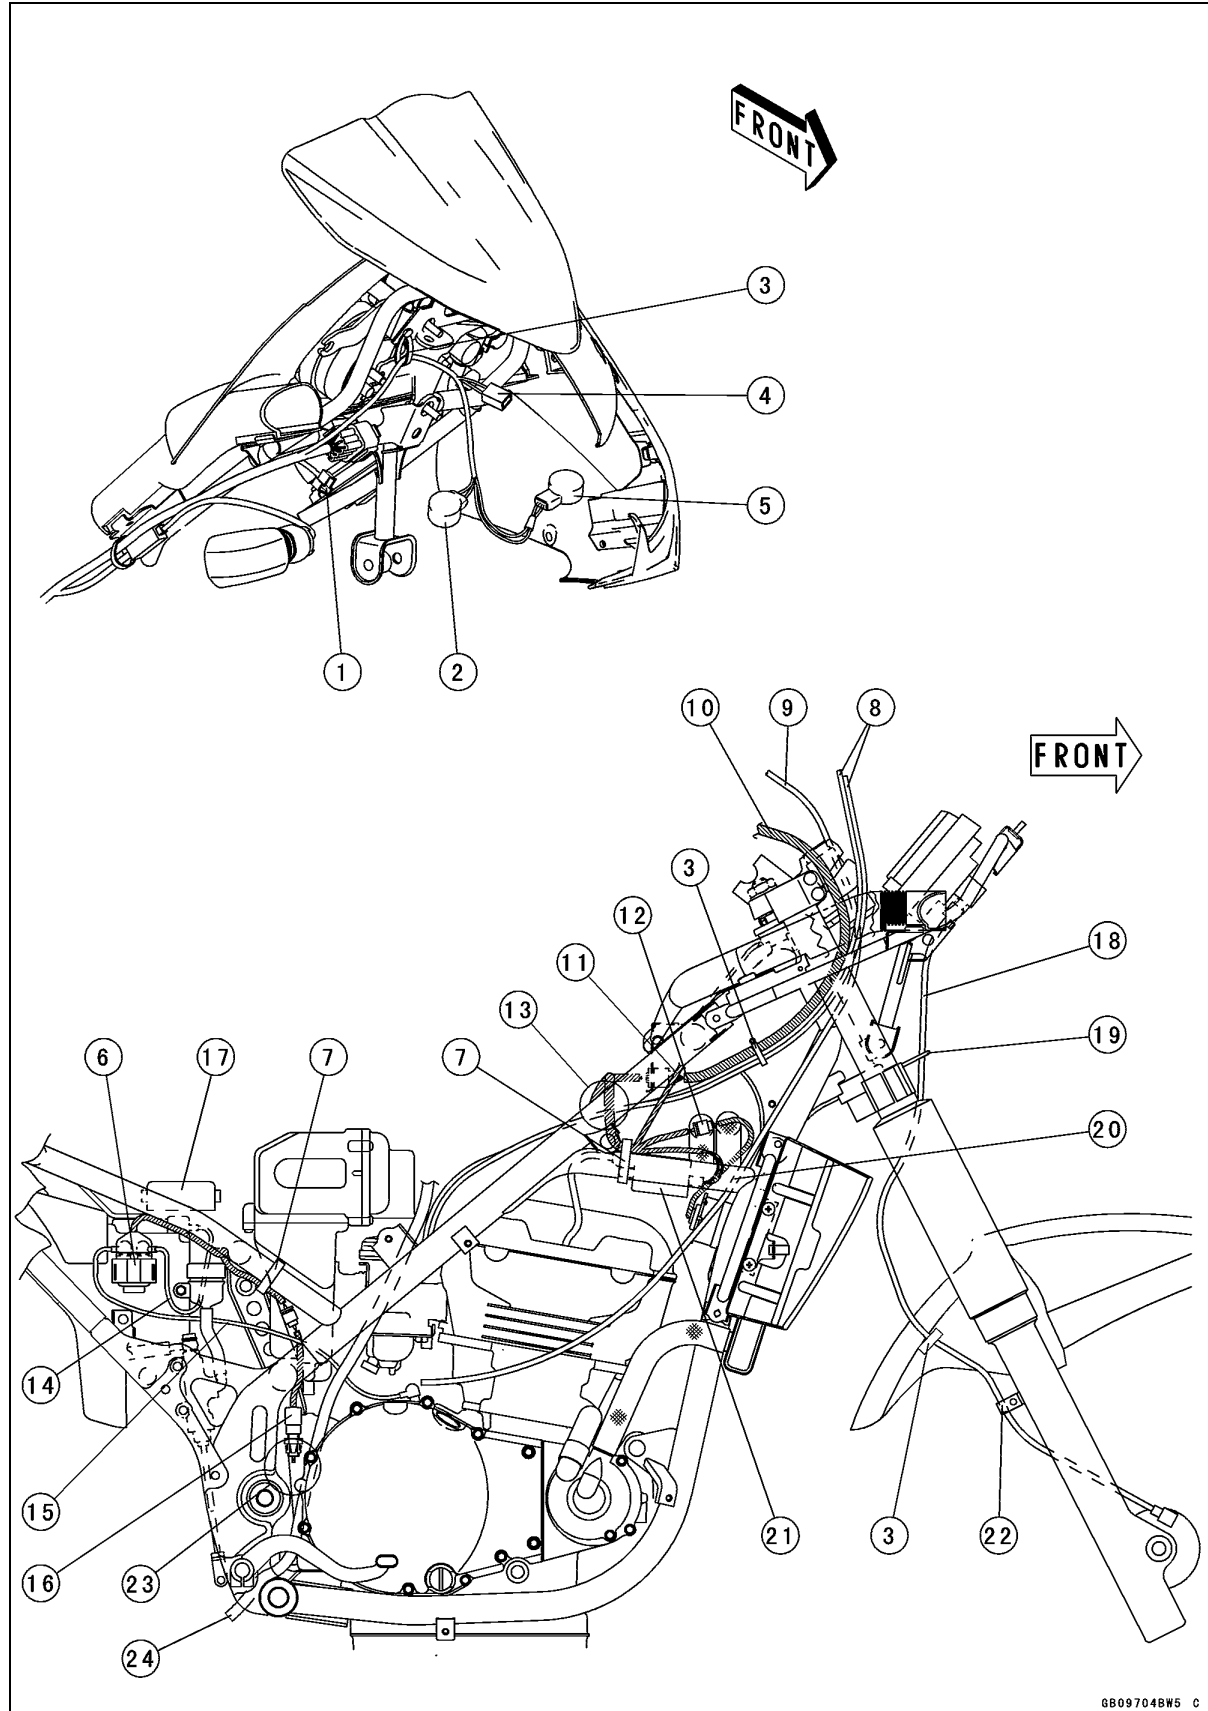

GB09704BW5 C

---


**Cable, Wire, and Hose Routing**

---

1. Diode
2. Headlight Lead Connector (High Beam)
3. Clamp
4. City Light
5. Headlight Lead Connector (Low Beam)
6. Starter Relay
7. Band
8. Throttle Cables
9. Clutch Cable
10. Handlebar Switch Lead Connector (Right)
11. Headlight, City Light, Right Turn Signal Light and Meter Leads
12. Radiator Fan Motor
13. Route the throttle cables under the main harness.
14. Battery Positive (+) Lead
15. Starter Motor Lead (Route it between the air cleaner housing and frame through the front of the air cleaner housing.)
16. Rear Brake Light Switch
17. Insert the igniter cover into the battery holder bracket.
18. Speedometer Cable
19. Guide (Run the meter cable through the guide.)
20. Route the clutch cable inside of the frame.
21. Ignition Coil (Right)
22. Guide (Run the speedometer cable through the guide)
23. Drain tube shall not lap with the rear brake light switch.
24. Drain Tube

# 17-12 APPENDIX

## Cable, Wire, and Hose Routing

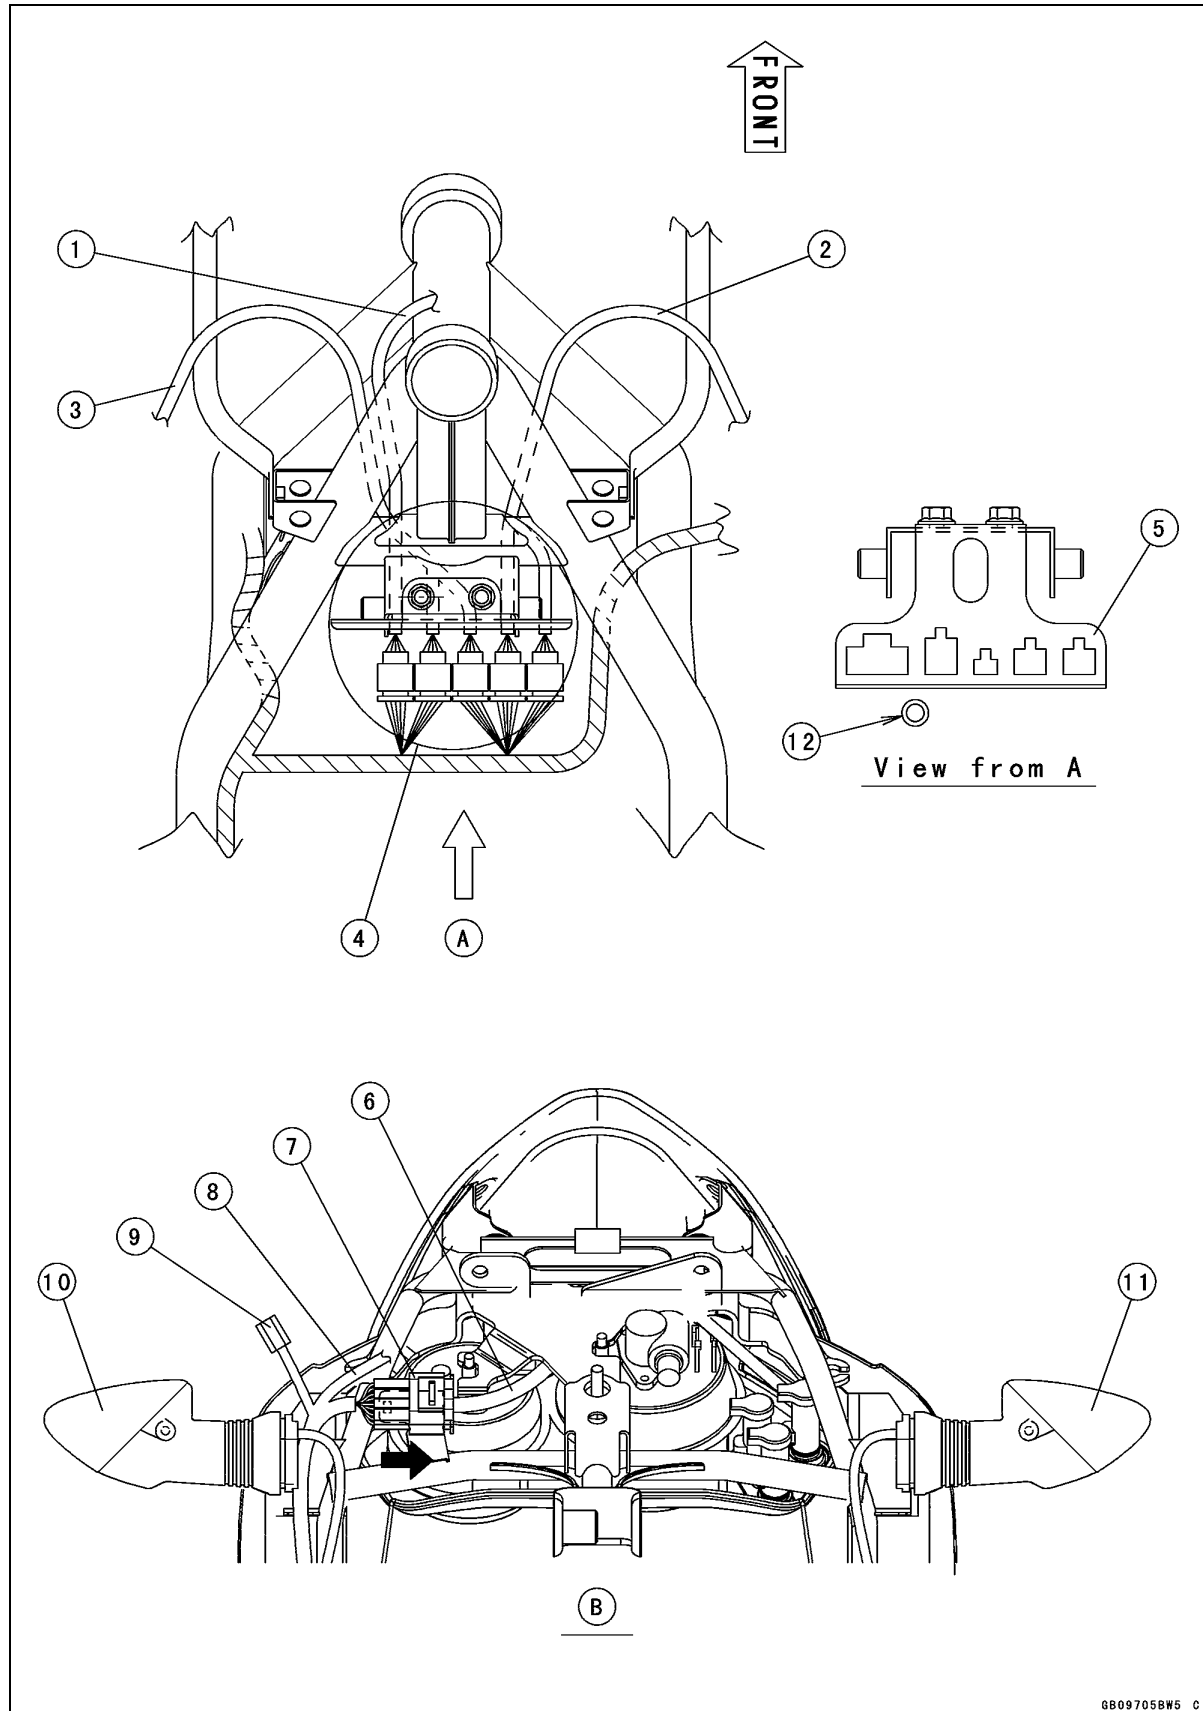

GB09705BW5 C

---


## Cable, Wire, and Hose Routing

---

1. Ignition Switch Lead
2. Handlebar Switch Lead (Right)
3. Handlebar Switch Lead (Left)
4. Fix the connector with bracket (5).
5. Bracket
6. Meter Leads
7. Insert the connector to arrow direction.
8. to Headlight
9. Diode Connector
10. Front Right Turn Signal Light
11. Front Left Turn Signal Light
12. Left handlebar switch terminal shall be connected under the bracket.
  - A. View from A
  - B. View from under the upper fairing.

# 17-14 APPENDIX

## Cable, Wire, and Hose Routing

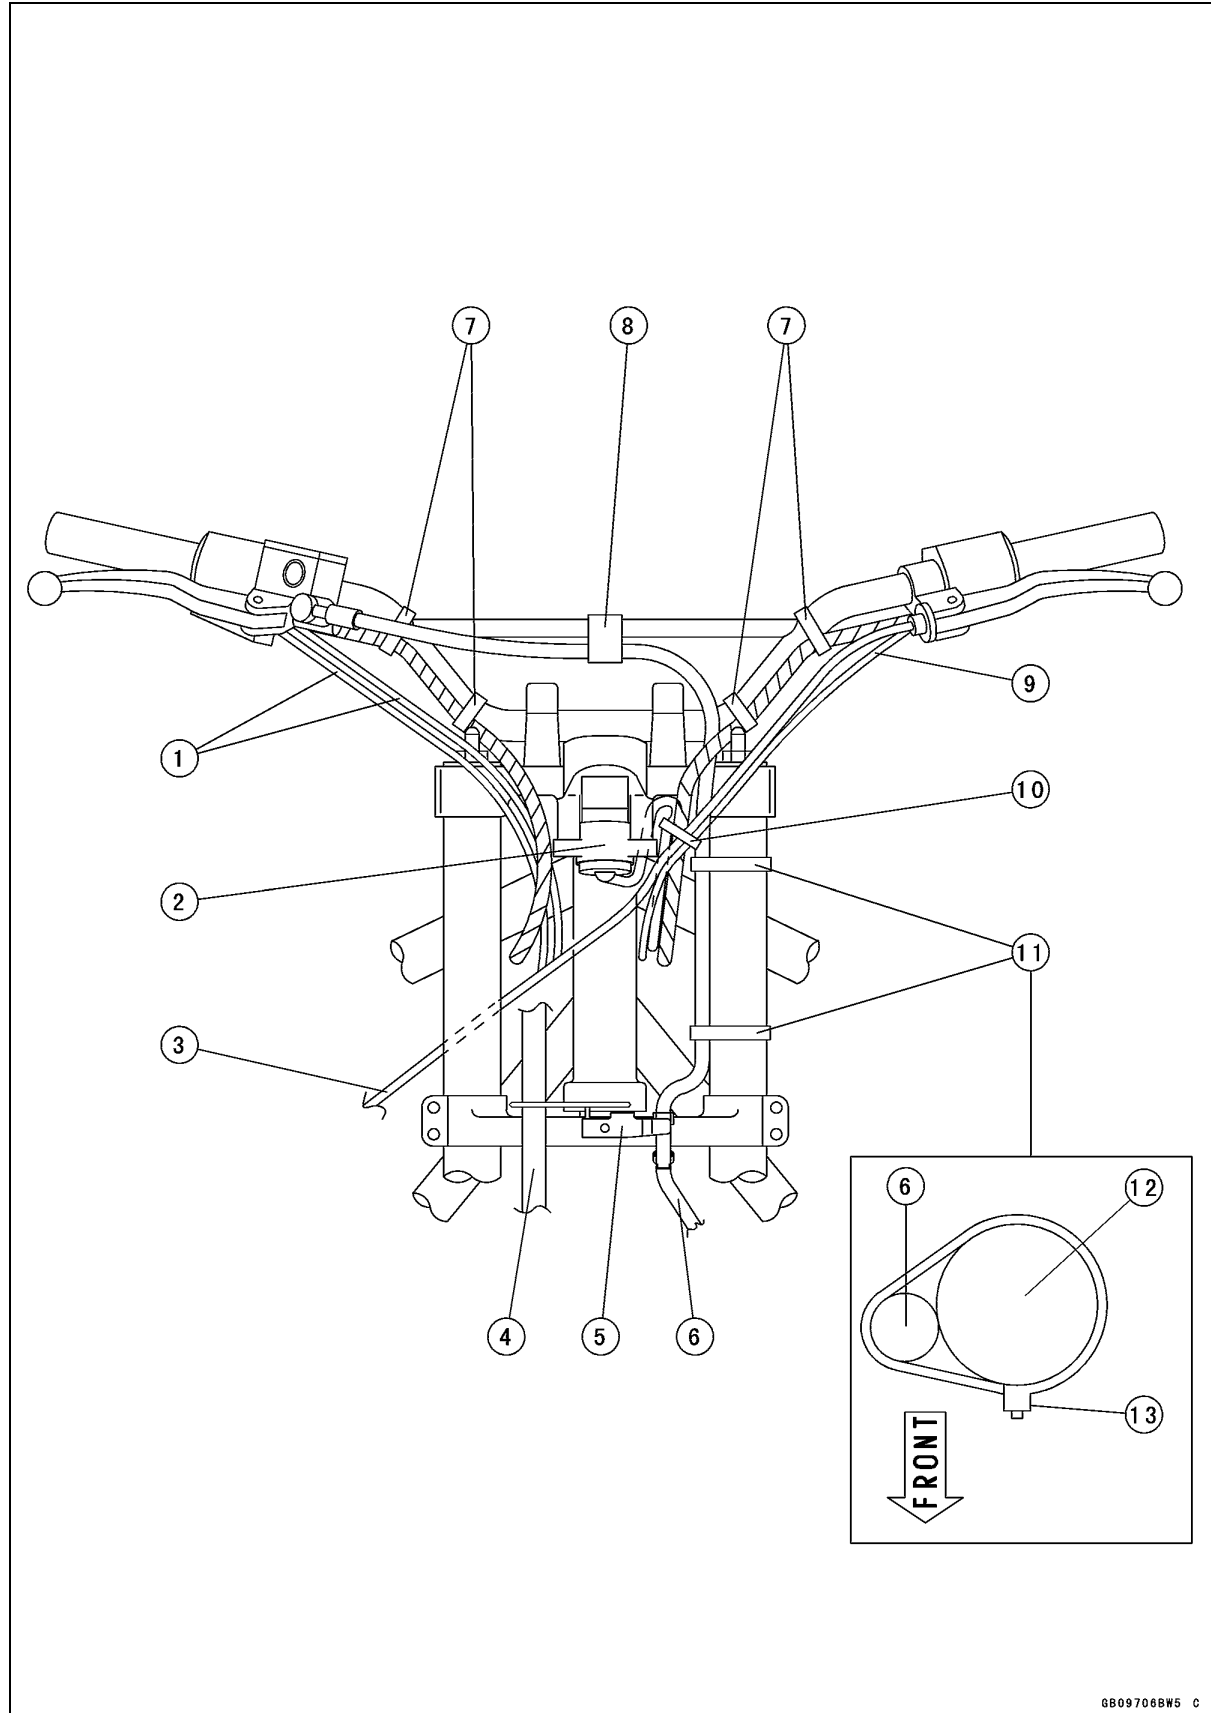

---

## Cable, Wire, and Hose Routing

---

1. Throttle Cables
2. Ignition Switch
3. Clutch Cable
4. Route the speedometer cable through the clamp (5).
5. Clamp
6. Front Brake Hose
7. Band
8. Clamp
9. Choke Cable
10. Band (Fix the choke cable, clutch cable, left handlebar switch lead and ignition switch leads with the band)
11. Band (Clamp the brake hose inside of the front fork inner tube, and shall not lap with the choke cable, clutch cable and left handlebar switch lead.)
12. Front Fork
13. Cutting of the band position to forward.

## 17-16 APPENDIX

### Troubleshooting Guide

---

#### NOTE

○ *This is not an exhaustive list, giving every possible cause for each problem listed. It is meant simply as a rough guide to assist the troubleshooting for some of the more common difficulties.*

#### Engine Doesn't Start, Starting Difficulty:

##### Starter motor not rotating:

- Starter lockout or neutral switch trouble
- Starter motor trouble
- Battery voltage low
- Starter relays not contacting or operating
- Starter button not contacting
- Wiring open or shorted
- Ignition switch trouble
- Engine stop switch trouble
- Fuse blown

##### Starter motor rotating but engine doesn't turn over:

- Starter clutch trouble

##### Engine won't turn over:

- Valve seizure
- Rocker arm seizure
- Cylinder, piston seizure
- Crankshaft seizure
- Connecting rod small end seizure
- Connecting rod big end seizure
- Transmission gear or bearing seizure
- Camshaft seizure
- Balancer bearing seizure

##### No fuel flow:

- No fuel in tank
- Fuel tap vacuum hose clogged
- Fuel tank air vent obstructed
- Fuel tap clogged
- Fuel line clogged
- Float valve clogged

##### Engine flooded:

- Fuel level in carburetor float bowl too high
- Float valve worn or stuck open
- Starting technique faulty
- (When flooded, crank the engine with the throttle fully opened to allow more air to reach the engine.)

##### No spark; spark weak:

- Battery voltage low
- Spark plug dirty, broken, or maladjusted
- Spark plug cap or high tension wiring trouble
- Spark plug cap shorted or not in good contact
- Spark plug incorrect
- IC igniter trouble
- Neutral, starter lockout, or side stand switch trouble

- Crankshaft sensor trouble
- Ignition coil trouble
- Ignition or engine stop switch shorted
- Wiring shorted or open
- Fuse blown

##### Fuel/air mixture incorrect:

- Pilot screw and/or idle adjusting screw maladjusted
- Pilot jet, or air passage clogged
- Air cleaner clogged, poorly sealed, or missing
- Starter jet clogged

##### Compression low:

- Spark plug loose
- Cylinder head not sufficiently tightened down
- No valve clearance
- Cylinder, piston worn
- Piston ring bad (worn, weak, broken, or sticking)
- Piston ring/groove clearance excessive
- Cylinder head gasket damaged
- Cylinder head warped
- Valve spring broken or weak
- Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface)

#### Poor Running at Low Speed:

##### Spark weak:

- Spark plug dirty, broken, or maladjusted
- Spark plug cap or high tension wiring trouble
- Spark plug cap shorted or not in good contact
- Spark plug incorrect
- IC igniter trouble
- Crankshaft sensor trouble
- Ignition coil trouble

##### Fuel/air mixture incorrect:

- Pilot screw maladjusted
- Pilot jet, or air passage clogged
- Air bleed pipe bleed holes clogged
- Air cleaner clogged, poorly sealed, or missing
- Starter plunger stuck open
- Fuel level in carburetor float bowl too high or too low
- Fuel tank air vent obstructed
- Carburetor holder loose
- Air cleaner duct loose
- Air cleaner O-ring damaged

##### Compression low:

- Spark plug loose
- Cylinder head not sufficiently tightened down
- No valve clearance



## Troubleshooting Guide

Cylinder, piston worn  
 Piston ring bad (worn, weak, broken, or sticking)  
 Piston ring/groove clearance excessive  
 Cylinder head warped  
 Cylinder head gasket damaged  
 Valve spring broken or weak  
 Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface)

### Other:

IC igniter trouble  
 Carburetor vacuum piston doesn't slide smoothly  
 Carburetor vacuum piston diaphragm damage  
 Engine oil viscosity too high  
 Drive train trouble  
 Brake dragging  
 Air suction valve trouble  
 Vacuum switch valve trouble  
 Coasting enricher trouble

### Poor Running or No Power at High Speed:

#### Firing incorrect:

Spark plug dirty, broken, or maladjusted  
 Spark plug cap or high tension wiring trouble  
 Spark plug cap shorted or not in good contact  
 Spark plug incorrect  
 IC igniter trouble  
 Crankshaft sensor trouble  
 Ignition coil trouble

#### Fuel/air mixture incorrect:

Starter plunger stuck open  
 Main jet clogged or wrong size  
 Jet needle or needle jet worn  
 Air jet clogged  
 Fuel level in carburetor float bowl too high or too low  
 Bleed holes of needle jet holder or needle jet clogged  
 Air cleaner clogged, poorly sealed, or missing  
 Air cleaner duct loose  
 Air cleaner O-ring damaged  
 Water or foreign matter in fuel  
 Carburetor holder loose  
 Fuel tank air vent obstructed  
 Fuel tap clogged  
 Fuel line clogged

#### Compression low:

Spark plug loose  
 Cylinder head not sufficiently tightened down

No valve clearance  
 Cylinder, piston worn  
 Piston ring bad (worn, weak, broken, or sticking)  
 Piston ring/groove clearance excessive  
 Cylinder head gasket damaged  
 Cylinder head warped  
 Valve spring broken or weak  
 Valve not seating properly (valve bent, worn, or carbon accumulation on the seating surface.)

### Knocking:

Carbon built up in combustion chamber  
 Fuel poor quality or incorrect  
 Spark plug incorrect  
 IC igniter trouble

### Miscellaneous:

Throttle valve won't fully open  
 Carburetor vacuum piston doesn't slide smoothly  
 Carburetor vacuum piston diaphragm damaged  
 Brake dragging  
 Clutch slipping  
 Overheating  
 Engine oil level too high  
 Engine oil viscosity too high  
 Drive train trouble  
 Air suction valve trouble  
 Vacuum switch valve trouble  
 Coasting enricher trouble  
 Balancer mechanism malfunctioning

### Overheating:

#### Firing incorrect:

Spark plug dirty, broken, or maladjusted  
 Spark plug incorrect  
 IC igniter trouble

#### Fuel/air mixture incorrect:

Main jet clogged or wrong size  
 Fuel level in carburetor float bowl too low  
 Carburetor holder loose  
 Air cleaner duct loose  
 Air cleaner poorly sealed, or missing  
 Air cleaner O-ring damaged  
 Air cleaner clogged

#### Compression high:

Carbon built up in combustion chamber

#### Engine load faulty:

Clutch slipping  
 Engine oil level too high  
 Engine oil viscosity too high  
 Drive train trouble  
 Brake dragging

#### Lubrication inadequate:

Engine oil level too low  
 Engine oil poor quality or incorrect

## 17-18 APPENDIX

### Troubleshooting Guide

---

#### **Coolant incorrect:**

- Coolant level too low
- Coolant deteriorated

#### **Cooling system component incorrect:**

- Radiator fin damaged
- Radiator clogged
- Thermostat trouble
- Radiator cap trouble
- Radiator fan switch trouble
- Fan motor broken
- Fan blade damaged
- Water pump not turning
- Water pump impeller damaged

#### **Over Cooling:**

##### **Cooling system component incorrect:**

- Radiator fan switch trouble
- Thermostat trouble

#### **Clutch Operation Faulty:**

##### **Clutch slipping:**

- Friction plate worn or warped
- Steel plate worn or warped
- Clutch spring broken or weak
- Clutch hub or housing unevenly worn
- No clutch lever play
- Clutch inner cable trouble
- Clutch release mechanism trouble

##### **Clutch not disengaging properly:**

- Clutch plate warped or too rough
- Clutch spring compression uneven
- Engine oil deteriorated
- Engine oil viscosity too high
- Engine oil level too high
- Clutch housing frozen on drive shaft
- Clutch hub nut loose
- Clutch hub spline damaged
- Clutch friction plate installed wrong
- Clutch lever play excessive
- Clutch release mechanism trouble

#### **Gear Shifting Faulty:**

##### **Doesn't go into gear; shift pedal doesn't return:**

- Clutch not disengaging
- Shift fork bent or seized
- Gear stuck on the shaft
- Gear positioning lever binding
- Shift return spring weak or broken
- Shift return spring pin loose
- Shift mechanism arm spring broken
- Shift mechanism arm broken

##### **Jumps out of gear:**

- Shift fork ear worn, bent
- Gear groove worn
- Gear dogs and/or dog holes worn

- Shift drum groove worn
- Gear positioning lever spring weak or broken

- Shift fork pin worn
- Drive shaft, output shaft, and/or gear splines worn

##### **Overshifts:**

- Gear positioning lever spring weak or broken
- Shift mechanism arm spring broken

#### **Abnormal Engine Noise:**

##### **Knocking:**

- IC igniter trouble
- Carbon built up in combustion chamber
- Fuel poor quality or incorrect
- Spark plug incorrect
- Overheating

##### **Piston slap:**

- Cylinder/piston clearance excessive
- Cylinder, piston worn
- Connecting rod bent
- Piston pin, piston pin hole worn

##### **Valve noise:**

- Valve clearance incorrect
- Valve spring broken or weak
- Camshaft bearing worn
- Rocker arm worn
- Rocker shaft worn

##### **Other noise:**

- Connecting rod small end clearance excessive
- Connecting rod big end clearance excessive
- Piston ring worn, broken, or stuck
- Piston seizure, damage
- Cylinder head gasket leaking
- Exhaust pipe leaking at cylinder head connection
- Crankshaft runout excessive
- Engine mounts loose
- Crankshaft bearing worn
- Primary chain worn
- Camshaft chain tensioner trouble
- Camshaft chain, sprocket, guide worn
- Air suction valve damaged
- Vacuum switch valve damaged
- Alternator rotor loose
- Balancer gear worn or chipped
- Balancer shaft position maladjusted
- Balancer bearing worn
- Starter chain, sprocket, guide worn

#### **Abnormal Drive Train Noise:**

##### **Clutch noise:**

- Clutch housing/friction plate clearance excessive

## Troubleshooting Guide

Clutch housing gear worn

### Transmission noise:

Bearings worn  
Transmission gears worn or chipped  
Metal chips jammed in gear teeth  
Engine oil insufficient

### Drive line noise:

Drive chain adjusted improperly  
Drive chain worn  
Rear and/or engine sprocket worn  
Chain lubrication insufficient  
Rear wheel misaligned

### Abnormal Frame Noise:

#### Front fork noise:

Oil insufficient or too thin  
Spring weak or broken

#### Rear shock absorber noise:

Shock absorber damaged

#### Disc brake noise:

Pad installed incorrectly  
Pad surface glazed  
Disc warped  
Caliper trouble

#### Other noise:

Bracket, nut, bolt, etc. not properly mounted or tightened

### Oil Pressure Warning Light Goes On:

Engine oil pump damaged  
Engine oil screen clogged  
Engine oil level too low  
Engine oil viscosity too low  
Camshaft bearing worn  
Crankshaft bearings worn  
Balancer bearings worn  
Oil pressure switch damaged  
Wiring faulty  
Relief valve stuck open  
O-ring at the oil passage in the crankcase damaged

### Exhaust Smokes Excessively:

#### White smoke:

Piston oil ring worn  
Cylinder worn  
Valve oil seal damaged  
Valve guide worn  
Cylinder head gasket damaged  
Engine oil level too high

#### Black smoke:

Air cleaner clogged  
Main jet too large or fallen off  
Starter plunger stuck open  
Fuel level in carburetor float bowl too high

### Brown smoke:

Main jet too small  
Fuel level in carburetor float bowl too low  
Air cleaner duct loose  
Air cleaner O-ring damaged  
Air cleaner poorly sealed or missing

### Handling and/or Stability Unsatisfactory:

#### Handlebar hard to turn:

Cable routing incorrect  
Hose routing incorrect  
Wiring routing incorrect  
Steering stem locknut too tight  
Steering stem bearing damaged  
Steering stem bearing lubrication inadequate  
Steering stem bent  
Tire air pressure too low

#### Handlebar shakes or excessively vibrates:

Tire worn  
Swingarm pivot bearings worn  
Rim warped, or not balanced  
Wheel bearing worn  
Handlebar clamp loose  
Steering stem head bolt loose

#### Handlebar pulls to one side:

Frame bent  
Wheel misalignment  
Swingarm bent or twisted  
Steering maladjusted  
Front fork bent  
Right and left front fork oil level uneven

#### Shock absorption unsatisfactory:

(Too hard)  
Front fork oil excessive  
Front fork oil viscosity too high  
Rear shock absorber adjustment too hard  
Tire air pressure too high  
Front fork bent  
(Too soft)  
Tire air pressure too low  
Front fork oil insufficient and/or leaking  
Front fork oil viscosity too low  
Rear shock absorber adjustment too soft  
Front fork, rear shock absorber spring weak  
Rear shock absorber oil leaking

### Brake Doesn't Hold:

#### Disc brake:

Air in the brake line  
Pad or disc worn  
Brake fluid leakage  
Disc warped  
Contaminated pad  
Brake fluid deteriorated

## 17-20 APPENDIX

---

### Troubleshooting Guide

---

Primary or secondary cup damaged in master cylinder  
Master cylinder scratched inside

#### **Battery Trouble:**

##### **Battery discharged:**

Battery faulty (e.g., plates sulphated, shorted through sedimentation, electrolyte insufficient)  
Battery leads making poor contact

Load excessive (e.g., bulb of excessive wattage)

Ignition switch trouble

Alternator trouble

Wiring faulty

Regulator/rectifier trouble

##### **Battery overcharged:**

Regulator/rectifier trouble

Battery faulty

## MODEL APPLICATION

Year	Model	Beginning Frame No.
2005	KLE500-B1	JKALE500ABA085001



KAWASAKI HEAVY INDUSTRIES, LTD.  
Consumer Products & Machinery Company

Part No. 99924-1352-01

Printed in Japan