

DTC	P0136/27	OXYGEN SENSOR CIRCUIT MALFUNCTION(BANK1 SENSOR2)
DTC	P0156/29	OXYGEN SENSOR MALFUNCTION (BANK2 SENSOR2)

CIRCUIT DESCRIPTION


To obtain a high purification rate for the CO, HC and NO_x components of the exhaust gas, a three-way catalytic converter is used, but for the most efficient use of the three-way catalytic converter, the air-fuel ratio must be precisely controlled so that it is always close to the stoichiometric air-fuel ratio.

The oxygen sensor has the characteristic whereby its output voltage changes suddenly in the vicinity of the stoichiometric air-fuel ratio. This is used to detect the oxygen concentration in the exhaust gas and provide feedback to the computer for control of the air-fuel ratio.

When the air-fuel ratio becomes LEAN, the oxygen concentration in the exhaust increases and the oxygen sensor informs the ECM of the LEAN condition (small electromotive force: < 0.45 V).

When the air-fuel ratio is RICHER than the stoichiometric air-fuel ratio the oxygen concentration in the exhaust gas is reduced and the oxygen sensor informs the ECM of the RICH condition (large electromotive force: > 0.45 V). The ECM judges by the electromotive force from the oxygen sensor whether the air-fuel ratio is RICH or LEAN and controls the injection time accordingly. However, if malfunction of the oxygen sensor causes output of abnormal electromotive force, the ECM is unable to perform accurate air-fuel ratio control.

The main heated oxygen sensors include a heater which heats the zirconia element. The heater is controlled by the ECM. When the intake air volume is low (the temperature of the exhaust gas is low) current flows to the heater to heat the sensor for accurate oxygen concentration detection.

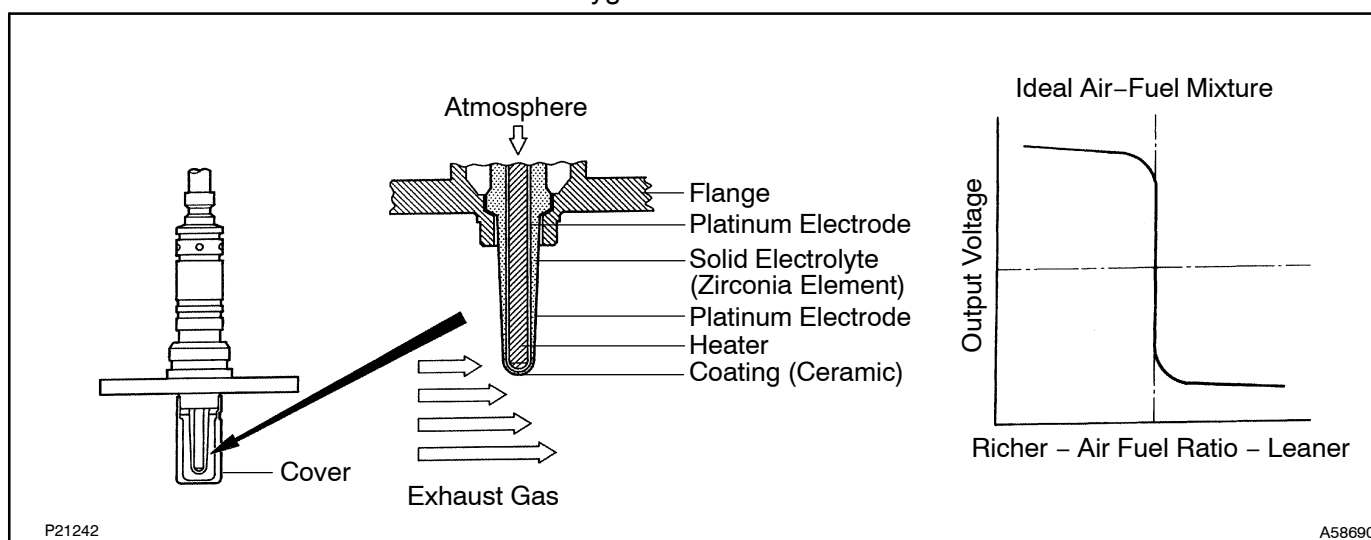


DTC No.	DTC Detecting Condition	Trouble Area
P0136/27 P0156/29	Output voltage of heated oxygen sensor remains at 0.40 V or more, or 0.5 V or less when vehicle is driven at 40 km/h (25 mph) or more after engine is warmed up (2 trip detection logic)	<ul style="list-style-type: none"> • Open or short in heated oxygen sensor circuit • Heated oxygen sensor


HINT:

- Bank 1 refers to the bank that includes the cylinder No. 1
- Sensor 2 refers to the sensor being farther from the engine body.

WIRING DIAGRAM

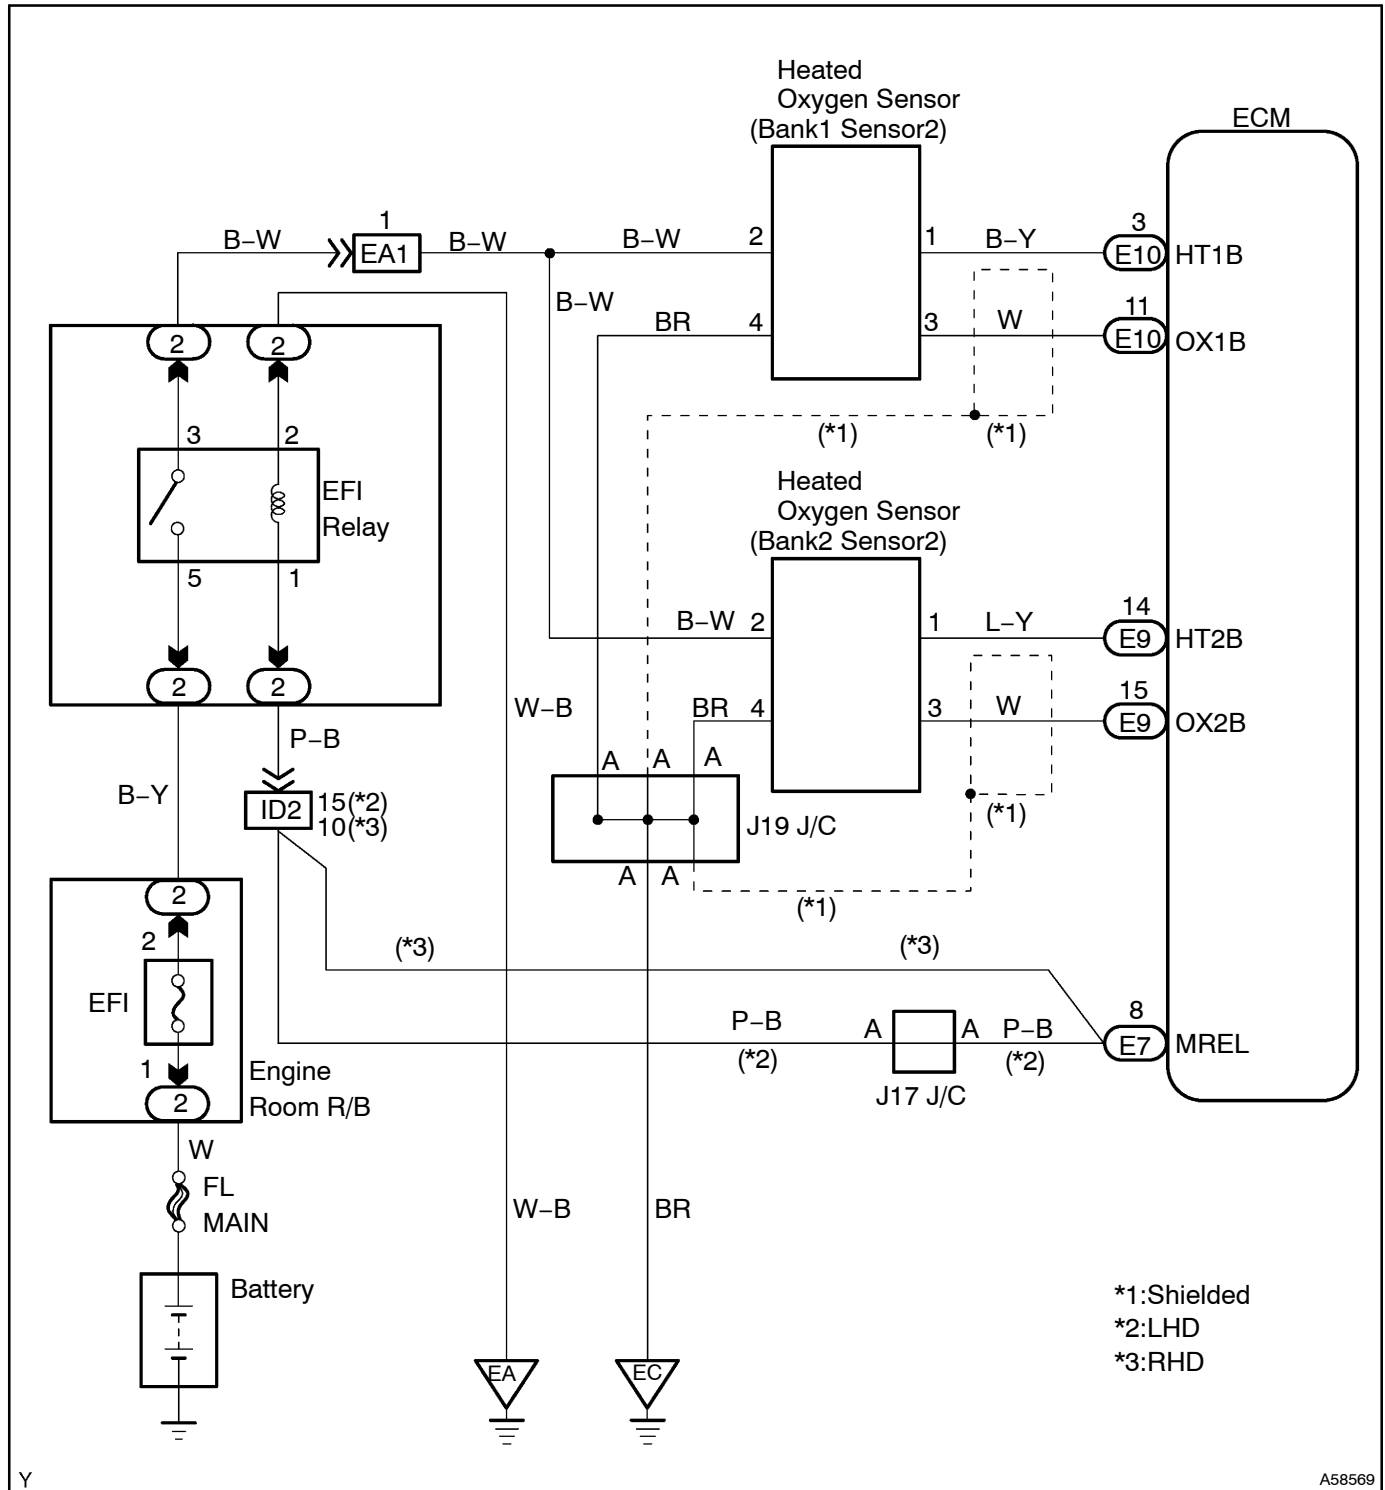

CONFIRMATION DRIVING PATTERN

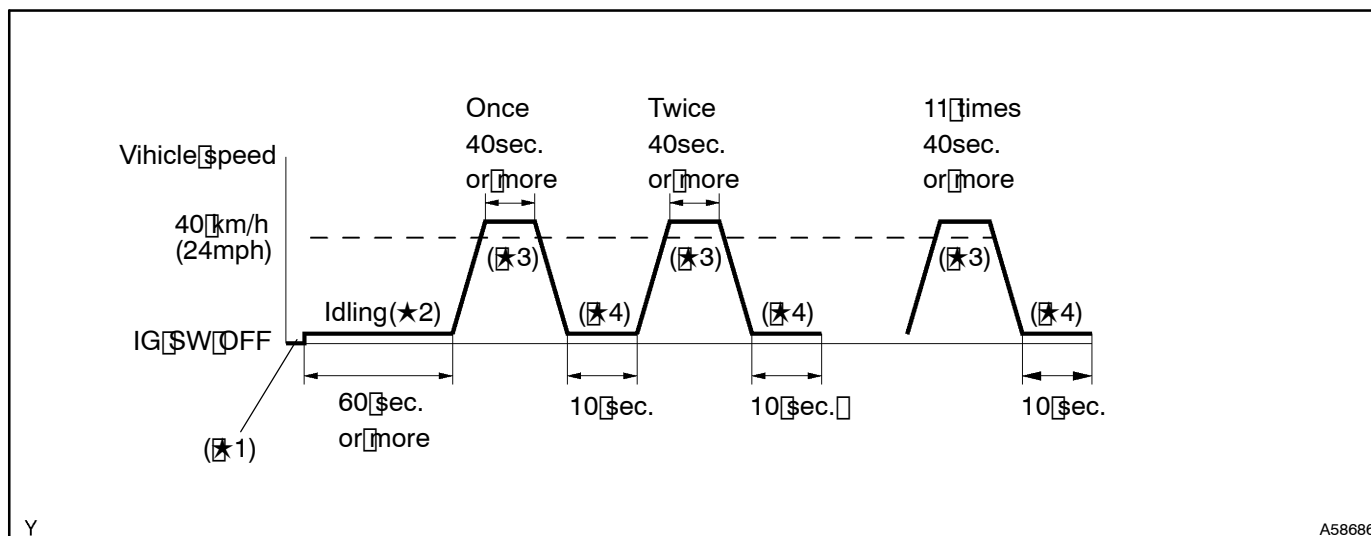

1. Connect the hand-held tester to the DLC3. (★1)
2. Switch the hand-held tester from the normal mode to the check (test) mode (See page 05-7). (★1)
3. Start the engine and let the engine idle for 60 seconds or more. (★2)
4. Drive the vehicle at 40 km/h (24 mph) or more for 40 seconds or more. (★3)
5. Let the engine idle for 10 seconds or more. (★4)
6. Perform steps (★3) to (★4) 11 times. (★5)

HINT:

If a malfunction exists, the CHECK ENG will light up on the multi-information display during step (★5).

NOTICE:

If the conditions in this test are not strictly followed, detection of the malfunction will not be possible. If you do not have a hand-held tester, turn the ignition switch OFF after performing steps from (★2) to (★5), then perform steps from (★2) to (★5) again.

INSPECTION PROCEDURE

HINT:

Read freeze frame data using the hand-held tester, as freeze frame data records the engine conditions when the malfunction is detected. When troubleshooting, it is useful for determining whether the vehicle was running or stopped, the engine was warmed up or not, the air-fuel ratio was lean or rich, etc. at the time of the malfunction.

1 READ OUTPUT DTC (BESIDES P0136/27 OR P0156/29)

Result:

	A	B
RESULT	P0136/27 and/or P0156/29 are output.	P0136/27 and/or P0156/29 other codes are output.

HINT:


If any other codes besides P0136/27 and P0156/29 are output, perform the troubleshoot on that DTC before.

YES


GO TO RELEVANT DTC CHART

NO

2 CHECK WIRE HARNESS OR CONNECTOR(ECM-OXYGEN SENSOR)

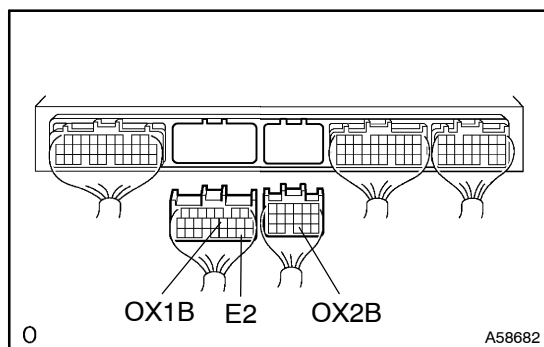

- (a) Disconnect the oxygen sensor connector.
- (b) Disconnect the ECM E10 and E9 connector.
- (c) Check continuity between the terminals OX1B of the ECM connector and OX1B of the oxygen sensor connector.
Resistance: 1 Ω or less
- (d) Check for short between the terminals OX1B and E2 of the ECM connector.
Resistance: 1 M Ω or more
- (e) Check continuity between the terminals OX2B of the ECM connector and OX2B of the oxygen sensor connector.
Resistance: 1 Ω or less
- (f) Check for short between the terminals OX2B of the ECM connector and E2 of the ECM connector.
Resistance: 1 M Ω or more

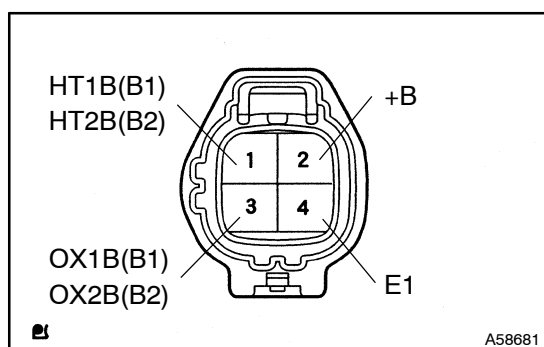

NG

REPAIR OR REPLACE WIRE HARNESS OR CONNECTOR

OK

3 INSPECT OXYGEN SENSOR(CHECK VOLTAGE)

- (a) Connect the hand-held tester to the DLC3.
- (b) Warm up the engine to normal operating temperature.
- (c) Read the voltage output of the heated oxygen sensor when the engine is suddenly raced.

HINT:

Perform quick racing to 4,000 rpm for 3 min. using the accelerator pedal.

Voltage: Alternates from 0.40 V or less to 0.5 V or more.

OK

CHECK THAT EACH CONNECTOR IS PROPERLY CONNECTED

NG

REPLACE OXYGEN SENSOR