


■ ATF COOLING SYSTEM

1. General

This automatic transmission uses an ATF warmer that increases the rate at which the ATF warms up, and an ATF cooler that cools down the ATF. The ATF warmer is provided as standard. An air-cooled type ATF cooler is also available as an option.


ATF and Engine Coolant Circuits

► Models without ATF Cooler ◀

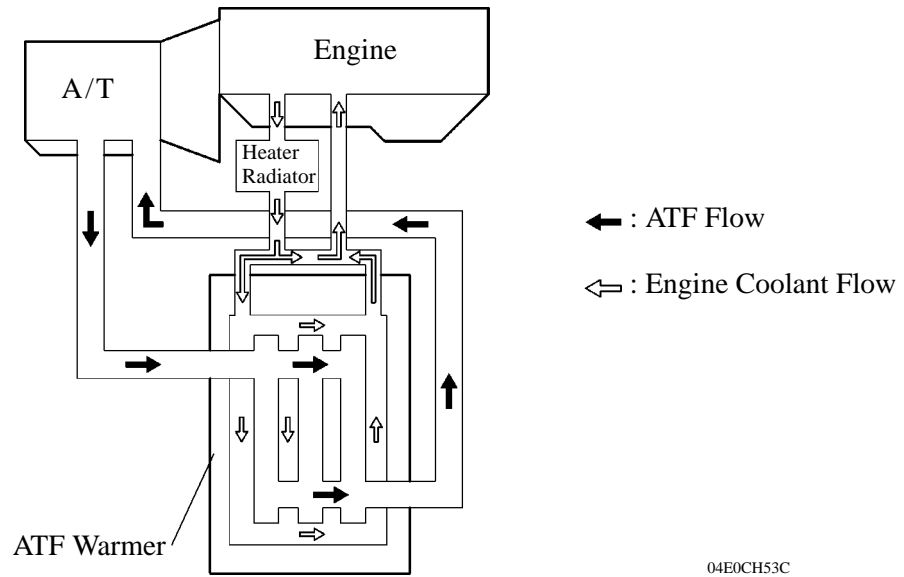

► Models with ATF Cooler ◀


- When the ATF is at a low temperature, it is warmed up by the engine coolant in the ATF warmer.
- When the ATF is at a high temperature, it flows to the ATF warmer and then to the ATF cooler, thus it is cooled down.

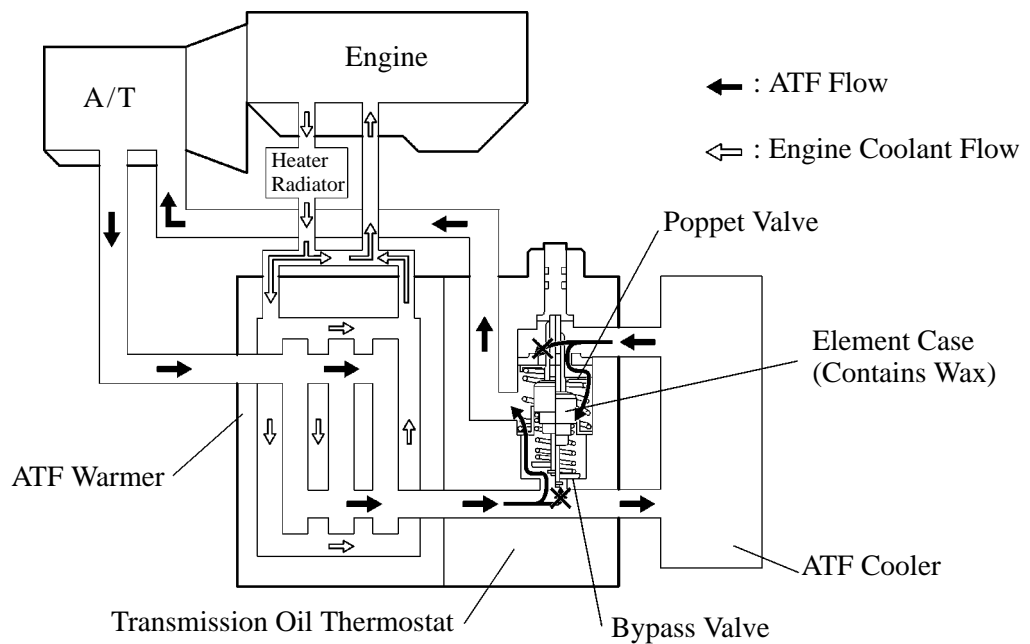


2. ATF WARMER

General

- The ATF warmer uses engine coolant to warm up the ATF quickly and keep the ATF temperature higher (within limits). Consequently, the friction losses of the automatic transmission are quickly reduced, thus improving fuel economy.
- Models equipped with an ATF cooler have a transmission oil thermostat to switch the ATF passages.

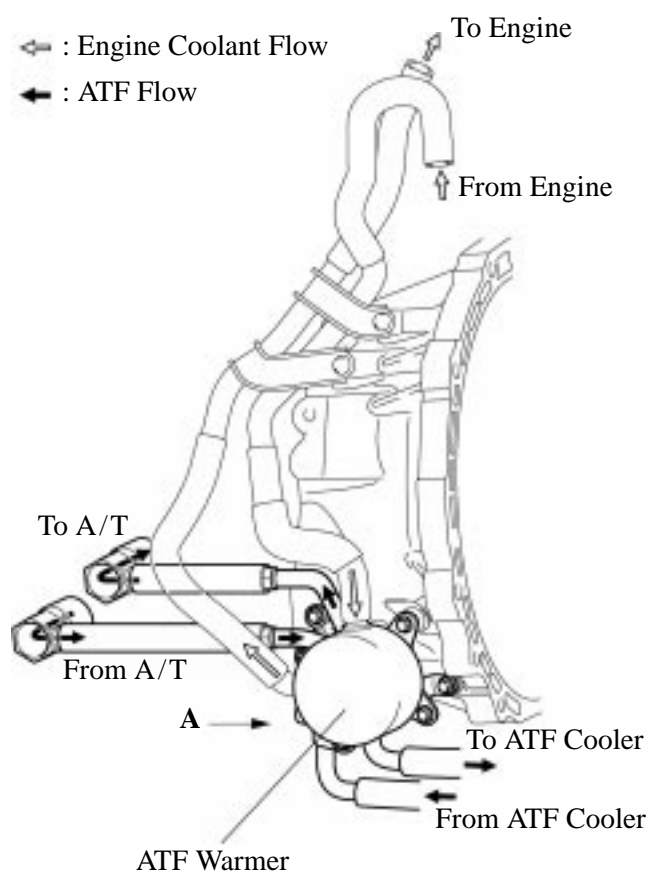


View from A

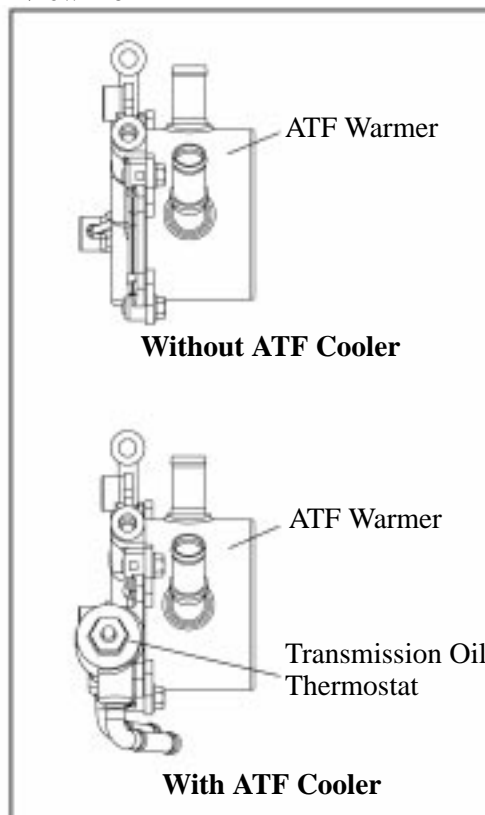


Transmission Oil Thermostat

The transmission oil thermostat consists of the poppet valve, bypass valve and element case (contains wax). When the ATF temperature changes from low to high, the wax will expand to start to open the poppet valve and close the bypass valve, thus switching the ATF passages.

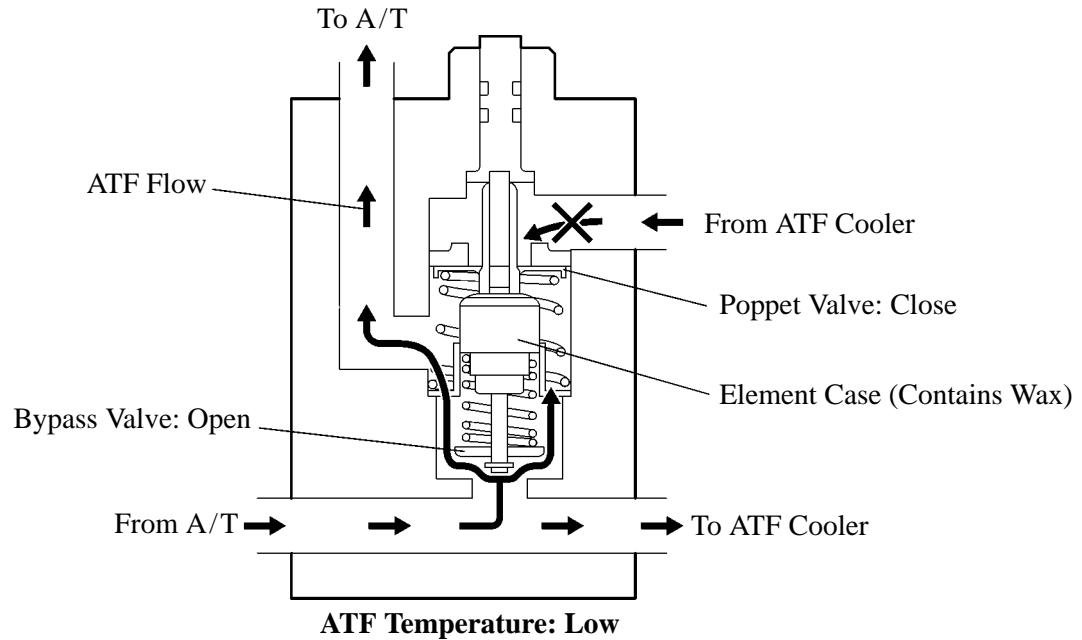

04E0CH52C

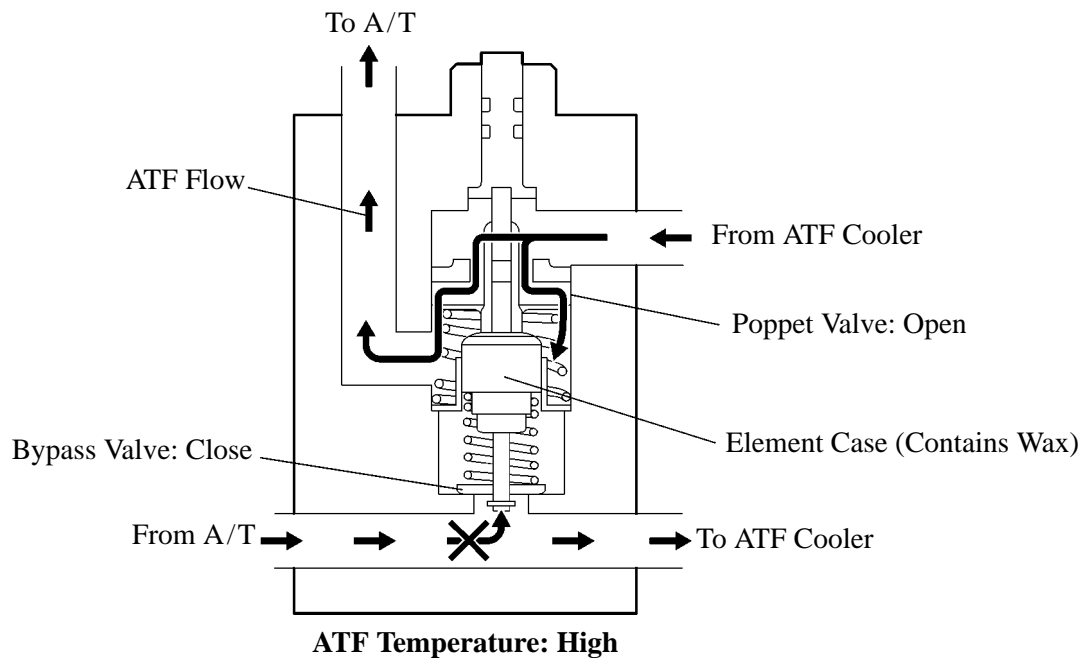


04E0CH109C

3. ATF COOLER

An air-cooled type ATF cooler is used to maintain ATF cooling performance under high loads.


ATF Cooler Core

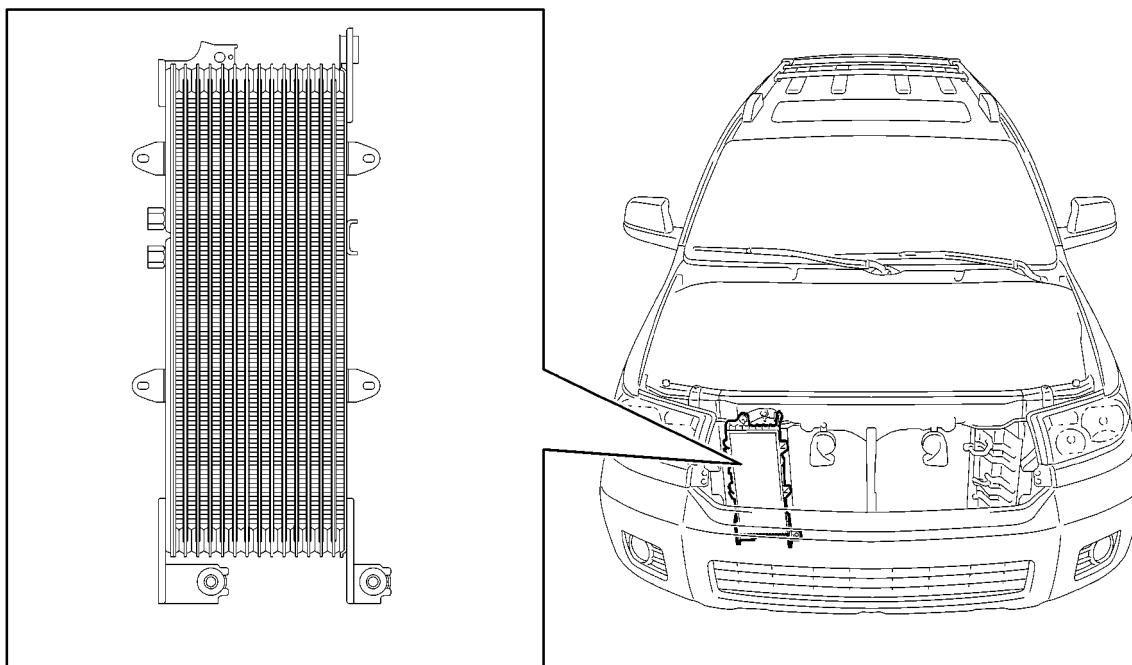

08LCH047Y

■ TOYOTA GENUINE ATF WS

- Toyota genuine ATF WS is used to reduce the resistance of the ATF and improve fuel economy by reducing its viscosity in the practical operating temperature range. At higher-fluid temperatures, the viscosity is the same as that of Toyota genuine ATF Type T-IV, to ensure the durability of the automatic transmission.
- There is no interchangeability between the Toyota genuine ATF WS and other types of ATF (Toyota Genuine ATF Type T-IV, D-II).


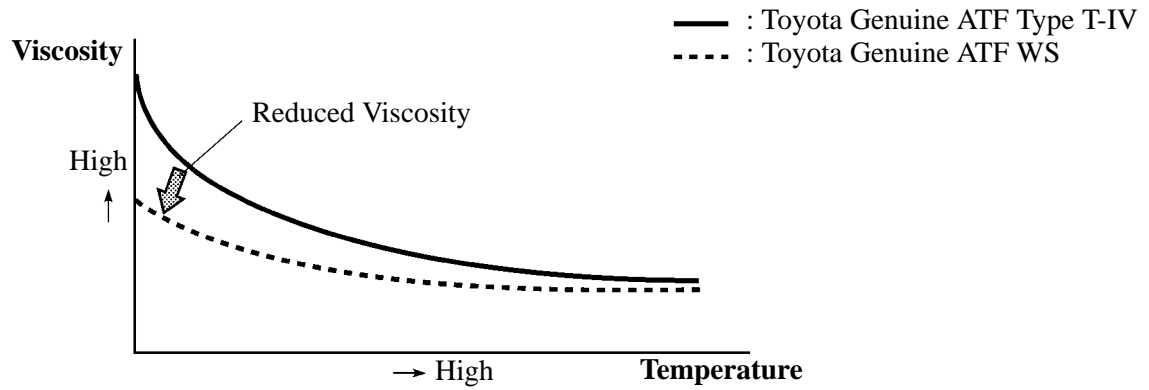


259LSK03

■ ATF FILLING PROCEDURE

An ATF filling procedure is used in order to improve the accuracy of the ATF level when the transmission is being repaired or replaced. As a result, the oil filler tube and the oil level gauge used in the conventional automatic transmission have been discontinued, eliminating the need to inspect the fluid level as a part of routine maintenance.

- This filling procedure uses a refill plug, overflow plug, ATF temperature sensor No. 2, and shift position indicator light “D”.
- ATF filling procedures are different between the models with an ATF cooler and the models without an ATF cooler.

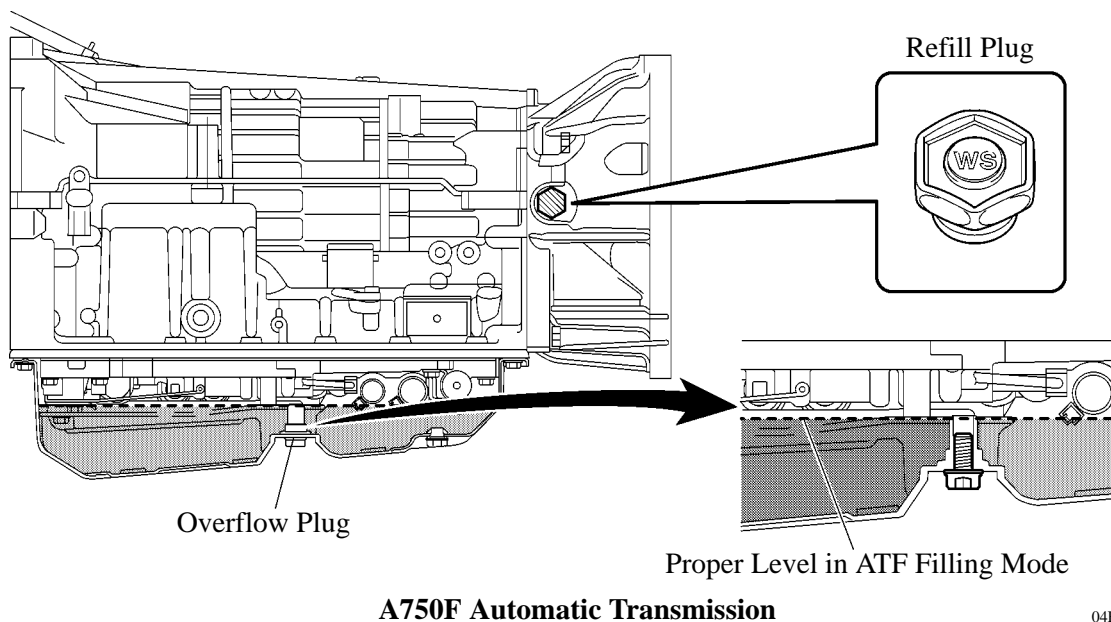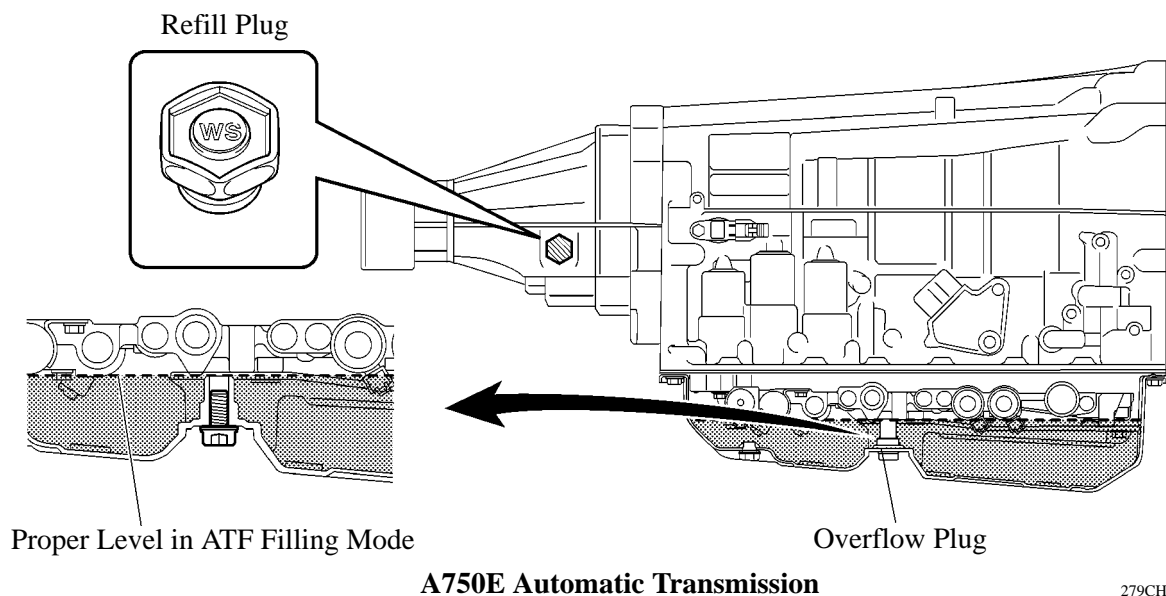

Service Tip

For details about the ATF filling procedures, see the 2008 Sequoia Repair Manual (Pub. No. RM08L0U).