



The XJ

OWNER'S HANDBOOK

Publication Part No. **JJM 18 02 21 801**

This handbook forms part of the Owner literature supplied with your new vehicle. Left hand drive and right hand drive conditions may be shown in the graphics and where information is specific to a particular country, it is indicated as such.

The **Quick start** section is designed to rapidly familiarise the driver with the initial set up and also explain some of the unique features. Please take the time to study the operating instructions with your vehicle as soon as you can.

Important

The information contained in this handbook covers all vehicle derivatives and optional equipment. Some of the options may not be fitted to your vehicle unless they formed part of the original vehicle specification. Therefore some parts of this handbook may not apply to your vehicle. Furthermore, due to printing cycles, it may include descriptions of options before they become generally available.

The options, hardware and software in your vehicle are from the available specifications for the market in which the vehicle was intended for sale. If your vehicle is to be used in another geographical area you may have to modify the vehicle specification to suit local conditions. Jaguar Cars Limited is not responsible for the cost of any modifications.

The information contained in this publication was correct when it went to print. Vehicle design changes may have been made after this handbook was printed. When this occurs a handbook supplement is added to the literature pack. Subsequent updates can be viewed on the Jaguar Internet site at; **www.ownerinfo.jaguar.com**.

In the interest of development, the right is reserved to change specifications, design or equipment at any time without notice and without incurring any obligations. This publication, or part thereof, may not be reproduced nor translated without our approval. Errors and omissions excepted.

©Jaguar Cars Limited 2007

All rights reserved.

Published by Jaguar Technical Communications.

Handbook Contents

Quick Start

Quick Start	5
Filling Station Information	26

Owner Information

General Information	29
Data Recording	36
Reporting Safety Defects	37
Modifications for the Disabled	38
Health and Safety	39

Security and Locks

Ignition Switch	41
Vehicle Security	42
Door Locks	47
Luggage Compartment	54
Alarm Systems	56
Garage Door Opener	60

Before Driving

Occupant Protection	64
Child Safety	82
Seats	92
Clock	97
Steering Column	98
Pedal Controls	100
Door Windows	101
Mirrors	104
Driving Position Memory	108
Luggage Compartment	110

On the Road

Instruments	111
Message centre	121
Trip Computer	129
Exterior Lighting	132
Interior Lighting	137
Parking Assist	139
Horn	142
Sunroof	143
Wipers and Washers	145
Parkbrake	148
Interior Features	149
Engine Starting	155

Transmission	157
Cruise (Speed) Control	160
Adaptive Cruise Control (ACC)	162
Automatic Speed Limiter	168
Stability Control	170
Braking System	171
Suspension	173
Driving Information	174
Fuel and Refuelling	178

Climate Control

Climate Control	184
Front Climate Controls	187
Rear Climate Controls	191
Touch-screen Climate Control	193

Roadside Emergency

Inertia Switch	203
Emergency Starting	204
Wheel Changing	206
Vehicle Recovery	213
Bulb Renewal	216
Fuses	222
Fire Extinguisher	231

Maintenance

General Maintenance	232
Hood Release	233
Regular Checks	234
Checking and Top-up	235
Battery	244
Wiper Blades	248
Wheels and Tires	249
Tire Glossary	265
Vehicle Care	266
Electrical Accessories	269

Specifications

Engine Data	270
Dimensions	271
Weights	272
Load Weights	273
Wheels and Tires	274

Handbook Contents

Touch-screen

Touch-screen	275
Touch-screen Display	278

Audio System

Audio System	282
Steering Wheel Controls	284
Radio	285
Satellite Radio (SDARS)	299
Digital Radio	304
Single CD Player	305
Compact Disc Changer	308

Telephone

Telephone Introduction	312
Telephone System	315
Telephone Operation - Standard . . .	319
Telephone Operation - Touch-Screen . .	323
Phone Book	328
Declaration of Conformity	330

Voice Control


JaguarVoice	331
-----------------------	-----

Quick Start

LOCKING AND UNLOCKING

Note: *Dependent upon vehicle configuration, the operation of the remote handset may differ from the following:*

Remote handset

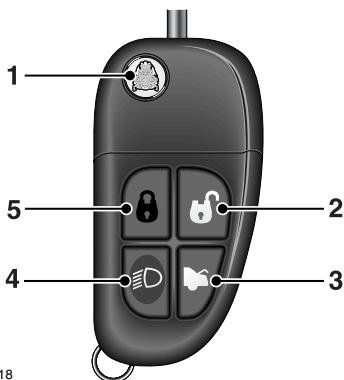

E86118

1. Press to release the door key.
2. Press once to disarm the alarm, unlock the driver's door and unlock the luggage compartment.
Press again to unlock remaining doors.
Press and hold to open the sunroof and windows (**Global opening**).
3. Press to unlock and open luggage compartment.
4. Press once to switch the headlamps on for 25 seconds.
Press three times in three seconds to activate the panic alarm.

5. Press once to lock the vehicle and arm the alarm.
Press twice within three seconds to fold the door mirrors (with power fold option).
Press and hold to close the sunroof and any windows that are open (**Global closing**).

Unlocking with the door key

If the vehicle is unlocked manually via the door lock, the key must be inserted in the ignition switch within 15 seconds to prevent the alarm being activated.

Two stage unlocking


This is a security feature that unlocks only the driver's door and luggage compartment on the first press of the button. It can be selected via the navigation system user operation menu (where fitted). Alternatively this can be set by your Dealer.
A 45 second Automatic door relock can also be set by your Dealer.

Quick Start

CENTRAL DOOR LOCKING

With the ignition switch in position I or II, press the facia switch (arrowed in illustration) to lock or unlock all the doors and the luggage compartment.

To also close or open the windows and sunroof, press and hold the switch.

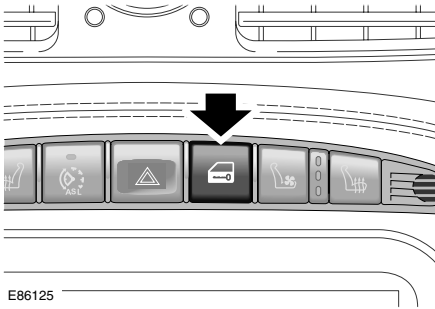

E86125

Drive away door locking

With the starter switch in position II, the luggage compartment, doors and fuel filler flap will automatically lock when the gear selector is moved from P (Park) or N (Neutral).

This feature can be disabled by your Jaguar Dealer.

Reminder - Fuel filler flap

The driver's door must be unlocked before operating the fuel filler flap release button.

LUGGAGE COMPARTMENT



The luggage compartment is electrically locked and unlocked in conjunction with the driver's door.

To open the luggage compartment with the vehicle locked:

- Press the luggage compartment button on the remote handset.

To open the luggage compartment with the vehicle unlocked:

- Press the button on the facia 1.
- Press the release button on the luggage compartment lid 2.

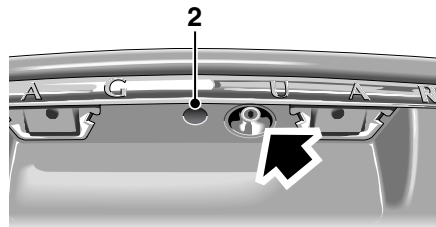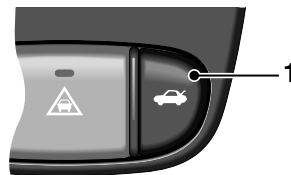

JAG0612

In the event of a dead battery, or other problem opening the luggage compartment, use the ignition key in the luggage compartment lock (arrowed in illustration).

Quick Start

Care Points

- Release buttons on the facia and luggage compartment lid are disabled when the vehicle is alarmed or in Valet mode.
- The luggage compartment has a power closure feature which removes the need to slam the lid.
- The vehicle alarm will sound if the luggage compartment is opened with the key when the vehicle is locked.

VALET LOCKING

A green-headed valet key is supplied for when you have your vehicle valet parked. With Valet mode active, the luggage compartment and glove compartment release switches are inhibited.



JOL3641

To activate Valet mode:


- Press the VALET switch, an audible chime will sound to confirm operation. If the starter switch is in position II the message centre will display VALET MODE.

- Turn off the starter switch, remove the standard remote handset and hand the green-headed key to the parking attendant.
- Access to the luggage compartment and glove box is regained when the unlock button of the standard remote handset is pressed.

SEATS

Front seat controls

Note: *Driving Position Memory provides more information on automatic seat movement, see page 10.*

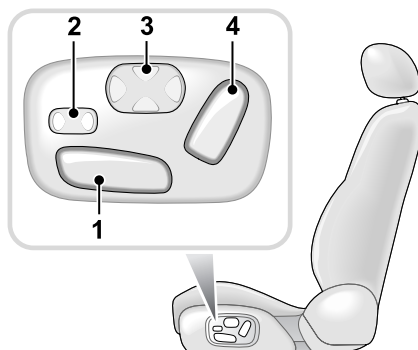


JAG0617

1. Seat forwards and rearwards, cushion height and front tilt control switch.
2. Seat cushion extension switch.
3. Lumbar support switch.
4. Seat recline and head restraint height adjustment switch.

Quick Start

Rear seat controls

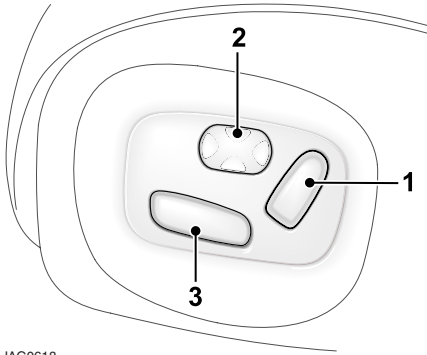

JAG0618



1. Backrest recline and head restraint height switch.
2. Lower backrest lumbar support adjustment.
3. Front seat position (for rear passenger comfort).

Rear seat controls inhibitor

The rear seat controls will be inhibited if the rear window isolation switch has been operated (see Windows and Door mirrors).

STEERING COLUMN AND PEDAL ADJUSTMENT

Steering column

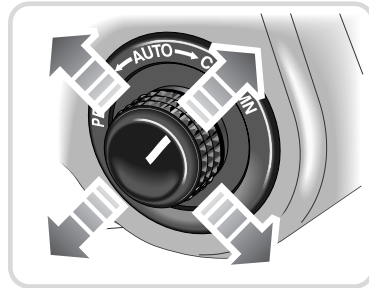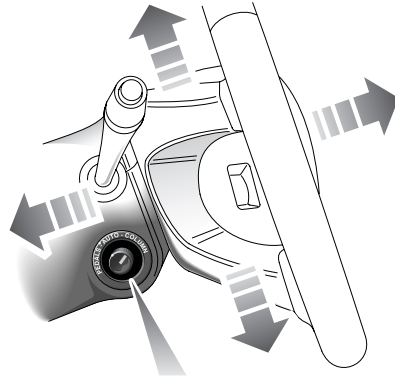

E86302



Turn the control on the left-hand side of steering column to **COLUMN** and move the control to adjust the height and reach.

Automatic seat movement

To prevent automatic movement of the driver's seat when the ignition switch is turned on or off, turn the control to either **PEDALS** or **COLUMN**.

Quick Start

Pedal adjustment

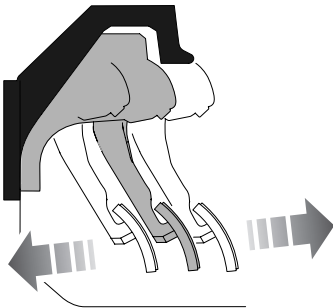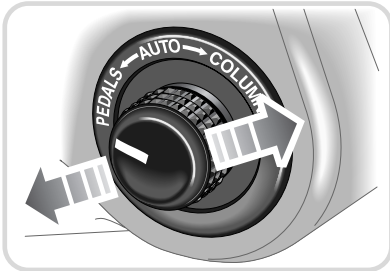

E86306

Turn the control to **PEDALS** and move the control to adjust the fore/aft position of the pedals.

Driver's seat movement with starter switch off


If the control is set to **AUTO**, the position of the steering column and driver's seat will automatically adjust to provide greater clearance for exit and entry when:

- the key is in the ignition switch and the driver's door is opened;
- the ignition key is removed.

ELECTROCHROMATIC REAR VIEW MIRROR

With the ignition switch on, the rear view mirror will automatically darken in proportion to the amount of glare detected from the following vehicles' headlamps. This feature is automatically switched off when reverse gear is selected.

WINDOWS AND DOOR MIRRORS

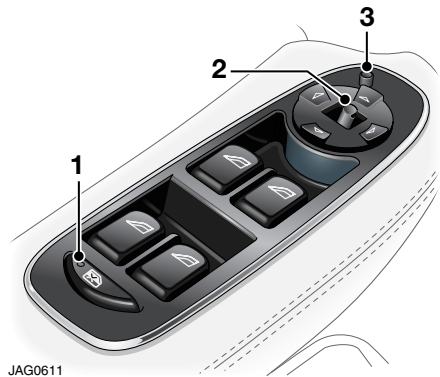

JAG0611

Windows

The windows are fitted with a facility that allows them to be fully opened or closed with a single operation of the switch.

- To open the window, press the respective window switch. Press the switch again to stop the window from fully opening.
- To close the window, pull the switch up. Pull the switch again to stop the window from fully closing.

Quick Start

Press button **1** to inhibit the operation of the rear window switches and electric rear seats (when fitted).

Door mirrors

To adjust the door mirrors, press the mirror selector switch **2** left or right to select the appropriate mirror. Use the four-way switch to adjust the position.

Power fold mirrors


The mirrors can be folded towards the door for better clearance/protection by pressing button **3**. Press the button again to unfold the mirrors.

The mirrors will automatically unfold next time the vehicle is unlocked with the handset.

Reminder - Global closing

If a window has been left open when leaving the vehicle, it can be closed by pressing and holding the lock button on the remote handset (this will also close the sunroof).

DRIVING POSITION MEMORY

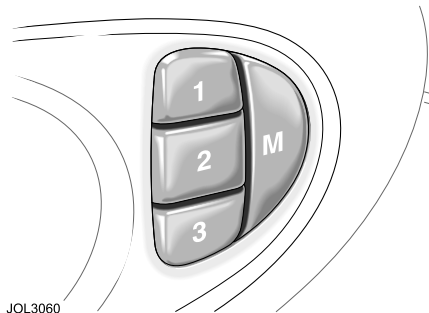

Once you have adjusted the driver's seat, steering column, pedals and exterior mirrors for your ideal driving position, the vehicle can memorise these settings for future use.

1. Insert the key into the starter switch and leave in the **OFF** position.
2. Push the memory button **M** and a red indicator in the switch will illuminate for five seconds.
3. Whilst the indicator is illuminated, press button **1**, **2**, or **3** to memorise the current settings.

The indicator will extinguish and an audible chime will sound to confirm that the settings are memorised. Any existing settings will be overwritten.

To recall a memorised driving position press buttons **1**, **2** or **3**.

Remote handset programming

With the key in the starter switch and the **M** button illuminated, you can program a remote handset to a memory position by pressing any button on the remote handset.

Quick Start

SEAT BELTS AND CHILD RESTRAINTS



A warning indicator on the instrument pack will illuminate to alert you that the driver's and/or front passenger's seat belt is unbuckled. Dependent upon specification this may be accompanied by an intermittent chime.

Child Seats

It is important to remember that your child's weight, rather than age, determines the type of seat that is required.

Refer to **Child Safety** to determine the correct seat for your child, see page 82.


Automatic Locking Reels (ALR)

All passenger seat belts have ALR fitted for use with child seats.

- To engage: extend the belt to maximum length to enable locking mechanism.
- To disengage: unbuckle the belt and allow the belt to fully retract.

With ALR enabled, as the seat belt retracts, it will automatically lock preventing re-extension. Ensure passengers do not fully extend the restraints and inadvertently engage this feature during normal use.

OVERHEAD CONSOLE

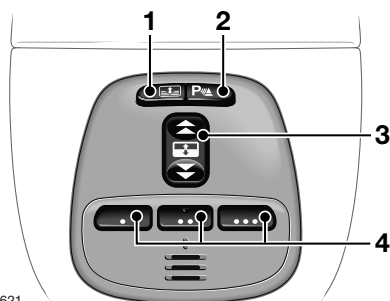

JAG0621

Rear window blind

Press button **1** to raise the rear window blind. Press the button again to lower the blind.

Parking assist

Press button **2** to turn off the front and rear parking sensors.

Parking assist care points

Sensors may activate on detection of water, snow or ice on their surface. This is entirely normal and regular cleaning will aid performance. Parking assist may sound if it detects a signal operating at the same frequency to that of the sensors (e.g. motorcycles, airbrakes).

Sunroof

The sunroof is fitted with a facility that allows it to be fully opened or closed with a single operation of switch **3**.

Quick Start

Closing remotely

If the sunroof has been left open when leaving the vehicle, it can be closed by pressing and holding the lock button on the remote handset.

Garage door opener

The buttons **4** on the overhead console can be programmed to transmit radio frequencies that can operate external devices, i.e. garage doors, entry gates, security systems, etc.

For more information, see page 60.

CLIMATE CONTROL



JAG0622

These are the primary functions of the climate control system:



For those vehicles fitted with the touch-screen navigation system, the advanced climate control functions can be accessed by pressing the **Climate** button.

AUTO (automatic) mode



Press to select automatic operation of the climate control system. The system will adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) and reduce misting, without further adjustments.

Screen heaters and timed air recirculation may be selected whilst in **AUTO** mode. Selecting any other function will cancel **AUTO** operation.

Quick Start

Recommended mode

Select **AUTO** as the normal operating mode. This will help prevent window misting and odours from the climate control system.

Dual temperature zones



With the **DUAL** button LED illuminated, the system provides separate temperature control of the driver and front passenger zones.

Press the button to de-select dual mode. The temperature of the passenger zone will automatically adjust to that of the driver's zone and the temperature of both zones will be controlled by the driver's temperature control buttons.

Temperature selection



Press the red buttons to increase temperature and the blue buttons to decrease temperature.

To quickly jump from **HI** or **LO** to a mid-range temperature setting, press and hold the **AUTO** button for a few seconds.

Air conditioning (A/C)



Air conditioning is an integral part of the climate control system, providing cooled and dehumidified air for occupant comfort; the dry airflow is also effective in preventing misting of the windows.

Press the button to switch the air conditioning system on or off. Air conditioning is controlled automatically when the vehicle is in **AUTO** mode.

De-selecting **A/C** will cancel **AUTO** mode.

External water deposits

The air conditioning system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form, but this is normal and no cause for concern.

Windshield defrost and demist



Press the **DEF** (defrost) button to remove frost or heavy misting from the windshield.

The rear screen and windshield heaters will be activated.

To de-select defrost mode, press **AUTO**. The rear screen and windshield heaters will remain on.

Heated screens and door mirrors



The front and rear screen heaters can be switched on or off in any mode, even when the climate control system is off, but will only operate when the engine is running.


The door mirror heaters are controlled by the rear screen heater button.

Screen heaters

The windshield and rear screen heaters will automatically activate on operation of the DEF button or detection of exterior temperatures at 5°C or lower.

Quick Start

FACIA AND CONTROLS

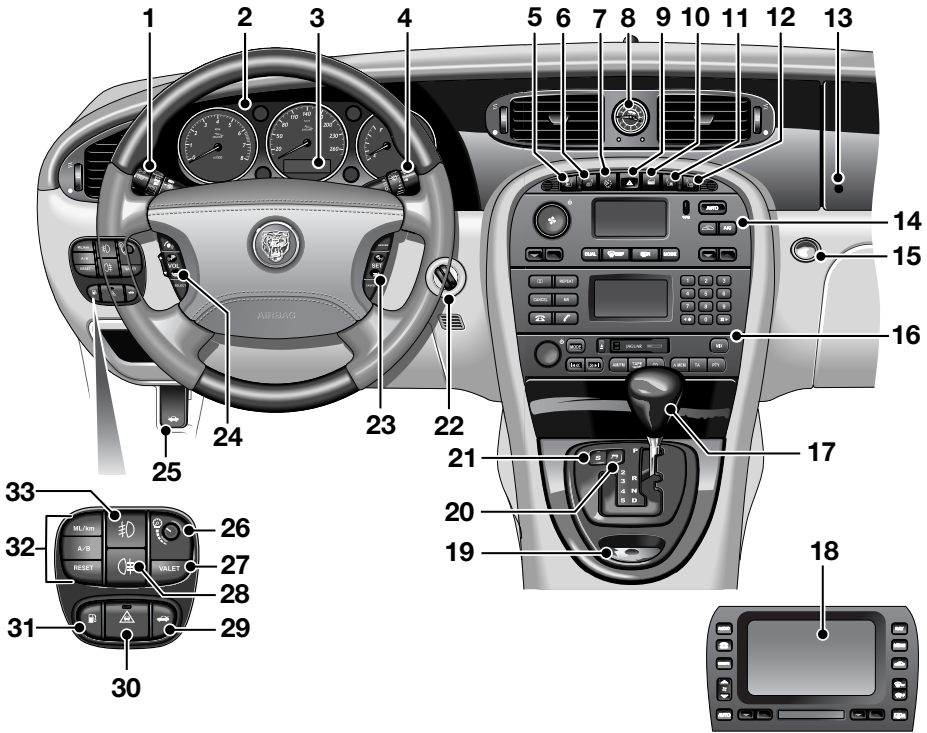

JAG0799

Quick Start

1. Direction indicators, exterior lamps and trip computer
2. Instrument pack and warning indicators
3. Message centre
4. Wiper and washer switch
5. Left seat ventilation switch
6. Left seat heater switch
7. Automatic speed limiter switch
8. Clock
9. Hazard warning switch
10. Master locking switch
11. Right seat heater switch
12. Right seat ventilation switch
13. Passenger air bag deactivation indicator
14. Climate control panel
15. Glove box release button
16. Audio system
17. Gear selector lever
18. Touch screen
19. Electric Parking Brake
20. DSC switch
21. Sports mode switch
22. Starter switch
23. Cruise control switches
24. Audio and telephone switches
25. hood release
26. Dimmer switch
27. Valet switch
28. Rear fog lamp switch
29. Luggage compartment switch
30. Adaptive Cruise Control forward alert switch
31. Fuel filler flap switch
32. Trip computer switches
33. Front fog lamp switch

Quick Start

Passenger air bag deactivation indicator



Based upon the weight and size of the occupant or object on the seat, the passenger air bag deactivation indicator may illuminate to confirm the air bag has been deactivated. THIS IS NORMAL.

For further information refer to **Occupant Protection**, see page 64.

Automatic exterior lamps

If Autolamps is selected, and the windshield wipers are operated continuously for more than 20 seconds, then the exterior lamps will be switched **ON** automatically.

Rotate the collar on the lever to select:


- Side lamps
- Headlamps
- Autolamps
- Headlamp exit delay

In **AUTO** mode, a sensor monitors the exterior light levels and will automatically switch the side lamps and dipped headlamps ON and OFF.

Automatic exterior lamps

If Autolamps is selected, and the windshield wipers are operated continuously for more than 20 seconds, then the exterior lamps will be switched ON automatically.

EXTERIOR LAMPS AND TRIP COMPUTER

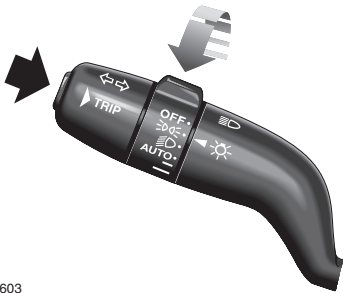


JOL4603

Move the lever up or down to activate the direction indicators. To display the trip data, press the trip button on the end of the stalk.

Push the lever away from you to select headlamp high beam. To flash the headlamps, pull the lever towards you and then release.

WIPERS AND WASHERS

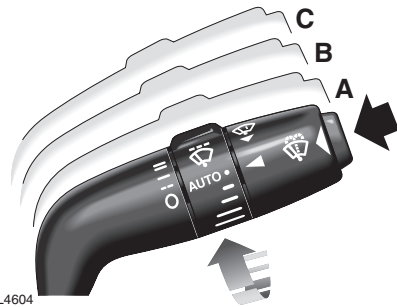

JOL4604

- A.** Intermittent wipe.
- B.** Slow speed operation.
- C.** High speed operation.

Press the button for windshield wash and wipe. Rotate collar to adjust the speed of intermittent wipe or to select **AUTO** for automatic operation of wipers.

Quick Start

Enabling automatic operation

The wiper lever must be in position **A** and **AUTO** selected on the collar to enable automatic operation of the wipers.

WARNING INDICATORS



Seat belt reminder



Electric Parking Brake on



Adaptive Cruise Control (ACC) active



Side lamps on



Headlamp high beam on



Front fog lamps on



Rear fog lamps on



Overspeed warning indicator



Direction indicators

Quick Start

AUTOMATIC TRANSMISSION

Gearshift interlock

The ignition switch must be in position **II** and the foot brake applied before the gear selector can be moved from **P** (Park) to **R** (Reverse). The lever can be moved into **P** with the ignition switch off.

Gear selector


The J-gate gear selector lever is designed to accommodate two different driving techniques as follows:

- Automatic selection: the right-hand side of the selector gate.
- Manual selection: the left-hand side of the selector gate to individually select 5th, 4th, 3rd or 2nd gear.

With the gear selector in **D** (Drive) and Sports mode active, the transmission will use 6th gear less at higher cruising speeds.
Fuel consumption will be adversely affected.

After selecting **R** (Reverse) or **D** (Drive) from **N** (Neutral) or **P** (Park), wait briefly for the transmission to engage before accelerating.

Sports mode

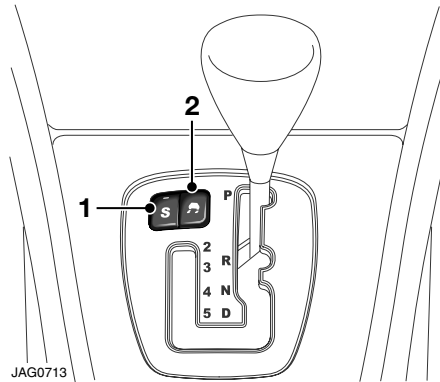

Press switch **1** to select Sports mode. A red indicator in the switch will illuminate to indicate that Sports mode is active. When Sports mode is selected, the gear change points are modified to make full use of the engine's power.

Dynamic Stability control (DSC)

DSC uses air suspension, traction control and anti-lock braking systems to maximise the vehicle's handling performance and help prevent wheelspin.


DSC is automatically activated when the starter switch is turned on, but can be switched off by pressing button **2** on the centre console. An amber indicator light in the instrument pack will permanently illuminate whenever DSC is switched off.

In the event of a system fault, the message **DSC NOT AVAILABLE** will also be displayed in the message centre.

Quick Start

ELECTRIC PARKING BRAKE (EPB)

Applying the EPB

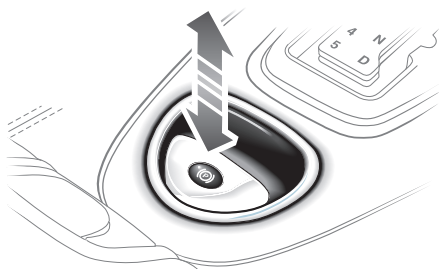


JOL4708

- The EPB will automatically release when the gear selector is moved from P (Park) and will automatically apply when the starter key is removed.
- The EPB can be manually released when the engine is running and the footbrake is applied. Press the EPB switch down to release and pull it up to apply.
- If manually applied whilst in **D** (Drive) or **R** (Reverse) the EPB will automatically release when the accelerator is applied.

CRUISE (SPEED) CONTROL

Speed control

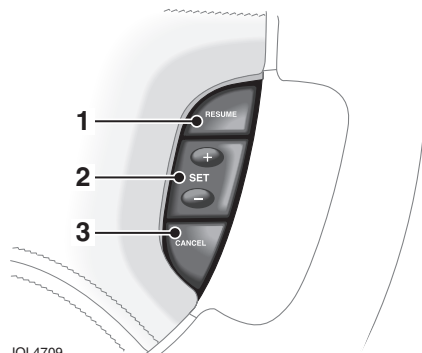

JOL4709

Speed control is the standard cruise control system where the vehicle will maintain a **SET** road speed until either cruise control is cancelled or the brake pedal is used.

The system is controlled via switches on the steering wheel:


1. **RESUME** - to resume a set speed retained in memory.
2. **SET** - to set the road speed to be maintained, or increase or decrease the speed in 2 km/h (1 mph) steps when cruise control is operating.
3. **CANCEL** - cancels cruise control, but retains the set speed in memory.

Brake pedal override

Cruise control will automatically disengage when the brake pedal is pressed or when the vehicle speed falls below 26 km/h (16 mph).

Quick Start

ADAPTIVE CRUISE CONTROL (ACC)

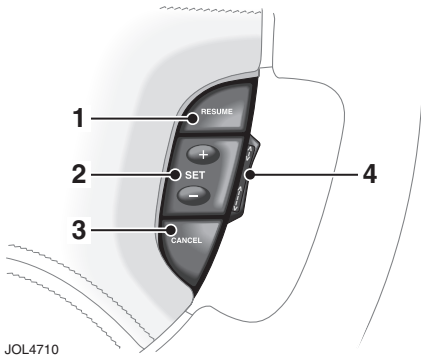

The Adaptive Cruise Control system is designed to aid the driver in maintaining a gap to the vehicle ahead, or to maintain a set road speed if there is no slower vehicle ahead. The system is controlled via switches on the steering wheel:

1. **RESUME** - to resume a set speed retained in the memory.
2. **SET** - to set the road speed to be maintained, or increase or decrease the speed in 2 km/h (1 mph) steps when cruise control is operating.
3. **CANCEL** - cancels cruise control but retains the set speed in the memory.
4. **GAP** - increase or decrease the time gap to the vehicle ahead.

The gap to the vehicle ahead can be changed to one of four pre-defined intervals and the current setting will be displayed in the message centre.

When a vehicle ahead enters the same lane as you, or a slower vehicle is encountered in the same lane, the road speed will automatically be adjusted to maintain the currently selected time gap. The warning indicator will illuminate to indicate that the vehicle is in follow mode.


Adaptive Cruise Control **is not** a collision warning or avoidance system. Additionally the system **will not detect**:

- Stationary or slow moving vehicles below 10 km/h (6 mph).
- Pedestrians or objects in the roadway.
- Oncoming vehicles in the same lane.

Quick Start

AUDIO SYSTEM KEY FEATURES

General operation

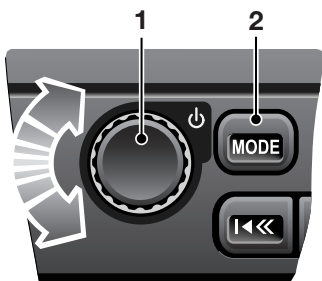

JAG0624

Press the control knob **1** to switch on or off and rotate to adjust the volume.

To adjust the sound settings, press the **MODE** button **2** repeatedly, until the required setting is displayed. Turn the control knob **1** to adjust the level or rating.

After approximately five seconds, the system will return to normal control mode.

Steering wheel controls



JOL4712

1. Press to mute the audio unit.
2. Press, as required, to increase or decrease volume.
3. Press and release to cycle through Radio, FM, AM, CD, and CD multichanger.
4. Press and release to cycle through preset radio stations or to skip to the next CD track.

Press and hold for at least two seconds to cycle to the next strongest station or next CD.

Quick Start

RADIO OPERATION




To switch on the radio function, press the **BAND** button. Pressing this button repeatedly scrolls through

FM, MW wavebands and satellite or digital stations (if fitted).



To search for a radio station, press the **Seek** arrow buttons.

Setting the radio presets

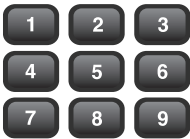

Once a radio station has been tuned, press and hold the desired preset button (or touch a station position on

the touch-screen) until a beep is heard. The preset is now stored.

A total of nine presets can be stored for each waveband.



The radio presets can be automatically set by using the automatic memory function.

Press and hold the **AMEM** button for two seconds. The radio will be briefly muted while it searches the waveband for the nine strongest stations.

To select the stored radio stations, press or touch the required radio preset button (1 to 9).

Activating TA (Traffic Announcements)



To activate this function, press and release the **TA** button. With **TA** activated, traffic

announcements will interrupt radio or CD play.

To de-activate this feature, press and release the TA button again.

CD OPERATION

Single CD player



If the radio or CD multichanger is being used, pressing the **CD** button will resume playing any CD installed in the player mechanism.

When a CD is loaded into the aperture, it will begin to load and play automatically.

Pressing the **CD** button, while in CD play mode, will pause the current track. A subsequent press of the **CD** button will resume play mode.

Six discs can be loaded into the multichanger unit, and a further single disc in the audio console.



To skip tracks, continually press the **Seek** arrow buttons to move back or

forward accordingly. Pressing and holding these buttons will search through the selected track.




When a disc is inserted, the CD icon is displayed. Press the disc eject button to eject the CD.

The display will show **DISC EJECT** and the CD icon will be turned off.

Quick Start

CD Multichanger

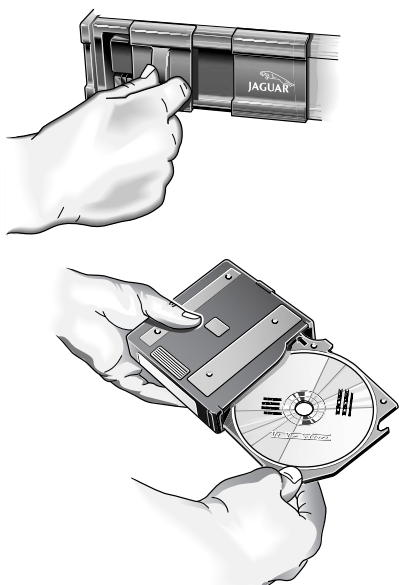

JAG0625

Care point

Remember to close the multichanger door. This will prevent dirt getting into the unit and help reduce skipping.

The CD multichanger is located in the luggage compartment. To load a CD into the multichanger:

1. Slide open the multichanger door; press the **Eject** button and remove the magazine. Close the door.
2. Pull a tray out from the magazine and insert a CD (label side up). Slide the tray into the magazine until a click is heard.

3. Slide open the multichanger door and ensure correct orientation, replace the magazine. Make sure that the magazine clicks into position.

CD selection



1. Press the **CDC** button to select the CD multichanger mode.

2. Press preset buttons **1** to **6** to select the appropriate CD loaded in the multichanger.

If a touch-screen is fitted to the vehicle, disc selection can be made by touching the relevant numbered disc icon.

3. When playing a CD, press the **CDC** button to pause play. Press again to continue play.

Playing random tracks



- To play random tracks from the disc, press and release the **MIX** button. To cancel, press the **MIX** button again.

To play random tracks from all discs loaded in the multichanger, press the **MIX** button for two seconds. To cancel, press and hold the **MIX** button.

Quick Start

TELEPHONE - BLUETOOTH® SYSTEM

Jaguar approved mobile phones can communicate with the vehicle's inbuilt telephone system. Please refer to the Jaguar website for a list of approved phones.

The following procedure demonstrates how to connect the most popular brands of mobile phone.

Pairing a handset to the vehicle

1. Turn the ignition switch to position II.

	Nokia	Motorola	Ericsson
1.	Select menu	Select menu	Select menu
2.	Select settings	Select settings	Select connectivity
3.	Select Bluetooth OR Select Connectivity then Bluetooth	Select Connection	Select Bluetooth
4.	Select On	Select Bluetooth link	Select My Devices
5.	Select Search for Audio devices	Select Hands-free	With New Device highlighted, select Add. Press OK to confirm
6.	After search select Jaguar	Select Look for devices	After search select Jaguar
7.	Enter pass code 1313. Press OK to confirm	After search select Jaguar	Select Connect
8.	No connection? Select Bluetooth (Menu) then Paired devices Jaguar	Permission to bond? Select Yes and enter pass code 1313	Enter pass code 1313 after prompt

When the handset has been successfully paired to the system, the touch-screen message changes to **Registered** followed by the message **Phone Connected**. On systems without a touch-screen the audio system message changes to **SIG***.

2. Press the telephone button on the audio panel. Ensure that no mobile phone is connected to the system. The touch-screen will display the message **Discover Me**. On non-touch screen systems the message **SIG****** or **SIG******* will be displayed.
3. Prepare the handset for pairing to the system.

See the telephone manufacturer's instructions for further details, or follow the table below for generic commands.

If your phone is capable of sending the signal strength and network operator's name, this information will be displayed on the touch-screen. For systems without touch-screen, the signal strength only will be displayed.

For best results when pairing your handset to the system, ensure the handset is fully charged.

Quick Start

Mobile phone compatibility

There are a number of mobile phones that have been tested to function correctly with the Jaguar system, however, not all mobile phones are compatible. For the latest list of compatible phones and software versions, please refer to www.ownerinfo.jaguar.com. Alternatively consult your Jaguar Dealer.

Downloading phone book entries

1. Turn the ignition switch to position **II**, and make sure that the handset is paired to the vehicle's system.
2. Press the telephone button on the audio panel or touch-screen surround.
3. Switch off the ignition switch and wait for your phone to disconnect from the vehicle to allow the system to complete the download process.

Making a call



JOL4717

1. Press and hold the **SELECT** switch on the steering wheel control, or press the call button on the audio panel. **Phone** will be displayed.
2. Key in the phone number required on the touch-screen or audio panel keyboard.
3. Press the call button on the steering wheel control, or on the audio panel. Calling will be displayed.
4. To end the call, press the call button on the steering wheel control, or on the audio panel.

Receiving a call

To answer or end a call, press the call button on the steering wheel control or on the audio panel.

Filling Station Information

FUEL TYPE



Unleaded 95 RON.

FUEL FILLING



JAG0626

With the vehicle unlocked, press the fuel flap release button on the knee bolster switchpack, see page 178.

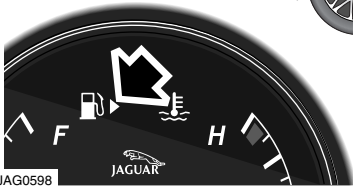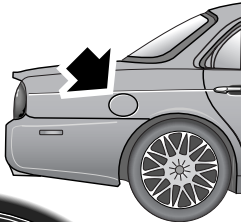

JAG0598

The filler flap is located on the right-hand side of the vehicle.

Ensure that the fuel nozzle rests on the filler neck when filling with fuel. After refuelling, twist the filler cap clockwise until it clicks and close the flap, which automatically locks shut.

TIRE PRESSURES

Check pressures when the tires are cold, see page 249. Deflating air from a warm tire to the recommended pressure will result in under-inflation which may be dangerous.




WARNING:

When using tires other than those recommended by Jaguar, do not exceed the speed capacity recommended by the tire manufacturer.

USA

A tire information label/placard is visible on the pillar behind the driver's door (also known as the B pillar).

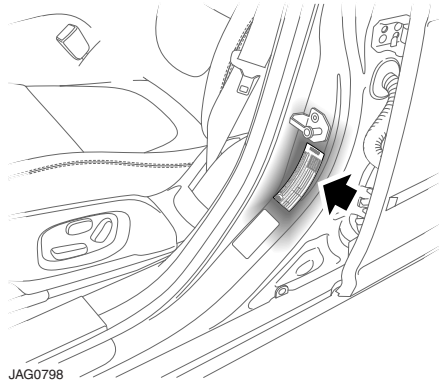


JAG0798

The label/placard is shown on page 250.

Filling Station Information

Canada and Mexico

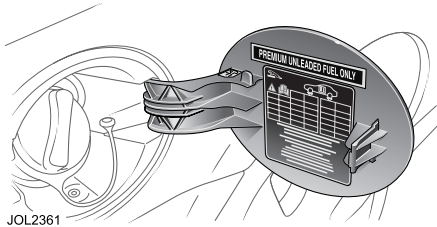


The tire pressures are shown on a label affixed to the inside of the fuel filler flap.



For your convenience, you may wish to record the tire pressures in the boxes provided below. If you are unsure of the correct pressures, please contact your Jaguar Dealer.

	FRONT
Normal Driving	<input type="text"/>
Laden/High Speed	<input type="text"/>
	REAR
Normal Driving	<input type="text"/>
Laden/High Speed	<input type="text"/>

HOOD RELEASE

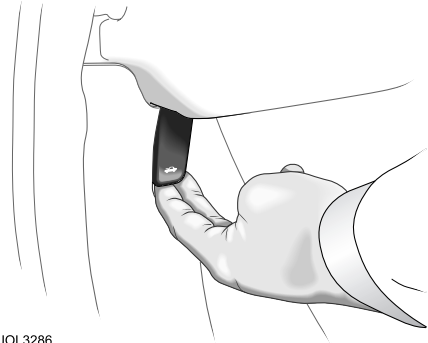

Pull the release lever located below the fascia on the left-hand side of the vehicle, see page 233.

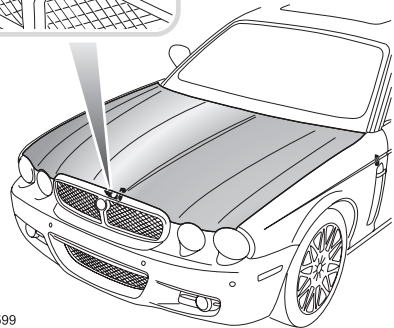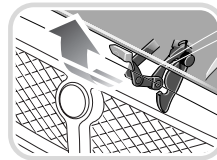

Lift the hood slightly and push the safety catch located under the centre of the front edge of the hood, then lift the hood.

Filling Station Information

UNDERHOOD TOP-UP

Recommended engine oil

See page 235.

An oil of 5W-30 viscosity to Jaguar specification WSS M2C913 - B must be used in all vehicles.

For **top-up purposes only**, where the WSS M2C913 - B specification cannot be found, ACEA A3/B3 or ACEA A1/B1 specification oils may be used.

Windshield/headlamp washer reservoir

See page 241.

Coolant system

See page 242.

General Information

INTRODUCTION

Whether you are new to the Jaguar marque or have previously owned Jaguar or Daimler vehicles, we are pleased that you have made Jaguar your choice of vehicle this time.

When left-hand or right-hand is used in the text, this refers to the left-hand side or right-hand side of the vehicle, viewed from the rear.

For safety and the pleasure you will get from your new vehicle, please take the time to get well acquainted with your vehicle by reading the handbooks.

This Handbook describes every option and model variant available and therefore some of the items covered may not apply to your particular vehicle.

Note: Remember to pass on the vehicle handbooks when reselling the vehicle. Handbooks are integral parts of the vehicle.

WARNINGS, CAUTIONS AND NOTES

Take particular note of WARNINGS, Cautions and Notes given throughout this handbook.



WARNING:

Safety warnings are included in this handbook. These indicate either a procedure which must be followed precisely, or information that should be considered with great care in order to avoid the possibility of personal injury.

Caution: Cautions are included in this handbook. These indicate either a procedure which must be followed precisely, or information that should be considered with great care in order to avoid the possibility of damage to your vehicle.

Note: A note is a procedure which will help avoid difficulties in the operation of the vehicle.

Warning symbols on the vehicle



JOL2756

On encountering the warning triangle or open book symbol on the vehicle, it is important that before touching this part of the vehicle or attempting adjustments of any kind you consult the relevant section of this handbook.

Caution: Do not remove any warning labels from the underhood area or from inside the vehicle.

General Information

JAGUAR DEALERS

Jaguar Dealers are chosen with care. Each is dedicated to providing a Sales, Service and Spare Parts facility of the highest standard.

Jaguar Dealers are provided with full technical support from the factory, with comprehensive training for all their technicians.

Dealers' workshops operate to a high standard and have all the necessary tools and equipment essential to maintain or repair Jaguar vehicles.

Accessories

A full range of Jaguar Engineering approved accessories including safety, stowage, touring, leisure and lifestyle products are just some of those available from your Jaguar Dealer.

Please ask your Jaguar Dealer for an up-to-date brochure so you can select your requirements from the latest range.

Jaguar body repair centres

Your Jaguar incorporates the latest technology in aluminium body structures.

A specialist network of vehicle Body Repair Centres is provided with full technical support from the factory, and with comprehensive training for all their body shop technicians.

The Body Repair Centres operate to a high standard and have all the necessary tools and equipment essential to repair Jaguar vehicles.

Genuine Jaguar parts and accessories

Your Jaguar Dealer can supply you with genuine replacement parts and accessories which are fully approved to Jaguar's original equipment specification.

This will ensure that the safety and performance of your vehicle is maintained for your complete peace of mind.

Please note that fitment of non-genuine parts may invalidate the vehicle warranty if a subsequent fault occurs due to fitting sub-standard replacement parts or accessories.

Jaguar parts distribution service

Jaguar Dealer stock a large number of parts to keep your vehicle maintained and back on the road as quickly as possible. Their service is supported by six strategically positioned Jaguar parts distribution centres in the United Kingdom, Germany, Japan, Australia and two in North America providing next day delivery to the vast majority of world-wide Dealers.

General Information

WARRANTY

Details of the vehicle warranty are contained within the Passport to Service for USA and Canada or, for Mexico, the Service Portfolio and Warranty Benefits.

USA and Canada

The Passport to Service booklet contains warranties applicable to the vehicle, which include:

- The Limited Vehicle Warranty.
- The Emission Control System Warranty and covered parts list.
- The Corrosion Warranty.

Tires are not warranted by Jaguar Cars, but by the specific manufacturer of the tires on the vehicle. Details of tire warranties are included in the vehicle literature pack.

Mexico

The Warranty Benefits contains warranties applicable to the vehicle, which include:

- The Limited vehicle Warranty.
- The Emission Control System Warranty and covered parts list.
- The Corrosion Warranty.


VEHICLE IDENTIFICATION

Vehicle Identification Number (VIN)

It is essential that the Vehicle Identification Number (VIN) is quoted in all correspondence and when ordering replacement parts.

The number is visible from outside the vehicle, on a plate in the lower left edge of the windshield.


Certification label

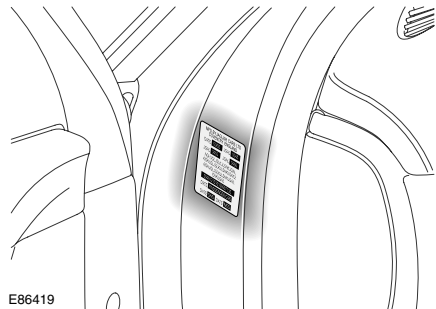

Vehicles have the Certification Label adhered to the left-hand front door hinge post. Vehicle weights, paint code, manufacture date and the VIN are shown on this plate.

General Information

Engine number

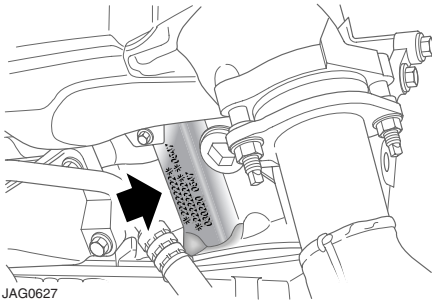

The number is located on the rear left-hand side of the cylinder block, adjacent to the transmission flange, shown above.

Transmission number

On a metal label or bar code label attached to the transmission casing.

JAGUAR DIAGNOSTIC SYSTEM

Many of the vehicle systems are controlled by complex electronic devices. Specialist equipment is required to trace and rectify faults in the systems and ensure that only faulty components are repaired or renewed.

Caution: Severe damage to the electrical system and electronic components can occur if any attempt is made to diagnose faults in the electrical system using conventional diagnostic equipment (for example; the use of test lamps or low impedance voltmeters). The fitting of any electrical accessory should only be entrusted to a Jaguar Dealer.

REGULAR SERVICING

Each vehicle is given a full Pre-Delivery Inspection to ensure that all systems function correctly and that the vehicle meets its specification.

Owners are responsible for the regular maintenance and servicing of the vehicle. Jaguar Dealers will be pleased to arrange periodic servicing and can provide you with details of tasks carried out at each service interval.

Failure to implement maintenance at the recommended intervals could result in deterioration of vehicle performance and possible infringement of regulations.

Regular routine maintenance not only helps to prevent unnecessary breakdowns and inconvenience, but enhances the trade-in or resale value of the vehicle.

Failure to perform regular maintenance at the correct interval may void factory warranty.

General Information

BREAKING-IN

Apart from a few precautionary recommendations, there are no strict breaking-in procedures for this vehicle.

By observing the following advisory notes you will ensure maximum engine, transmission and brake life for your vehicle:

- Allow the engine to warm up thoroughly before operating at engine speeds over 3500 rev/min.
- Vary the speed frequently.
- From 1500 kilometres (940 miles) onwards, gradually increase performance of the vehicle up to the permitted maximum speed, where road conditions permit.

Breaking in for brakes

To ensure that the brake pads can bed-in evenly and reach their optimum wear and performance condition, usually within 480 kilometres (300 miles), the following points are recommended:

- Where possible, avoid heavy braking or rough usage of the brakes as this can result in damage being caused to the brake pads and discs.
- Avoid prolonged use of the brakes, for example, when descending severe gradients.
- Frequent light application of the brakes is desirable. This helps to fully bed-in the brake pads before the normal breaking-in period is completed and the vehicle is operated at high speeds, when maximum brake efficiency will be required.

The above equally applies when new discs or pads have been fitted.

Warming Up

Do not operate the engine at high speed when first started, but allow time for the engine to warm up and the oil to circulate.

PROTECT THE ENVIRONMENT

We must all play our part in protecting the environment. Correct vehicle usage and disposal of waste cleaning and lubrication materials are significant steps towards this aim.

Avoid using high engine speeds. You will then protect your engine, reduce fuel consumption, lower the engine noise level and help towards reducing the environmental burden.

Care should be taken at all times to avoid polluting the environment. Used materials, for example, batteries, tires, fluids and filters, should be disposed of at suitable facilities in accordance with local legislation. If in doubt, clarification should be sought from your local authority/regulator.

MOBILE/PORTABLE TELEPHONES

Check the laws and regulations on the use of cellular telephones in the areas where you drive. Always obey them. Also, give full attention to driving.

Use hands-free operation (if fitted) and pull off the road and park before making or answering a call, if driving conditions so require.

General Information

WINDOW TINTING


Do not have your vehicle windows tinted with a metal oxide tinting (for maximum heat reduction from sun load) if you have a navigation system fitted to your vehicle.

Metal oxide tinting prevents the reception of the Global Positioning Satellite (GPS) system signals by the antenna, causing the navigation system to stop functioning.

In addition, metal tinting must never be applied to windows that contain antenna patterns as radio reception will be degraded.

A non-metal tinting should be used if you require window tinting and if in doubt, contact your Jaguar Dealer for advice.

FLOOR MAT RETENTION

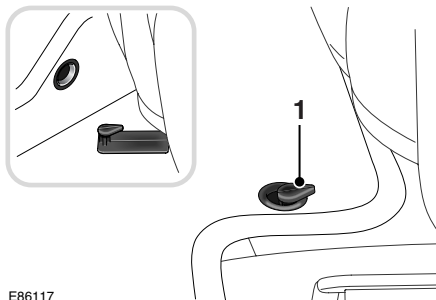

Ensure that the driver floor mat is correctly positioned and secured under the tongue on the retention post (1), [only one shown], so that it does not interfere with the operation of the accelerator pedal or the brake pedal.

The positioning of the mat should be especially checked when refitted after removal for cleaning or servicing.

General Information

LEATHER CARE GUIDE

Leather is a natural product, therefore, it bears natural characteristics, such as grain variations, growth and brush marks. These non-weakening marks show the true nature of the hide and are the hallmarks of a leather product. Leather is an easy to maintain natural product, however, dust and substances can penetrate the pores and crease the leather, causing surface wear and brittleness.

To prevent ingrained dirt, inspect the seat upholstery regularly and clean every one to two months as follows:

- Wipe off fine dust from the seat surfaces at regular intervals using a clean, damp, non-coloured cloth. Change frequently to a clean area of cloth to avoid abrasive action on the leather surface. Avoid over-wetting.
- If this is not sufficient, use a cloth which has been dampened with warm soapy water and then wrung out; avoid over-wetting. Use only mild non-caustic soap.
- Use Jaguar Leather Cleaner for heavily soiled areas. Dry off and rub with a clean soft cloth, changing surfaces regularly.
- Sharp objects such as belts, zip fasteners, rivets, etc. can leave permanent scratches on the leather surface.
- Dark clothing may stain leather seats just like other upholstery products.

- Do not use solvents such as gasoline, white spirit or alcohol. Do not use detergents, furniture polish or household cleaners. Such strong treatments may give, initially, an impressive appearance, but their use will lead to rapid damage or deterioration of the natural properties of the leather. Jaguar recommend a basic set of products that have been specially selected for the type of leather in your vehicle. The Manufacturer's Warranty will be invalidated if treatments are used other than those recommended by Jaguar Cars Limited.
- Unless spillages such as tea, coffee or ink are washed away immediately, permanent staining may have to be accepted.

When staining (e.g. from clothing) or spillage occurs, clean the affected area immediately as described above.

It is recommended that Jaguar Leather Cleaner is used several times a year to maintain its appearance and suppleness. The Jaguar Leather Cleaner will nourish and moisturise the leather and help to improve and renew the surface protective film against dust and substances.

If a valet service is used, ensure that the specialist concerned is aware of, and follows, these instructions precisely.

For any further questions please consult your Jaguar Dealer for specialist advice.

Data Recording

SERVICE DATA RECORDING

Service data recorders in your vehicle are capable of collecting and storing diagnostic information about your vehicle. This potentially includes information about the performance or status of various systems and modules in the vehicle, such as engine, throttle, steering or brake systems. In order to properly diagnose and service your vehicle, Jaguar Cars Limited and service and repair facilities may access vehicle diagnostic information through a direct connection to your vehicle when diagnosing or servicing your vehicle.

EVENT DATA RECORDING

Other modules in your vehicle - event data recorders - are capable of collecting and storing data during a crash or near crash event. The recorded information may assist in the investigation of such an event. The modules may record information about both the vehicle and the occupants, potentially including information such as:

- How various systems in your vehicle were operating.
- Whether or not the driver and passenger seat belts were buckled.
- How far, if at all, the driver was depressing the accelerator and/or the brake pedal.
- How fast the vehicle was travelling.
- Where the driver was positioning the steering wheel.

To access this information, special equipment must be directly connected to the recording modules. Jaguar Cars Limited do not access event data recorder information without obtaining consent, unless pursuant to court order or where required by law enforcement, other government authorities or other third parties acting with lawful authority.

Other parties may seek to access the information independently of Jaguar Cars Limited.

Reporting Safety Defects

VEHICLE DEFECTS (U.S. ONLY)

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Jaguar Cars.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign.

However, NHTSA cannot become involved in individual problems between you, your Dealer, or Jaguar Cars.

To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-327-4236 (TTY: 1-800-424-9153); go to

<http://www.safercar.gov>; or write to:

Administrator

NHTSA,
U.S. Department of Transportation,
400 Seventh Street S. W.,
Washington, D.C. 20590.

To contact Jaguar Cars, call
1-800 4 Jaguar.

You can also obtain other information about motor safety from the website <http://www.safercar.gov>.

VEHICLE DEFECTS (CANADA ONLY)

If you believe that your vehicle has a defect which could cause a crash, or could cause injury or death, you should immediately inform Transport Canada in addition to notifying Jaguar Canada.

To contact Transport Canada, call their toll-free number; 1-800-333-0510.

Modifications for the Disabled

VEHICLE MODIFICATIONS (USA ONLY)

If you are considering modifying your vehicle in any way to accommodate a disability, for example by altering or adapting the driver's or front passenger's seat(s) and/or airbag systems, please contact Jaguar Cars in the USA at:

Jaguar Cars
Customer Relationship Center
555 MacArthur Blvd, Mahwah,
New Jersey 07430-2327,
1-800-4Jaguar Option 9.

Health and Safety

HEALTH AND SAFETY PRECAUTIONS



WARNING:

Many liquids and other substances used in vehicles are poisonous and should never be consumed and must be kept away from open wounds. These substances include antifreeze, brake fluid, fuel, windshield washer additives, lubricants and various adhesives.



WARNING:

The presence of any unusual fumes (for example; gasoline or exhaust fumes) in the passenger compartment and/or luggage compartment should be corrected immediately by a Jaguar Dealer.

If you must drive under these conditions do so only with all windows fully open.



WARNING:

By operating other electronic equipment (for example; a mobile phone without an exterior antenna) electromagnetic fields can cause malfunctions of the vehicle electronics. Therefore, you should observe the instructions of the equipment manufacturers.



WARNING:

Any modifications to the fuel system not specifically designed for this Jaguar are prohibited. Such modifications in some circumstances could result in a fire. All service actions must be entrusted to a Jaguar Dealer.



WARNING:

Alterations to the electrical system, including the fitting of accessories not designed for this Jaguar, will cause damage to the electrical circuits and systems. In some circumstances this could result in a malfunction or fire. All accessory work should be entrusted to a Jaguar Dealer.



WARNING:

No attempt should be made to repair a fuse that has blown. Always install a new fuse of the correct amperage. Failure to comply with the above may cause a fire hazard or create serious damage elsewhere in the electrical circuit.



WARNING:

Avoid contact with battery acid which is poisonous and corrosive. Acid will cause burns to the skin as well as to the eyes. In the event of skin or eye contamination, wash the affected area with water thoroughly. Seek immediate medical attention when eye contact has occurred.

Health and Safety



WARNING:

Do not disconnect any pipes in the air conditioning refrigeration system. A refrigerant is used which can cause blindness if allowed to contact the eyes. If refrigerant should contact the eyes or skin, wash the eyes or affected area with cold water for several minutes. Do not rub. As soon as possible thereafter, obtain treatment from a doctor or eye specialist.



WARNING:

When working within the engine compartment, take care to avoid contact with moving parts and hot components.

California Proposition 65




WARNING:

Engine exhaust, some of its constituents and certain vehicle components, contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. In addition, certain fluids contained in vehicles and certain products of component wear contain or emit chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Ignition Switch

IGNITION SWITCH

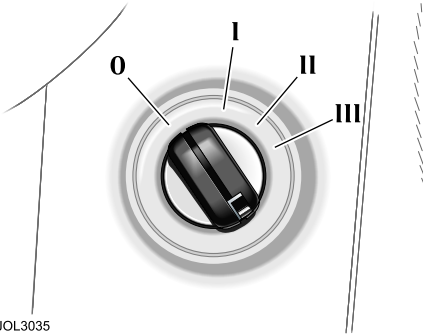

The facia-mounted ignition switch, on the right-hand side of the steering column, has four key positions:

- 0** Ignition OFF - Is the only position in which the key can be inserted and removed.
- I** Auxiliary - allows use of some electrical circuits, for example, radio and window operation (accessory delay only).
- II** Ignition ON - All electrical circuits except the starter motor are activated. The key remains in this position when driving.
- III** Engine start - The starter motor is operated for as long as the key is held in this position, against spring pressure.

When the key is turned back to the OFF position, the delayed accessory feature (window operation etc.) becomes active.

The circuits available in the auxiliary position remain activated for a preset timed period or until a front door is opened.

To remove the ignition key

Automatic transmission vehicles have a key interlock feature.

Apply the Electric Parking Brake, move the gear selector to the Park **P** position and turn the key to position **0**.

The automatic transmission gear selector must be placed in Park **P** before the key can be removed from the ignition switch.

When the key is removed, the gear selector will be locked in Park.

Gearshift interlock

A brake pedal/gearshift interlock system is incorporated in the automatic transmission gear selector mechanism.

To move the gear selector from Park:

1. Turn the ignition key to position **II** or start the engine.
2. Press the brake pedal.
3. Select a gear.

Vehicle Security

GENERAL INFORMATION

When the vehicle is unoccupied or unattended, you are advised to do the following:

- Apply the Electric Parking Brake and move the gear selector to the Park **P** position.
- Do not leave children or pets in the vehicle unattended.
- Do not leave luggage or valuables on display.
- Remove all keys, including remote transmitters, from the vehicle prior to locking the doors, even when the vehicle is in your garage.
- Close all windows, luggage compartment and glove compartment, and lock all the doors.
- Park the vehicle where it can be seen. At night, park in a well-lit area.
- It is important to keep your keys in safe places at all times. Leaving them in conspicuous places is an invitation for a thief to steal them and, consequently, your vehicle or belongings. Keep them as secure as you would your wallet or purse, both at home and away.

IMMOBILISATION SYSTEM

This vehicle is fitted with an immobilisation system. The system prevents the vehicle being driven away by unauthorised persons.


Programmable key

An electronic device is fitted in the head of each key which is programmed to the vehicle electronic systems.

When a programmed key is inserted into the ignition switch it is recognised and accepted by the vehicle's electronic systems.

The engine cannot be started with a key that is not programmed to the vehicle electronic systems.

Immobilisation system status light

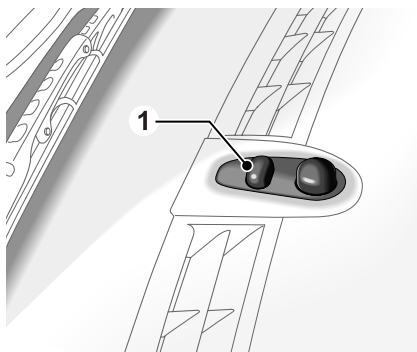

JAG0628

The immobilisation system status is shown by a Light Emitting Diode (LED), which is located on the top surface of the facia panel (1).

If an ignition key is put into the ignition switch and turned to position II, and the LED remains flashing after three seconds, it is possible that the engine will not start.

Should this occur, please contact a Jaguar Dealer, who will investigate the cause of the flashing LED.

Vehicle Security

KEYS

Vehicles are supplied with two integrated transmitter keys and one green-headed valet key. Additionally, black-headed keys are available and for further details, contact a Jaguar Dealer.

Integrated key transmitter

The integrated transmitter key comprises the key body integrated with a remote transmitter. The key operates all the locks on your vehicle.

Green-headed valet key

The green-headed valet key is not integrated with a remote transmitter. The key operates the driver's door lock and the ignition switch, but does not operate the luggage compartment lock.

Black-headed key

This black-headed key is not integrated with a remote transmitter, but it does operate all the locks and the ignition switch on your vehicle. The key is not supplied with your vehicle. For further details, contact a Jaguar Dealer.

Additional keys

Five additional keys can be programmed to operate the locks on your vehicle.

Note: *A maximum of three additional integrated keys can be used.*

All additional keys must be obtained from and programmed by, a Jaguar Dealer.

Key number label

The key number is recorded on an adhesive label which is affixed to the rear of the integrated transmitter keys. Peel off the label and keep safely, not in the vehicle.


Vehicle Security

KEY TRANSMITTER



WARNING:

Never leave the key transmitter in the vehicle if children or animals are also left in the vehicle. The vehicle's systems and remote control functions could be operated, which may result in injury.

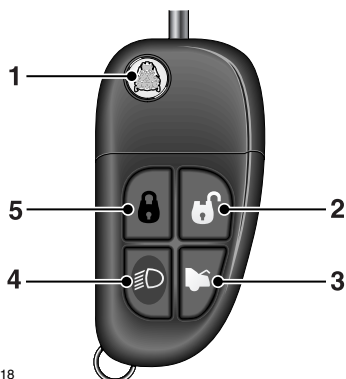

E86118

1. To release the key from the transmitter, press and release the release button. Press and hold the button and fold the key into the transmitter.
2. Unlocks and disarms the vehicle.
3. Releases the luggage compartment lock.
4. Activates the convenience headlamp feature or sounds the panic alarm.
5. Locks and arms the vehicle.
Press twice within three seconds to fold the door mirrors (with power fold option).

The security system is controlled remotely by a radio frequency, battery-operated, integrated transmitter key.

The transmitter is activated by pressing one of the operating buttons.

Note:


- The key transmitter may not operate correctly in areas which are subject to interference from other radio equipment operating on the same frequency. Interference may emanate from sources such as amateur radio, medical equipment, telecommunications devices and other remote controls or alarms. Where such interference is experienced, operate the key transmitter as close as possible to the vehicle, or use the key in the driver's door lock.
- All buttons on the key transmitter will not operate if a key is in the ignition switch, however, if the doors, hood or luggage compartment are open, only the lock button will not operate.

Each integrated key will operate all the locks on your vehicle.

Additional integrated key transmitters can be obtained from your Jaguar Dealer. See Additional keys on page 43.

Vehicle Security

Key transmitter battery renewal

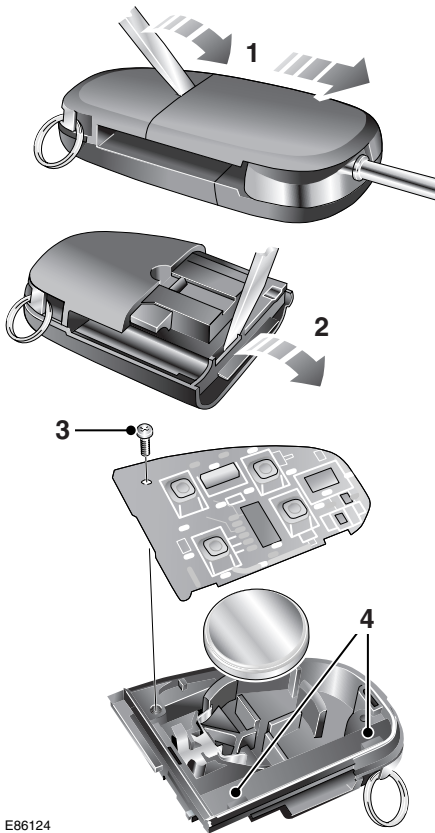

E86124

When the battery needs renewal there will be a significant decrease in the effective range of the key transmitter. To renew the battery:

- Insert a small, flat-blade, screwdriver at an angle of about 45 degrees, into the slot on the back of the key transmitter as shown (1). Apply light pressure to the screwdriver and lever the screwdriver forward to separate the two halves of the key transmitter. Finally, pull the transmitter from the key body.
- Insert the screwdriver into the slot between the transmitter covers adjacent to the key stowage area as shown (2). Apply light pressure to the screwdriver and lever the screwdriver downward to separate the covers.
- Unscrew and remove the small screw (3) and remove the printed circuit board, taking care not to touch the battery terminals. Remove the battery and dispose of it safely.
- Fit a new battery cell, type CR2032 (available from your Jaguar Dealer), with the side marked with the positive symbol (+) downwards in the battery receptacle. Avoid touching the new battery as moisture/oil from the fingers can reduce the life of the battery and corrode the contacts.
- Replace the printed circuit board making sure to engage the board under the securing tabs (4), and secure with the screw.
- Refit the cover and click into place with thumb pressure.
- Slide the transmitter back onto the key body until it clicks into place.

Vehicle Security

Care of key transmitters

The key transmitters must be treated with care. Do not expose to extremes of heat, dust, humidity or fluids. Do not leave the transmitter exposed to direct sunlight. The battery is the only serviceable part.

Caution: Should a key transmitter be lost, a new one can be obtained and programmed to the vehicle by a Jaguar Dealer, who will ask for proof of vehicle ownership. It is advisable to notify a Jaguar Dealer as soon as a key transmitter is lost or stolen and have the remaining key transmitter(s) reprogrammed. This will then prevent the lost or stolen key transmitter from being used to disarm and unlock the vehicle.

Note: Jaguar Dealers keep a log of all enquiries for replacement keys and notify Jaguar Cars Limited of any such requests.

RADIO FREQUENCY APPROVAL

The radio frequency remote system operates on a frequency subject to USA Federal Communications Commission (FCC) rules. The device complies with Part 15 of the FCC rules and RSS-210 of the industry Canada.

Operation is subject to the two following conditions:

1. The device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

The key transmitter radio frequency approval numbers for the USA and Canada are shown below:

USA - NHVB1U241.


Canada - 3495 103 2304.

Note: *The manufacturer is not responsible for any radio interference or TV interference caused by unauthorised modifications to this equipment. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.*

Caution: The key transmitter may suffer interference from other legal users of this radio frequency band, such as radio amateurs, medical equipment, remote controls or alarm systems. To lock or unlock the vehicle either use a key or operate the transmitter as close to the security antenna on the rear screen as possible.

Door Locks

LOCK THE VEHICLE AND SET THE ALARM

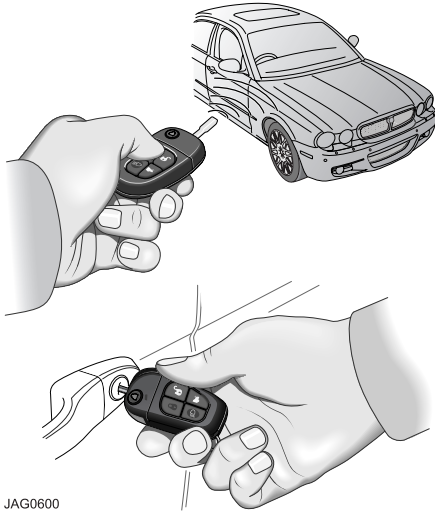

JAG0600

All doors can be centrally locked and unlocked remotely, using the key transmitter buttons.

Only the driver's door is equipped with an external key lock, which activates the central locking, double-locking (when enabled), two-stage unlocking (when enabled) and central unlocking (when enabled).

- Ensure windows and sunroof (if fitted) are fully closed.
- Press the lock button on the key transmitter, or;
- Put the key in the driver's door lock, turn the key towards the rear of the vehicle and release.

The direction indicators will flash once, and the security light (located on the top surface of the fascia) will start flashing. After 20 seconds, the alarm will be set.

If a door, the hood or the luggage compartment are open and an attempt is made to lock the vehicle, the direction indicators will flash five times (if enabled) and/or an audible warning will sound twice as a warning that the vehicle is not secure.

Note: The security system will not arm if a key is in the ignition switch. If a key is used in the driver's door key barrel and turned towards the front of the vehicle and released when an aperture is ajar, (2 error tones (if enabled), or five flashes of the direction indicators (if enabled) will be emitted). The security system will arm, but will not monitor the aperture that is ajar until it has been fully closed.

Drive-away door locking

With the ignition key at position **II** and all the doors closed, all doors will lock when the gear selector is moved from position **P** (Park) or **N** (Neutral). The gear selector has to be moved from **P** or **N**, and into a different gear, for longer than one second.

If the vehicle is stopped and a door is opened and subsequently closed, the doors will lock again when the gear selector is moved from position **P** or **N**, and into a different gear.


If the vehicle is stopped and a door is opened and subsequently closed, but the gear selector is not moved from position **P** or **N**, or the current gear position, the doors will remain unlocked.

All vehicles have the drive-away door locking feature installed during manufacture, except Japan.

This feature can be disabled, or reinstated, by a Jaguar Dealer, if required.

Door Locks

Central locking switch

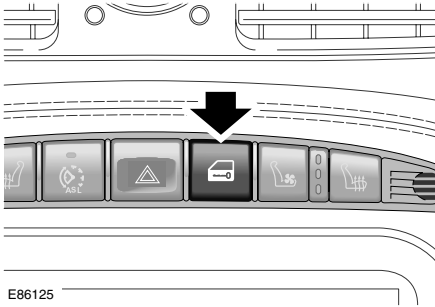

The ignition switch must be in either position **I** or **II** for the central locking switch to operate.

With all the doors closed and unlocked, one press of the switch will lock all of the doors and inhibit the luggage compartment.

With all the doors closed and locked, one press of the switch will unlock all of the doors and allow access to the luggage compartment.

If the vehicle is unlocked, press and hold the switch for more than two seconds to centrally lock the vehicle and close all the windows and sunroof (if fitted).

Releasing the switch will halt the operation of the windows and sunroof (if fitted).

If the vehicle is locked, press and hold the switch for more than two seconds to unlock the vehicle and open all the windows and sunroof (if fitted). Releasing the switch will halt the operation of the windows and sunroof (if fitted).

Note: All windows must be taught to the vehicle for this function to operate, see **To reset the window anti-trap system** on page 102.

If the central locking switch is pressed when the ignition switch is not in position **I** or **II**, the security system's inclination and intrusion sensors (if fitted) will not operate for one arming period. The security LED in the facia will flash for five seconds to indicate that this has occurred.



WARNING:

Make sure that all occupants are kept clear of the windows and sunroof aperture (if fitted).



WARNING:

When an interior door release lever is pulled, the door will unlatch.

After using the central locking switch, it may be necessary to press the switch again or pull a front door interior release lever to unlock the vehicle.

Smart locking

This feature helps prevent locking the key in the vehicle.

If a front or rear door is open or ajar and an attempt is made to lock that door using the interior locking lever, the locking lever is prevented from moving to the locked position. No locking will be made.

If an attempt is made to lock the vehicle using a closed front door interior locking lever and any other door is open, all doors will centrally lock and then unlock.

If an attempt is made to lock the vehicle using a closed rear door interior locking lever and any other door is open, only that door will lock; all other doors remain unlocked.

Door Locks

If a door, the hood or the luggage compartment is open, the vehicle can only be locked from the outside by using a key in the driver's door lock.

Note: *An audible and/or visual error warning will be given.*

It will not be possible to lock the vehicle with a key transmitter if a door, the luggage compartment or the hood is open, or a key is left in the ignition.

Global closing



WARNING:

Ensure that no children, pets, or obstructions are in any open aperture before operating global closing. Safety mechanisms are in place to prevent serious injury, however, injuries can still occur.

Key in the driver's door - Turn and hold the key towards the rear of the vehicle, for more than 2 seconds duration, to close all the electrically operated windows and sunroof (if fitted). If the key is released, the global closing action stops immediately.

UNLOCKING THE VEHICLE

Using a Key Transmitter

Press the unlock button on the key transmitter.

Single-stage unlocking

This unlocks all doors, the luggage compartment, the interior lamps turn on and the security LED stops flashing. The direction indicators will flash twice to indicate that the system is disarmed.

Two-stage unlocking

The first press of the unlock button:

- Unlocks the driver's door.
- Enables the luggage compartment to be opened using the exterior release button.
- Turns on the interior lamps.

This will also disarm the system if it was armed, the direction indicators will flash twice and the security LED stops flashing.

A second press is required to unlock all doors (Jaguar Dealer programmable or key transmitter selectable).

Using a Key

Single-stage unlocking

Put the key in the driver's door lock, turn the key towards the front of the vehicle and release. This will:

- Unlock all doors.
- Enables the luggage compartment to be opened using the exterior release button.
- Turns on the interior lamps.

The direction indicators will flash twice and the security LED will stop flashing.

Door Locks

Two-stage unlocking

Put the key in the driver's door lock, turn the key towards the front of the vehicle and release. This will unlock the driver's door, the luggage compartment is un-inhibited, and turn on the interior lighting. This will also disarm the system if it was armed, the direction indicators will flash twice, and the security LED will stop flashing.

Turning the key towards the front of the vehicle a second time will unlock all the remaining doors.

Selecting single-stage or two-stage unlocking

The procedure for changing from single stage to two stage unlocking (if enabled), or vice versa, is as follows:

- Press and hold the lock and unlock buttons on the key transmitter simultaneously for four seconds.

Note:

- *The direction indicators will flash twice to confirm the action.*
- *To revert to the previous condition, repeat the procedure described above.*
- *For operation of the two stage unlocking feature when the vehicle is equipped with a touch-screen, please refer to the touch-screen display handbook.*

Global Opening

Key in the driver's door - Turn and hold the key towards the front of the vehicle, for more than two seconds duration, to open all the electrically operated windows and sunroof (if fitted). If the key is released, the global opening action stops immediately.

Key transmitter - Press and hold the unlock button for longer than two seconds to open all the electrically operated windows and sunroof (if fitted – one shot operation). Pressing any button again while global opening is taking place will stop all movement.

Auto-relocking

This feature automatically centrally locks and arms the vehicle (if security and auto-relock are enabled) if the vehicle has been unlocked with the key transmitter having been previously locked (double-locked) and the security system armed:

- and no door, hood or luggage compartment has been opened in the last 45 seconds after the remote unlock operation or,
- if the ignition remains off for 45 seconds after the remote unlock operation.


Note: *This feature is disabled at the factory, but can be enabled or disabled, by a Jaguar Dealer, as required.*

Direction Indicator Unlock Alerts

The exterior direction indicators give two flashes as unlocking takes place.

Door Locks

INTERNAL DOOR LOCKING AND UNLOCKING

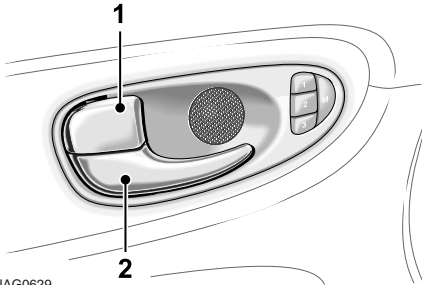

JAG0629

To centrally lock all doors, press the lock lever (1) on the driver's or front passenger's door.

To unlock a front or rear door, pull the release handle (2) or the lock lever (1).

To unlock and open a rear door, pull the lock lever (1) then pull the release lever (2).

To open any unlocked door, pull the release handle (2).

The driver's or front passenger's door lock lever will unlock all doors.

Note: Operating the locks more than 15 times within 20 seconds will prevent the central locking from being used for 20 seconds. If required, the locks may be operated individually during the 20 second waiting period.

VALET KEY LOCKING



JAG0722

Before locking the vehicle and handing the **green-headed valet key** to a parking attendant, press the valet switch to inhibit the luggage compartment interior release switch, external luggage compartment switch, and the glove compartment switch. When the valet switch is pressed an audible valet mode chime will be emitted.

If the key is in ignition position **II** when the valet mode switch is pressed, the **VALET MODE** message will be displayed on the message centre.

The vehicle can then be parked by an attendant who can lock the vehicle after parking, but cannot open the luggage compartment or glove compartment.

The luggage compartment can then only be unlocked with the key transmitter. To cancel valet mode, operate the key transmitter unlock button, or, manually unlock the luggage compartment with the key transmitter using the luggage compartment release key lock.

Door Locks


When in valet mode, each operation of the interior luggage compartment release switch, exterior luggage compartment switch or the glove compartment switch, will result in a chime being emitted which indicates that valet mode has been selected. If the ignition is set to position II a message will appear on the message centre display indicating that an unauthorised attempt has been made to open the glove compartment or luggage compartment.

Note:

- *Do not use the green-headed key for normal driving as the luggage compartment and glove compartment cannot be opened.*
- *If the vehicle alarm system is armed and the luggage compartment is opened using the key transmitter, the alarm will not sound. The system will be rearmed when the lid is closed, provided the vehicle has not been disarmed.*
- *Neither the luggage compartment lid release switch on the facia switchpack nor the lid release button will operate when the vehicle is armed, or in valet mode. An attempt to operate these switches whilst in valet mode will result in an audible warning chime.*
- *Operating the internal, external or remote luggage compartment switches more than 15 times within 20 seconds, or opening and closing the luggage compartment will cause opening to be inhibited for 20 seconds. Should this happen wait 20 seconds for normal operation to resume. If required, the luggage compartment may be opened by using the key during the 20 second waiting period.*

Door Locks

CHILD SAFETY LOCKS

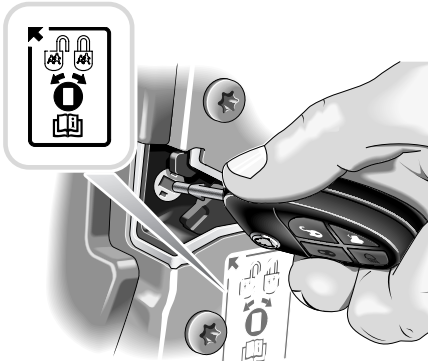

E86300

Child safety locks are fitted to the rear doors.


Open a rear door, insert the ignition key into the lock and turn the key outwards. This immobilises that door interior handle. Repeat this for the opposite rear door.

After setting the child lock, the door(s) can only be opened using the exterior door handle.

To remove the child lock feature, open the door and using a key, move the control to its original unlock position.

Luggage Compartment

LUGGAGE COMPARTMENT LOCKS

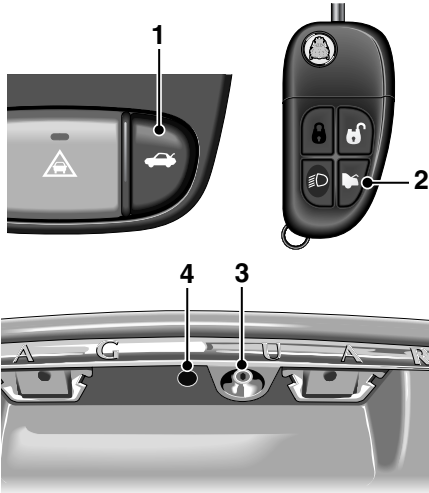

E86128

The luggage compartment is locked and unlocked electrically in conjunction with the doors.

Neither the luggage compartment lid release switch on the facia nor the lid release button will operate whilst the vehicle is armed or in valet mode. An attempt to operate these switches whilst in valet mode will result in an audible warning chime.

To open the luggage compartment, use any of the methods that follow:


- Press the luggage compartment lid release switch (1), which is located on the facia switchpack. This switch will not operate if the vehicle speed exceeds 8 km/h (5 mph).
- Press the luggage compartment button (2) on the key transmitter (see the Note following).

Note: Button (2) will only operate with the gear selector in **P**.

- Insert a key into the luggage compartment lock (3), however, opening with the key when the vehicle is armed will cause the alarm to sound immediately. Should this occur, press the transmitter unlock button, or place the key in the ignition, to disarm the alarm system.
- With the vehicle unlocked, press the release button (4) on the luggage compartment lid. The button will not operate unless **P** or **N** has been selected and the vehicle is unlocked.
- The luggage compartment locks automatically when the lid is closed.

Luggage Compartment

LUGGAGE COMPARTMENT EMERGENCY RELEASE

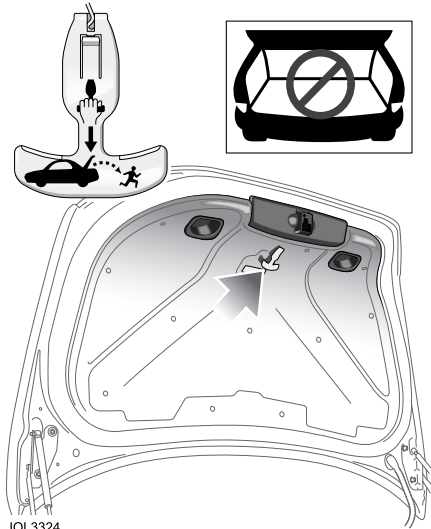

Your vehicle is equipped with a mechanical interior luggage compartment release handle that provides a means of escape for children and adults in the event they become locked inside the luggage compartment.

Adults are advised to familiarise themselves with the operation and location of the release handle.

The T- shaped handle is located on the luggage compartment door lid.

To open the luggage compartment lid from the inside, pull the illuminated T- shaped handle and push up the trunk lid. The material that the handle is made of will glow for hours in the darkness of the luggage compartment following brief exposure to ambient light.

Ensure that the T- shaped handle is firmly returned to its stowed position after use.



WARNING:

Keep vehicle doors and the luggage compartment locked and keep keys out of a child's reach. Unsupervised children could lock themselves in an open trunk and risk injury. Children should be taught not to play in vehicles.



WARNING:

On hot days, the temperature in the luggage compartment and vehicle interior can rise very quickly. Exposure of people or animals to these high temperatures for even a short time can cause death or serious heat-related injuries, including brain damage. Small children are particularly at risk.

Alarm Systems

AUDIBLE SIGNALS

Note: *In certain countries, legislation prohibits the use of audible confirmation signals. In such cases, the sound source has been removed from the system.*

Two audible signals will be heard (if enabled) if an attempt is made to lock the vehicle with a key in the driver's door lock barrel or the lock button is pressed on the key transmitter; if a door, the hood or the luggage compartment is not fully closed, or a key is in the ignition switch.

The full alarm will activate, as previously described, unless the security system is disarmed, either by pressing the unlock button on the key transmitter, or by placing a valid key into the ignition switch and turning the key to position **II**.

An audible signal will sound when:

- The valet switch is pressed with the luggage compartment closed.
- The vehicle is in valet mode and the interior/luggage compartment release button, or glove compartment switch is pressed.
- A door is opened if the vehicle is passively armed. This mode can be cancelled by disarming the security system, using the key transmitter, by turning the key in the ignition switch to position **II**, or, by turning the key in the driver's door lock barrel towards the front of the vehicle.

FULL ALARM

Once armed, any of the following circumstances will create a full alarm state, sound the horns, sound the siren, or a combination of both (as country legislation dictates) and flash the direction indicators:

- Opening a door, luggage compartment lid (except with transmitter) or hood.
- Movement in the passenger area (if intrusion sensors are fitted).
- Using a key in the ignition switch which is not programmed to the vehicle.
- An attempt to lift, or tow the vehicle (when inclination sensor fitted).
- The vehicle battery is disconnected and the vehicle is fitted with a Battery Backed Sounder (only Battery Backed Sounder will be audible).
- If, after 15 seconds (passively armed), from opening the driver's door with a key (as country legislation dictates), the key is not inserted into the ignition switch and turned to position **II**, or a passenger door is opened before the driver's door.
- If, after seven seconds (actively armed), from opening the driver door with a key (as regional legislation dictates) the key is not inserted into the ignition and turned to position **II**, or a passenger door is opened before the driver's door.
- Any attempt is made to remove the radio or the front navigation system (if fitted).

Alarm Systems

- Pressing the headlamp convenience button on the remote transmitter three times within three seconds activates the panic alarm (if enabled).

HEADLAMP CONVENIENCE

One press of the headlamp convenience button switches the headlamps on for 25 seconds, or until the headlamp convenience button is pressed for a second time, or until a valid key is inserted into the ignition switch.

ERROR AUDIBLE SIGNALS

Two audible signals will be heard whenever one of the following conditions are present:

- If any door is open when an attempt is made to lock the vehicle.
- The luggage compartment or the hood is not properly closed when an attempt is made to lock the vehicle.
- A key is present in the ignition switch and a button on the transmitter is pressed.

See **Direction Indicator Unlock Alerts** on page 50 for the Notes regarding error signals during failure of intrusion sensor (if fitted), and inclination sensor (if fitted).

Note: *The error audible signal can be disabled and the direction indicator flash option can be enabled (and vice versa) by a Jaguar Dealer.*

ERROR FLASH SIGNALS

The direction indicators will flash five times whenever one of the following conditions are present:

- The luggage compartment or hood are not fully closed when an attempt is made to lock the vehicle.
- If any door is open when an attempt is made to lock the vehicle.
- A key is present in the ignition switch.

See **Direction Indicator Unlock Alerts** on page 50 for the Notes regarding error signals during failure of intrusion sensor (if fitted), and inclination sensor (if fitted).

Alarm Systems

SECURITY FEATURES

The security system has been designed for:

- Prevention of theft of the vehicle.
- Prevention of theft of items from the vehicle.
- Personal security.

The security system is integrated with the vehicle electronics and engine management systems making it far more difficult for a thief to penetrate and steal the vehicle.

Panic alarm

When in or near the vehicle, the alarm can be set off to deter a possible offender. For this feature to operate, the key must not be in the ignition switch.

Pressing the headlamp convenience/panic button on the key transmitter three times within three seconds will activate the panic alarm.

The alarm is stopped by putting the key into the ignition switch and turning to position **II**.

Note:

- *The key transmitter cannot be used to cancel the panic alarm. This prevents unauthorised cancellation in an emergency.*
- *The panic alarm feature can be enabled or disabled by a Jaguar Dealer.*
- *The vehicle locking status will not change when the panic alarm is activated.*

Passive arming

Caution: Passive arming will not lock the doors, it only arms the security alarm system.

Passive arming, if enabled by a Jaguar Dealer, will automatically arm the vehicle alarm system 30 seconds after the last protected entry (door, luggage compartment) is closed following the key being removed from the ignition switch.

When passive arming occurs, the direction indicators will flash once and a single tone will be heard (when enabled). The red security light on the fascia will start to flash and will continue for as long as the alarm is armed.

Opening the driver's door causes a warning sound which continues for 15 seconds before the system goes into the full alarm state. If any other door is opened before the driver's door, the system goes into the full alarm state immediately.

When the system is passively armed and a black-headed, or integrated key is used to open the trunk, full alarm is activated.

If the system has been passively armed it can be disarmed by either using the key transmitter, by switching the ignition to position **II**, or by unlocking the driver's door with the key.

Note: *The security system will not passively arm if a key is in the ignition switch or if any protected entry is open.*

Battery reconnection

If the battery has been disconnected and is subsequently reconnected, the alarm system will resume the same state as before the battery was disconnected.

Alarm Systems


If the alarm was sounding when the battery was disconnected, it will sound again when the battery is reconnected if the trigger that caused the alarm is still active (a door ajar, for example) and to disarm the vehicle will need:

- The transmitter unlock button to be pressed, or
- A key placed in the ignition switch and turned to position II, or
- The driver's door to be unlocked with a key.

If the trigger is no longer active (the door is now fully closed) the alarm will not sound.

Garage Door Opener

INTRODUCTION

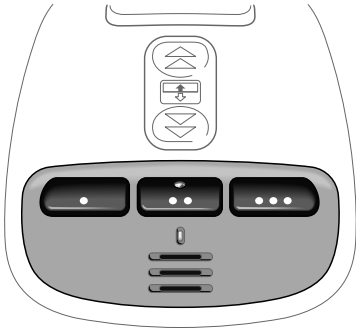

JOL2373

The garage door opener transceiver is located in the overhead console. The transceiver can be programmed to transmit the radio frequencies of up to three different transmitters used to activate garage doors, entry gates, home lighting, security systems, or other radio frequency operated devices.

Although this section mainly describes the procedures for the garage door opener, it also equally applies to the previously mentioned applications. In some countries this feature is also known as HomeLink® Universal Transceiver.



WARNING:

Do not use the transceiver with any garage door opener that lacks the safety stop and reverse feature as required by safety standards. A garage door opener which cannot detect an object, signalling the door to stop and reverse, does not meet current safety standards. Using a garage door opener without these features increases risk of serious injury or death.



WARNING:

When programming the transceiver to a garage door opener or entry gate, make sure that people, the vehicle and objects are out of the way to prevent potential harm or damage as the gate or garage door will activate during the programme.

Note: *This device may suffer from interference if operated in the vicinity of a mobile or fixed station transmitter. This interference is likely to affect the hand-held transmitter as well as the in-car transceiver.*

For information, or for assistance, contact your Jaguar Dealer or the supplier by phone or via the internet (see page 63).

Garage Door Opener

BEFORE PROGRAMMING

Caution: When programming a garage door opener or entry gate that may require you to press and re-press the hand-held transmitter (cycle), unplug the device during the cycling process to prevent possible motor failure.

It is recommended that for best results, fit a new battery to the hand-held transmitter of the garage door opener (or other device) before programming. If your garage door opener receiver (located in the garage) is equipped with an antenna, ensure that the antenna is hanging straight down.

TO ERASE ALL PROGRAMMING


For first time programming, ensure that the engine is switched off:

1. Turn the ignition switch to position I.
2. Press and hold the two outer buttons on the garage door opener in the overhead console. Keep the buttons pressed, the indicator light will illuminate. The indicator light is part of the middle button in the garage door opener in the overhead console.
3. Release the buttons when the lights begin to flash (this will take approximately 20 seconds).

All memories in the garage door opener have now been cleared.

Note: Do not perform this procedure when programming the additional garage door opener buttons.

PROGRAMMING THE VEHICLE

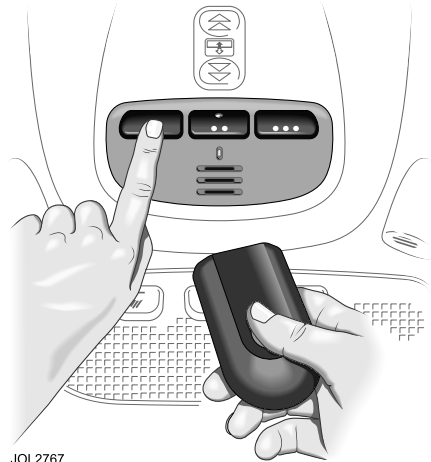

JOL2767

Ensuring that the engine is switched off:

1. Turn the ignition switch to position I.
2. Hold the end of the original garage door opener hand-held transmitter approximately 50 mm to 150 mm (2 to 6 inches) away from the transceiver in the overhead console, keeping the indicator light in view.
3. Using both hands, simultaneously press and hold both the desired garage door opener button on the overhead console and the hand-held transmitter button. Keep both buttons pressed. The light will flash, slowly at first and then change to a fast flash. When the indicator light flashes rapidly, release both buttons. The rapid flashing light indicates successful programming.

Garage Door Opener

4. If, after 60 seconds, the indicator light does not flash rapidly, release both the transceiver and the hand-held transmitter buttons and repeat the procedure starting with Step 2. However, position the hand-held transmitter at a different angle and/or distance.
5. Press and hold the programmed overhead console garage door opener button and observe the indicator light:
 - If the indicator light is solid/continuous, programming is complete. Your device should activate when the garage door opener button is pressed and held for one to two seconds and then released.
 - If the indicator light blinks rapidly for two seconds and then turns a solid/continuous light, proceed with the following programming instructions for rolling code device equipment.

Note: To programme additional garage door opener buttons, begin at Step 2.

Rolling code device equipment programming

Note: A second person may make the following steps quicker and easier as once the button has been pressed there are 30 seconds only in which to complete Step 3.

1. At the garage door opener receiver (motor head unit) in the garage, locate the **learn** or **smart** button/switch. The name of the button/switch may vary between manufacturers.
2. Press and release the learn or smart button.

3. Return to the vehicle and firmly press and hold the programmed garage door opener button for two seconds and release.
4. Repeat the press/hold/release sequence three times to complete the learning/training process.

The garage door opener in the overhead console should now activate the rolling code device.

Reprogramming a single garage door opener button

To programme a device to a previously trained button:

1. Press and hold the desired pre-programmed garage door opener button for at least 20 seconds, but no longer than 30 seconds, until the indicator light begins to flash.
2. Without releasing the overhead console button, position the hand-held transmitter approximately 50 mm to 150 mm (2 to 6 inches) away from the transceiver in the overhead console, keeping the indicator light in view.
3. Carry out Step 3 of programming the vehicle, see page 61.

Entry gate/Canadian programming

The technology of some entry gates requires you to press and re-press (cycle) the hand-held transmitter every two seconds during programming.

Continue to press and hold the desired overhead console button while you cycle your hand-held transmitter until the indicator light flashes rapidly.

Garage Door Opener

INFORMATION AND ASSISTANCE

For information on the range of available compatible products or accessories, or for assistance, contact your Jaguar Dealer.

You can also contact the supplier's helpline on 1-800-355-3515 or the website address for Homelink™ is www.homelink.com.

Note: *Keep the original transmitter for future use or programming procedures if, for example, you purchase a new vehicle.*

Caution: **It is recommended that when you sell or dispose of the vehicle, the programmed transceiver buttons be erased for security purposes.**



WARNING:

The manufacturer is not responsible for any radio or TV interference caused by unauthorised modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Occupant Protection

SEAT BELTS



WARNING:

Seat belts are designed to bear upon the bony structure of the body, and should be worn low across the front of the pelvis or the pelvis, chest and shoulders, as applicable; wearing the lap section of the belt across the abdominal area must be avoided.



WARNING:

Seat belts should be adjusted as firmly as possible, consistent with comfort, to provide the protection for which they have been designed. A slack belt will greatly reduce the protection afforded to the wearer.



WARNING:

Care should be taken to avoid contamination of the webbing with polishes, oils and chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.



WARNING:

The belt should be replaced if webbing becomes frayed, contaminated or damaged.



WARNING:

It is essential to replace the entire assembly after it has been worn in a severe impact even if damage to the assembly is not obvious.



WARNING:

Belts should not be worn with the straps twisted.



WARNING:

Do not carry hard, fragile, or sharp items between your person and the seat belt. In an impact the pressure from the seat belt on such items can cause them to break, which in turn may cause death or serious injuries.



WARNING:

Each belt assembly must only be used by one occupant; it is dangerous to put a belt around a child being carried on the occupant's lap.



WARNING:

The occupants of the front seats should not travel with the seat back at more than 30 degrees from upright. Doing so will reduce the protection afforded by the seat belt.

Seat belt safety

The use of front and rear seat belts is mandatory in most countries. Using seat belts saves lives. They should be worn by all occupants, whenever the vehicle is in use, for maximum protection.

Lap/shoulder inertia reel seat belts are provided for both front occupants and three rear seat positions.

Occupant Protection

The inertia operating mechanism of the seat belts allows the wearers to move their upper bodies to reach various controls. The seat belts lock automatically with accelerated body movement or in the event of emergency braking.

The seat belt assemblies incorporate additional safety devices. All have belt pretensioners and the front belts also have force limiters. These devices provide increased protection in the event of a severe frontal impact.

The pretensioners operate with the air bags as part of the Advanced Restraints Technology System (ARTS). See **RESTRAINTS SYSTEMS** on page 70.

Comfort belts are fitted to both individual electrically operated rear seats. They are also fitted to the outer seats only on the electrically operated rear bench seat.

These belts incorporate a twin tension facility. When the belt is buckled around the occupant, a reduced tension is applied to provide a more comfortable fitting. When the belt is unfastened, a higher tension is applied to allow it to retract correctly.



WARNING:

Seat belts should be worn by all vehicle occupants, for every journey no matter how short. Failure to do so will greatly increase the risk of death or serious injury in the event of an accident.



WARNING:

No modifications or additions should be made by the user which will either prevent the seat belt adjusting devices from operating to remove slack, or prevent the seat belt assembly from being adjusted to remove slack.

A slack seat belt offers a greatly reduced level of occupant protection in an impact.



WARNING:

If any damage, wear, cuts, defects, or impaired operation are noted with the seat belts, the vehicle should be taken to a Jaguar Dealer for immediate attention. Do not use the vehicle if the seat belts cannot be operated correctly.



WARNING:

When using seat belts to restrain items other than occupants, take care to ensure that the belts are not damaged, or exposed to sharp edges.



WARNING:

Care must be taken to avoid contaminating the seat belt webbing, and seat belt mechanisms with any chemicals, liquids, grit, dirt, or cleaning products. If the seat belts do become contaminated they should be replaced immediately. Contaminated seat belts may not operate correctly in an impact and cannot be relied upon.

Occupant Protection

Seat belt checks

Note: *If the vehicle is parked on an incline, the seat belt mechanism may lock. This is not a fault, and the belt should be gently eased out from the upper anchorage.*

The seat belts should be inspected regularly to check for fraying, cuts, or wear to the webbing, and the condition and security of the mechanism, buckles, adjusters, and mounting points.

Checks

- With the seat belt fastened, give the webbing near the buckle a quick upward pull. The buckle must remain securely locked.
- With the seat belt unfastened, unreel the seat belt to the limit of its travel. Check that it unreels smoothly with no snatches or snags. Allow the belt to fully retract, again checking for smooth operation.
- Partially unreel the seat belt, then hold the tongue plate and give a quick forward pull. The mechanism must lock and prevent any further unreeling.

If any of the seat belts fail to meet those criteria, immediately contact your Jaguar Dealer.

Beltminder

The Beltminder feature is a supplemental warning to the seat belt warning function, see page 115. This feature provides additional reminders to the driver that the driver's and/or front passenger's seat belt is unbuckled by intermittently sounding a chime and illuminating the seat belt warning indicator in the instrument panel.

Note: *Not all countries have the warning chime.*

Note: *Objects placed on the front passenger seat may activate the seat belt reminder warning chime and indicator. It is recommended that any objects placed on the front passenger seat are secured using the seat belt.*

Occupant Protection

Seat Belt Fitting



JOL3029



WARNING:

Do not adjust the seat belt while driving.

Draw the tongue of the seat belt over the shoulder, across the chest and push it into the buckle unit slot. A positive 'click' indicates that it is safely locked.

Comfort clips or devices that create slack in the seat belts are not recommended.

Ensure that the webbing is midway between the neck and the edge of the shoulder. Correct tension is controlled by automatic retraction of the reel.

A warning indicator on the instrument panel is illuminated when the driver's seat belt is not fastened. (In some countries a warning signal sounds for six seconds).


Note: *If the vehicle is parked on unlevel ground, the seat belt mechanism may lock. This is not a fault, allow the seat belt to retract a small amount before gently easing the belt from its attachment to unlock it.*

To release the seat belt, press the red button.

Note: *When releasing the seat belt it is advisable to hold the belt before pressing the release button. This will prevent the belt from retracting too quickly.*

Occupant Protection

Front belt height adjustment

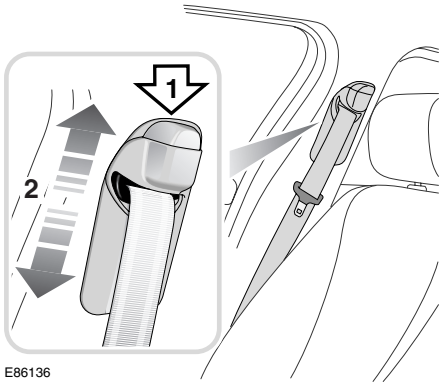

WARNING:


Correct seat belt adjustment is essential for safety and comfort. Ensure that the height is correctly adjusted and the mechanism is locked in place before driving the vehicle. Do not attempt to adjust the seat belt height once the vehicle is in motion. Doing so may cause you to lose control of the vehicle, or incorrectly adjust the seat belt.

To adjust the front seat belt heights, press the locking button (1) and slide the anchorage (2) so that the seat belt webbing passes over the shoulder without pulling against the neck. Release the button and check that the anchorage point is locked.

Always check the anchorage point after the seat has been adjusted to ensure that the belt is correctly positioned.


Seat Belt Clip

A clip is fitted to the seat belt for easier access to the tongue. This clip prevents the tongue from sliding down the seat belt to the side of the seat when the belt is undone, retaining it higher up the belt nearer to the shoulder.

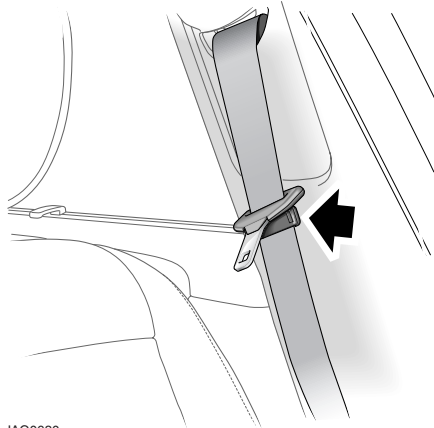

It is important that when the belt is fitted around the lap and over the shoulder that any slackness (as shown in the next column) in the portion of belt over the lap is removed.

Occupant Protection

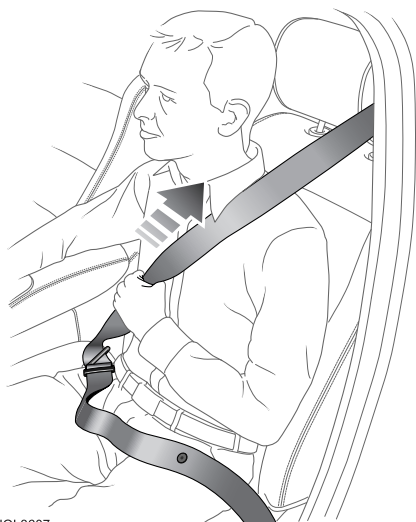

JOL3607


If the belt has any slack in the lap strap this must be removed by pulling firmly upwards on the shoulder strap of the seat belt thus tightening the belt and safely securing the occupant.



WARNING:

Do not use the belt clip to introduce slack into the seat belt. To be fully effective, the seat belt must remain in full contact with the body at all times.

Pregnant Women

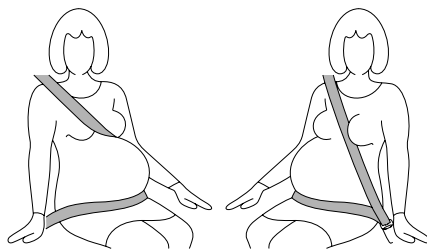

WARNING:

Position the seat belt correctly for the safety of the mother and unborn child. Never wear just the lap strap, and never sit on the lap strap whilst using just the shoulder strap. Both of these actions are extremely dangerous, and may increase your risk of serious injury in the event of an accident or during emergency braking.



WARNING:


Never place anything between you and the seat belt in an attempt to cushion the impact in the event of an accident. It can be dangerous, and will reduce the effectiveness of the seat belt in preventing injury.

Position the lap strap comfortably across the hips beneath the abdomen. Place the diagonal part of the seat belt between the breasts and to the side of the abdomen. Ensure that the seat belt is not slack or twisted.

Occupant Protection

RESTRAINTS SYSTEMS

Advanced Restraints Technology System (ARTS)

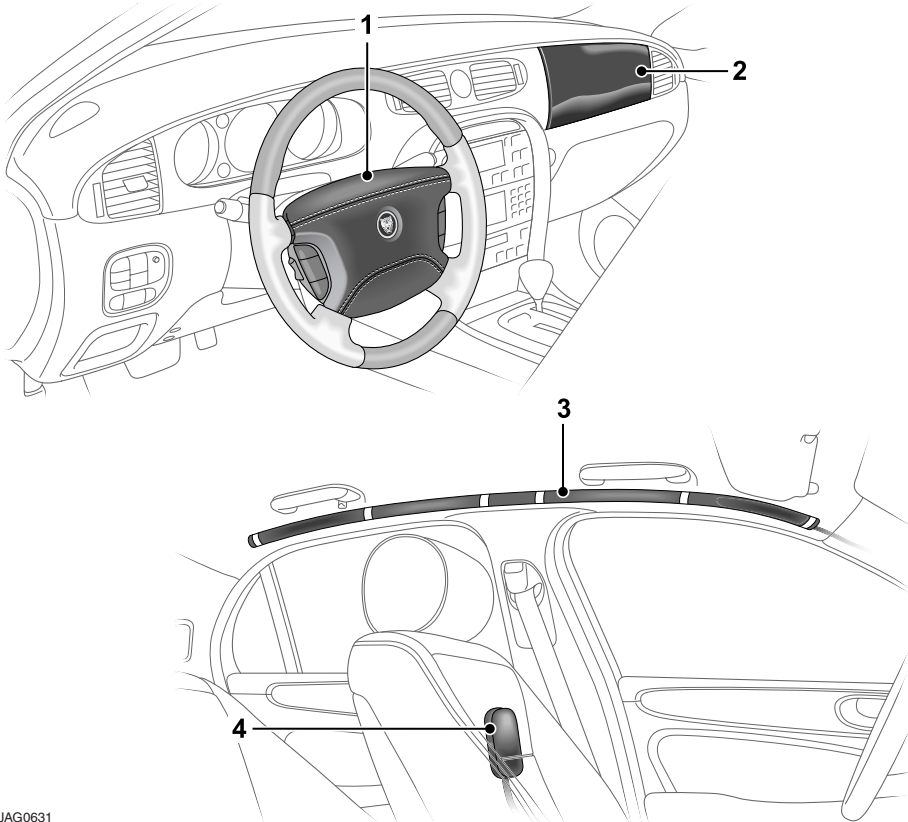

JAG0631

In order to provide optimum protection this vehicle is equipped with front, side and curtain air bags. They are used in conjunction with the seat belts to help protect occupants from upper body (thorax) and head injuries.

1. The driver front air bag is located in the centre of the steering wheel.
2. The front passenger air bag is located in the facia panel immediately in front of the passenger seat.
3. Curtain air bags are fitted on each side, above the front and rear doors.
4. Thorax and pelvis side air bags are fitted within the outboard bolsters of both front seats, and are identified by labels.

Occupant Protection



WARNING:

High speed impacts may cause serious injury or death irrespective of safety features fitted to a vehicle. Always drive with caution and consideration for the vehicle's characteristics, road and weather conditions, and do not exceed any speed limits in force.



WARNING:

Seat belts should be worn at all times, by the driver and passengers in all seating positions. The air bag SRS cannot provide protection in some types of impact. Under these circumstances the only protection will be provided by a correctly worn seat belt.



WARNING:

Air bags inflate at high speeds, and can cause injuries. To minimise the risk of injury, ensure that all vehicle occupants wear correctly positioned seat belts, sit correctly in the seats, and position the seats as far back as practical.



WARNING:

Ensure that a gap is maintained between the side of the vehicle, and the head and torso. This will enable unobstructed inflation of the curtain, and seat mounted side air bags.




WARNING:

Air bag inflation takes place instantaneously, and cannot protect against the effects of secondary impacts. Under these circumstances the only protection will be provided by a correctly worn seat belt.



WARNING:

Phone systems should only be installed by qualified persons familiar with the operation of, and requirements for, vehicles fitted with SRS. If you are in any doubt, seek advice from your Jaguar Dealer.

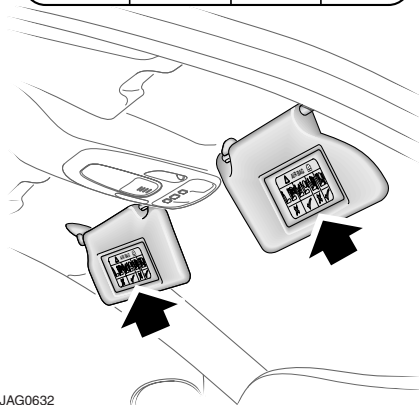

JAG0632

Air bag warning information is printed on the driver's and passenger's sun visor.

Occupant Protection

The air bags and seat belt pretensioners are electrically controlled by an advanced restraints technology system.

Both front air bags use a dual inflation technology. When activated, the bag(s) will deploy at either a normal or reduced level of inflation, depending on crash severity. The lower inflation level is also selected if the restraint system senses that the seat occupant is too close to the air bag.

Various sensors determine the direction and severity of an impact and the presence and position of front seat occupants.

The system analyses this information then deploys the appropriate air bags only e.g. the side air bags where the impact is on that side only.

Air bags are not deployed in a rear impact.



WARNING:

For the air bags to operate correctly the roof lining and door post trims must be in good condition, correctly fitted, and free from obstruction. Any damage, wear, or incorrect fitment should be referred to your Jaguar Dealer as soon as possible for examination and repair.



WARNING:

Do not allow passengers to obstruct the operation of the air bags by placing any part of their person, or any objects, in contact with, or close to, an air bag module. Air bags deploy at very high speeds, and can cause serious injury or death if objects or occupants are within the area of deployment.

Disability modifications

Occupants with disabilities that may require the vehicle to be modified, must contact a Jaguar Dealer before any modifications are made.

Air bag fault warning indicator



The air bag warning indicator in the driver's instrument panel will be lit for approximately six seconds when the ignition is turned on.

If the indicator remains on or flashes, it indicates a fault within the air bag electrical circuits. Report the fault to a Jaguar Dealer immediately. It is safe to drive the vehicle; however, in an accident the air bags may not operate.

The following components are monitored by the air bag system:

- Driver's and passenger's dual stage air bag
- Driver's and passenger's side thorax air bag
- Driver's and passenger's pre-tensioner
- Driver's and passenger's side crash sensor - 4 off
- Passenger's seat occupancy sensor
- Restraint control module



WARNING:

If the warning indicator signals that a fault is present in the system, do not use a child restraint on the front passenger seat. Doing so will increase the risk of death or serious injury to the child.

Air bag warning indicator information is shown on page 117.

Occupant Protection

Air bag deployment

To do their life-saving job, air bags must inflate rapidly and with considerable force. There is therefore a risk of death or serious injuries such as fractures, facial and eye injuries or internal injuries, particularly to occupants who are not properly restrained by seat belts or sitting correctly when the air bag deploys.

The risk of injury from a deploying air bag is greatest close to the trim covering the air bag.

The whole sequence of events from sensing the impact to full inflation of the bag takes place in a fraction of a second.

The noise and gas associated with the deployment of the air bags is not injurious to health.

After air bag deployment, it is normal to notice a smoke-like, powdery residue or smell the burnt propellant. This may consist of cornstarch, talcum powder or sodium compounds that result from the combustion process that inflates the air bag.

Small amounts of other chemicals may be present which may irritate the skin and eyes, but none of the residue is toxic.

While the system is designed to help reduce serious injuries, it may also cause minor burns, abrasions, swelling or temporary hearing loss.



WARNING:

Safety experts recommend a minimum distance of at least 254 mm (10 inches) between an occupant's chest and a front air bag.



WARNING:

No objects whatsoever should be attached to the centre cover of the steering wheel, the passenger facia panel, the sides of the front seats or the interior trim immediately above the door openings. Do not put anything on or over the air bag inflation area. Placing objects on or over the air bag inflation area may cause those objects to be propelled by the air bag into your face and torso causing serious injury.



WARNING:

Do not try to put an adult seat belt around two children.



WARNING:

Children 12 years old and younger can be killed or seriously injured by the air bag. The rear seat is the safest place for children.



WARNING:

Several air bag system components get hot after inflation. Do not touch them after they have deployed.



WARNING:

If an air bag is inflated, the air bag will not function again and must be renewed immediately. If a new air bag is not fitted, the unrepaired area will increase the risk of injury in a collision.

Occupant Protection

Air bag deployment effects



WARNING:

When an air bag inflates a fine powder is released. This is normal, and not an indication of a malfunction. However, the powder may cause irritation to the skin, and should be thoroughly flushed from eyes, and any cuts or abrasions.



WARNING:


After inflation some air bag components are at high temperatures. To prevent injury, do not touch the air bag components until they have cooled.



WARNING:

In order to react with sufficient speed, air bags are deployed by an explosive charge. Consequently air bag deployment is accompanied by a very loud noise which may cause discomfort and temporary loss of hearing.

Front protection

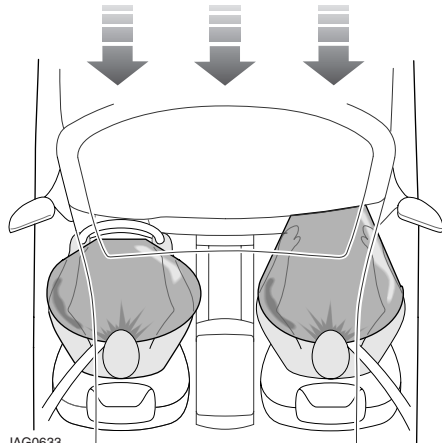

JAG0633


With a front impact of sufficient force, the restraints system will trigger the front air bag(s) and seat belt pretensioners, which immediately tighten the seat belts.

For front occupants, the seat belt then slackens with increasing chest load, allowing the head and chest to more gradually come into contact with the inflated air bag. The air bag absorbs the remaining energy of the impact and then deflates rapidly via vent holes.

Front air bags are designed to inflate in frontal and near-frontal collisions, not low speed impacts, roll-over, side impact or rear impact.

Occupant Protection

Side protection

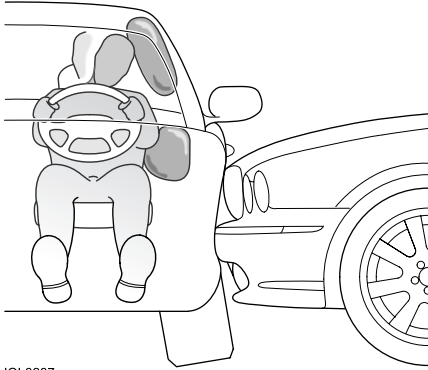

JOL3287

The side protection system utilizes four air bags: Two mounted in the front seats, and two curtain air bags located just above the front and rear door openings, under the headlining trim.

When the seat mounted thorax and pelvis air bag inflates upon a vehicle side impact, it breaks through the seat bolster stitching, protecting the side of the rib cage and pelvis of the driver or front seat passenger.



When the curtain air bag inflates upon a vehicle side impact, it breaks through the headlining and deploys downwards, giving head protection to the front and rear seat occupants on the impact side.

The curtain air bag on the front passenger side is always deployed in a side impact even if the front passenger air bags are de-activated. This is to maintain protection for a rear occupant.

Seat mounted thorax and curtain air bags are designed to inflate in a side impact collision, not roll-over, rear impact, frontal or near-frontal collisions, unless the collision causes sufficient lateral deceleration.

The air bags, in combination with the seat belts, can help reduce the risk of severe injuries in the event of a significant side impact collision.

Whiplash protection

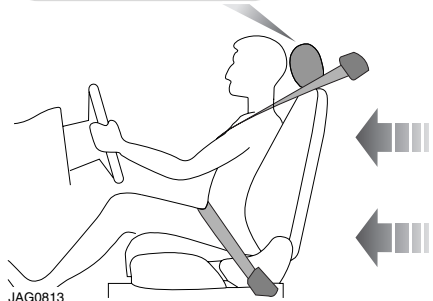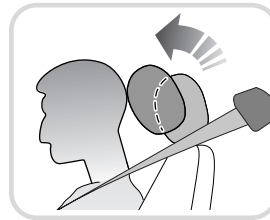

JAG0813

Both front seats are equipped with Active Head Restraints (AHR) which reduce the risk of neck and spinal injury (whiplash) in the event of a rear impact.

When activated, the head restraint moves upwards and forwards, cushioning the occupants' head.

After activation, the whiplash protection mechanism automatically resets and does not require to be replaced.

Occupant Protection



WARNING:

For optimum protection, the driver and passenger should sit in the centre of the seat with the head as close as possible to the head restraint.



WARNING:

Adjust the head restraint so that it is just behind your head and never behind your neck.



WARNING:

Do not wedge objects (e.g. luggage) between the front seat backrest and the rear seat cushion.



WARNING:


After a rear collision, the front seats must be inspected by a Jaguar Dealer even where there is no apparent damage or change to the seat.



WARNING:

Do not attempt to service or tamper with the seat recliner mechanism.

Occupancy sensing

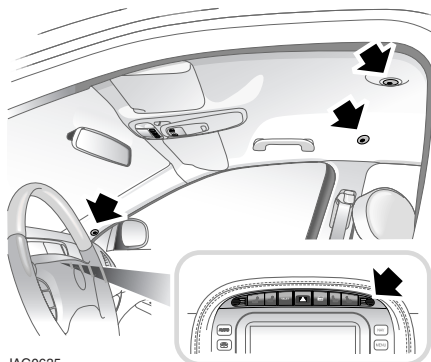

JAG0635

The front passenger seat is monitored by ultra-sonic sensors (shown above) and a seat weight sensor to determine the presence, weight and position of the front passenger. In certain conditions, e.g. where no passenger is present, the appropriate air bags will be de-activated. In a collision these air bags would not be deployed.

The occupancy sensor operates as follows:

Passenger occupancy status	Passenger air bag status	Indicator lamp active
Completely empty	Deactivated	No*
Low weight occupant/object	Deactivated	Yes
Heavy occupant/object	Activated	No
Passenger head too close to air bag door	Deactivated	Yes

Occupant Protection

*It is possible to receive an intermittent indicator lamp, with an empty seat condition. This is part of the system's adaptive behaviour, and does not affect the status of the passenger air bag. However, if the indicator lamp becomes permanently illuminated when the seat is definitely empty and the seat belt is unbuckled, then contact your nearest Jaguar Dealer immediately.

Note: *The occupancy sensing system is designed to confirm that a front passenger is properly seated as recommended:*

- *Always sit centrally in the seat, remaining in contact with the seat back which for comfort should be rearwards of the vertical position.*
- *Adjust the seat to be as far back from the fascia as is practical.*
- *Always wear seatbelts.*

The seat adjustment controls are described on page 92.



WARNING:

It is important that the passenger position sensors (see illustration) are not obscured in any way which could affect air bag deployment, e.g. fitting non-approved accessories.



WARNING:

Crash test data and statistics, show that the safest place for a child to be restrained, is in a child seat correctly fitted to the vehicle's rear seat.



WARNING:

Do not use a child restraint on a seat protected by an operational air bag in front of it. Doing so presents a high risk of death or serious injury to the child in the event of an accident.




WARNING:

Do not fit a child restraint to the front passenger seat if the SRS warning indicator illuminates continuously with the ignition on.

Occupant Protection

Air bag deactivation warning indicator (Yellow)

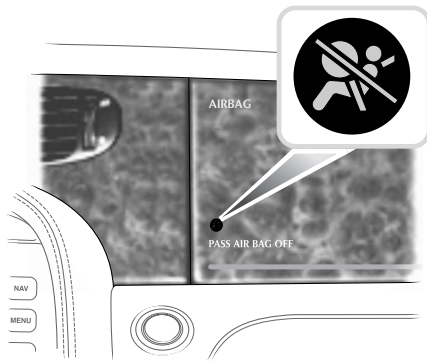

The PASS AIR BAG OFF warning indicator on the passenger fascia is associated with the deployment conditions for the front seat passenger air bag only.

- The warning indicator will NOT be lit if the seat is empty and the front air bag will not be activated.
- The warning indicator will NOT be lit if the seat is occupied by a larger child or an adult. The front air bag will be activated and will be deployed in the event of a frontal impact.
- The PASS AIR BAG OFF warning indicator WILL be lit if the seat is occupied by, for example, a small child and in this case the front air bag will not be activated.
- If the passenger adopts a posture (e.g. leaning very far forward) which could cause injury from an inflating air bag, the PASS AIR BAG OFF warning indicator WILL be lit and the front air bag will not be activated.

Note: Whenever the PASS AIR BAG OFF warning indicator on the passenger fascia is illuminated, the front passenger air bag will not be deployed in the event of an impact.

Driving position



WARNING:

Driver and front seat passenger should always move their seats as far rearwards as is practical.



Since the risk zone at the time of deployment is the first 55 mm – 75 mm (2 to 3 inches) from the air bag cover, sitting back 254 mm (10 inches) provides a clear margin of safety. Very few drivers are unable to achieve and maintain that safety gap.


The vast majority of drivers who do not now sit that far back can change their position and achieve that distance.

Occupant Protection



JOL2780

- Use seat belts.

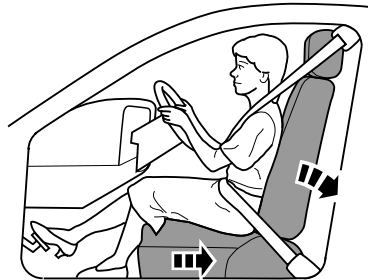

JOL2782


- Move your seat as far rearwards as you can while still comfortably reaching the pedals.

Recline the back of your seat one or two notches from the upright position. If reclining the back of your seat makes it hard to see the road, raise the seat.



JOL2781

- If adjustable pedals are fitted, move them towards the seat.

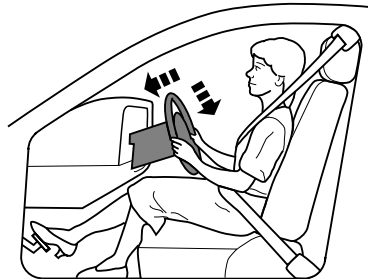

JOL2783

- Tilt the steering wheel/column downwards so as to point the air bag at your chest instead of your head and neck. Adjust the steering wheel/column fore/aft so that it extends towards the driver as little as possible, ensuring that the air bag has plenty of room to deploy.

Occupant Protection



JOL2784

- Sit in the centre of the seat with the head as close to the head restraint as possible.

* Ideally, drivers should sit with at least 254 mm (10 inches) between the centre of their breastbone and the cover of the steering wheel air bag.



WARNING:

Adjust the head restraint so that it is just behind your head and never behind your neck.

Note: *Seat, steering wheel and pedal adjustment controls are described later in this section, pages 92, 98 and 100 respectively.*

Air bag service information



WARNING:

Do not attempt to service, repair, replace, modify, or tamper with, any part of the SRS. This includes wiring or components in the vicinity of SRS components. Doing so may cause the system to trigger, or render the system inoperative, either of which may result in death or serious injuries.



WARNING:

Do not use any electrical test equipment, or devices in the vicinity of SRS components or wiring. Doing so may cause the system to trigger, or render the system inoperative, either of which may result in death or serious injuries.

All of the following operations should only be carried out by a Jaguar Dealer, or suitably qualified person:-

- Removal or repair of any wiring or component in the vicinity of any SRS components.
- Installation of electrical, or electronic equipment and accessories.
- Modification to the front or sides of the vehicle exterior.
- Attachment of accessories to the front or sides of the vehicle.

Occupant Protection

Air bag disposal



WARNING:

Do not attempt to service, repair or modify the air bag system or its electrical fuses. All work on the air bag system, including renewal after deployment must be carried out by an authorised Jaguar Dealer.

In the event of the vehicle being dismantled, air bag module removal and disposal **MUST** be made by a qualified person. Instructions can be obtained from a Jaguar Dealer.

Child Safety

CHILD AND INFANT SAFETY



WARNING:

Children must be restrained by a child safety restraint that is suitable for their weight and size.



WARNING:

Crash statistics show that children are safest when properly restrained on the rear seat.



WARNING:

Do not use a forward facing child seat until the child using it is above the minimum weight of 9 kg (20 lb.) and able to sit up unaided. Up to the age of two, a child's spine and neck are not sufficiently developed to avoid injury in a frontal impact.



WARNING:

Do not allow a baby or infant to be held or carried on the lap. The force of a crash can increase effective body weight by as much as thirty times, making it impossible to hold onto the child. Children typically require the use of a seat appropriate to their age and size, thereby enabling the seat belts to be properly fitted, reducing the risk of injury in a crash. Children could be endangered in a crash if their child restraints are not properly secured in the vehicle.



WARNING:

Do not use a child seat that hooks over the seat back. This type of seat cannot be satisfactorily secured and is unlikely to be safe for your child.




WARNING:

Do not use a child restraint on a seat with an operational air bag in front of it. There is a risk of death or serious injury when the air bag deploys.

It is very important for all infants and children under 12 years of age to be restrained in a suitable child safety seat appropriate to their age and size.

Note: *In some countries legislation prohibits children travelling in the front of a vehicle. Ensure that you are familiar with the legislation in force where the vehicle is being used, and are in full compliance.*

Child Safety

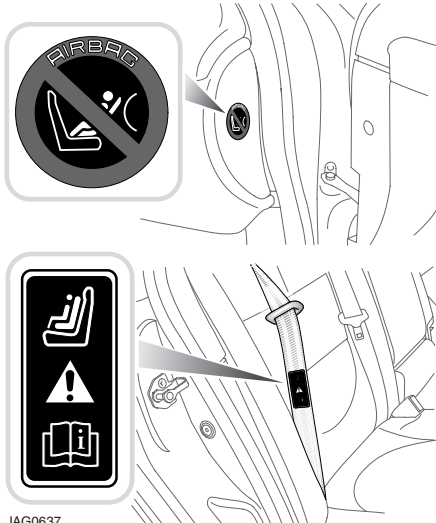

JAG0637



WARNING:

**Original text according to ECE R94.01.
Extreme hazard! Do not use a rearward facing child restraint on a seat protected by an air bag in front of it!**

The symbol affixed to the end of the fascia on the passenger side is to warn against the use of a rear facing child seat when the front passenger air bag is fitted and operational.

Jaguar Cars Limited strongly recommend that at all times children should be seated in the rear seats.

If, however, you have no alternative but to place a child in the front passenger seat, use only a forward-facing child seat with the passenger seat set fully rearward and in its lowest position.

Infant Safety

Babies and small children who cannot sit up by themselves should be carried in an approved baby seat.

In many countries legislation governs how and where children should be carried when travelling in a vehicle. It is the responsibility of the driver to comply with all regulations in force in the country where the vehicle is being used.

Note:

It is important to read and understand all the information contained in this handbook relating to child safety before carrying a child in your vehicle. If you are unsure about any aspect of this information, contact your Jaguar Dealer.

Make sure you read the information in this section which contains:

- General advice about the use of child restraints.
- Specific information about installing a non-LATCH child restraint.
- Specific information about fitting the LATCH child restraint system.

Child Safety

CHILD SEATS

In all countries there are regulations governing the use of restraint systems for children and babies. Infants and children must be seated in an approved safety device, which is suitable for the weight and size of the child. A child restraint must meet the regulations enforced in the country where it is used and the approval number and the weight category have to be clearly labelled on the seat.

Holding a baby or child in a person's arms is not a substitute for a child restraint system. Do not use a seat belt to restrain more than one person.

In an accident, a baby or child held in a person's arms can be crushed between the vehicle's interior and a restrained person.

The child can also be injured by hitting the interior or by being thrown from the vehicle during a sudden manoeuvre or impact.

Injury can also be caused if the baby or child is allowed to ride on the seat unrestrained. Other occupants should also be properly restrained to help reduce the chance of injuring the child.

Do not allow children to stand in the space between the seats, or on the passenger seats.



WARNING:

Do not put an adult seat belt around two children.



WARNING:

Choose a child seat that sits securely on the seat cushion and against the seat back.



WARNING:

Always use the top tether to secure a forward facing child seat, where possible.

Child Safety

Suitability of each passenger seat position for the carriage of children up to 12 years of age, or 1.5 m (5 feet) tall, and the installation of child restraint systems:

Note: The information contained in the following table may not be applicable to all countries. If you are in any doubt regarding the type and fitment of child seats seek advice from your Jaguar Dealer.

Mass Group (with approximate age) as indicated on child restraint	Vehicle Seating Position		
	Front Passenger*	Rear Outboard	Rear Centre
0 = Up to 10 kg (22 lb) (birth to 10 months)	X	U	U
0+ = Up to 13 kg (28 lb) (birth to 18 months)	X	U	U
I = 9 to 18 kg (20 - 40 lb) (9 months to 5 years)	UF	U & L	U
II = 15 to 25 kg (33 - 55 lb) (4 to 7 years)	U	U	U
III = 22 to 36 kg (48 - 80 lb) (6 to 12 years)	U	U	U
<p>Key:</p> <p>U: Suitable for Universal category restraints approved for use in this mass group.</p> <p>UF: Suitable for forward facing Universal category restraints approved for use in this mass group.</p> <p>L: Suitable for particular vehicle specific child restraint given below. These restraints may be of the specific-vehicle, restricted or semi-universal categories.</p> <p>X: Seat position not suitable for child restraint in this mass group.</p> <p>The safest place to transport children is the rear seat.</p> <p><i>* Jaguar recommend that the vehicle front passenger seat be positioned fully rearward with the cushion adjusted to its highest position when installing child restraints.</i></p>			

Caution: Information given within the table is correct at the time of going to press. However, availability of child restraints may change. Please consult your Jaguar Dealer for the latest recommendation.

Note: The legislation which governs how and where children should be carried when travelling in a vehicle, is subject to change. It is the responsibility of the driver to comply with all regulations in force.

Child Safety

SUITABLE CHILD SEATS

Before you buy a child seat, it is important to note that your child's weight, rather than age, determines the type of seat that is required.

Jaguar recommends that a rear-facing seat with a harness is used for as long as your infant's development allows.

Do not use a forward-facing seat until your child is able to sit up unaided. Up to the age of two, a child's spine and neck are not sufficiently developed to avoid injury in a frontal impact.

When choosing a child seat, it is also important to consider how you plan to use it. For longer journeys, a reclining seat may offer added comfort and support for a sleeping child, while a lightweight design may be easier to lift in and out of the vehicle. It is also worth noting that some children are more suited to a harness-style seat than a booster seat during their toddler years.

Because child seats vary in shape, certain designs may be more stable when mounted on the outer rear seating positions, rather than in the centre. Always check that the child seat can be mounted securely in the required position: if in doubt, speak to your Jaguar Dealer.

We strongly advise that you do not buy or use a second-hand child seat. The seat may have been used inappropriately, or involved in an accident. In such circumstances, the seat may not protect your child.

SECURING CHILD RESTRAINTS

Passenger seat belts (not the driver's) with an automatic locking device for use with child seats.

If engaged, this device allows the belt to be retracted (tightened) but not pulled out. When used to secure a child seat, therefore, the belt will automatically lock at any point to which it has retracted.

Always ensure that child restraint assemblies are fitted in strict accordance with the child restraint manufacturer's instructions. Keep the fitting instructions for future reference.

The following checks should always be carried out:

- Fit the child seat in the correct position and secure with the seat belt in accordance with the manufacturer's instructions. If necessary, remove the head restraint to accommodate a larger child seat.
- Make sure the child seat is fitted firmly to the car seat. There should not be excessive forward or sideways movement.
- Pull the seat belt all the way out to engage the locking device. To fix the seat firmly, retract the belt back onto the reel; a ratchet operation may be felt as the belt retracts. Continue to pay the belt back onto the reel until it fits snugly around the child seat.
- Regularly check and refit the child seat to ensure there is no slack in the installation.

Child Safety

- The seat belt must not be twisted and the buckle must not rest on the child seat frame, as it may snap open in an accident.
- Never modify the seat, or install it differently to the instructions.

The above is a guide only. Depending on the features of a particular child seat, e.g. forward or rearward facing, engage the locking device before or after attaching the belt, as convenient.

Unbuckling the belt and releasing the child seat will allow the belt to resume its normal operation.

Always secure an unoccupied child seat safely. In an accident an unsecured child seat may pose a risk to the vehicle occupants.

Booster seats

If a booster seat is used, position the lap section of the adult seat belt over the child's pelvis. The diagonal seat belt should rest on the child's shoulder, not the neck.

SAFE USE OF CHILD RESTRAINTS



WARNING:

The top tether anchor point must always be used to secure forward-facing child seats (see page 90).

Ensure that there is no slack in the webbing and that the restraints fits the child snugly across the rib cage and hips. These are the parts of the body most able to take the force of an impact.

- Ensure the path and position of an integral harness across the shoulders is appropriate for your child's development – consult the manufacturer's instructions.
- The lap strap should pass across the top of the child's thighs, bearing on the pelvis, not the abdominal area.
- Adjust the harness every time, so that one or two fingers only can be inserted between the child and harness. Different clothing on a child can make a difference to the correct fitting of the harness.
- Make sure the harness webbing is not twisted.
- Never modify the seat harness or buckles, as this may affect the quick release mechanism.
- Always secure your child correctly, even for the shortest journey.
- Follow the seat manufacturer's instructions for harness adjustments.

Child Safety

Check List - Non-LATCH Child Restraints

Follow the check list each time your child travels in the vehicle:

- Carefully follow the instructions provided by the manufacturer of the restraint system.
- Always use the appropriate child restraints and adjust harnesses for every child, every trip.
- Avoid dressing your child in bulky clothing and do not place any objects between the child and the restraint system.
- Regularly check the fit of your child seat and replace seats or harnesses that show signs of wear.
- Ensure that you have removed all slack from the adult seat belt.
- No child seat is completely child-proof. Encourage your child not to play with the buckle or harness.
- Never leave a child unsupervised in the vehicle.
- Activate the rear door child safety locks (see page 53).
- Ensure your child does not exit the vehicle from the side where there is traffic.

Set your child a good example – always wear your seat belt.

LATCH ANCHOR POINTS

Your vehicle is fitted with a set of LATCH (Lower Anchorages and Tethers for Child restraints) brackets that allow a LATCH child seat to be secured directly and easily to the vehicle body without the use of adult seat belts.



WARNING:

Do not attempt to fit LATCH restraints to the centre seating position. The anchor bars are not designed to hold an LATCH restraint in this position.



WARNING:

If the restraint is not correctly anchored, there is a significant risk of injury to the child in the event of a collision or emergency braking.



WARNING:


Child restraint anchorages are designed to withstand only loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts, harnesses, or for attaching other items or equipment to the vehicle.



WARNING:

If removing a head restraint in order to fit a child restraint, always secure the head restraint when storing it. If left loose in the vehicle it may cause death or serious injury during sudden braking or an impact.

Child Safety

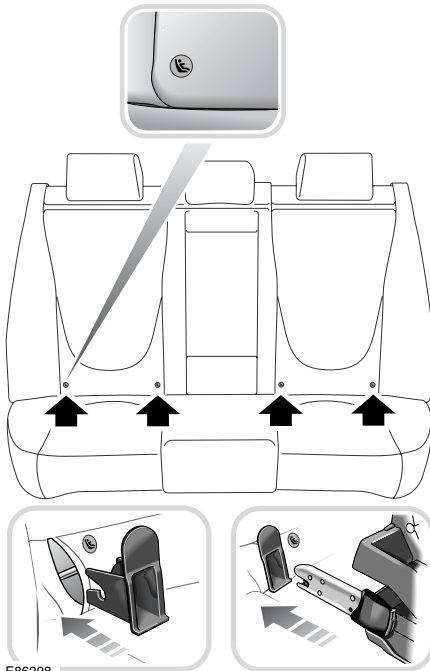

The anchorage loops are accessible through the gap between the rear seat back and cushion.

Installing the LATCH seat



WARNING:

Always follow the manufacturer's instructions supplied with the LATCH child seat. The following is to be considered only as a guide.

Always ensure the child seat attachment legs and the vehicle anchorage loops are kept clean and free of dirt.

1. Raise or remove the head restraint.
2. Slide the child seat into the locking mechanism.

3. Test the security of the child restraint. To do this attempt to pull the restraint away from the vehicle seat and twist the restraint from side to side. Even if the restraint appears secure you should still check the anchor points visually to ensure correct attachment.

Note: Always ensure that if an upper tether is provided, it is fitted and tightened correctly.

Seat with tether straps - Clip the flexible lower straps to the two anchorage points. Adjust the length of each strap until the seat is held firmly against the vehicle seat back.



JOL2790



WARNING:

Do not install a child seat with flexible lower attachments in the vehicle centre seat position. The anchorage loops are only provided to install a compatible child seat in the vehicle outboard seat positions.


Child Safety

Check List – LATCH Child Restraints

Follow the check list each time your child travels in the vehicle:

- Always attach the top tether when installing the LATCH seat.
- Carefully follow the instructions supplied with the child seat.
- Always give the LATCH seat a final pull to ensure the lower anchors are secure.
- Always use the appropriate child restraints and adjust harnesses for every child, every trip.
- Make sure your child falls into the correct weight range for the seat.
- Avoid dressing your child in bulky clothing and do not place any objects between the child and the restraint system.
- Regularly check the fit of your child seat and replace seats or harnesses that show signs of wear.
- No child seat is completely child-proof. Encourage your child not to play with the buckle or harness.
- Never leave a child unsupervised in the vehicle.
- Activate the rear door child safety locks, see page 53.
- Ensure your child does not exit the vehicle from the side where there is traffic.
- Set your child a good example – always wear your seat belt.

TOP TETHER ANCHORAGES

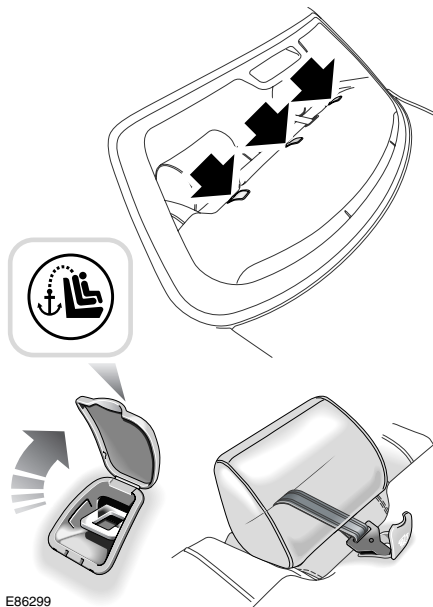

WARNING:

If provided, the top tether must always be used to secure forward-facing child seats.

The top of the child seat is connected by a short strap to the top tether bracket, to prevent the seat from rotating about the lower anchorages. The top tether brackets are positioned behind the head restraints, under access covers.

Note: *If two individual electrically-operated rear seats are fitted, top tethers are only provided for these seats.*

Child Safety

Pass the top tether strap under the vehicle rear head restraint, if fitted, to connect to the top tether bracket. Adjust the length of the top tether strap to hold the top of the child seat against the vehicle seat back.

Make sure the child seat is securely fitted and follow the check lists on pages 88 and 90.



WARNING:

Child restraint anchorages are designed to withstand only those loads imposed by correctly fitted child restraints. Under no circumstances are they to be used for adult seat belts or for attaching other items or equipment to the vehicle.

Seats

SEAT ADJUSTMENT



WARNING:

Do not adjust the seat while the vehicle is moving. Doing so could cause loss of vehicle control and personal injury.


All seats, except the rear bench type, are adjusted electrically by switches on the side of the seat cushion. Adjustment can be made with or without the ignition key inserted.

Three different positions can be stored and recalled by a memory system for each seat. (Steering wheel, pedals and door mirrors positions are also memorised for the driver.) See Driving Position Memory on page 108.


Note: It is advisable to move the seat to the correct position in relation to the gear lever and front and side vision before adjusting the steering column, pedals, mirrors and seat belt.

Front seat adjustment

The full range of front seat adjustments are made using the switches on the outboard side of the seat.

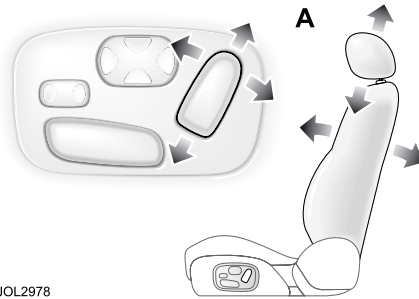

A - Backrest angle (recline) and head restraint height.

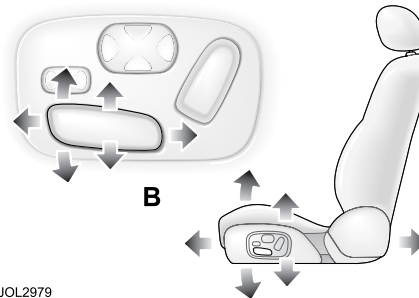


B - Seat fore and aft movement.

- Move the switch forward or rearward to change the seat fore and aft position.
- Move the centre or rear of the switch up or down to adjust cushion height.
- Move the front of the switch up or down to tilt the front of the cushion.


Seats

Head restraint adjustment

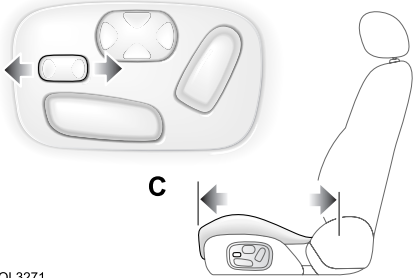

JOL3271


C - If fitted, this varies the cushion extension. Moving the control will change the distance between the front of the cushion and the backrest.

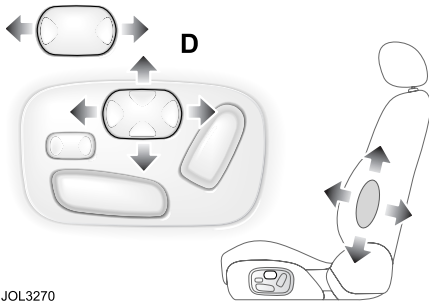

JOL3270

D - Provides adjustable lumbar support in the lower backrest. Either a 2-way or 4-way switch may be fitted:

- 2-way or 4-way switch: Press the front or back of the switch to increase/decrease lumbar support.
- 4-way switch only: Press the top of the switch to increase higher lumbar, decreasing lower lumbar support. Press the bottom of the switch to increase lower lumbar, decreasing higher lumbar support. Press the front of the switch to increase mid-lumbar and the rear to decrease all lumbar support.

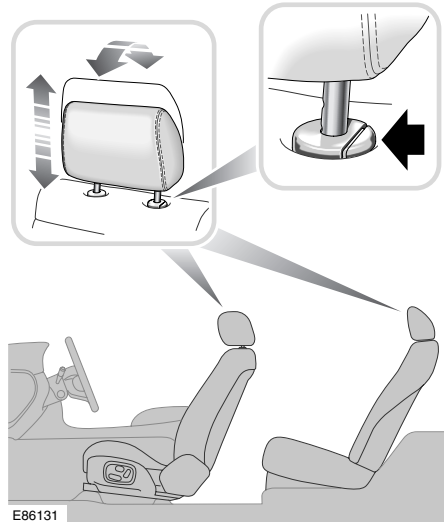

All head restraints may be manually tilted.



WARNING:

Head restraints are designed to support the head, not the back of the neck. The restraint must be positioned correctly to restrain rearward movement of the head in a collision. An incorrectly adjusted head restraint increases the risk of death or serious injury in the event of a collision.



WARNING:

Adjust the head restraint so that the top of the head restraint is above the centre line of the head. An incorrectly adjusted head restraint increases the risk of death or serious injury in the event of a collision.

Seats



WARNING:

Do not drive, or carry passengers with the head restraints removed from occupied seats. The absence of a correctly adjusted head restraint increases the risk of death or serious injury in the event of a collision.



WARNING:

Never adjust the head restraints while the vehicle is in motion. An incorrectly adjusted head restraint increases the risk of death or serious injury in the event of a collision.

Rear head restraint adjustment


The rear head restraints on vehicles without electrically operated rear seats may be manually adjusted.

Outer head restraints - To raise the outer rear seat head restraints, pull the head restraint upwards. To lower, press the lever in the escutcheon (shown in the upper illustration) and push the head restraint into the seat back.

Centre head restraints - To adjust the rear centre head restraint, tilt the head restraint forwards and lift or push down the head restraint to the desired height. The head restraint can be locked in one of three height positions.

Note: Do not use the levers on the escutcheon to raise or lower the centre head restraints.

Rear seat adjustment

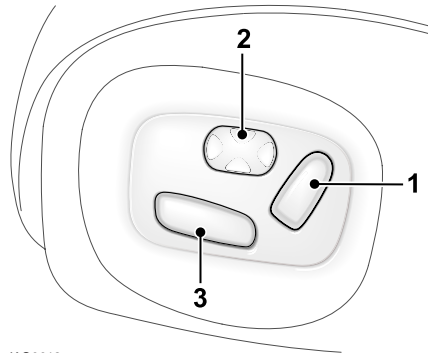

JAG0618

Seats with individual backrests may be adjusted electrically using the switches on the sides of the seat cushions. Adjustment can be made with or without the ignition key inserted.

Seat adjustments are:

(1) - Backrest recline and head restraint height.


(2) - Adjustable lumbar support in the lower backrest: Increase/decrease support and up/down movement, as for front seats. For increased comfort, the front passenger seat fore and aft movement and backrest recline can be controlled from the rear seat immediately behind, using switch (3).

Note: Operation of the front seat by a rear seat passenger and rear seat operation, except for lumbar adjustment, can be disabled from the driver's door switchpack rear feature immobilisation switch. (See **Door Windows** on page 101.)

Seats


SEAT HEATERS

Some seats have heaters in the backrests and cushions. The heaters have three heat settings and each seat has its own control.

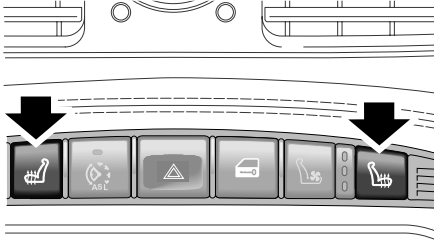

E86133

The front seat heaters buttons are located at the top of the centre console.

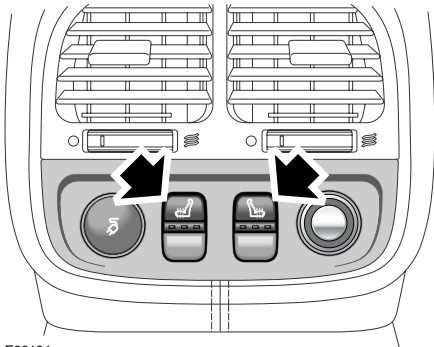

E86134

The rear seat heater buttons are located below the rear air vents.

Note: Storage of the vehicle in a heated garage, body heat or warm ambient temperatures may prevent operation of the seat heater.

With the engine running, pressing a heater button will select the highest heat setting, as shown by three illuminated red indicators.


A second press selects the mid setting (two red indicators) and a third press selects the lowest heat setting (one red indicator). A fourth press turns the seat heater off; all indicators off.

A heater will maintain a pre-set temperature while it is switched on. The heater will automatically switch off if the engine is turned off or if a fault is detected.

Seats

VENTILATED SEATS

Some front seats have a cooling function in the backrests and the cushions.

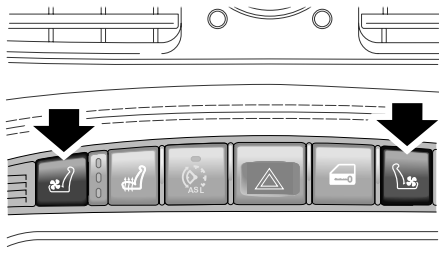

JAG0602

The front seat ventilation buttons are located at the top of the centre console.

With the engine running, pressing a ventilation button will select the highest fan speed setting, as shown by three illuminated blue indicators.

A second press selects the mid setting (two blue indicators) and a third press selects the lowest fan speed setting (one blue indicator). A fourth press turns the seat cooling fan off; all indicators off.

The cooling fan will automatically switch off if the engine is turned off or if a fault is detected.

HEATED STEERING WHEEL

A heater is incorporated in the steering wheel rim and operates in conjunction with the driver's seat heater. The steering wheel heater is switched on in any of the three driver seat heater positions.

Clock

CLOCK ADJUSTMENT





E86362

The analogue clock is adjusted by pressing the + and - buttons below the dial. Pressing and holding either button will increase the rate of hand movement forwards or backwards as required.

Steering Column

STEERING COLUMN ADJUSTMENT

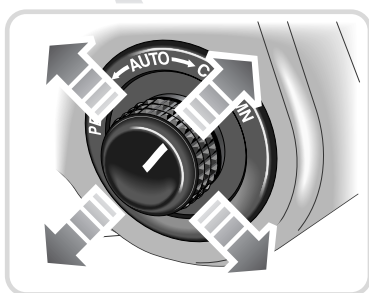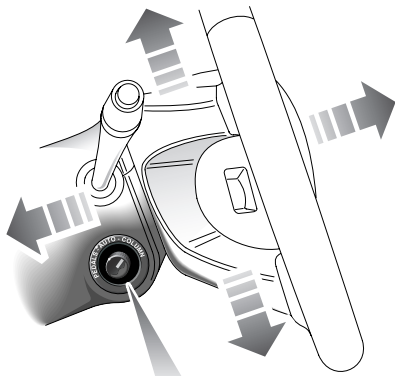

E86302



WARNING:

Never adjust the steering wheel position whilst the vehicle is in motion. Doing so will reduce control of the vehicle, and may cause unpredictable steering movements.

The steering column can be adjusted for tilt and reach by operating the control switch on the left side of the steering column.

Turn the switch to the **COLUMN** or **AUTO** position.

Move the switch forwards or backwards to adjust reach.

Move the switch up or down to tilt.

Three column positions may be stored and recalled by the Driver Position Memory system. See page 108.

ENTRY/EXIT MODE

Entry/exit mode provides automatic movement of the steering column and driver's seat to allow easier entry to or exit from the vehicle.

Entry/exit mode is selected by setting the steering column adjustment switch to the AUTO position.

Exit– If the ignition key is in position **0** and the driver's door is opened or if the ignition key is removed, the steering column will move to the uppermost tilt position. The seat will move rearwards unless it is already 40 mm (1.5 inches) or less from its fully rearward position when it will not move any further back.

Entry– When the key is next inserted in the ignition switch and the door is closed, the steering column and seat will return to their previous positions. If, however, the memorised driver position has been changed (using the door memory switch or another integrated key), the steering wheel and seat will move to the new position.

Caution: Do not use steering wheel mounted security devices since movement of the steering wheel in entry/exit mode could result in vehicle damage (e.g. the windshield) or possible injury to the occupant.

Steering Column

Note:

- *If the adjustment switch is moved away from AUTO whilst the steering column is tilted away, the steering column will move back to its memorised position when the key is next inserted in the ignition and entry/exit mode is then cancelled.*
- *If the adjustment switch is moved during entry/exit operation, steering column movement will stop.*

Pedal Controls



PEDAL ADJUSTMENT



WARNING:

Do not adjust the pedals whilst driving.

Three pedal positions may be stored and recalled by the Driver Position Memory system. See **Driving Position Memory** on page 108. It will not be possible to adjust the pedals if cruise control has been set.

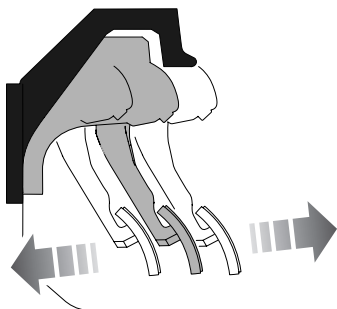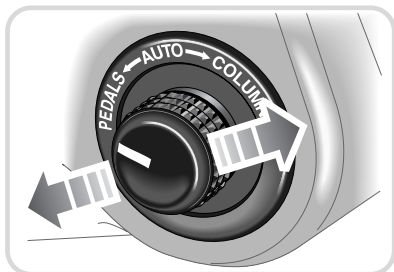

E86306

This facility enables the pedals to be moved towards or away from the driver's seat, providing extra adjustment for the driving position. All pedals move together (no individual pedal adjustment) and are electrically controlled from the combined steering column/pedal adjust switch on the left side of the steering column housing. The adjustment can be made with or without the ignition key inserted.

To adjust the position of the pedals, turn the switch to PEDALS, then push it forwards or rearwards to cause a corresponding movement of the pedal assembly.

Door Windows

WINDOW OPERATION



E86328

The front and rear door windows are electrically operated by switches located on each door.

Switches on the driver's door control all door windows.

Passengers are provided with a switch to control their door window only.

These switches will only operate the windows when the ignition switch is in position **I** or **II**.

The rear window inhibit button (arrowed) immobilises operation of the rear windows by rear seat occupants (and front seat adjustment by rear seat occupants, when fitted).



WARNING:

If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.



WARNING:

All of the windows have an anti-trap protection system. However, before closing a window care must be taken to ensure that none of the occupants have any part of their body in a position where it could be trapped. Even with an anti-trap system serious injury or death can occur.



WARNING:

Ensure that you remove the ignition keys when leaving occupants in the vehicle. This will prevent unsupervised operation of the windows, which may result in injury.

Raising and lowering the windows

Each switch has two positions to raise the window and two positions to lower the window.

To lower a window, press the switch downwards to the first position until the desired window position is reached, then release.

To raise a window, pull the switch upwards to the first position until the desired position is reached, then release.

If the switches are held for longer than six seconds, for example, when attempting to overcome frozen or jammed windows, the window drive will be switched off for a few seconds to protect the window drive motors.

Door Windows

The windows can be operated with the key removed from the ignition switch within ten minutes of the vehicle being stopped provided the driver's or front passenger's door has not been opened. If a rear door is opened the windows can still be operated within the ten minute period.

One-touch operation

Each window has a 'one-touch' facility enabling the occupant to fully open or close the window in one quick movement. Press the switch briefly to the second position to fully open the window in one movement. Pull the switch briefly to the second position to fully close the window in one movement. Window travel can be stopped at any time by pressing the switch again.

Immobilising the rear windows

To immobilise the rear windows (and operation of the front seat by a rear seat passenger, when this feature is fitted), press the rear window inhibit button (see illustration on previous page).

The LED in the button will light up showing that the rear windows cannot be operated by rear seat occupants.

Pressing the button again will enable occupants to operate the rear windows. See also the rear seat adjustment procedure on page 94.

Wind resonance with lowered windows

Due to the sleek exterior of the vehicle, it is possible for a resonance, booming sound, to occur when one or both rear windows are open; this is eliminated by slightly opening an adjacent front window.

Window anti-trap protection

Each electrically operated window has an anti-trap protection feature. If the upward movement of the window detects an obstacle, the anti-trap system will immediately stop the window closing, then move it downwards for a short distance.

Note: *If the battery is disconnected or discharged, the window anti-trap feature is lost. When the battery is reconnected or recharged the window anti-trap system must be reset.*

To reset the window anti-trap system

1. Fully close the window, hold the switch in the close position for two seconds and then release the switch. Wait for two seconds, do not open the window.
2. Again, select the same window to close, holding the switch for a further two seconds.
3. Check to confirm the operation by opening the window and then use one-touch operation to close the window.
4. Repeat for the remaining electrically operated windows.

Door Windows

To override the anti-trap protection

The anti-trap system will also stop the window closing if a blockage or resistance occurs e.g. in the window guide channels. Typically this might be due to icing in winter, but could also be caused by damage or misalignment of the guide channels or seals.

1. After the initial attempt to close the window, operate the close switch a second time.
2. When the window has reversed from the blockage, operate the switch (within ten seconds) until the window stops again (it will not reverse on the third attempt).
3. Immediately operate the close switch again. The window will now move up a short distance with increased force to override the blockage.
4. Repeat the override action until the window has closed. Each time the window stops, the switch must be operated immediately to initiate further override action.

If this procedure fails to move the blockage, the anti-trap feature will be lost and must be reset (see previous column) after the blockage has been cleared.


Thermal overload

If the windows are repeatedly opened and closed (e.g. by a child), a protection system will deactivate window operation for a short period to avoid overheating of the window motors.

Mirrors

DOOR MIRRORS

Both door mirrors are adjusted from the driver's door switchpack.

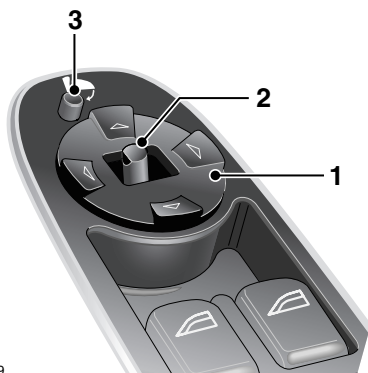

E86329

The four-way adjustment button (1) moves the mirrors to the required position. The selector switch (2) selects the mirror to be moved, left for the left-hand side mirror and right for the right-hand side mirror. When the selector switch is in the centre position, adjustment to either mirror is inhibited.

Each mirror housing is designed to pivot against the vehicle upon impact. To return the mirror to its normal position, manually reposition the housing until it locks into place.

At night, the approach lamps in the door mirrors also switch on automatically when reverse is selected.

Mirror Heating

The door mirrors have heating elements which work when the rear screen heater is switched ON. The mirror heater will clear all ice from the mirror surface.

Caution:

Do not use a scraper to remove ice from the mirrors as this will damage the surface.

Power Foldback (where fitted)

To assist parking by reducing the overall vehicle width, the door mirrors can be folded back.

The button (3) is located in the driver's door window switchpack and will operate the mirrors when the ignition switch is in any position except OFF.

To fold the mirrors inwards press the button. A second press of the button returns the mirrors to their normal driving position.

Note:

- If the button is pressed repeatedly, a thermal cut-out will prevent damage to the vehicle's electronics. If this occurs, wait for five minutes for the cut-out to reset before operating the button.
- If the thermal cut-out operates and leaves the mirrors in the folded position, the mirrors can be folded outwards manually.
- If the door mirrors are repositioned manually (or are knocked out of position), re-engage the mechanism to power the mirror to the foldback position, then outwards to the drive position.

Mirrors



WARNING:

Do not drive the vehicle with the door mirrors in the folded position, except when parking.

***Note:** The power foldback feature can be operated via the remote control by pressing the lock button twice, within three seconds.*

Mirror Dip When Reversing

Vehicles are not normally delivered with this feature but, if your vehicle has memory function, it can be fitted by your Dealer.

When reverse gear is selected, one or both door mirrors incline downwards to provide a close up view of the rear side areas.

When the gear selector is moved out of reverse, the mirrors return to their original positions.

INTERIOR REAR VIEW MIRROR

During night time driving with the ignition switched on, the interior rear view mirror will darken automatically in proportion to the amount of glare detected from a following vehicle's headlamps.


When you shift the gear selector lever into reverse, the interior mirror dimming feature will be automatically switched off for a clearer view whilst reversing.

Note:

- *Should a mirror assembly become detached from the windshield, it must be refitted by a Jaguar Dealer.*
- *Ensure that the windshield in front of the mirror is kept clean. Where fitted, the moisture sensor for wiper operation is located to the front of the mirror casing. Any dirt may affect the operation of this sensor.*
- *The automatic darkening of the mirror will not operate properly if the rear window shade (if fitted) is not stowed or if the light that would otherwise strike the mirror is obstructed.*

Mirrors

Interior mirror (with compass)

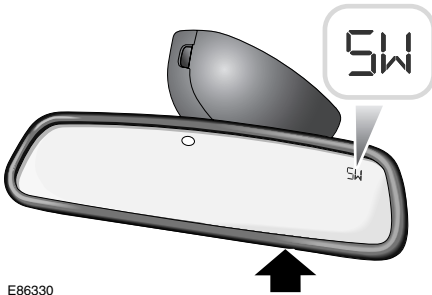

E86330

Compass operation

When switched on, the compass display on the right-hand side of the mirror surface shows the direction the vehicle is pointing. Eight main directions can be displayed, e.g. **N** for north, **SW** for south-west etc.

Setting the compass

With the ignition on, depress and hold the button under the mirror (see the arrow in the illustration above). Depending on how long the button is held will produce the following results:


- 0 to 2 seconds, the display will be blank.
- 3 to 5 seconds, use this to set the zone for geographic location.
- 6 to 8 seconds, will cause the compass to RESET the calibration of the compass. The letter **C** will be displayed in the mirror.
- 9 seconds will set either **L** for left-hand drive or **R** for right-hand drive.

Inaccurate compass direction

With the ignition on, push the button for three to five seconds until the Zone selection is shown (a number will be displayed in the mirror compass).

Now press the button repeatedly until the variance zone number for your area (from the map below) appears in the compass display.

The compass is now set to your new location and will give a steady direction heading after about five seconds.

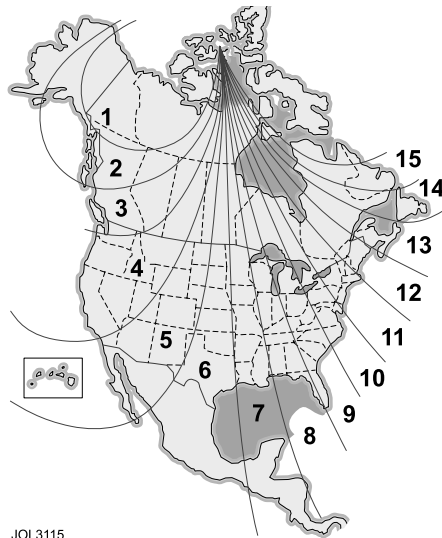

JOL3115

If adjusting the zone setting did not correct the compass heading error, or if the zone was already correctly set for your area then the compass must be recalibrated.

Mirrors

Calibrating the compass

If **C** is displayed in the compass window instead of the direction, or if the compass displays the wrong heading even when the compass variance zone is correctly set, the compass must be calibrated.

Note:

- *Installing items such as a ski rack, antenna or roof rack can cause changes to the vehicle's magnetic field. In these situations the compass will need to be recalibrated.*
- *The compass may not indicate the correct compass point in tunnels or whilst driving up or down a steep hill. (The compass will show the correct reading when the vehicle moves to an area where geomagnetism is stabilised)*

Find a large open space away from traffic, for example, an empty parking lot.

Start the engine and depress and hold the button under the mirror for approximately six to eight seconds until a **C** appears in the compass display.

Drive the vehicle in a complete circle, 360 degrees, at less than 10 km/h (6 mph) until a direction of travel appears in the compass display.


Alternatively, you can calibrate the compass by driving your vehicle on your everyday routine. Calibration will be completed once the vehicle has completed a full circle.

The calibration process is now complete.

Holding the button depressed for longer than nine seconds enables left-hand drive **L** or right-hand drive **R** to be set.

Driving Position Memory

INTRODUCTION

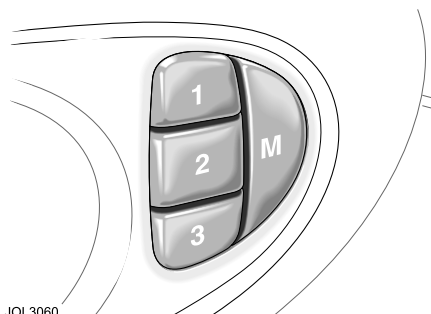

This facility, if fitted, enables three different comfort positions to be memorised and recalled for each occupant:

- The driver's seat, steering column, pedals and exterior rear view mirrors.
- Rear passenger seat positions when memory is fitted to these.

The key does not have to be in the ignition switch to make seat, steering column and pedal adjustments, but is required to be in the switch to set the memory.

SETTING AND RECALLING

Setting a memorised position

To store a driver's seat position in the memory:

1. Adjust the seat, steering column, pedals and exterior rear view mirrors to the desired positions.
2. Insert a key into the ignition switch and leave in the OFF position.
3. Push memory button **M** and the red LED in the switchpack will illuminate for a five second period.

4. While the red LED is illuminated, push button **1**, **2** or **3** to memorise the configuration. The LED will go out and a chime will indicate that the setting procedure is complete.

By repeating these four steps and pressing the unused buttons, two more driving positions can be stored in the memory.

To set a new driving position, adjust to the desired position and perform steps 2 and 3. The previous memory will be erased and the new position will be set.

The rear passenger's seats can also be memorised by repeating steps 2 and 3 above after adjusting the seat to the desired position.

Recalling a memorised position from the door

Ensure the gear selector lever is in position **P**.

Press and release the appropriate memory button (**1**, **2** or **3**). The seat, steering column, pedals and door mirrors will move automatically to the memorised position.

Memory recall using an integrated key

The integrated key will recall a memory position when the unlock button is pressed when set as follows:

1. Insert a key, to be retained in memory, into the ignition switch.
2. Adjust the seat, steering column, pedals and exterior rear view mirrors to the desired positions.
3. Press the **M** button: The red LED will illuminate for a five second period.

Driving Position Memory

4. Press button **1**, **2** or **3** and then press any button on the integrated key. Both button presses must occur while the red LED is illuminated.
5. Repeat for the other integrated key, pressing the remaining memory buttons.

To cancel integrated key memory recall:

1. Place a key into the ignition switch and leave in the OFF position.
2. Press the **M** button: The red LED will illuminate for a five second period.
3. Press any button on the integrated key (except the panic button, if fitted) then press the **M** button again. Both button presses must occur while the red LED is illuminated.


Note: *If memory recall is performed using an integrated key with the vehicle in entry/exit position, the steering column and seat will not return to the memorised position until either the integrated key is placed in the ignition switch or the driver's door is closed.*

Operating tips

- When making adjustments to a set driving position, reset the new position in the same memory channel.
- A driving position will only be memorised during the five second period when the red memory LED is illuminated.
- Previous memory is erased when a new driving position is entered.

Luggage Compartment

LUGGAGE TIE-DOWN LOOPS

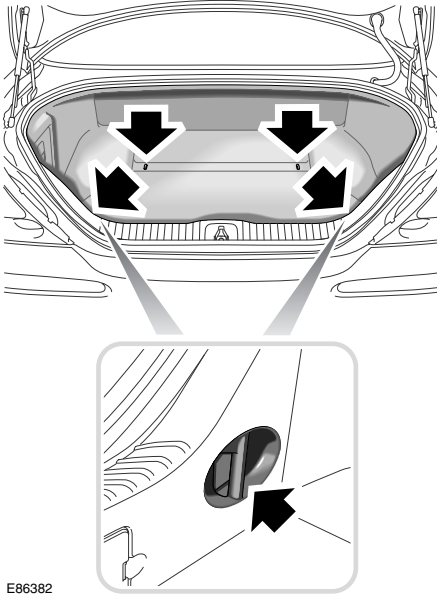

E86382



WARNING:

Locate heavy loads in the luggage compartment towards the front of the vehicle and secure them to stop them sliding. Loose items can be a hazard.



WARNING:

Do not drive with the luggage compartment lid open as exhaust fumes can be drawn into the passenger compartment.

Four loops are positioned in the luggage compartment for attaching straps to secure loads and prevent them from sliding over the luggage floor.

These loops are not to be used for securing passengers or animals nor as anchorages for child restraints.

It is advisable to distribute luggage weight evenly over the entire luggage floor area.

A range of Jaguar storage accessories, including a luggage retaining net, are available from your Jaguar Dealer.




WARNING:

A luggage net is not designed to restrain objects in the event of a collision.

Instruments

INSTRUMENT PANEL

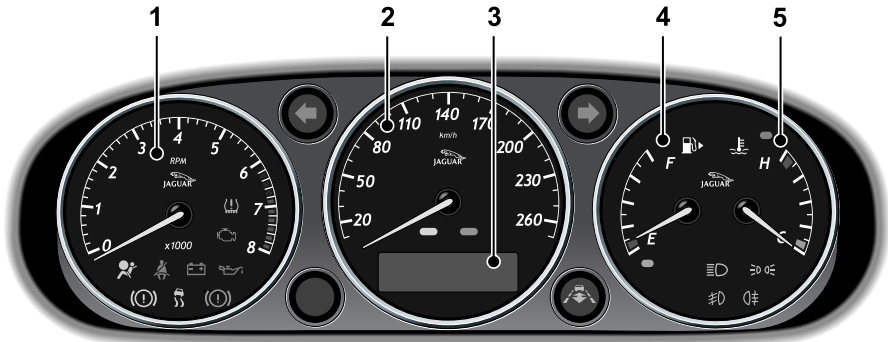

JAG0742

None of the instruments will show correct indications until the ignition is switched ON (position II).

If the exterior lamps switch is ON and the ignition is ON, the display brightness can be varied using the dimmer switch.

The instruments shown above are:

1. Tachometer.
2. Speedometer.
3. Message centre.
4. Fuel gauge.
5. Engine temperature gauge.

Tachometer

The tachometer indicates engine speed in revolutions per minute and is calibrated in increments of 250 rev/min extending to:

- 8000 rev/min for naturally aspirated engines.
- 7000 rev/min for supercharged engines.

Do not allow the needle to enter the red sector.

Speedometer

Speed indications are either:

USA - Miles per hour, the outer figures, and kilometres per hour on the inner ring.

Canada and Mexico - Kilometres per hour, the outer figures, and miles per hour on the inner ring.

Odometer


The odometer is displayed in the message centre unless a message has priority or a trip computer function has been selected.

The odometer records the total distance covered by the vehicle.

The odometer reading is displayed below the speedometer, along with the trip distance since it was last reset. To reset the trip distance, press the reset button on the trip computer switchpack. The trip distance will roll-over at 16,090 kilometres (or 9999.9 miles).

Instruments

Engine temperature

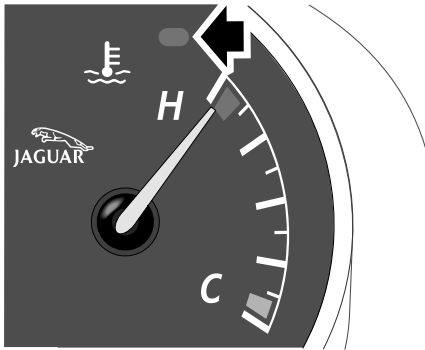

JAG0639

Drive at moderate road and engine speeds until normal operating temperature is reached. This is indicated when the pointer is between the blue (cold) segment and the red (hot) segment.

The engine operating temperature will vary with changes in weather and engine load. The engine temperature may rise in some circumstances, such as:

- Idling for long periods in slow moving traffic.
- Driving up a long hill in hot weather.
- Driving slowly or stopping after driving at high speed.
- Towing a trailer or caravan.

Should the pointer move into the red segment (**H**) of the coolant gauge, stop the vehicle as soon as it is safely possible, turn off the engine and open the hood to allow the engine to cool.

Caution: Serious engine damage can occur if the vehicle is driven whilst the engine is overheating.



WARNING:

The radiator cooling fans may continue to run after the ignition has been switched off but will automatically switch off when the engine has cooled sufficiently.



WARNING:

It is unsafe to run the engine in an overheated condition.




WARNING:

Do not remove the coolant reservoir filler cap while the engine is hot. If it is essential, then protect your hands against escaping steam. **SLOWLY** turn the cap counter-clockwise to allow the steam pressure to escape completely before removing the cap.

Instruments

Fuel gauge

Indicates the amount of fuel in the tank.

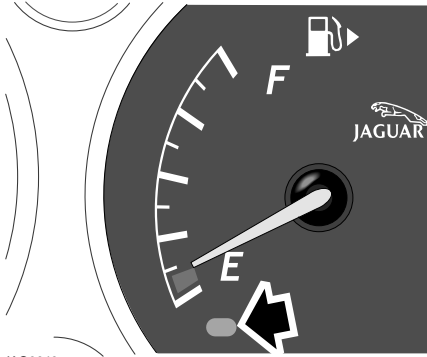

JAG0640

An amber warning indicator is displayed in the gauge when the fuel in the tank is at a low level. The tank should be refilled at the earliest opportunity.

Caution: Never allow the vehicle to run out of fuel. The resulting mis-fire may cause serious damage to the catalytic convertor.

The small arrow, shown beside the fuel pump symbol, identifies on which side of the vehicle the filler cap is located.

Instruments

WARNING INDICATORS

Warning indicators are arranged within the instrument panel.

There are two warning indicators, one red, the other amber, located above the message centre for primary and secondary status of the warnings displayed by the message centre.

RED warning indicators are for primary warnings. A primary warning must be investigated immediately by the driver or a Jaguar Dealer.

AMBER warning indicators are for secondary warnings when the driver must take action and then report the fault to a Jaguar Dealer at the earliest opportunity.

Other indicators within the instrument panel indicate system status, such as blue for high beam and green for direction indicators, when in operation.

Lamp check

A lamp check is initiated when the ignition is switched ON and lasts for three seconds (except the air bag warning indicator which will remain on for six seconds). If any warning indicator remains on after this period, investigate the cause before driving.

Not all lamps are included in the lamp check, for example, high beam headlamps or direction indicators.

Low oil pressure (Red)



This illuminates with the ignition switched ON and should go out once the engine is running.

If the indicator remains ON once the engine has started or comes ON whilst driving, loss of oil pressure is indicated. STOP the engine immediately and investigate the cause.

Do not restart the engine until the cause of loss of oil pressure has been identified and rectified.

First check the engine oil level, see page 235.

Charge indicator (Red)



If the indicator comes ON when the engine is running it indicates that there is either a battery voltage fault or an generator fault.

Turn OFF all electrical accessories, radio, climate control, rear screen heater etc. Try to use the minimum electrical load as possible, such as power windows, electric sunroof etc. Report the fault to a Jaguar Dealer.

Instruments

Seat belt (Red)



The warning indicator illuminates when the ignition is turned ON and:

- The driver's seat belt is not fastened.
- A passenger is sitting in the front seat and their seat belt is not fastened.

The indicator should go out when the driver's seat belt (and the front passenger's if the seat is occupied) is fastened.

Note: *The vehicle must be moving above 16 km/h (10 mph) for the indicator to illuminate if the passenger seat belt is not fastened.*

Beltminder

The Beltminder feature is a supplemental warning to the seat belt warning function.

This feature provides additional reminders to the driver that the driver's and/or front passenger's seat belt is unbuckled by intermittently sounding a chime and illuminating the seat belt warning indicator in the instrument panel.

If the vehicle is moving above 16 km/h (10 mph) and one or both front seats are occupied and a seat belt is not fastened, a warning chime will be heard and the indicator will flash.

The chime sound and the indicator flashing will last for 10 seconds and then repeat every 30 seconds for five minutes or until the belts are fastened or the vehicle stops.

If the warning indicator stays ON continuously with the seat belt(s) fastened, report the fault to a Jaguar Dealer. It is safe to drive the vehicle with the indicator ON continuously, provided that the seat belt(s) is properly fastened.

Ensure that all occupants seat belts are fastened before driving.

Note: *If a heavy object is placed on the front passenger seat it may activate the Beltminder feature. It is recommended that the object be placed in the luggage compartment.*

It is safe to drive the vehicle with the indicator ON continuously, provided that the seat belt(s) is properly fastened. Ensure that all occupants seat belts are fastened before driving.

Although not advisable, it is possible to disable the Beltminder function. Please see a Jaguar Dealer to disable or reinstate this function.

Instruments

Brake (Red)

BRAKE

This illuminates when:

- The ignition is ON and the Electric Parking Brake (EPB) is ON.
- There is a fault with the EPB.
- The brake fluid is low.

If the indicator is ON and there are no associated messages it means that the EPB is applied.

If the indicator flashes, there is a fault with the EPB system and the EPB cannot be applied.

If the indicator is ON and the message **PARKBRAKE ON** is displayed, it means that the EPB is applied but the vehicle is moving. Release the parkbrake or stop the vehicle when it is safe to do so.

If the indicator is ON and the message **LOW BRAKE FLUID** message with a RED priority indicator is displayed on the message centre, low brake fluid is indicated. In this case, loss of braking in one, or both, brake circuits may be imminent.



WARNING:

If the message LOW BRAKE FLUID is displayed, DO NOT drive the vehicle until the fault is rectified. Consult a Jaguar Dealer immediately.

Engine malfunction (Amber)



This indicator comes on when the ignition is on and remains on until the engine is started.

If the indicator comes on when the engine is running then there is an engine malfunction.

Specialised diagnostic equipment is required to repair such faults. Report the fault to a Jaguar Dealer.

The vehicle may go to **limp home** mode, with the possibility of reduced engine performance. Drive the vehicle with caution.

Anti-lock Braking System (ABS) (Amber)

ABS

If a fault has been detected in the Anti-lock Braking System (ABS) or the electric EPB system, this indicator will illuminate.

A warning message will appear with this indicator to indicate either ABS fault or EPB fault.

The brake system will continue to function normally, but without ABS braking.

Should the indicator come on or stay on after the bulb check cycle, stop the vehicle at the first opportunity, turn the engine OFF and then restart.

If the ABS indicator comes on again, the vehicle should be driven to a Jaguar Dealer at the earliest opportunity.



WARNING:

If the ABS and brake warning indicators are ON at the same time, DO NOT drive the vehicle until the fault is rectified. Consult a Jaguar Dealer immediately.

Instruments

Dynamic Stability Control (DSC) (Amber)



The indicator will flash at the rate of twice a second when DSC is operating.

The message **DSC NOT AVAILABLE** will be displayed and the indicator will be ON continuously when a fault is detected in the system.

If the system is turned OFF, a message **DSC OFF** will be displayed for four seconds and the warning indicator will remain ON.

Adaptive Cruise Control (ACC) follow mode (Amber)



If ACC is active, this illuminates to indicate that the vehicle is in follow mode and automatically maintaining the desired gap to the vehicle immediately ahead.

Only applicable to vehicles fitted with ACC.

Air bag (Amber)



If the air bag system develops a fault, the warning indicator will flash and then come ON and remain on until the fault has been diagnosed and cleared.

Report the fault to a Jaguar Dealer immediately.

It is safe to drive the vehicle; however, in an accident the air bags may not operate.

Low tire pressure (Amber)



Illuminates when one or more tires is significantly under inflated. The vehicle should be stopped as soon as possible and the tires checked and inflated to the recommended pressure.

If the tire pressure monitoring system develops a fault, the indicator will flash repeatedly for 75 seconds. The indicator will then remain on. Refer to page 253.

Sidelamps (Green)



Illuminates when the side lamps or headlamps are switched ON either manually or by the autolamp system, if fitted.

High beam (Blue)



Illuminates when the high beam headlamps are switched ON or flashed ON.

Front fog lamps (Green)



Illuminates when the front fog lamps are switched ON.

Rear fog lamps (Amber)



Illuminates when the rear fog lamps are switched ON.

Instruments

Direction indicators (Green)



The appropriate indicator tell-tale will flash when the column switch is moved up or down to signal a right or left-hand turn.

If a direction indicator fails, the tell-tale will flash at twice the normal rate when that indicator is selected. A message will be shown that a bulb has failed. Fit a new bulb immediately.

Note:

- *If a bulb has failed, the audible ticking will sound at twice the normal rate.*
- *If a trailer or caravan is fitted and a direction indicator bulb fails then the tell-tale will flash at twice the normal rate and a message will be displayed that a rear indicator lamp has failed.*

Hazard warning lamps

When the hazard warning is selected, both direction indicator tell-tales flash simultaneously.

Instruments

AUDIBLE WARNINGS

Various sounds are produced for warning and notification purposes as follows:


Hazard or Condition	Remedy/Chime or Tone
Air bag system failure.	A tone sequence is repeated five times. Report the fault to a Jaguar Dealer as soon as possible.
External lamps are switched on when the driver's door is opened.	A chime will sound for ten seconds as a warning that the lamps are on when the ignition is off and the driver's door is opened. Note: <i>The chime will not sound if the switch is in autolamp position.</i>
Key in ignition switch.	A chime will sound until either the key is removed, the driver's door is closed or the ignition is switched ON.
Hazard warning indicators on.	A ticking will sound until the hazard indicators are switched off.
Vehicle armed.	This warns that the alarm will sound shortly unless the system is disarmed by either pressing the unlock button on the key transmitter or placing the key in the ignition switch.
Left or right direction indicators on.	If the switch has not turned itself OFF, switch the turn indicator OFF when the manoeuvre is completed. A ticking will sound until the indicators are switched OFF.
Memory 1, 2 or 3 configuration saved.	A short tone as the memory selection is saved.
Valet mode.	This indicates that the valet mode has not been set or that access to a restricted area has been prevented because valet mode has been set.

Instruments

Hazard or Condition	Remedy/Chime or Tone
Seat belt reminder (Not all countries).	A chime will sound for six seconds after the ignition is switched on or until the front seat belts, when occupied, are fastened or the ignition switch turned to 0 . The chime will also sound at regular intervals for five minutes if the vehicle is moving above 16 km/h (10 mph) and the driver's and/or front passenger's (if occupied) seat belts are not fastened or are unfastened.
Electric Parking Brake (EPB).	If the message PARKBRAKE ON is displayed, it means that the parkbrake is applied but the vehicle is moving. Release the parkbrake or stop the vehicle when it is safe to do so.
EPB cannot be applied.	This sounds a warning that the parkbrake cannot be applied.
Adaptive Cruise Control driver intervene.	Action is required by the driver to apply the brakes.
Gear selector not in Park (P).	This warns that the gear selector is not in Park (P) when the ignition is turned off.

Message centre

MESSAGE INFORMATION

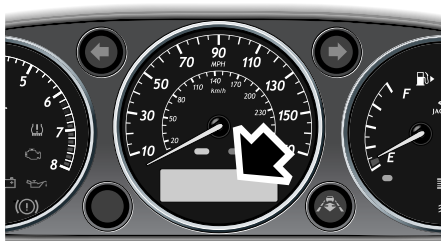

E86335

Driver information, messages and data are displayed on the message centre display panel situated within the instrument panel.

For the message centre to operate the ignition must be switched ON (position II).

The primary function of the message centre is to inform the driver of the following:

- Warning messages.
- Temporary alert messages.
- Information messages.

The message centre displays:

- The total distance covered by the vehicle.
- Trip computer information.
- Warning messages if system faults are detected.
- Status messages to indicate changes in state of certain vehicle functions.

Messages



WARNING:

If a red warning indicator is displayed, investigate immediately and, if necessary, stop the vehicle as soon as possible but only when it is safe to do so.

Most messages, when displayed, have an associated warning indicator, red or amber, above the display which will come on to indicate the message priority.

Caution: Do not ignore warning messages, take appropriate action immediately. Failure to do so may result in serious damage to the vehicle.

If more than one message is active, each is displayed in turn for two seconds in order of priority.

Messages take priority over the odometer reading or trip computer data and, if active, will be displayed when the ignition is switched ON.

Message centre illumination

The message centre is lit at all times when the ignition is ON, and message brightness is controlled by the dimmer switch.

All information displayed will be brightly lit if the exterior lamps master switch is OFF.

Note: Warning indicators are always brightly lit and are not affected by the dimmer switch.

Message centre

Language selection

The displayed language can be changed to another language, if required.

Press the ML/km button on the trip computer switchpack and whilst pressing, turn on the ignition to position **II**.


Now press the ML/km button, each press will display a different language. When the desired language is shown, press the A/B button. After three seconds the new language will be displayed for every message.

Note: *If you wish to exit the language changing procedure and keep the original language, do not press the A/B button but wait ten seconds or turn the ignition off.*

Message centre

Message list

The table on this and the following pages lists all messages and warning indicators and explains their meaning.

Message	Warning indicator	Priority Indicator	Meaning
LOW BRAKE FLUID	Brake	Red	<p>Displayed when the brake fluid level is low. Complete loss of braking may occur.</p> <p> WARNING: DO NOT drive the vehicle until the fault is rectified. Consult a Jaguar Dealer immediately.</p>
ENGINE COOLANT LOW	None	Red	Displayed when the engine temperature become excessive. Pull off the road when safe to do so and allow the engine to cool.
RESTRICTED PERFORMANCE	None	Red	This will be displayed when the vehicle has possible loss of power or driveability. Report the fault to a Jaguar Dealer.
ENGINE SYSTEMS FAULT	Malfunction indicator	Red	Displayed when the engine has defaulted to limp home mode. Report the fault to a Jaguar Dealer at the earliest opportunity.
VEHICLE TOO LOW	None	Red	The air suspension system is too low. Start the engine and wait for the message to clear before driving the vehicle. If the message is displayed while you are driving, restrict your speed until the message is cleared. If the message is persistently shown, inform your Jaguar Dealer.
DRIVERS (or PASSENGERS) DOOR OPEN	None	Red	The driver's and/or one or more passenger doors are open. Check that all doors are closed before driving.
TRUNK OPEN	None	Red	Check that the luggage compartment lid is closed before driving.
HOOD OPEN	None	Red	Check that the hood is closed before driving.

Message centre

Message	Warning indicator	Priority Indicator	Meaning
PARKBRAKE FAULT	None	Red	Displayed when there is a fault in the Electric Parking Brake (EPB) system. If the red brake warning indicator is flashing the EPB cannot be applied.
CATS SYSTEM FAULT	None	Amber	Displayed when a fault is detected in the adaptive damping (CATS) system (only those vehicles fitted with adaptive damping suspension). Report the fault to a Jaguar Dealer at the earliest opportunity.
AIR SUSPENSION FAULT	None	Amber	Drive the vehicle with caution and inform your nearest Jaguar Dealer to have the fault rectified.
ABS FAULT	ABS	Amber	ABS will not be available. The braking system will work, but care must be used if braking heavily.
CHECK PRESSURE RH or LH FRONT or REAR TIRE	TPMS (Tire Pressure Monitoring System)	Amber	The tire is significantly under inflated. You should stop the vehicle as soon as possible, check the tires and inflate them to the recommended pressure.
CHECK PRESSURE SPARE TIRE	TPMS	Amber	The spare tire is significantly under inflated. It should be inflated to the recommended pressure.
TIRE PRESSURE SENSOR FAULT	TPMS	Amber	You have a temporary spare wheel fitted. You should limit your vehicle speed to 80 km/h (50 mph) and, as soon as possible, replace the temporary spare wheel with a correctly inflated full size wheel.
			The TPMS sensor has become defective, an unapproved accessory is interfering with the TPMS or you have fitted a wheel and tire which does not have a sensor. You should seek Jaguar Dealer assistance at the earliest opportunity.

Message centre

Message	Warning indicator	Priority Indicator	Meaning
TIRE PRESSURE SYSTEM FAULT	TPMS	Amber	You have fitted wheels and tires which do not have TPM sensors fitted. Fit sensors to the wheels at the earliest opportunity.
			TPMS sensors have become defective, an unapproved accessory is interfering with the TPMS or a general fault has been detected in the TPMS. You should seek Jaguar Dealer assistance at the earliest opportunity.
TIRE PRESSURES LOW FOR SPEED	TPMS	Amber	The tire pressures are not suitable for high speed driving. You should reduce vehicle speed and inflate the tires to the recommended pressure for high speed driving.
SERVICE REQUIRED	None	Red	Displayed when vehicle service is required.
SERVICE REQ'D IN XXXX MLS (XXXX km).	None	Amber	Displayed when there is 3400 km (2000 miles) and less, to next vehicle service.
STEERING COLUMN LOCKED	None	Amber	The steering lock system has failed to unlock the steering column. The engine cannot be started. Remove the key and re-insert it into the ignition switch, then try again to unlock the column by turning the steering wheel gently to the left and right (only small movements will be possible).
GEARBOX FAULT	None	Amber	It is likely that the driver will experience a degradation of transmission operation and possibly reduced acceleration capability.
DSC NOT AVAILABLE	Stability Control	Amber	Displayed when a fault occurs in the stability control system.

Message centre

Message	Warning indicator	Priority Indicator	Meaning
DSC ON (or OFF)	Stability Control	Amber (OFF only)	Displayed when the stability control system is switched ON or OFF. The warning indicator will FLASH when the stability control system is switched ON and operating. When the system is switched OFF, the warning indicator in the instrument panel will be illuminated until the system is switched back ON.
WASHER FLUID LOW	Low washer fluid level	Amber	Indicates that the windshield wash fluid level is low. If wash/wipe is selected when this message is displayed (even if it has been cleared from the message centre), the programmed wipe after washing will not operate. This is to avoid smearing the windshield if the reservoir is empty. Top up the washer fluid at the earliest opportunity.
CHECK FUEL FILLER CAP	None	Amber	The fuel filler cap may be loose or leaking excessively.
VALET MODE	None	None	Indicates that the valet switch is selected on. It also indicates that an attempt has been made to open the luggage compartment using the interior release whilst valet mode is selected.
Note: In most countries it is illegal to use a vehicle with a defective exterior bulb. Bulb replacement information starts on page 216.			
FAILED FRONT LH (or RH) INDICATOR	None	Amber	Check for any failed front direction indicator lamps and replace.
FAILED REAR LH (or RH) INDICATOR	None	Amber	Check for any failed rear direction indicator lamps and replace. This also applies to any trailer/caravan lamps.
FAILED LEFT (or RIGHT) SIDE REPEATER	None	Amber	Check for failed side direction indicator repeater lamps and replace.

Message centre

Message	Warning indicator	Priority Indicator	Meaning
EXTERIOR LAMPS SWITCH IS OFF	None	Amber	This is displayed with the ignition on, the headlamps in the OFF position and it is dark or ambient light level is low. This message is displayed only when the lamps would be on if the switch were in AUTO position. It is a reminder to drivers who normally leave autolamp selected on and may not be aware that it has been turned off.
APPLY PARKBRAKE	None	Amber	If the battery has been disconnected then the EPB must be applied to reset the system.
PARKBRAKE ON	Brake	None	Displayed if the EPB is applied whilst the vehicle is moving above 3 km/h (2 mph). Release the EPB.
LISTENING	None	None	When Voice Activation has been selected and the system is waiting for a voice command/input.
COLUMN ADJUST	None	None	The column adjust switch has been moved to this position.
COLUMN ADJUST AUTO	None	None	The column adjust switch has been moved to this position.
PEDAL ADJUST	None	None	The column adjust switch has been moved to this position.
PEDAL ADJUST INHIBITED	None	None	The pedals cannot be adjusted when the vehicle is in cruise control operation.
AUTOLAMP DELAY OFF	None	None	Autolamp delay function has been turned off.
AUTOLAMP DELAY X:XX	None	None	Changing the time delay will display the newly set time that the headlamps will remain ON after exiting the vehicle.
CRUISE ENGAGED	None	None	Displayed when cruise control system is operating.
CRUISE CANCELLED	None	None	Driver has cancelled cruise control or is braking.
CRUISE OVERRIDE	None	None	Driver is pressing the accelerator pedal.
The following messages only apply to vehicles fitted with Adaptive Cruise Control.			

Message centre

Message	Warning indicator	Priority Indicator	Meaning
DRIVER INTERVENE		Red	Action by the driver to apply the brakes is required.
SETSPEED XXX KM/H		None	Speed set for Adaptive Cruise Control.
GAP ← — →		None	Set the distance (time gap).
ACC SENSOR BLOCKED		Amber	Clean the front of the vehicle in the area of the sensor unit (the sensor is mounted behind the left-hand cover in the lower cooling air inlet).
CRUISE NOT AVAILABLE		Amber	Adaptive cruise malfunction.
FORWARD ALERT ON (or OFF)		None	Forward alert feature has been switched ON or OFF. A warning will not be given for objects detected in the vehicle path of travel if forward alert is switched OFF.
FORWARD ALERT		None	Forward alert feature has been switched ON or the setting changed. A warning will be given for objects detected in the vehicle path of travel. A longer gap symbol indicates that the system will warn when detected objects are further away than the previous setting.

Trip Computer


COMPUTER DISPLAY

The computer memory stores data for a journey or series of journeys until it is reset to zero.

The displayed information is for guidance only, as it can be affected by traffic, road and weather conditions.

Two independent memories are available (A and B) to allow two separate journeys to be recorded concurrently, for example, work usage and evening/weekend usage.

Trip distance, average fuel economy and average speed will be prefixed A or B depending on the current memory selected.

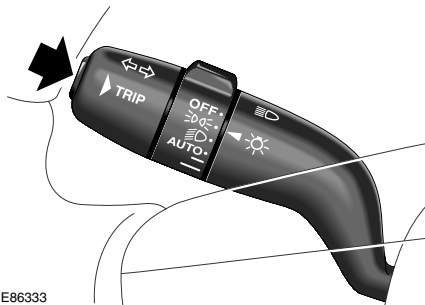

E86333

Press the TRIP button on the end of the left column stalk switch repeatedly to display the data in the following order:

- Odometer.
- Trip distance.
- Range.
- Current fuel consumption.
- Average fuel economy.
- Average speed.
- Messages.

Odometer

The odometer shows the total vehicle distance travelled since the vehicle was new.

When the ignition is switched ON (position II) the display shows the odometer reading. This will be followed by any warning messages, if there are any, for example, **PASSENGER DOOR OPEN**.

The odometer reading is displayed in either miles or kilometres, depending on the units selected with the trip computer.

Trip Distance (A/B)

This displays the distance travelled since the last memory reset.

The maximum trip reading is 16,090 kilometres (9999.9 miles). The computer, either A or B, will automatically reset to zero if this distance is exceeded.

Range

This shows the predicted distance, kilometres or miles, that the vehicle should travel on the remaining fuel, assuming average fuel economy and fuel consumption stay constant.

Current Fuel Consumption

Instantaneous or at the moment fuel consumption, which is continuously updated.

Average Fuel Consumption (A/B)

The average fuel consumption, litres per 100 kilometres or miles per gallon, based on the accumulated distance travelled and the accumulated fuel used.

Average Speed (A/B)

The average speed since the last press of the reset button.

Trip Computer

TRIP COMPUTER SWITCHPACK



JOL3641

ML/km

Pressing the 'ML/km' button alternately displays data in metric or imperial units.

A/B

Selects either A or B trip memory. Select the required data using the column stalk TRIP button and then pressing A/B will show the A or B information for that data.

Reset

- One short press clears (hides) the displayed message. Continue to give brief presses to clear one message after another until all messages are cleared.
- Press and hold for three seconds to reset or clear the selected trip A or B, to zero.

Note: If warning messages are hidden, the warning or fault still exists and requires investigation.

Warning and information messages have priority over trip data and, if active, will be displayed when the ignition is at position II.

SETTING THE TRIP COMPUTER

At the start of the journey, or series of journeys, to be recorded, reset the computer memory to zero as follows:

1. Press the TRIP button on the end of the left column stalk switch to select a trip function. The computer will display either TRIP A: or TRIP B: data.
2. Press the A/B button to select the trip (A or B) to be reset.
3. Press the RESET button and hold for three seconds.

The display will read:

RESETTING

TRIP A (or B).

Then it will reset and display:

A: 0 (or B: 0) or the new value.

Note: All trip functions for A or B, depending on which was selected, will be reset.

Trip Computer

CLEARING MESSAGES

Messages can be hidden by pressing RESET on the trip computer switchpack.

One press will hide one message. Once all messages have been hidden, the display will show trip data, a further press will display the odometer reading.

If RESET is pressed again, all active messages will be re-displayed.

Repeatedly pressing the RESET button will cycle through the trip, odometer and message modes.

If a fault occurs when in trip computer or odometer mode, the relevant message will be displayed immediately.

If a trip computer function is selected by pressing the TRIP button while messages are displayed, the trip data will be displayed for ten seconds, then the message will reappear.

Note: *Hidden messages reappear after an ignition OFF/ON cycle, if the fault remains.*

Exterior Lighting

LAMPS MASTER SWITCH



WARNING:

It is an offence in certain countries to obscure front and rear lamps, direction indicators and reflectors.

Switch positions

The exterior lamps are controlled by the left-hand column stalk switch.

The rotary collar on the stalk has positions for turning the exterior lamps on or off and positions for autolamps/exit delay. These are:


OFF



JOL3190

All exterior lamps OFF (except vehicles provided with daylight running lamps).


Sidelamps

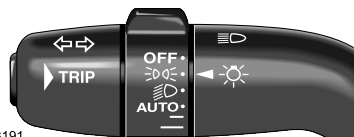

JOL3191

Switches on front side lamps, tail, license plate and any other marker lamps required by local legislation.

Headlamps

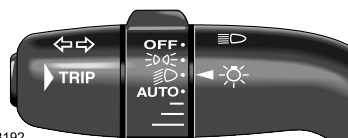

JOL3192

With the ignition in position II, this position switches on low beam headlamps, in addition to the lamps switched on in sidelamp position.

The left-hand column stalk switch has two positions for controlling the high beam.

Pulling the switch towards the steering wheel and releasing causes the high beam to flash on and off. The high beam can be flashed at any time when the switch is pulled and will remain ON for as long as the switch is held.

The second position is to switch high beam headlamps ON. With the ignition in position II, first select low beam lamps, and then push the column lamp switch away from the steering wheel.


The blue warning lamp on the instrument panel and the high beam headlamps will come ON.

To turn high beam OFF, pull the column switch towards the steering wheel to return to low beam.

Note: If low beam is switched OFF with high beam still activated, both low and high beam will be extinguished. Both low and high beam will illuminate if low beam is turned on again.

Exterior Lighting

AUTOLAMPS

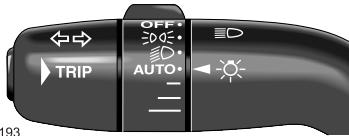

JOL3193

A light sensor control, mounted on the front of the fascia, monitors exterior light levels and automatically switches the sidelamps and low beam headlamps ON or OFF.

The ignition switch must be in position 'II' and AUTO selected on the stalk for full automatic lamp operation.


When light fades towards dusk, the sidelamps and headlamps will switch ON automatically and the sidelamp warning indicator in the instrument panel will illuminate.

At dawn, as light increases, the sidelamps and headlamps switch OFF automatically.

Keep the windshield clean and do not cover the sensor. Obstructing the light in this area of the sensor may lead to unwanted operation of the sidelamps and headlamps.

If the windshield wipers are switched on in auto, slow or fast modes for more than 20 seconds then the exterior lamps will be switched on, if selected to autolamps mode. The lamps will switch off two minutes after the wipers are switched off or will go off straight away if autolamps is de-selected or the ignition is turned off.

EXIT DELAY

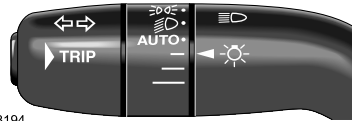

JOL3194

When parking the car at night, if the headlamps were switched on then they will remain on for a short period after the key has been removed from the ignition switch. This is to give a clearly lit area for occupants leaving the vehicle.

If the exterior lamps switch rotary collar is in the AUTO position there will be no exit delay and the headlamps will turn off when the exterior lamps switch is turned off.

Three settings on the rotary collar set the time that the lamps will remain on after the key is removed from the ignition switch;

- 10 seconds.
- 30 seconds.
- 2 minutes.

Note: The ignition switch must be turned off or the key removed from the ignition switch for this feature to operate.

The message centre shows the delay setting or when this feature is turned off.

HEADLAMP CONVENIENCE

When approaching the vehicle, the sidelamps and headlamps can be switched on by pressing the headlamp button on the remote transmitter.

The lamps will come on for 25 seconds or can be switched off by pressing the remote transmitter headlamp button again.

Exterior Lighting

DAYLIGHT RUNNING LAMPS

In certain countries it is a legal requirement for the exterior lamps to be on during the hours of daylight.

With the rotary collar in the OFF position, low beam headlamps, sidelamps, tail lamps, license plate lamps and, where fitted, side marker lamps will switch on automatically with the following conditions:

- The ignition is turned to position II.
- The vehicle gear selector out of park.
- The Electric Parking Brake is not applied (released).

HEADLAMP LEVELLING

No manual control of headlamp levelling is required on this vehicle. The air suspension will keep the vehicle level.

FOG LAMPS

The fog lamps can only be switched on when the ignition switch is in position II.

Front fog lamps



JAG0802


With the lamps on in sidelamp or low beam position, press the switch to turn on the front fog lamps. Pushing the switch again will turn off the front fog lamps.

A warning indicator in the instrument panel indicates that the fog lamp is on.

If the sidelamps are turned off, the fog lamps will automatically turn off.

Note: The front fog lamps should only be used when visibility is severely restricted by fog.

Rear fog lamps

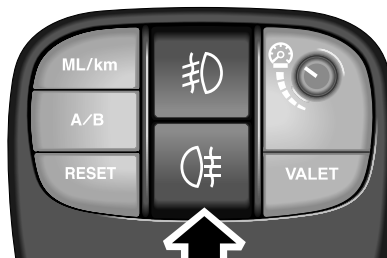

JAG0803

The rear fog lamps can only be switched on if the low beam headlamps are on or if front fog lamps are switched on.

Press the switch to turn on the rear fog lamps. Pushing the switch again will turn off the rear fog lamps.


A warning indicator in the instrument panel indicates that the fog lamp is on.

When the side lamps are switched off the fog lamps will go off.

If the sidelamps are left on, but the ignition switch is turned to OFF, the fog lamps will switch off.

Exterior Lighting

DIRECTION INDICATORS

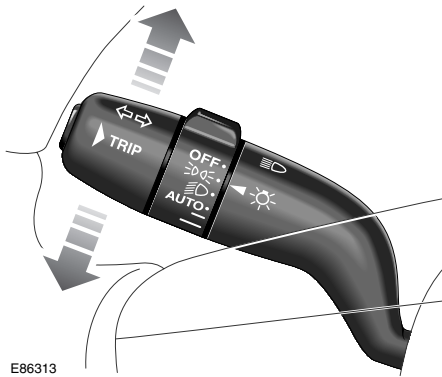

E86313

The direction indicators, the left column stalk, operate when the ignition is in position II. Move the stalk up for indicating a right turn or move it down to indicate a left turn.

Two positions are provided. The first position, partly moving the stalk up or down, causes the indicator to flash while it is held in this position. On releasing the stalk the indicators stop flashing.

The second position is a full movement of the stalk up or down, which can then be released. The indicators will remain flashing and will cancel when the turn is completed.

An audible ticking and a flashing green arrow on the instrument panel indicates that the selected direction indicator is operating.

Bulb failure

The direction indicators (including those on a trailer, if attached) and side repeaters are monitored for bulb failure.

If a bulb fails when it is on, a message is shown in the message centre. At the same time, the corresponding side green warning indicator will flash at twice the normal rate. The audible ticking will sound at twice the normal rate.

DOOR GUARD/PUDDLE LAMPS

Door guard lamps are fitted to each door to give warning of an open door to passing vehicles.

Puddle lamps illuminate the 'step out' area at night.

Each lamp comes on automatically when the door is opened. If the door is left open the lamps remain on for five minutes and then switch off.

APPROACH LAMPS

Approach lamps are fitted in the door mirrors to provide illumination for the floor area around the front doors.


The approach lamps come on when:

- The vehicle is unlocked using a key, a key transmitter or the central locking switch.
- Using the headlamp convenience button on the key transmitter.
- Reverse gear is selected.

The approach lamps will not illuminate if the autolamp sensor determines that the ambient light is sufficiently bright.

Exterior Lighting

HAZARD WARNING

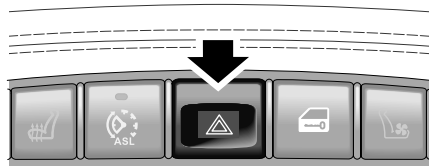

E86312

The switch is in the centre console below the radio and operates with the ignition ON or OFF. Use only in an emergency to warn traffic of a vehicle breakdown or approaching danger.


To operate, press the switch.

The direction indicators, the instrument panel green indicators and the audible warning will operate in unison. The switch symbol will illuminate.

To cancel, press the switch again.

Interior Lighting

CABIN LIGHTING

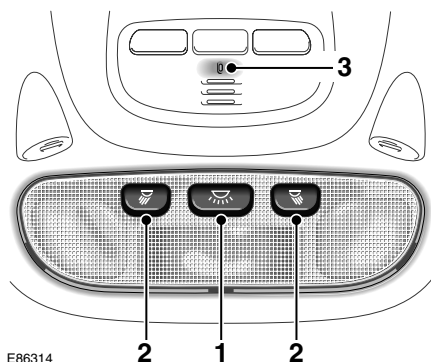

1. Front and rear courtesy lamps and footwell lamps.
2. Reading/map lamps.
3. Centre console illumination.

Interior lighting comprises front overhead courtesy lamp and two front and two rear reading/map lamps. Vanity mirror, glove compartment, footwell and luggage compartment lamps are also provided.

Pressing the centre switch (1) in the overhead console turns the front and rear courtesy lamps and footwell lamps on. A second press turns the lamps off.


The centre console area is illuminated by a small lamp from the overhead console (3). This is on whenever the sidelamps are on and can be controlled by the dimmer switch.

Reading/map lamps

The reading/map lamps are turned on and off by individual switches (2).

The reading/map lamps will remain on for up to 15 minutes after the ignition has been turned off.

Rear Lighting

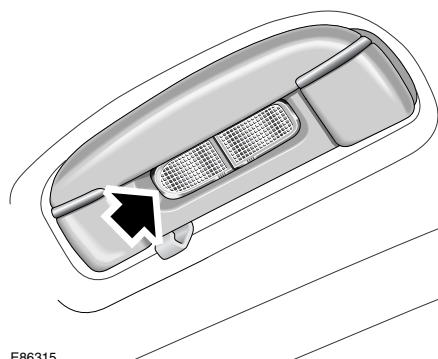

The rear interior lamps can be switched on or off by pressing the lens cover.

Illuminated entry/Exit

The interior lamps fade on when a door is opened and go out when the engine is started or 15 seconds after the last door is closed. If any door is left open, the lamps will fade off after two minutes.

When the vehicle is unlocked with a key or the key transmitter, the courtesy lamps will come on at maximum brightness for two minutes if a door is not opened.

With the engine running, opening any door will put on all interior lamps, they will go out immediately after the last door is closed.

Glove compartment

The glove compartment will be illuminated when the lid is opened.

Luggage Compartment Lighting

The luggage compartment will be illuminated when the lid is opened.

Interior Lighting

DIMMER SWITCH



JAG0800

The instruments, switchpacks, in-car entertainment panel and climate control panel will be lit when the exterior lamps are switched on.

Push and release the knob to extend it for ease of operation.

Rotate the knob to adjust the illumination to the required level.

Push the knob again to place it in the stowed position.

BATTERY SAVER

If the interior lamps are switched on using the centre switch in the overhead console and the ignition switch is turned to position **0**, the lamps will automatically turn OFF after 40 minutes.

If the interior lamps are switched on by opening a door and a key is left in the ignition switch in position **0**, the lamps will automatically turn off after ten minutes.

If the glove compartment or vanity mirror lamps are switched on and the ignition switch is turned to position **0** or the key is removed, the lamps will automatically turn OFF after 40 minutes.

Parking Assist

INTRODUCTION



WARNING:

Parking aids may not detect moving objects such as children and animals until they are dangerously close. Always use extreme caution when manoeuvring.


Parking assist is always automatically switched on when the ignition is turned on.

Caution: Parking aids are for guidance only, and are not intended to replace the driver's visual checks for obstructions when manoeuvring.

Caution: PDC sensors may not detect some obstructions. Obstructions such as narrow posts, small objects close to the ground, and some objects with dark non-reflective surfaces, for example.

Caution: Systems which use the same frequency band as the front PDC sensors may cause irregular tones to be emitted.

Caution: When washing the vehicle do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.

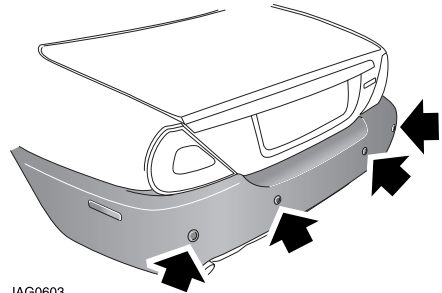

Note:

- For reliable operation, the sensors in the front (if fitted) and rear bumpers should be kept free from frost, ice and grime.
- When using a high pressure spray the sensors should only be sprayed briefly and at least 200 mm (8 inches) distance from the sensors.
- Front parking assist may sound spurious tones if it detects a frequency tone using the same band as the sensors, for example, a motor cycle exhaust.

Towing


When an approved Jaguar tow bar electrical system is fitted, the rear parking assist is automatically turned off if a trailer is attached to the vehicle.

Rear fitted accessories

Particular care must be taken with rear fitted accessories, for example, a tow bar or a bicycle carrier, as the rear park assist will only indicate the distance from the bumper to the obstacle.

Parking Assist

PARKING ASSIST

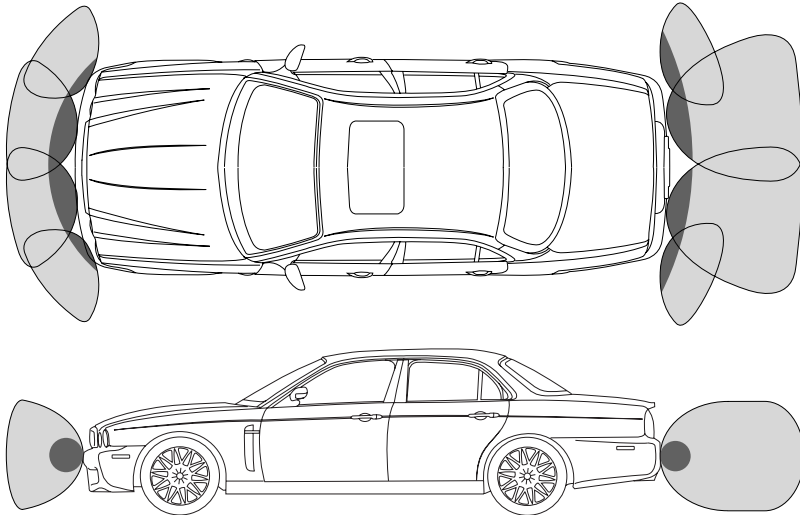


E86368

1  2 

When reverse gear is selected and ignition is on, rear parking assist automatically provides an audible proximity warning (to the nearest detected obstacle) when reversing the vehicle, if obstacles are detected within the operating range, shown in the illustration above, between approximately:

1. 600 mm (24 inches)
2. 1600 mm (63 inches)

Parking Assist

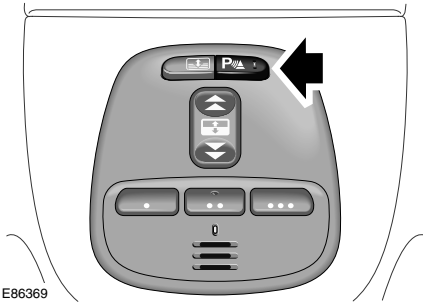

E86369

When both front and rear parking assist are fitted, a switch is located in the overhead console.

Pressing the switch turns front and rear parking assist on or off together. The switch integral warning lamp will come on when the system is turned off or if a fault is detected in the system. A switch is not provided when only rear parking assist is fitted.

Note: *The front parking assist will also operate when reverse gear is selected.*

Front parking assist provides an audible proximity warning when driving forwards if objects are detected within the operating range, shown in the illustration below in the approximate range:

The front sensors only operate within a fixed speed range in forward gears and are not effective when moving forwards above 15 km/h (9 mph) or when slowing down until below 7 km/h (4½ mph).


If an obstacle is detected at the front or rear of the vehicle, a beep tone will be heard from the front or rear speaker respectively, which increases in rate as the vehicle approaches the obstacle.

The front or rear parking assist beep will become continuous when the obstacle is detected at or within 300 mm (12 inches) from the rear or approximate 250 mm (10 inches) from the front of the vehicle.

If the system has a fault when engaging reverse gear or turning on the ignition, then a single, three second tone will be heard (only once per ignition cycle) and, if fitted, the switch lamp will come on. The system is automatically disabled when a fault is detected.

Horn

DUAL TONE HORN

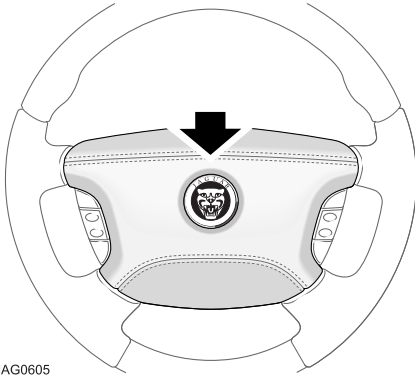


JAG0605

The dual tone horn is operated by pressing the centre pad on the steering wheel.

The horn also operates as a warning horn if the vehicle alarm system is activated.

Sunroof

INTRODUCTION

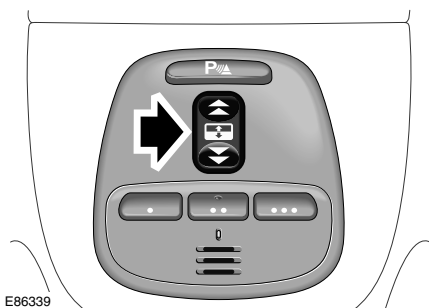

WARNING:

Extreme care must be taken to ensure that none of the occupants have any part of their body in a position where it could be trapped by the panoramic sunroof when closing. Although an anti-trap mechanism is fitted, serious injuries can occur.

The sunroof switch is located in the overhead console. The ignition switch must be in either position **I** or **II** for the sunroof to operate.

The sunroof has a one-touch facility enabling the occupant to fully open or close the sunroof in one quick movement.

OPERATION

To open the sunroof

- Push the rear of the switch gently upwards to the first position and hold until the sunroof is fully open. The sunroof can be stopped at any open position by releasing the switch.
- To fully open the sunroof with one-touch operation, briefly push the rear of the switch fully upwards to the second position and then release. To stop the sunroof opening, briefly press the switch upwards, forwards or rearwards.

To close the sunroof

- Push the front of the switch upwards to the first position and hold until the sunroof is closed. It can be stopped at any position by releasing the switch.
- To close the sunroof with one-touch operation, briefly push the front of the switch upwards to the second position and then release. To stop the sunroof closing, press the switch upwards, forwards or rearwards.

To tilt the sunroof open

- Push the front of the switch upwards and hold until the required position is reached, or until the tilt is fully open, and then release the switch.

To tilt open with one-touch operation

- Briefly push the switch upwards to the second position.

Sunroof

To close the tilted sunroof

- Push and hold the rear of the switch until the sunroof is closed. Briefly push the rear of the switch upwards to the second position to tilt closed with one-touch operation.

Sunshade operation

The sunshade can be manually opened and closed using the recessed handle.

Note: *When the sunroof is fully open the sunshade is also fully open and, because the recessed handle is hidden, it cannot be manually closed from this position. The sunroof will need to be fully closed to gain access to the recessed handle.*

Wipers and Washers


WINDSHIELD WIPERS

Caution: Do not operate the windshield wipers on a dry screen. The drag on the wiper mechanism may cause damage.

Caution: In freezing, or very hot conditions ensure that the wipers have not stuck to the windshield before operating. The drag on the wiper mechanism may cause damage.

Caution: Remove any snow, ice, or frost from the windshield, around the wiper arms and blades and the screen scuttle before operating the wipers. Snow and ice can cause damage to the wiper mechanism if left uncleared.

The windshield wipers and screen wash functions are controlled by the right-hand column stalk switch and only operate with the ignition in position II.

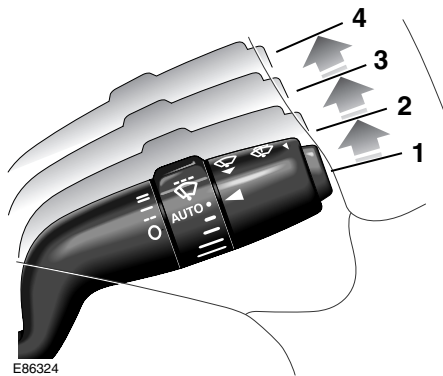

Moving the stalk up or down operates or turns off the windshield wipers.

The stalk functions are as follows:

- Position (1):
The windshield wipers are OFF and parked.

- First position (2):
Intermittent wipe.
- Second position (3):
Slow speed wiper operation.
- Third position (4):
High speed wiper operation.

Intermittent wipe

When intermittent wipe is selected the delay between wipes can be varied. Turn the collar to vary the delay from 2 seconds to 20 seconds.

Flick wipe

Pull the column switch towards the steering wheel for a single wipe. Holding the column switch in this position will operate the wiper continuously at slow speed until released.

Rain sensitive wiper control

When AUTO, (turn the rotary collar to AUTO) and intermittent wipe are selected, the wipers will automatically operate to clear the windshield when rain falls on to the windshield, or when moisture is present.

For the wipers to operate, the ignition switch must be in position II.

Note: When starting a journey with a wet windshield, the rain sensing wipers will not operate immediately the ignition is switched on. Therefore, a flick wipe should be used to clear the windshield of any moisture.

Caution:

Ensure that AUTO is not selected when entering a car wash or damage to the wiper blades/arms can occur.


Wipers and Washers

WIPERS ON, LIGHTS ON

Note: Some States require lights on when the wipers are in use.

If the windshield wipers are switched on in auto, slow or fast modes for more than 20 seconds, then the exterior lamps will be switched on, if selected to autolamps mode. The lamps will switch off 2 minutes after the wipers are switched off or will go off straight away if autolamps is de-selected or the ignition is turned off.

WINDSHIELD WASH/WIPE

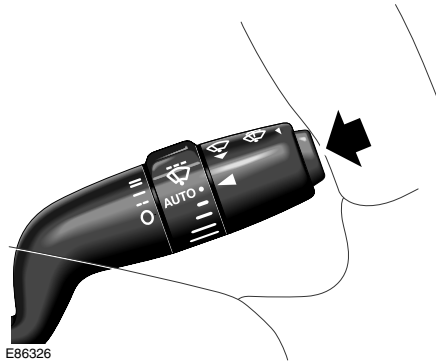

WARNING:

Some screenwash products are flammable, do not allow screenwash to come into contact with sources of ignition.

Push the button on the end of the stalk to obtain the wash/wipe programme.

If the wipers are selected off or intermittent, the washers will operate at slow speed during the washing action when the button is pressed. When the button is released, the wipers will complete up to three further wipes. A single wipe will take place four seconds after the last wipe to clear any drips of water from the windshield.

If rain sensitive wipers are fitted and selected then the wipers will operate until no moisture is detected.

Wipers and Washers

HEADLAMP POWERWASH

The headlamp powerwash units (if fitted) are mounted between the front headlamps.

The headlamp powerwash feature will operate if the ignition is in position **II** and low or high beam headlamps are switched ON. It will not operate if the washer fluid level is low.


When the windshield wash/wipe button is pressed, the headlamp powerwash directs two short bursts, three seconds apart, at the headlamps. If the wash/wipe button is held, the headlamp wash cycle will continue for up to 20 seconds.

The headlamp powerwash will operate the first time the wash/wipe button is pressed and thereafter every sixth succeeding wash/wipe operation. If the headlamps or ignition are switched OFF and ON again, headlamp powerwash will operate on the next press of the wash/wipe button.

Note: *If the washer fluid level is low in the reservoir, the windshield wipers will not operate when windshield wash is selected, even though there may be washer fluid remaining in the reservoir and sprayed onto the screen. This is to prevent damage to the blades, or scratching of the glass, or smearing dirt across the screen.*

Parkbrake

ELECTRIC PARKING BRAKE OPERATION

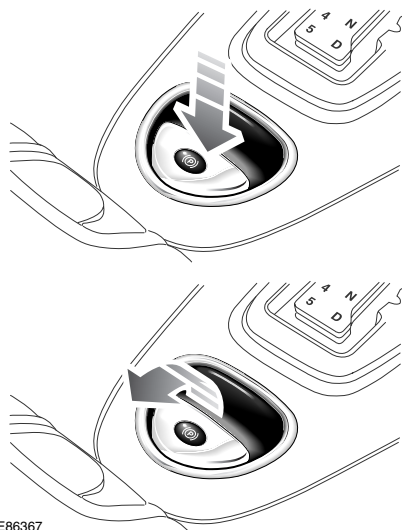

E86367

The switch which operates the EPB is mounted on the centre console to the rear of the gear selector.

To engage the EPB, pull the EPB switch upwards and release. The switch will return to the neutral position. The EPB warning/brake fluid low warning indicator on the instrument panel will illuminate.

To disengage the EPB, with the ignition switch in position **II** or with the engine running, apply the footbrake and press the EPB switch down.

The EPB is automatically released when the gear selector is moved from the Park **P** position.

If the vehicle is stationary and the gear selector is in **D** or **R** and the EPB is applied, then the EPB will automatically release when the accelerator pedal is depressed.

Inadvertent operation of the EPB whilst the vehicle is in motion will cause the message **PARKBRAKE ON** to be displayed on the message centre, the warning indicator in the instrument panel will be illuminated and a warning chime will sound.

If the EPB is applied whilst the vehicle is moving, push the switch down to release it. If the switch is in the neutral position after EPB application, depressing the accelerator pedal will release the EPB.

Note: *If the vehicle is in motion, the EPB should only be used as an emergency brake.*

The EPB is automatically applied when the key is removed from the ignition switch. If you wish to keep the EPB off, press and hold the EPB switch down and, at the same time, remove the key.


Caution: **Take care that the vehicle is safely parked to prevent it from rolling if you wish to leave the EPB off.**

The warning indicator in the instrument panel will remain on for a short time if the EPB is applied when the key is turned to position **0** or if the key is removed.

If the battery has been discharged or disconnected the message **APPLY PARKBRAKE** will be displayed when the ignition is next switched on. Depress the footbrake and pull the EPB switch up to apply the EPB. This is required to reset the EPB system which will now function correctly.

Interior Features

ACCESSORY POWER POINTS

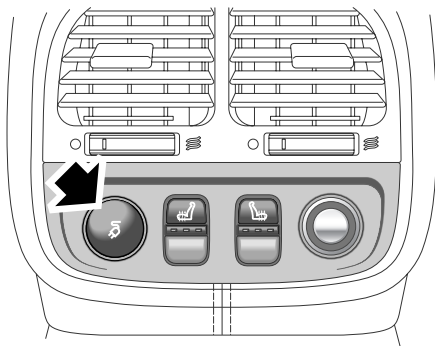

E86361

There are two sockets to provide a power source for accessories, such as a 12-volt vacuum cleaner or mobile phone.


One is fitted to the end of the centre console to the left of the cigar lighter, beneath a flip lid.

The other accessories socket is located in the glove compartment (not shown).

Caution: Only Jaguar approved accessories should be plugged into the power sockets. Using any other equipment may damage the vehicle's electrical system. If you are in any doubt contact a Jaguar Dealer.

Caution: The engine should be running when using accessories for long periods. Failure to do so can discharge the battery.

CIGAR LIGHTER AND ASHTRAY

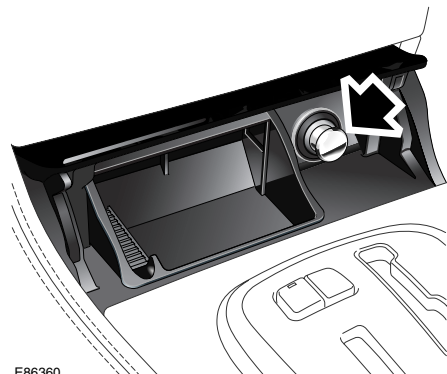

E86360

Push the lid to gain access to the front cigar lighter and ashtray. To operate the cigar lighter the ignition must be on, press the lighter in and wait until the element has heated, it will then pop-up.

Note: *Never hold the lighter knob down. Do not attempt to remove particles from the heating element, it is self-cleaning.*

The cigar lighter is designed to be used just to heat the lighter element and is not for providing a power source for accessories.

To empty the ashtray, lift it out vertically and remove. After emptying, push the ashtray into the opening until it snaps back into place.



WARNING:


Do not use the ashtrays for disposing of waste paper, or other combustible items. The resulting fire may cause death or serious injury.

Interior Features

Passenger door ashtrays

To remove the passenger door ashtray, open the ashtray cover by lightly pressing downwards. When the cover is fully open, lightly push it towards the door trim and remove.

SUN VISORS AND VANITY MIRRORS

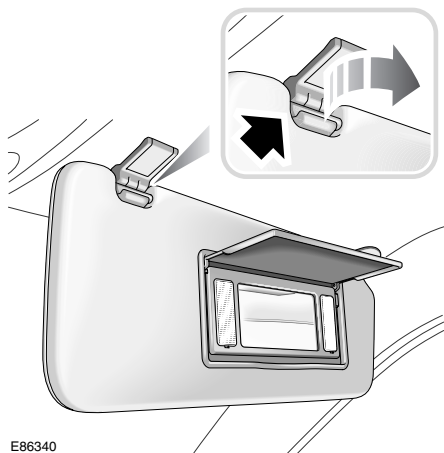


E86340

Adjustable sun visors can be swung downwards or unclipped and swung sideways to reduce sun glare.

The sun visors are fitted with illuminated vanity mirrors, behind a hinged flap. The lamp comes on when the flap is lifted.

SUNGLASSES STOWAGE

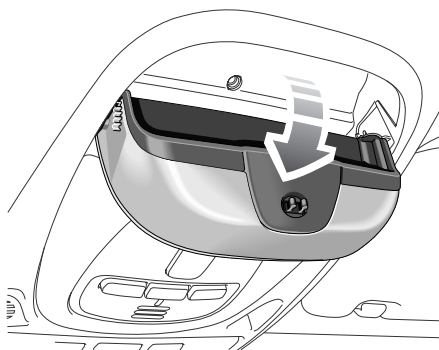


E86343

A compartment for stowing sunglasses or spectacles is located in the overhead console. Push upwards to open.

Interior Features

CENTRE CONSOLE

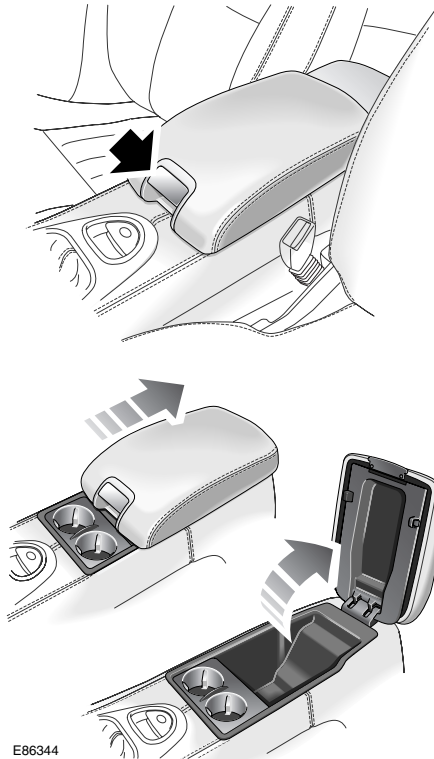

E86344

The centre console carries the armrest, cupholders and the cubby box and. At the rear of the centre console is a cigar lighter and accessory power point.

The sliding armrest is hinged at the rear and has a release button located on the front of the armrest. The chromed button is pulled upwards to raise the armrest and gain access to the cubby box.

To expose the two cupholders, slide the armrest rearwards.



WARNING:

The cup and bottle holders should only be used for soft containers. Containers which are hard (cans, metal, ceramic, hard plastic etc.) can cause serious injury if the vehicle is involved in an accident, sudden manoeuvre or braking.



WARNING:



Do not carry open drinks containers. Hot liquids can cause serious injury when spilled and may damage the vehicle.



WARNING:

Do not drink, or use the drinks holders when driving. Doing so would break concentration, which may result in loss of control.

Depending on specification, an alternative centre console may be fitted.

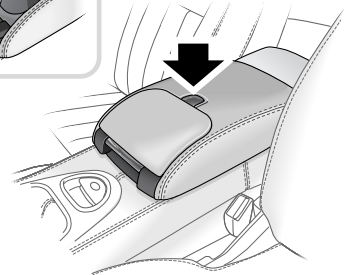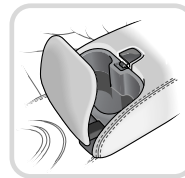


JAG0817

To expose the two cupholders, press the button to release cover.

Interior Features

REAR ARMREST

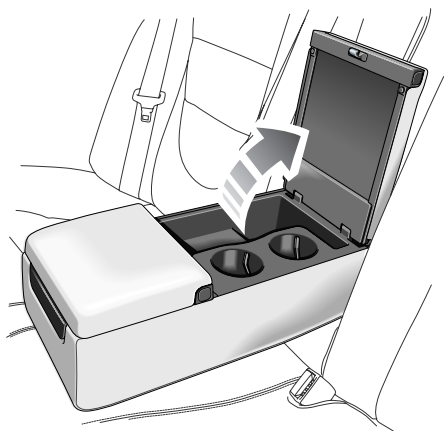

E86358



WARNING:

The cup and bottle holders should only be used for soft containers. Containers which are hard (cans, metal, ceramic, hard plastic etc.) can cause serious injury if the vehicle is involved in an accident, sudden manoeuvre or braking.



WARNING:

Do not carry open drinks containers. Hot liquids can cause serious injury when spilled and may damage the vehicle.




WARNING:

Do not drink, or use the drinks holders when driving. Doing so would break concentration, which may result in loss of control.

Depending on vehicle specification there can either be a rear armrest or a rear centre console fitted.

To access the cupholders in the rear armrest, press the two buttons on the rear hinged lid and raise it. The cupholders can then be used as required.

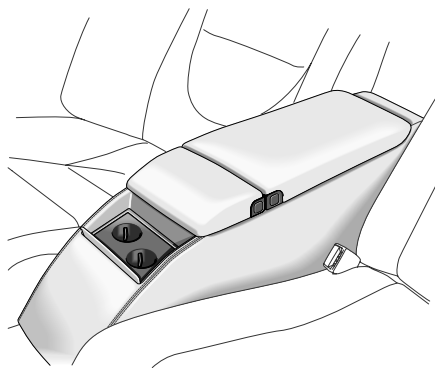


E86359

To access the cupholders in the rear centre console, push and release the rear of the lid which will then fold forwards exposing the two cupholders. To close the lid, fold rearwards and push it shut to cover the two cupholders.

Interior Features

SUNBLINDS


Rear sunblind

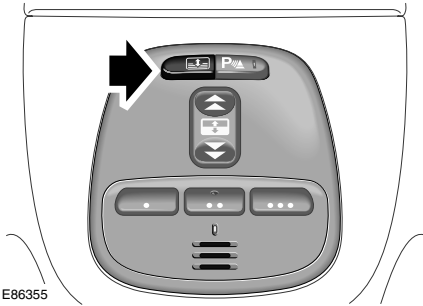

E86355

Push the switch to raise the sunblind.
To lower the sunblind, push the switch again.


Side sunblinds

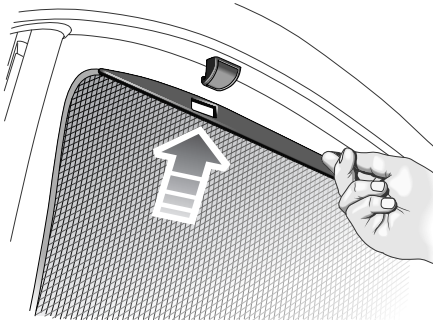

E86356

The rear door window sunblinds are manually operated by lifting the blind and securing it in the two clips provided. To lower the blind just unhook it from the clips and lower it gently back into the stowage.

Quarter light sunblinds

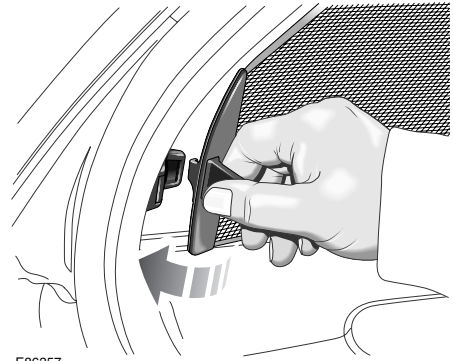

E86357


 **WARNING:**

Take care when releasing the quarter light blind because it could strike your face if it slips from your hand.

Quarter light blinds have a single securing clip. Pull the blind rearwards and locate it in the clip. To stow the blind, unhook it and gently let it return into the stowage.

Interior Features

GLOVE COMPARTMENT

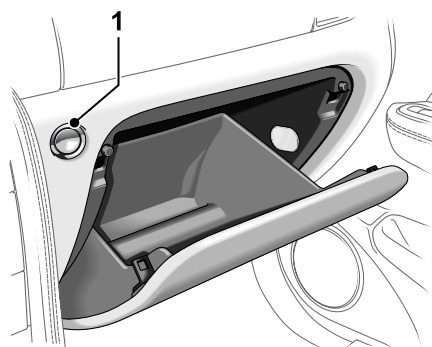

JAG0641

To open the glove compartment, press and release the button (1).

If the glove release button is pressed more than 15 times within a 20 second duration, the glove opening function will be inhibited.




It will then be necessary to wait for 20 seconds before the glove opening function will be reactivated.

The glove compartment cannot be opened when the following conditions occur:

1. The vehicle is being driven using the green-headed valet key and valet mode has been selected, or,
2. The vehicle is centrally or double-locked via the remote transmitter, or via the driver's door key barrel by turning the key towards the rear of the vehicle and releasing, or, after auto-locking occurs.

PICNIC TRAY

(where fitted)

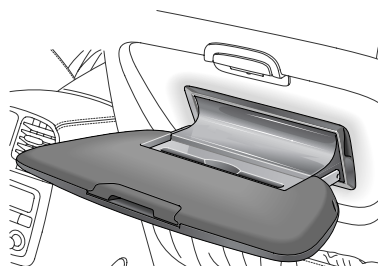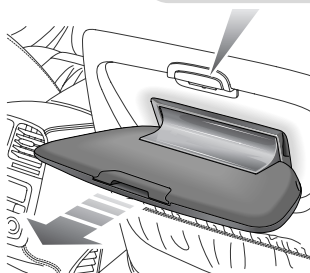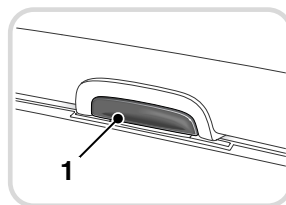

E86363

Push the button (1) to release the tray.

To extend the tray, pull it towards you. This will expose the pen holder slot.

To replace the tray, push it forwards to its non-extended position and then lift it upwards and push it into the seat back until it clicks into place.

Do not use the tray in a moving vehicle.

Stow away securely when not in use.

Engine Starting

BEFORE STARTING

Before starting the engine, new owners/drivers should familiarize themselves with the layout and operation of the controls and instruments.



WARNING:

Before attempting to start the engine, check that the Electric Parking Brake (EPB) is ON and the gear selector lever (automatic transmission) is in position P or N.

When the vehicle is stationary the automatic gear selector may be left in **D**, **2**, **3** or **4**, unless the vehicle is to be parked. When stopping for traffic lights, junctions etc., either select **P** or apply the EPB and select **N**.

STARTING THE ENGINE



WARNING:

Never start the engine, or leave it running, when the vehicle is in an enclosed space. Exhaust gasses are poisonous and can cause unconsciousness and death if inhaled.

The engine cannot be started until the automatic transmission gear selector is in **N** or **P**.

Insert the key into the ignition switch and turn clockwise to position **II** to switch on the ignition.

When the key is turned to position **III** the starter motor will turn the engine until:

- The key is released and automatically returns to position **II**.
- The ignition switch is turned to **0** or **I**.
- The gear selector is moved out of **P** or **N** (automatic transmission vehicles).
- The engine starts.

Do not use the starter continuously for longer than six seconds. Continued use of the starter will discharge the battery and may damage the starter mechanism. Wait until the engine stops turning before re-using the starter.

When the engine starts, release the key.

The red charge warning indicator in the instrument panel should go out when the engine is running.

Engine Starting

If the engine fails to start

If an ignition key is placed in the ignition switch and turned to position **II** and the alarm security indicator is flashing, it is possible that the engine will not start. In any event, please contact a Jaguar Dealer to investigate the cause of the indicator flashing.

Caution: If the engine fails to start, do not continue cranking as this will discharge the battery. It may also damage the catalytic convertor due to unburnt fuel passing through the exhaust.

It is possible that the fuel system inertia switch may have tripped, see page 203 for the resetting procedure.

If the engine persistently fails to start and flooding is suspected, depress the accelerator pedal fully, hold it in this position and turn the key to position **III** for six seconds. Release the key, remove your foot from the accelerator pedal and then attempt to restart the engine.

Note: *The engine cannot start whilst the pedal is fully depressed, it must be released to enable the engine to start.*

If the engine still fails to start, switch the ignition OFF and contact a Jaguar Dealer.

Stopping the engine and locking the steering

Turn the key from position **II** to the lock position **0**. This turns off the ignition and stops the engine. The steering will be locked when the key is removed from the switch.

Leaving the key in position **I** or **II** will discharge the battery.

PARKING THE VEHICLE

When leaving the vehicle, remember the following:

- Whenever the vehicle is being parked, apply the EPB and, with automatic transmission, move the gear selector to Park **P**.
- Do not leave children or pets in the vehicle unattended.
- Do not leave luggage or valuables on view. Always take your valuables with you or lock them in the luggage compartment.
- Remove the ignition key and spare keys, even when the vehicle is in your garage.
- When the vehicle is unoccupied, close all windows and lock all doors securely.
- Park the vehicle where it can be seen. At night, park in a well-lit area.
- When leaving the vehicle unattended, for maximum security ensure that the doors are double-locked (where fitted).
- Ensure that the keys and the key transmitters are removed from the vehicle before locking the doors, and that all doors, the luggage compartment and the hood are closed.

Transmission

GEARSHIFT INTERLOCK

A brake pedal/gearshift interlock system is incorporated in the automatic gear selector mechanism.

To move the gear selector from Park:


1. Turn the ignition key to position **II** or start the engine.
2. Press the brake pedal.

Note: Under the following conditions, the brake pedal must be released and re-applied before moving the gear selector from Park:

- The gear selector was moved into Park while the brake pedal was depressed or;
- The brake pedal was depressed while the ignition was switched ON.

In either case the letter **P** for PARK on the gearshift will flash to indicate that the interlock is still active.

GEAR SELECTOR LEVER

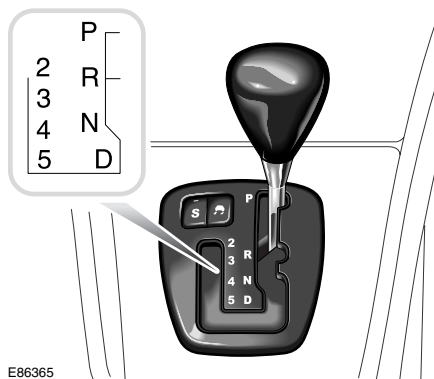

E86365

The J-gate gear selector lever is designed to accommodate two different driving techniques as follows:

- Automatic selection – the right-hand side of the selector gate.
- Manual selection – the left-hand side of the selector gate to individually select 5th, 4th, 3rd, or 2nd gear.

Gear selector positions



WARNING:

The EPB or brake pedal must be applied before selecting forward or reverse drive from a stationary position.

P = Park – Use when parking. In this position the transmission is locked. Do not select if the vehicle is moving.

N = Neutral - Disconnects the driveline from the engine. Use the EPB when stopping temporarily.

Note:

- After selecting forward or reverse drive ranges from Neutral or Park, wait briefly for the transmission to engage before accelerating.
- When in Neutral or Park the engine can only be accelerated to 4500 rev/min.

R = Reverse – Do not select if the vehicle is moving forward.

The reversing lamps come ON automatically when reverse gear is selected and the ignition switch is in position **II**.

D = Drive – All six gears are changed automatically as required by the throttle position and road speed.

Transmission

2, 3, 4, 5 = If selected, the transmission operates automatically in second, third, fourth or fifth gear but will not engage gears higher than the one selected.

When the vehicle is stationary the automatic gear selector may be left in **D**, **2**, **3**, **4**, or **5**, unless the vehicle is to be parked. When stopping for traffic lights, junctions etc., either select **P** or apply the EPB and select **N**.

Drive to fifth

When driving in gear position **D** with sixth gear engaged, the gear selector can be shifted sideways across the gate to **5**.

Provided that the vehicle's speed is not too great, the transmission will shift down to fifth. Sixth gear will be inhibited until the gear selector is moved back to **D**.

Hill climbing and engine braking

When driving on roads with long downhill gradients, selecting **3** or **2** (depending on road/traffic conditions) will give engine braking.

When the gear selector is moved from **D**, **5**, **4**, or **3** down to **2**, downshift to second gear will only take place at appropriate road speeds.

Reverse inhibit

Reverse is inhibited when the vehicle is moving forward at speeds above 8 km/h (5 mph).

Note: *Reverse inhibit will not function in limp home mode.*

Kickdown

Kickdown is operated when the pedal is pressed fully down, beyond the normal operating range and against a spring pressure, to provide maximum engine performance.

Kickdown is used in circumstances where rapid acceleration is required, such as when overtaking.

Kickdown causes the transmission to change down to the lowest gear possible to achieve maximum acceleration.

The gear engaged depends on the road speed at the time of kickdown.

As well as shifting down, the gearshift points are extended to give greater performance. This mode is in effect for as long as the pedal is pressed fully down.


Limp home mode

In the unlikely event of an electrical or mechanical failure, transmission operation will be impaired. The vehicle gear selector ranges **P**, **R**, **N**, **D** can still be used to enable the vehicle to be driven to a safe area.

The driver should be aware that the vehicle's performance will be reduced and must take this into account when driving. In this event consult a Jaguar Dealer immediately.

Transmission

SPORT MODE

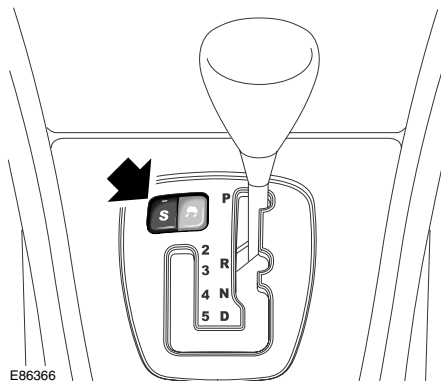

The switch marked **S** on the **J**-gate surround enables the driver to select either normal **N** or sport **S** modes.

When sport mode is selected the automatic transmission will operate normally, but the gearshift points are extended to make full use of the engine's power reserves.

To select Sport, press the switch. A red indicator within the switch is illuminated to indicate that sport mode has been selected.

To cancel Sport, press the switch again.

Note: Both sides of the **J**- gate can be used, irrespective of transmission mode. For example, with **S** selected, the transmission can be operated in full automatic mode or by manual selection.

In addition to the switched transmission modes (**N** and **S**) the transmission control module will select shift patterns to suit specific conditions.

Cruise Control

When cruise control is operating at set speed the transmission selects a shift pattern to suit cruise control operation.

Dynamic Stability Control (DSC)

When DSC is switched ON and the system is activated, the transmission selects a shift pattern to suit traction control conditions.

Gradients

When the vehicle is being driven on roads with uphill gradients, the transmission adapts the shift pattern to make better use of engine power and aid engine cooling.


Note: Under the conditions previously described, the relevant transmission mode will override the **N** or **S** modes selected by the driver. When such conditions no longer exist, the transmission will revert to the shift pattern previously selected by the driver, i.e. **N** or **S**.

Cruise (Speed) Control

INTRODUCTION

The cruise (speed) control system, when fitted, can be used by the driver to maintain a selected vehicle speed above 28 km/h (17.5 mph) without the driver having to use the accelerator.

Switches on the steering wheel allow the driver manual control of the system. Brake operation also influences the cruise control system.

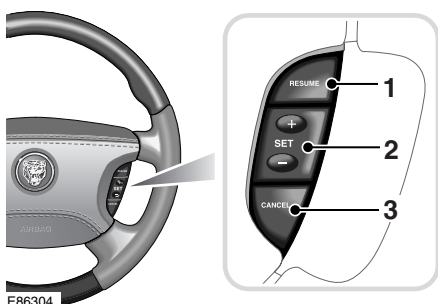

1. **RESUME** - to resume the set speed retained in memory.
2. **SET** - to set the speed or increase/decrease the set speed when the speed has been set.
3. **CANCEL** - cancels cruise control but retains the set speed in memory.

OPERATION

Setting the vehicle speed



WARNING:

Only use cruise control when conditions are favourable, for example, straight, dry, open roads with light traffic.

When you are travelling at the speed you require, which must be above 28 km/h (17.5 mph), press the SET button.

Cruise control will engage and maintain the set speed and you can remove your foot from the accelerator pedal.

Note: Cruise control will automatically disengage when the brake pedal is pressed or when the vehicle speed falls below 26 km/h (16 mph).

Changing the set speed

There are three ways to change the set speed:

1. Accelerate or decelerate to the desired speed then press the SET (+) button.
2. Increase or decrease the speed by pressing and holding either SET (+) or (-) until the desired speed is obtained, then release the switch.
3. Increase or decrease the speed in steps of 2 km/h (1 mph) by briefly pressing either the SET (+) or (-) until the desired speed is obtained.

Resuming the set speed

If the vehicle is accelerated above the set speed, then the set speed will be resumed when the accelerator pedal is released.

If CANCEL is pressed, or the brake pedal is pressed, the cruise control will disengage but the set speed memory will be retained. Press RESUME and the vehicle will return to the set speed.

Note: Cruise control will not resume at speeds below 28 km/h (17.5 mph).

RESUME will not operate if the ignition has been turned off.

Cruise (Speed) Control

Caution:

- **RESUME should only be used if the driver is aware of the set speed and intends to return to it.**
- **It is not recommended to resume set speed when a low gear is selected as excessive engine speeds will occur.**

Cruise control will switch off and clear the memory when:

- The ignition is switched to position **0**.
- A fault occurs. The cruise control system will switch OFF and cannot be used until the fault is cleared.


Cruise control automatic switch off

Cruise control will switch off but the set speed will remain in the memory when:

- The CANCEL button is pressed.
- The brake pedal is pressed.
- Speed falls below 26 km/h (16 mph).
- Neutral, Park or Reverse gear positions are selected.
- Dynamic Stability Control (DSC) is operating.
- The difference between the actual and set speed is too great.
- The vehicle reaches a maximum speed of 230 km/h (144 mph).
- The accelerator pedal is used to accelerate beyond the set speed for too long a period.

Adaptive Cruise Control (ACC)

PRINCIPLE OF OPERATION

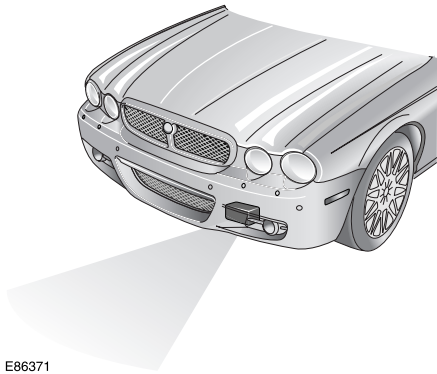

E86371

The Adaptive Cruise Control system is designed to aid the driver to maintain a gap from the vehicle ahead or a set road speed if there is no slower vehicle ahead. The system is intended to provide enhanced operation of the vehicle when following other vehicles which are in the same lane and travelling in the same direction.



WARNING:

Adaptive Cruise Control is not a collision warning or avoidance system. Additionally, Adaptive Cruise Control will not react to:

- **Stationary or slow moving vehicles below 10 km/h (6 mph).**
- **Pedestrians or objects in the roadway.**
- **Oncoming vehicles in the same lane.**


The Adaptive Cruise Control system is based on the use of a radar sensor which projects a beam directly forward of the vehicle so as to detect objects ahead.

The radar sensor is mounted behind a cover on the left-hand side of the lower cooling aperture, to provide a clear view forward for the radar beam.

- Only use Adaptive Cruise Control when conditions are favourable, that is, straight, dry, open roads with light traffic.
- Do not use in poor visibility, specifically fog, heavy rain, spray or snow.
- Do not use on icy or slippery roads.
- It is the driver's responsibility to stay alert, drive safely and be in control of the vehicle at all times.
- Keep the front of the vehicle free from dirt, metal badges or objects, including vehicle front protectors, which may prevent the sensor from operating.
- Do not use ACC when entering or leaving a highway.

Adaptive Cruise Control (ACC)

USING ACC

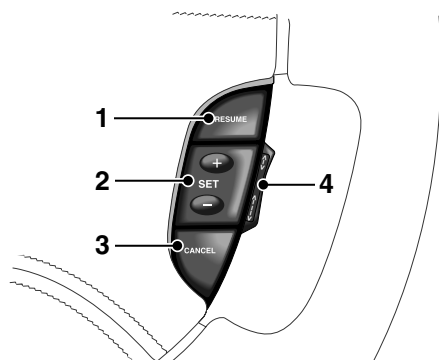

E86372

The system is operated by switches mounted on the steering wheel. The driver can also intervene at any time by use of the brake or accelerator pedal.

The steering wheel switches operate as follows:

1. **RESUME** - to resume the set speed retained in memory.
2. **SET** - to set the speed or increase/decrease the set speed when the speed has been set.
3. **CANCEL** - cancels cruise control, but retains the set speed in memory.
4. **GAP** - increase or decrease.

Setting the speed

Accelerate as normal until the required speed is reached.

Press the SET (+) button briefly and the vehicle speed will then be stored in the memory and the system engaged. The set speed will be displayed on the message centre.

SET SPEED
80 KM(50 MPH)
(80 KM/H)

Changing the set speed

There are three ways to change the set speed:

- Accelerate or brake to the required speed and press the SET (+) button.
- Increase or decrease the speed by pressing and holding either the SET (+) or (-) button until the required set speed is shown on the message centre. The vehicle speed will gradually change to the selected speed.
- Increase or decrease the speed in steps of 2 km/h (1 mph) by briefly pressing the SET (+) or (-) button.

ACC operates between approximately 34 km/h and 180 km/h (20 mph and 110 mph) dependent on the country specification.

Set speeds outside this range will not be captured.

The ACC may apply the brakes to slow down the vehicle to the new set speed. The new set speed will be displayed on the message centre until ACC is cancelled.

Adaptive Cruise Control (ACC)

Entering the follow mode set gap



WARNING:

When in follow mode, the vehicle will not decelerate automatically to a stop, nor will the vehicle always decelerate quickly enough to avoid a collision without driver intervention.

Once a set speed has been selected, the driver can release the accelerator and the set road speed will be maintained.

When a vehicle ahead enters the same lane or a slower vehicle is ahead in the same lane, vehicle speed will be adjusted automatically until the gap to the vehicle ahead corresponds to the preset gap. The vehicle is now in follow mode.



The warning indicator in the instrument panel will be illuminated,

GAP



The message centre will display the gap set.

The vehicle will then maintain the constant time gap to the vehicle ahead until:

- The vehicle ahead accelerates to a speed above the set speed.
- The vehicle ahead moves out of lane or out of view.
- A new gap distance is set.

If necessary, the vehicle brakes will be automatically applied to slow the vehicle to maintain the gap to the vehicle in front. The maximum braking which is applied by the ACC system is limited and can be overridden by the driver applying the brakes, if required.

Note: *Driver braking will cancel Adaptive Cruise Control.*

If the ACC system predicts that its maximum braking level will not be sufficient, then an audible warning will sound while the ACC continues to brake.

This is accompanied by a red warning indicator and **DRIVER INTERVENE** will be displayed on the message centre. The driver should take IMMEDIATE action.

When in follow mode the vehicle will automatically return to the set speed when the road ahead is clear, for instance when:

- The vehicle in front accelerates or changes lane.
- The driver changes lane to either side or enters an exit lane.

The driver should intervene if appropriate.

Changing the follow mode set gap

The gap from the vehicle ahead can be decreased or increased by pressing the gap setting rocker switch on the steering wheel.

Four gaps are available and the selected gap setting will be displayed on the message centre when the rocker switch is pressed.

After the ignition is switched ON the default gap will be automatically selected ready for ACC operation.

Adaptive Cruise Control (ACC)

Note: It is the driver's responsibility to select a gap appropriate to the driving conditions.

Overriding the speed and follow mode



WARNING:

Whenever the driver is overriding the ACC by depressing the accelerator pedal, the ACC will not automatically apply the brakes to maintain separation from any vehicle ahead.

The set speed and gap can be overridden by pressing the accelerator pedal when cruising at constant speed or in follow mode.

If the vehicle is in follow mode, the instrument panel warning indicator will go out when the ACC is overridden by the driver using the accelerator and **CRUISE OVERRIDE** will be displayed on the message centre.

When the accelerator is released the ACC function will operate again and vehicle speed will decrease to the set speed, or a lower speed if follow mode is active.

Automatic low speed switch off

If the speed of the vehicle decreases below 30 km/h (18 mph), the ACC system will be automatically switched OFF and the instrument panel warning indicator will go out.

If the brakes were being applied by the ACC system, they will be slowly released.

This will be accompanied by an audible warning, a red warning indicator and **DRIVER INTERVENE** will be displayed on the message centre. The driver must take control.

Automatic switch off

Adaptive Cruise Control will disengage, but not clear the memory when:

- The **CANCEL** button is pressed.
- The brake pedal is pressed.
- Neutral, Park or Reverse gear positions are selected.
- Dynamic Stability Control (DSC) activates.

Adaptive Cruise Control will disengage and clear the memory when:

- The ignition switch is switched OFF.
- Maximum vehicle speed is reached.
- A fault occurs in the ACC system.

Resuming the set speed/follow mode

Caution: RESUME should only be used if the driver is aware of the set speed and intends to return to it.

By pressing the RESUME button after ACC has been cancelled, for example, after braking, the ACC will become active again provided that the set speed memory has not been erased.

The set speed will be displayed for four seconds and the original set speed will be resumed, unless a vehicle ahead causes the follow mode to become active.

Hints on driving with ACC.

The system acts by regulating the speed of the vehicle using engine control and the brakes. Gear changes may occur in response to deceleration or acceleration whilst in ACC.

ACC is not a collision avoidance system, however, during some situations the system may provide the driver with an indication that intervention is required.

Adaptive Cruise Control (ACC)


An audible alarm will sound, accompanied by a red warning indicator and the message **DRIVER INTERVENE** if the ACC detects:

- That a failure has occurred whilst the system is active.
- That using maximum ACC braking only is not sufficient.
- That the vehicle speed has decreased below the minimum for ACC operation.

Note:

- *Adaptive cruise control operates when the gear selector lever is in position 2, 3, 4, 5 or D.*
- *When engaged, the accelerator pedal rests in the raised position. Fully release the pedal to allow normal ACC operation.*

Detection beam issues

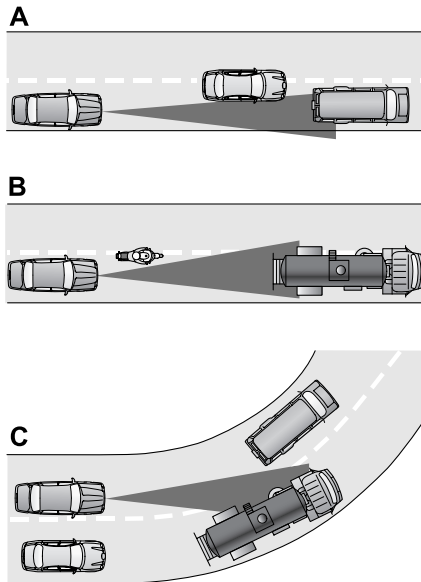

JOL3033

Detection issues can occur:

- When driving on a different line to the vehicle in front (**A**).
- With vehicles that edge into your lane which can only be detected once they have moved fully into your lane (**B**).
- There may be issues with the detection of vehicles when going into and coming out of a bend (**C**).

In these cases ACC may brake late or unexpectedly. The driver should stay alert and intervene if necessary.

Adaptive Cruise Control (ACC)

ACC malfunction

If a fault occurs during operation of the system in cruise or follow modes, the ACC system will switch OFF and cannot be used until the fault is cleared.

A red warning indicator and the message **DRIVER INTERVENE** appear briefly, and are then replaced by an amber warning indicator and the message **CRUISE NOT AVAILABLE**.

If failure of the ACC or any related system occurs at any other time, an amber warning indicator will be displayed accompanied by the message **CRUISE NOT AVAILABLE**. It will not be possible to activate the ACC system in any mode.

Accumulations of dirt, snow or ice on the sensor or cover may inhibit ACC operation. Fitting of a vehicle front protector or metallised badges may also affect ACC operation.

If this occurs in ACC cruise/follow mode, the red warning indicator is displayed, the audible alarm sounds and the message **DRIVER INTERVENE** appears briefly.

These warnings are then replaced by the amber warning indicator and the message **ACC SENSOR BLOCKED** is displayed. The system is no longer active.

Clearing the obstruction allows the system to return to normal operation. If the obstruction is present when ACC is inactive, e.g. on initial starting or with the ACC system switched off, the amber warning indicator will be displayed with the message **ACC SENSOR BLOCKED**.

Tires other than those recommended may have different sizes. This can affect the correct operation of the ACC.

FORWARD ALERT FUNCTION



E86374

Limited detection and warning of objects ahead is provided during ACC operation by the ACC **DRIVER INTERVENE** warning.

The forward alert feature additionally provides warnings whilst ACC is not engaged; if an object is detected close ahead then a warning tone and message will be issued. The brakes will not be applied.

This additional feature may be switched on or off using the forward alert switch in the lower outboard knee bolster switchpack. When the indicator lamp in the switch is on, forward alert is active.

The sensitivity of the warning may be changed:

- Press the gap decrease button when ACC is disengaged to display and then decreases the sensitivity of the alert.
- Press the gap increase button displays and then increases the sensitivity of the alert.

Both of these are accompanied by the **FORWARD ALERT** message on the message centre.

Automatic Speed Limiter


PRINCIPLE OF OPERATION



WARNING:

Automatic Speed Limiter (ASL) set speeds must be within local speed restriction limits. The driver must always ensure that a safe speed is set, taking into account the prevailing traffic and road conditions.

ASL can be used in a situation where varying vehicle speed is likely, but a maximum speed must not be exceeded. For example, where a local speed limit is 80km/h (50mph), the set speed could be at that limit or just under. The driver is then safe in the knowledge that the local speed limit cannot be exceeded while ASL is operating.

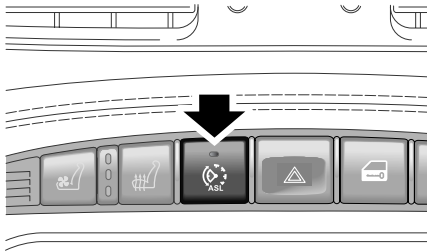

E86376


The ASL button allows the driver to select between cruise control and the automatic speed limiter.

The ASL can be to any speed between 30 km/h (18 mph) to 240 km/h (150 mph).

When the ASL system is selected, the tell-tale status indicator in the switch will illuminate. When the ASL button is pressed again, the indicator will extinguish, ASL will be cancelled and cruise control will be available again.

USING THE ASL

Setting a speed limit

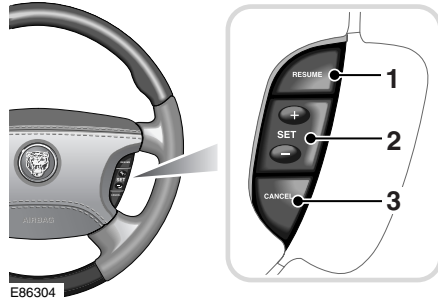

1. Press the **ASL** button. The tell tale indicator in the switch will illuminate.
2. Press the **RESUME** button (1).
While a speed is being set or altered the message centre display will show the selected speed.
3. Use the +/- buttons (2) to set the required speed.
4. The set speed can be adjusted at any time by pressing the +/- buttons (2).
While a speed limit is being set or altered, a message is displayed on the message centre.

**LIMITER SET
XXX km/h (MPH)**

Automatic Speed Limiter

Note: The message is also displayed at other times as an information display.

When ASL is selected and a set speed inserted, the engine will respond normally up to the set speed. Further accelerator pedal pressure will not increase the vehicle speed beyond your set speed.

Suspending ASL

ASL can be suspended by pressing the **CANCEL** button (3). Applying sudden, rapid acceleration (kickdown) will also suspend ASL.

**LIMITER
CANCELLED**

Resuming ASL

If ASL has been suspended, it can be reinstated with a single press of the **RESUME** button (1), however, ASL will only reinstate if the vehicle speed is less than the current speed set in memory and greater than 30 km/h (18 mph). The message centre will display an appropriate message if the vehicle speed is too fast to resume ASL.

**TOO FAST TO
RESUME LIMIT**

Exceeding the set speed

If the set speed is exceeded, e.g. on a steep downhill section, the message centre will display an appropriate message along with an amber warning indicator.

**OVER LIMIT
XXX km/h (MPH)**

There are three categories of over limit displays:

1. If the set speed is exceeded by up to 15 km/h (9 mph), the message centre will display the message along with an amber warning indicator.
2. If the set speed is exceeded by more than 15 km/h (9 mph), the message centre will display the message along with a flashing amber warning indicator.
3. If the set speed is exceeded by more than 15 km/h (9 mph) for a duration of five seconds, the message centre will display the message along with a flashing amber warning indicator and also give an audible warning tone.

Use your brakes to rectify the situation.

ASL unavailable


If ASL is not available due to a fault, the message centre will display an appropriate message along with an amber warning indicator.

**LIMITER NOT
AVAILABLE**

When the ignition is switched off, ASL is deactivated and any set speed is deleted from memory.

Stability Control

DYNAMIC STABILITY CONTROL (DSC)

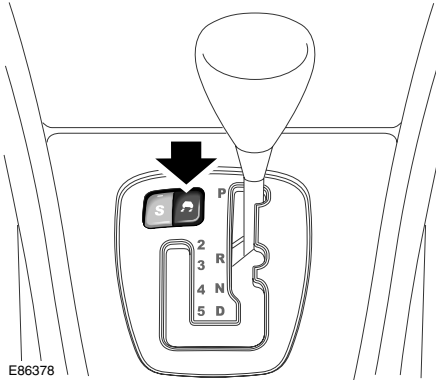

Unless it has been switched off, Dynamic Stability Control is operational whenever the engine is running. If the system is operating, the warning indicator in the instrument panel will flash.

The Dynamic Stability Control (DSC) system controls the Anti-lock Braking System (ABS), traction control and yaw control of the vehicle.

Yaw control determines the vehicle's direction relative to the driver's inputs (sideslip and under/oversteer). It applies braking pressure to individual wheels if excessive variation is detected. This ensures that the vehicle follows the driver's intended direction of travel.

Traction control will intervene to prevent wheel spin, by automatically reducing the power output from the engine and applying braking to individual wheels.

This improves acceleration, particularly on surfaces with uneven friction, for example, one wheel on ice and the other on tarmac.

ABS helps to prevent the road wheels from locking and skidding during emergency braking.

When the ABS system is operating, the warning indicator in the instrument panel will flash.

The Dynamic Stability Control system can be switched OFF by pressing the switch on the centre console switchpack. The warning indicator in the instrument panel will remain on and a message will be shown to indicate that the system has been switched OFF. If the switch is pressed again the system will switch ON.

If cruise control is engaged it will automatically disengage if stability control activates.

A system malfunction is indicated by the illumination of the amber DSC warning indicator and the message **DSC FAULT**.

It is safe to drive the vehicle but the system may not activate under wheel spin or slide conditions. Report the fault to a Jaguar Dealer as soon as possible.



WARNING:

- **The fact that the vehicle is fitted with Dynamic Stability Control must never allow the driver to be tempted into taking risks which could affect his/her safety or that of other road users. In all cases it remains the driver's responsibility to drive safely according to the prevailing conditions.**
- **It is recommended that when using snow chains, DSC should be switched OFF.**

Braking System

ANTI-LOCK BRAKING SYSTEM (ABS)

This system helps to prevent the road wheels from locking and skidding during emergency braking, assisting the driver to maintain full steering and directional stability.

The factor controlling ultimate stopping distance and cornering ability is tire/road adhesion.



WARNING:

The fact that a vehicle is fitted with ABS must never allow the driver to be tempted into taking risks which could affect his/her safety or that of other road users.



WARNING:

The addition of ABS cannot overcome the consequences of trying to stop in too short a distance or cornering at too high a speed, or the risk of aquaplaning.



WARNING:

The driver should always take road conditions into account.

A slippery road surface always requires more braking distance for a given speed, even with ABS.

A possible increase in stopping distance compared to locked wheels may occur during ABS operation on slushy snow, gravel, sand, or some heavily corrugated or ridged warning sections of road surfaces.

ABS optimises tire/road adhesion under maximum braking conditions though it cannot provide increased cornering ability. There is no need for special braking techniques, such as pumping the brakes, to achieve optimum braking distances and control on poor or slippery road surfaces. Tires must be in good condition to achieve maximum adhesion.

During normal braking the ABS will not be activated. However, if the braking force applied begins to exceed tire/road adhesion the ABS will automatically activate, preventing the road wheels from locking.

In these circumstances a pulsating effect will be felt from the brake pedal indicating that the system is functioning.

The pulsating effect is due to small fluctuations in pressure supplied to the brakes by the system to maintain full tire/road adhesion.

Under severe braking on some road surfaces tire noise may be apparent even though the wheels will at no time become locked.

ABS MONITORING

The ABS control module monitors the ABS electrical system from ignition switch ON to ignition switch OFF.

Any malfunction will be indicated by the anti-lock warning indicator coming on.

Should a fault develop in the ABS system, the brake system will still operate conventionally and with the same standard of performance as vehicles not equipped with ABS.

Braking System

Hints on driving with ABS

The Anti-lock Brake System (ABS) helps the driver to maintain full steering and directional stability during emergency braking by preventing the road wheels from locking and skidding. ABS constantly monitors the speed of each road wheel and varies brake pressure to each, according to the available grip. ABS optimises the tire-to-road adhesion under maximum braking.

When ABS is activated, you will feel a pulsating effect on the brake pedal. This is normal and you must maintain maximum pressure on the brake pedal for ABS to be effective.

ABS will enable you to steer around obstacles during emergency braking. ABS will not eliminate the dangers inherent when:

- driving too close to the vehicle in front of you
- aquaplaning
- cornering with excessive speed
- poor road surfaces.

Anti-lock Brake System (ABS) warning indicator



WARNING:

If the ABS warning indicator illuminates whilst driving, avoid heavy braking. Seek qualified assistance as soon as possible. Failure to follow this instruction may lead to personal injury or loss of vehicle control.

If a fault is detected in the ABS, the ABS warning indicator will illuminate. Drive with care if the ABS warning indicator illuminates or remains on after the bulb check cycle. The brake system will continue to function normally, but without ABS braking.

EMERGENCY BRAKE ASSIST (EBA)

The EBA system measures the rate at which the brake pressure increases. If the system detects an emergency braking situation, EBA automatically initiates the full braking effect. This can reduce stopping distances in critical situations, which can help an inexperienced driver to stop in the same distance as an experienced driver.



WARNING:

The EBA system is an additional safety system: it is not intended to relieve the driver of his responsibility for exercising due care and attention when driving.

Suspension

AIR SUSPENSION

This vehicle is fitted with a fully automatic air suspension system. It ensures that the vehicle is always at the correct ride height with varying load conditions, including luggage compartment load or when towing.

The system will automatically adjust the amount of air in the springs to level the vehicle. Air is supplied either from an air reservoir or a compressor. The compressor will run periodically to refill the reservoir.

Changes in ambient temperature will also have an effect on vehicle height when the vehicle is parked.

Caution:

- **Do not overload the vehicle. Vehicle load weights are shown on page 273.**
- **A slight air loss is expected over time causing the vehicle to lower, so do not store or place anything under the vehicle if it is to be left for an extended period.**

Speed lowering

When driving at highway speeds, the system will lower the vehicle to improve aerodynamics and vehicle stability. The suspension will automatically return the vehicle to the normal height when the vehicle slows.

Changes in ambient temperature will also have an effect on vehicle height when the vehicle is parked.

Speed lowering is undesirable when towing. Only Jaguar approved towing equipment will not allow this feature.

Warning messages

If the message **VEHICLE TOO LOW** is displayed when the ignition is switched on, start the engine and wait for the suspension to raise. The vehicle should not be driven until the message is cleared.

If the message **VEHICLE TOO LOW** is displayed when driving, restrict the vehicle speed and wait for the system to regain the correct height and the message will then clear. If the message is displayed frequently, inform your Dealer to have the system attended to.

If the message **AIR SUSPENSION FAULT** is displayed at any time, drive with caution. Have the vehicle checked by a Dealer at the earliest opportunity.

Note: *If your vehicle needs to be recovered by a roadside emergency service ensure that the vehicle is securely lashed by the wheels and NOT the body.*

Driving Information

Before driving off, check the gauges and warning indicators and messages. Take special note of any warning indicator that is on.



WARNING:

Ensure the EPB is on and the automatic gear selector is in P or N before attempting to start the engine.

Seat belts are provided for your safety and it is unwise, and in certain countries illegal, to commence any journey, however short, without wearing them.

DRIVING TIPS

Engine Braking on Downhill Gradients

When driving on mountain roads with long downhill gradients it is advisable to select a low gear.

Use Of Headlamps In Daylight

When visibility is poor the headlamps with low beam setting should be switched on so that the vehicle may be seen more easily by other road users. The instrument illumination dimmer control adjusts the brightness of the panel illumination.

Parking the Vehicle

When leaving the vehicle, remember the following:

- Remove the ignition key and spare keys, even when the vehicle is in your garage.
- When the vehicle is unoccupied, close all windows and lock all doors securely.
- Park the vehicle where it can be seen. At night, park in a well-lit area.
- When leaving the vehicle unattended, for maximum security ensure that the doors are double-locked (where fitted).
- Ensure that the keys and the key transmitters are removed from the vehicle before locking the doors, and that all doors, the luggage compartment and the hood are closed.
- Whenever the vehicle is being parked, apply the EPB and move the gear selector to Park **P**.
- Do not leave children or pets in the vehicle unattended.
- Do not leave luggage or valuables on view. Always take your valuables with you or lock them in the luggage compartment.

Driving Information

WINTER DRIVING

Freeing a frozen door lock

Caution: Do not apply a proprietary lock de-icer through the keyhole.

Should the lock become frozen, warm the end of the key before use.

Windshield wiper blades

Before driving away, clear any ice from the windshield and check that the wiper blades are free. Switching on the heated screen will accelerate this process.

Frost precautions

The correct concentration of coolant must be maintained at all times when topping up or refilling the cooling system.

TOURING

Foreign travel

Before planning foreign travel, check with a motoring organisation to ensure that your vehicle will comply with legal requirements of the countries you intend to visit.

International motoring organisations are helpful for all aspects of long distance touring advice.

In some countries it is a legal requirement to carry spare vehicle bulbs.

First aid kit

A first aid kit is compulsory equipment in certain countries. Your Jaguar Dealer can supply a first aid kit.

Fire extinguisher

Many countries make it compulsory to carry a fire extinguisher. If your vehicle is not supplied with a fire extinguisher, your Jaguar Dealer can supply and fit one. See page 231.

Gasoline in containers

Some countries forbid the carrying of gasoline in containers, as do most ferry and hovercraft operators.

Cellular radio telephones

Ask your motoring organisation about the use of cellular radio telephones before travelling abroad, as some countries exercise controls on the importation and use of such equipment.

Roof rack

Only the Jaguar approved roof rack should be used, (see page 273 for load weight details).

The maximum load, including the weight of the rack, must not exceed the load rating indicated on the roof rack bars and must be deducted from the vehicle maximum luggage load.

Loads on the roof rack may affect vehicle handling, especially in crosswinds or when cornering.

Jaguar warning triangle

A warning triangle to give traffic advanced notice of a disabled vehicle is compulsory in many countries.

A triangle, designed to international standards, is fitted as standard equipment in certain countries.

Hazard warning lamps must be used with the warning triangle.

The warning triangle, with its stand legs folded flat, may be mounted on the inside of the luggage compartment lid.

In an emergency, remove the triangle and unfold its stand legs. Place the triangle in the road in accordance with local traffic regulations to give oncoming traffic warning of an immobilised vehicle.

Driving Information

TOWING A CARAVAN OR TRAILER

Your Jaguar Dealer, and the main motoring and caravanning organisations can advise you on towing, towing weight capacities and about regulations that apply in other countries.

The following are important points of safety, stability and comfort upon which further advice should be sought:

- Maximum braked towing weight is permissible, provided long periods of uphill driving on gradients over 8% are not undertaken.
- In high altitude mountainous regions, the thinner atmosphere can reduce engine performance. Above 1000 metres (3280 feet) the stipulated maximum permitted gross train weight must be reduced by 10% for every 1000 metres (3280 feet) in altitude.
- The curbside weight of the vehicle can be found in the Specifications Section, page 272, of this Handbook.
- When towing at the maximum permissible rear axle load keep within legal towing speeds.
- Tires must be inflated to the normal (higher) pressures shown on the tire pressure label on the fuel filler flap.
- The recommended maximum tow ball tongue weight is shown in the Specifications Section, page 273, of this Handbook. Having a lower tongue weight or exceeding the maximum tongue weight limit may impair the vehicle's handling.


- When towing, the tongue weight of the caravan or trailer and the tow bar assembly must be deducted from the permissible maximum load, see the Specifications Section, page 273, of this Handbook.
- Avoid heavy braking. As the overrun brake on the caravan or trailer is not connected to the ABS, heavy caravan or trailer braking could critically affect the stability of the outfit as a whole.
- Ensure that the towing vehicle's engine, transmission, suspension, brakes and tires are fully efficient and regularly serviced. Similarly check the wheels, tires, brakes and wheel bearings of the caravan or trailer.

Caution:

- **When not in use, it is recommended that the removable tow ball is either securely stowed in the luggage compartment or, preferably, not in the vehicle. Do not leave it loose in the vehicle.**
- **It is essential that only a Jaguar tow bar and Jaguar electrical tow bar kit are supplied and fitted by a Jaguar Dealer. This is particularly important with this vehicle having air suspension. If unapproved towing equipment is used whilst towing, the air suspension speed lowering function will not be inhibited. This may result in a change in trailer weight distribution and attitude.**

Driving Information

Tow bar Fixing Points

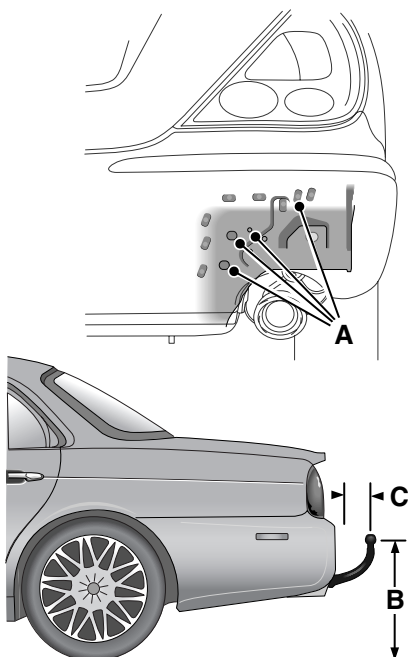

E86386

The mounting points (A) require drilling for tow bar mountings.

Tow ball centre height from the ground at Gross Vehicle Weight (GVW) (B) = 385 mm (15.157 inches).

Tow ball centre distance from bumper cover (C) = 76 mm (3 inches).

Note: This vehicle has an aluminium body, any part drilled, and any fixings attached, must be specially protected to prevent body corrosion. For further information please contact your Dealer.

Caution: Contact your Jaguar Dealer for details of additional parts that are advised to be fitted before towing. This is particularly important with this vehicle having air suspension. If unapproved towing equipment is used whilst towing, the air suspension speed lowering function will not be inhibited. This may result in a change in trailer weight distribution and attitude.

Fuel and Refuelling

REFUELLING

Before refuelling, switch off the ignition and remove the key.

Note: Do not leave the ignition key in the vehicle; vehicles have been stolen from garage service/filling stations whilst the driver is absent from the vehicle. It is recommended that the vehicle is locked, if left unattended.

Caution: No additives of any kind (fuel or oil) must be put into the fuel tank. Additives could reduce engine life or affect exhaust emissions.





WARNING:

- Fuel vapour is highly flammable and in confined spaces is explosive and toxic. In the event of inadvertent spillage, and before refuelling, always switch OFF the engine. Do not use exposed flame or light. Do not smoke. Do not inhale fumes.
- Do not fill the tank so that fuel is visible in the fuel filler intake tube. This could cause spillage and danger from exposed fuel.


Caution: Your vehicle is fitted with catalytic converters and must only be filled with unleaded fuel.

Filling the Fuel Tank

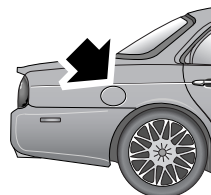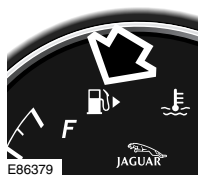

The fuel filler flap release switch is located in the knee bolster switchpack below the facia. The filler flap is on the right-hand side of the vehicle.

A small arrow is shown on the fuel gauge as a reminder on which side of the vehicle the fuel filler flap is located.

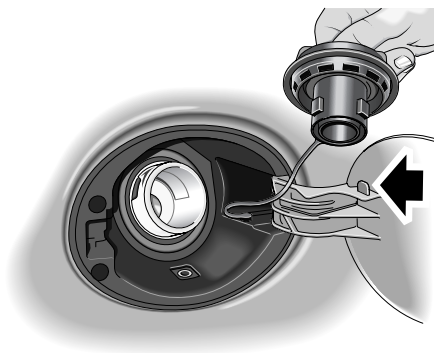


E86380

Open the fuel filler flap and turn the filler cap counter-clockwise, an 1/8 turn, and remove the cap from the filler neck. The cap is held by a retaining strap and can be stowed over the hook on the flap to allow easy access to fill the tank.

Fuel and Refuelling

A warning label on the inside of the fuel filler flap advises type/grade of fuel.

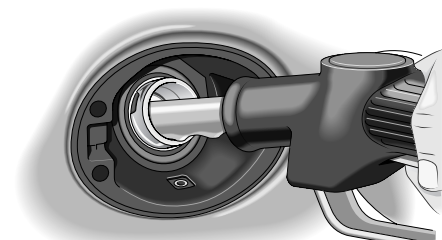

E86381

When filling, the dispenser nozzle must be inserted into the filler neck sufficiently to open the trap door for fuel to flow into the fuel tank. For quickness and to completely fill the tank, ensure that the fuel nozzle rests on the filler neck as shown. Fill the tank until the filler nozzle automatically shuts off. Filling beyond this point could result in fuel spillage.

After refuelling, twist the filler cap clockwise until it clicks and close the flap, which automatically locks shut.

The continuous use of high quality fuel makes the need for additional additives unnecessary.

This will help to protect the engine components against corrosion, carbon deposit formation and prevent the fuel injection system from clogging.

If in doubt your local Jaguar Dealer will advise on which fuel must be used in your vehicle.

The filler neck of the fuel tank has a small diameter to suit the unleaded fuel pump nozzle and will prevent the larger diameter leaded fuel nozzle from entering the filler neck.

Not all countries have a small diameter nozzle so care must be taken to only fill the tank with unleaded fuel.

FUEL CAPACITY

Avoid the risk of running out of fuel and never intentionally drive the car when the fuel gauge indicates that the tank is empty. When refuelling your vehicle after the fuel gauge reads empty, you may not be able to add the fuel quantity shown below to the tank as there will be a small reserve remaining in the tank.

Fuel tank capacity	85 litres 22.4 US gallons
Fill capacity (when the fuel gauge indicates empty)	79 litres 20.9 US gallons
Reserve capacity (when the fuel gauge indicates empty)	5.8 litres 1.5 US gallons

Fuel and Refuelling

FUEL ECONOMY

The following tips not only lead to greater fuel economy but also reduce air pollution causing less environmental damage:

- Try to avoid using the car for short journeys - this will lead to greater fuel economy and reduce wear on the engine.
- Plan ahead - choose uncongested routes, combine car trips and share cars where possible.
- Drive off as soon as possible after starting a cold engine - do not leave the engine idling until it has warmed up.
- Drive smoothly and efficiently - harsh acceleration and heavy braking have a significant effect on fuel consumption - driving more smoothly saves fuel.
- Slow down - driving at high speeds significantly increases fuel consumption.
- Switch off - sitting stationary is zero miles per gallon, switch off the engine when it is safe to do so.
- Unnecessary weight - do not carry unnecessary weight and remove roof racks when not in use.
- Regular servicing keeps the engine at best efficiency.
- Ensure that tires are inflated to the correct pressure for the journey.
- Use air conditioning and all vehicle electrical devices sparingly - all increase fuel consumption.

- Check your fuel consumption - it will help you get the most from your car and any significant change in consumption may indicate a vehicle fault.

FUEL REQUIREMENTS

All vehicles are fitted with a catalytic system and can only use unleaded fuel.

Unleaded fuel must be used for the emission control system to operate properly. Its use will also reduce spark plug fouling, exhaust system corrosion and engine oil deterioration.

The preferred fuel should have an octane rating of at least 95 RON (Research Octane Number) and a minimum anti-knock index (AKI) of 91.

Super Green Plus 98 RON unleaded fuel (where available) may be used as an alternative to the standard 95 RON unleaded fuel.

Some countries have only 91 RON fuel available. The vehicles in these countries are specially calibrated to use this fuel.

Using unleaded fuel with an octane rating lower than recommended can cause persistent, heavy spark knock (a metallic rapping noise). If severe, this can lead to engine damage.

If a heavy spark knock is detected even when using fuel of the recommended octane rating, or if you hear steady spark knock while holding a steady speed on level roads consult a Jaguar Dealer to have the problem corrected.

Failure to do so is misuse of the vehicle, for which Jaguar Cars Limited is not responsible. However, occasional light spark knock for a short time while accelerating or driving up hill, may occur.

Fuel and Refuelling

Fuels containing alcohol

Caution: Take care not to spill fuel during refuelling. Fuel containing alcohol can cause paint damage, which may not be covered under the warranty.

Some fuel suppliers sell fuel containing alcohol without advertising its presence. Where uncertainty exists check with the service station operator.

***Note:** Some difficulty in starting may be encountered when using alcohol blended fuel.*

Ethanol

Caution: This vehicle is not suitable for use with fuels containing more than 10 per cent ethanol. Do not use E85 fuels (85 per cent ethanol content).

Equipment necessary for use of fuels containing more than 10 per cent is not fitted to this vehicle. If E85 fuels are used, serious engine and fuel system damage will occur.

Fuels containing up to 10 per cent ethanol (grain alcohol) may be used. Ensure the fuel has octane ratings no lower than those recommended for unleaded fuel. Most drivers will not notice any operating difference with fuel containing ethanol. If a difference is detected, the use of conventional unleaded fuel should be resumed.

Methanol

Some fuels contain methanol (methyl or wood alcohol). If you use fuels containing methanol the fuels must also contain co-solvents and corrosion inhibitors for methanol. Also, do not use fuels that contain more than three per cent methanol even if they contain co-solvents and corrosion inhibitors. Fuel system damage or vehicle performance problems resulting from the use of such fuels is not the responsibility of Jaguar Cars Limited, and may not be covered under the warranty.



Methyl Tertiary Butyl Ether (MTBE)

Unleaded fuel containing an oxygenate known as MTBE can be used provided the ratio of MTBE to conventional fuel does not exceed 15 per cent.

MTBE is an ether based compound, derived from petroleum, which has been specified by several refiners as the substance to enhance the octane rating of fuel.

Fuel and Refuelling


FUEL FILLER FLAP MANUAL RELEASE

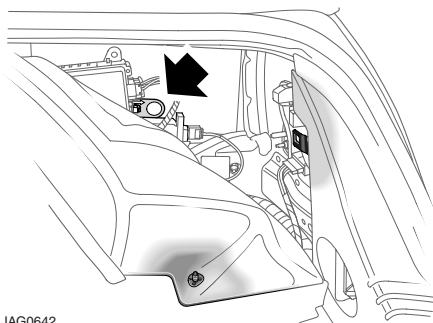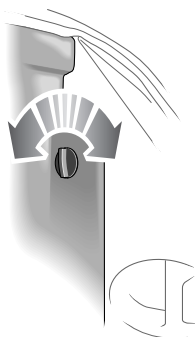

JAG0642

If the fuel filler flap fails to release it can be manually unlocked as follows:

In the luggage compartment, remove the carpet from the right-hand side by turning the carpet securing screws counter-clockwise, then gently pull the carpet down.

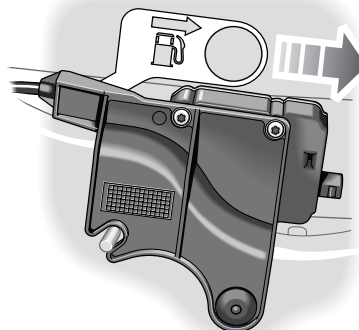

JAG0643

Locate the fuel flap release mechanism and pull the knob rearwards. This will release the flap to gain access to the filler cap and enable the vehicle to be refuelled. Report the fault to a Jaguar Dealer.

Fuel and Refuelling

CATALYTIC CONVERTORS

A few precautions on the use of vehicles fitted with catalytic converters are necessary. These are:

- In order to maintain the efficiency of the emission control system it is essential that unleaded fuel is used. Use of leaded fuel will seriously damage the catalytic converters.
- Heavy impact on the converter casings must be avoided.
- The engine settings must not be altered; they have been established to ensure that the vehicle will comply with stringent exhaust emission regulations. Incorrect engine settings could cause unusually high catalytic converter temperatures and thus result in damage to the converter and vehicle. If adjustment to the settings is considered necessary, this should be performed by a Jaguar Dealer.
- A correctly tuned engine optimises exhaust emissions, performance and fuel economy and it is recommended that the vehicle is regularly maintained.
- Do not continue to operate the vehicle if any engine malfunction is evident; malfunctions should be rectified immediately. For instance, misfire, loss of engine performance, excessive oil consumption or engine run-on may lead to unusually high catalytic converter temperatures and may result in damage to the converters and vehicle.
- The use of catalytic converters increases exhaust system temperatures, therefore, do not operate or park the vehicle in areas where combustible materials such as dry grass or leaves may come into contact with the exhaust system.
- Do not run the engine with either a spark plug lead disconnected or a spark plug removed. Do not use any device that requires an insert into a spark plug hole in order to generate air pressure e.g. tire pump, paint spray attachment etc., as this could also result in catalytic converter damage.
- The vehicle is designed for normal road use. Below are examples of abuse which could damage the catalytic converters and/or vehicle and may lead to a dangerous condition due to excessively high catalytic converter temperatures:
 - Competition or off-road use.
 - Excessive engine speed.
 - Overloading the vehicle.
 - Switching off the engine whilst in gear.

Climate Control

INTRODUCTION

The cabin is supplied with filtered air from a fully automatic electronic climate control system with manual overrides.

Two systems are available:

- A two zone system which allows the front occupants to set individual temperatures for the left and right sides of the interior.
- A four zone system which allows front and rear occupants to set individual temperatures, i.e. two front zones and two rear zones.

Occupant controls

Note: *If your vehicle is equipped with a touch-screen, the climate controls are described in the touch-screen display handbook.*

The main climate control panel is located in the centre console above the radio and audio controls.

There are two types of control panel for either two or four zone systems:

- A dedicated control panel with LCD (Liquid Crystal Display) screen.
- A multi-function touch-control and display unit shared with navigation and other systems. Where this control unit is fitted, refer to the touch-screen display handbook for the detailed operating instructions.

Where the four zone climate control system is fitted, an additional control/display panel for rear passenger use is located at the rear of the centre console, between the front seats.

Voice control

The climate control system may also be operated by spoken commands if the available voice activation system is fitted. For full information on the use of this system refer to the touch-screen display handbook or audio systems handbook.

RECOMMENDED OPERATION

Automatic climate control

Automatic climate control provides efficient regulation of the vehicle environment without constant adjustments from the occupant.

Sensors inside the vehicle monitor temperature, humidity and direct sunlight. In response, the electronic control system automatically adjusts the heat input, blower speed, air intake and airflow distribution, so as to maintain the selected temperature(s) and reduce misting.

Automatic operation provides optimum comfort under most driving conditions.

It is recommended that automatic control (AUTO) is selected as the normal operating mode.

Use of air conditioning

Air conditioning is an integral part of the climate control system, providing cooled and dehumidified air for occupant comfort; the dry airflow is also effective in preventing misting of the windows.

While the air conditioner can be manually switched off, it is recommended that it is used in all climatic conditions throughout the year, preferably in AUTO mode.

Close all windows and the sunroof when the air conditioning is on to ensure satisfactory operation.

Climate Control

Use of air recirculation

The air conditioner/heater system is supplied with fresh air via an intake flap. Closing the flap causes the air inside the vehicle to be recirculated. This helps to prevent unpleasant odours from being drawn into the vehicle and also to improve the performance of the air conditioner in very hot conditions. However, the use of recirculated air will cause screen misting after a short period and should only be used as necessary.

In AUTO mode, the air intake flap is controlled automatically. If required, air recirculation may be manually selected for either a short or indefinite period.



WARNING:

To prevent humidity build up inside the vehicle and possible screen misting, avoid driving with the air conditioning system off or with manual air recirculation selected for prolonged periods.


GENERAL POINTS

To ensure the satisfactory operation of the climate control system, note the following points:

- Ensure that the external grille at the base of the windshield, which provides fresh air for the climate control system, is kept clear of leaves, snow or obstructions.
- A solar sensor, see item 1 on the next page, is mounted on the centre top of the fascia. Ensure that this sensor is not covered.
- Temperature and humidity sensors, see item 2 on the next page, are located behind the small grille. Do not cover or obstruct the opening.
- Air ducts under the front seats supply the rear passenger footwells (see air distribution illustration). Objects or material placed under the seats may block or obstruct the open ducts.
- The external air intake to the air conditioner/heater system is fitted with a filter. Ensure that the filter is changed at the specified service intervals to maintain efficient operation.
- If the air conditioning system is not used frequently, it should be run briefly at least once each week, with a cold setting, to prevent the seals from drying out with subsequent refrigerant leaks.
- Moisture removed from the air by the air conditioning unit is discharged onto the road underneath the vehicle. After stopping, puddles of water may form underneath the vehicle.

Climate Control

AIR DISTRIBUTION

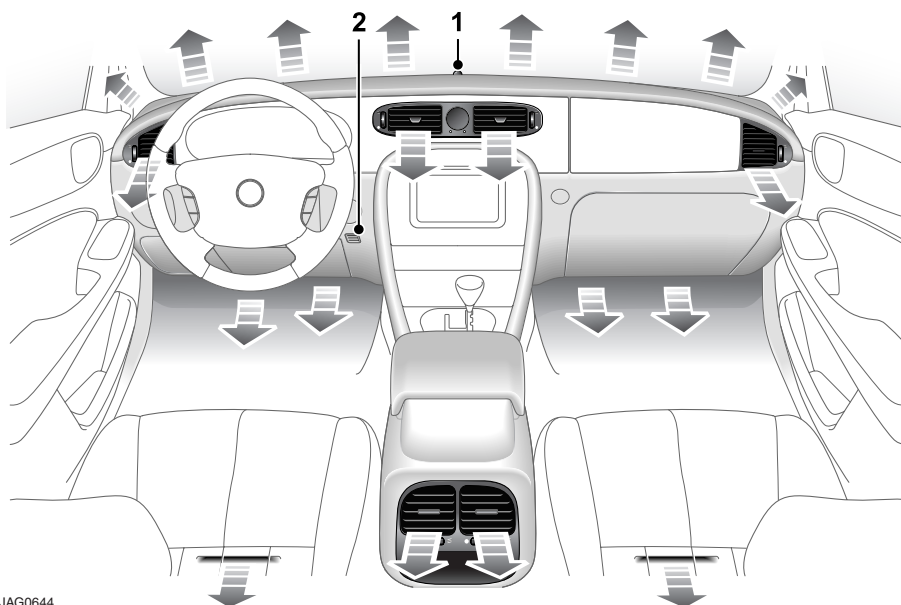

JAG0644


1. Solar sensor.
2. Temperature and humidity sensors.

The illustration above shows the location of the air vents within the vehicle. The airflow from the fascia level vents is regulated using thumbwheel controls and adjustable direction vanes.

Air distribution between the windshield, fascia and floor levels is selected automatically when operating in AUTO mode, but can be selected manually.

Front Climate Controls

FRONT CONTROL PANEL

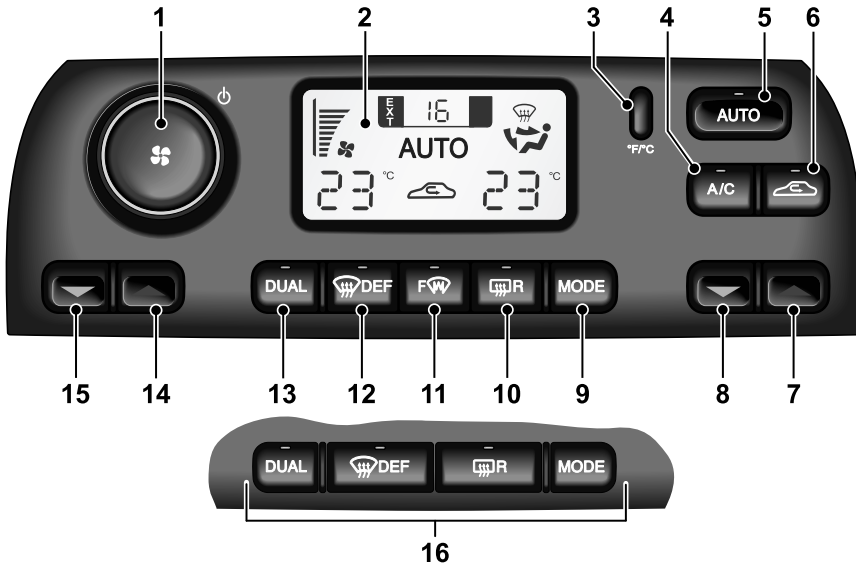

JAG0645

1. Blower speed and system On/Off.
2. Display panel.
3. Fahrenheit/Celsius selector.
4. Air conditioner on/off.
5. Select automatic operation.
6. Recirculation/fresh air.
7. Increase right zone temperature.
8. Decrease right zone temperature.
9. Select air distribution.
10. Heated rear screen/door mirrors.
11. Heated front screen (optional).
12. Defrost windows.
13. Select dual/single temperature zone.
14. Increase left zone temperature.
15. Decrease left zone temperature.
16. Option without front screen heater.

The climate control functions are selected by push buttons and a rotary control. When a button is pressed, selection of the function is confirmed by a beep; most buttons also have an illuminated LED.

Many system functions also have graphic symbols displayed on the LCD (Liquid Crystal Display) screen.

Automatic control (AUTO) may be overridden at any time. Defrost/demist operation is available and also manual selection of blower speed, air distribution, recirculation, air conditioning and windshield heating.

Panel illumination

With the exterior lighting switched on, the graphics on the panel controls are illuminated by low level backlighting.

Front Climate Controls

The illumination level is adjusted by the common instrument panel dimmer control (see page 138).

TO SWITCH THE SYSTEM ON

The climate control system operates in position **II** of the ignition switch.

With the ignition key turned to the run position, the system will switch on in the operating mode last set.

For normal usage select AUTO mode.

AUTO mode

Automatic operation provides a controlled environment over a temperature range of 17°C to 31°C (61°F to 89°F) and should be regarded as the normal operating mode.



To select automatic climate control press the **AUTO** button; the word AUTO

appears on the LCD screen to confirm selection.

Front and rear screen heating and timed air recirculation may be selected in AUTO mode. Selecting any other control will cancel AUTO operation.

Automatic operation cannot be deselected using the AUTO button. To exit AUTO mode, select another mode or press the blower control knob to switch the system off.

Temperature selection



Separate controls allow the driver and front passenger zone

temperatures to be independently adjusted. Press the red buttons to increase temperature and the blue buttons to decrease temperature.

Both driver and front passenger selected temperatures are always displayed.

Pressing the driver's buttons to select the maximum or minimum temperature settings causes the display to change to HI or LO respectively and cancel AUTO mode.

To quickly jump from HI or LO to a convenient midrange temperature of 23°C (73°F), press and hold AUTO for a few seconds.

Dual temperature zones



With the DUAL button LED illuminated, the system provides separate temperature control of the driver and front passenger zones.

Press DUAL to deselect dual temperature control (LED off); the front passenger temperature will change to that of the driver side. Using the driver side temperature control buttons will now change both zone temperatures together.

To select dual temperature control, press either the **DUAL** button or one of the front passenger side red/blue temperature control buttons. The DUAL LED is illuminated.

External temperature

The external (EXT) temperature is displayed at the top of the screen.



Press the button to change the scale between degrees

Fahrenheit (°F) and degrees Celsius (°C) for the displayed

internal and external (EXT) temperatures.

Front Climate Controls

Windshield defrost/demist

Frost and heavy misting



To remove frost or heavy misting from the windshield, press the **DEF** button.

- The blower switches on automatically at a high speed, but the speed can be increased or decreased manually if required.
- Air conditioning switches on automatically and cannot be deselected.
- Recirculation is cancelled and cannot be selected.
- The front screen heater and the rear screen heater/door mirror heaters switch on automatically, provided the engine is running.

To deselect defrost mode, press **AUTO** (recommended operating mode).

Light misting



To prevent or remove light windshield misting, select manual air distribution to windshield and feet.

Heated screens and door mirrors



The front (**F**) and rear (**R**) screen heaters may be switched on and off in any mode, including system off, but only operate when the engine is running. The door mirror heaters are also controlled by the rear screen heater button.

The front screen heater (if fitted) switches off automatically after 6½ minutes. The rear screen and door mirror heaters switch off automatically after 21 minutes.

The windshield heaters may be manually deselected during the timed period using the push buttons.

In cold ambient conditions, at the start of a journey, the front and rear screen heaters will switch on automatically for the timed period.

Note: *The top three lines of the rear screen pattern are a concealed antenna system and do not defrost the rear screen.*

Air conditioning



Press to switch the air conditioning on or off.

The air conditioning system is controlled automatically in AUTO mode. Deselecting A/C cancels AUTO mode.

The air conditioning system is also switched on automatically in defrost mode (DEF) but cannot be deselected.

Blower speed



Set the blower speed as required with the rotary control knob. Blower speed is shown as a series of bars on the LCD screen.

When operating in AUTO mode, blower speed is controlled automatically (but not displayed) and any adjustment of the knob will cancel AUTO mode.

Note: *In AUTO mode, the blower only operates at low speed, if heating is required, until the engine is warm.*

Front Climate Controls

MANUAL AIR DISTRIBUTION

Air distribution is automatically controlled in AUTO and defrost modes.



Press **MODE** to select manual air distribution. Four air distribution modes are available and are selected in succession by pressing the MODE button. A symbol is displayed for the selected mode.



Airflow distributed to the windshield and feet; select to prevent or remove light misting and when heating the interior.



Airflow directed to foot level; select to heat the interior.



Airflow distributed to the face and feet.



Airflow directed at face level only; select to cool the interior.

AIR RECIRCULATION

Timed air recirculation



Press the button briefly to select timed air recirculation. The fresh air intake is opened and the button LED extinguished at the end of the time out period.

Latched air recirculation



Press and hold the button for a few seconds to select latched air recirculation. Selection is indicated by the screen symbol and two beeps.

Selecting latched air recirculation cancels AUTO operation.

To deselect latched air recirculation, press the recirculation button again, or select **AUTO**.

TO SWITCH THE SYSTEM OFF



Press in the blower rotary control knob to switch the climate control system off.

If the blower control knob is pressed again, the system will switch on in the previous mode set.

4-Zone climate control system

If 4-zone climate control is fitted, switching off front climate control (above) will also cause the rear climate control system to be switched off. Switching the front system on again will not switch the rear system on.


RAM AIR

With the climate control system switched off, air recirculation is automatically selected (intake flap closed). To select fresh air with the system off, press the **MODE** button to select one of the air distribution modes.

With the blower switched off, the fresh airflow results from the forward motion of the vehicle (ram air effect).

Rear Climate Controls

CONTROL PANEL

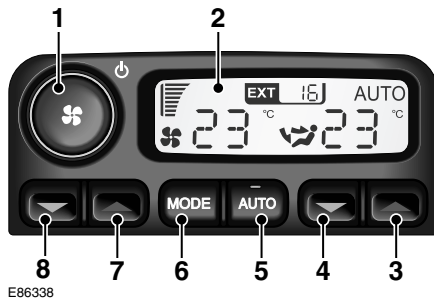

1. Blower speed and system on/off.
2. Display panel.
3. Increase right zone temperature.
4. Decrease right zone temperature.
5. Select automatic operation.
6. Select air distribution.
7. Increase left zone temperature.
8. Decrease left zone temperature.

4-ZONE CONTROL

The rear climate control panel provides independent temperature control of the rear left and right passenger zones, when the front control system is operating.

SWITCHING ON

The rear climate control system can only be switched on if the front system is already switched on. Switching on the front system does not switch on the rear system.

To switch on the rear climate control system, press **AUTO**, or press in the blower control knob (1).

AUTO OPERATION

Selecting **AUTO** (5) provides full automatic temperature control, including blower speed and air distribution, for both rear positions.

TEMPERATURE CONTROL

The left and right zone temperatures are set independently using the red (increase temperature) and blue (decrease temperature) in the same manner as the front system.

HI/LO (maximum/minimum temperatures) cannot be selected on the rear control panel but selection of HI/LO on the front panel will apply to all four zones, overriding rear temperature selection.

MODE BUTTON

Press the **MODE** button (6) to select manual air distribution; repeat presses will cycle through the following options:

- Rear airflow to face level only.
- Rear airflow to face and feet levels.
- Rear airflow to feet only.

Selecting **MODE** will immediately cause **AUTO** operation to be deselected.

BLOWER SPEED

Rotate the blower speed knob (1) to vary the blower speed as indicated by the changing number of bars shown on the LCD display (2).

Adjusting the blower speed will immediately cause **AUTO** operation to be deselected.

Note: If defrost (DEF) is selected on the front control panel, the rear system will operate normally but with a limit on the blower speed.

Rear Climate Controls

SWITCHING OFF

The rear system may be switched off independently of the front system by pressing in the blower control knob (1).

The rear system will be switched off if the front system is switched off.

Touch-screen Climate Control

INFORMATION

A general introduction to the touch-screen is given in the **Touch-screen** chapter of this handbook, starting on page 275. The operating information given here refers to the touch-screen and other controls.

The vehicle has both driver and passenger (dual zone) red and blue temperature control arrow buttons.

Refer to page 191 for more information on the rear climate control panel fitted with the optional 4-zone system.

Controls and displays

The climate control system has its own menu on the touch-screen. A number of other buttons are also used for climate control and are located around the perimeter of the touch-screen. When a perimeter button is pressed, selection of the function is confirmed by a beep and, on most buttons, illumination of a Light Emitting Diode (LED).

An LCD screen below the touch-screen shows the interior temperatures set by the driver and passenger and the external (EXT) ambient temperature.

Note: *Using other systems and touch-screen displays, such as audio or navigation, does not affect the climate control settings.*


Panel illumination

With the exterior lighting switched on, the graphics on the panel controls are illuminated by low level backlighting.

The illumination level is adjusted by the common instrument panel dimmer control.

Touch-screen Climate Control

CONTROLS

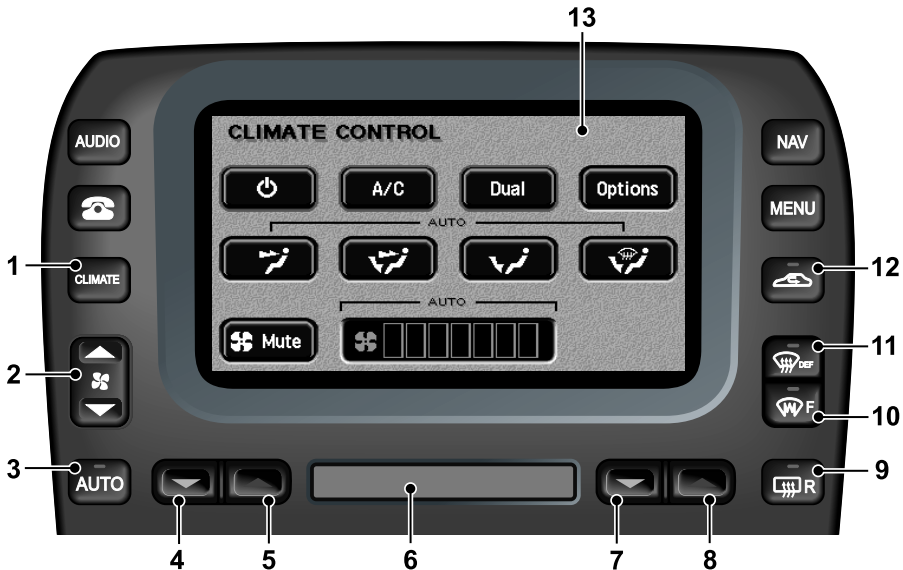

JAG0646

1. Select climate control touch-screen.
2. Adjust blower speed.
3. Select automatic operation.
4. Decrease left-hand zone temperature.
5. Increase left-hand zone temperature.
6. LCD screen: interior and exterior temperatures.
7. Decrease right-hand zone temperature.
8. Increase right-hand zone temperature.
9. Heated rear screen/door mirrors.
10. Heated front screen.
11. Defrost operation.
12. Select air recirculation.
13. Touch-screen.

Touch-screen Climate Control

IGNITION ON

The climate control system operates in position **II** of the ignition switch.

When the ignition is switched to position **II** or the engine is started, the Jaguar logo will be displayed briefly followed by the last touch-screen selected (e.g. radio).

The climate control system will be set to the climate operating mode selected previously.

CLIMATE CONTROLS DISPLAY

There are two climate control touch-screen displays, one for the system 'ON' state and the other for system 'OFF'/ram air mode. Smaller pop-up displays appear briefly when selecting air recirculation or adjusting the blower speed.


Most climate functions can be selected using the perimeter buttons without displaying the climate touch-screen buttons.



To select the touch-screen display, press the **CLIMATE** button.

To exit the climate control screen, select another system function, e.g. AUDIO.

AUTO MODE

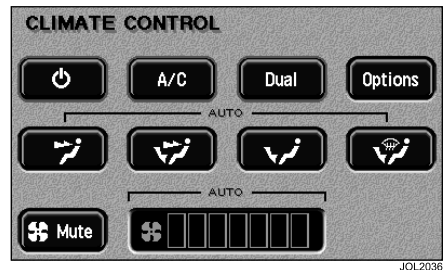

Automatic operation provides a controlled environment over a temperature range of 17°C (61°F) to 31°C (89°F) and should be regarded as the normal operating mode.



To select automatic climate control press the **AUTO** button and select the required temperature.

The AUTO mode touch-screen is shown above. If the touch-screen is not displayed, press the **CLIMATE** button.

Front and rear screen heating and timed air recirculation may be selected while remaining in AUTO mode. Selecting any other climate control perimeter button or touch-screen button will cancel AUTO operation.

Automatic operation cannot be deselected using the **AUTO** button. To exit AUTO mode, select another climate mode or touch the system **ON/OFF** button to switch the system off.

Touch-screen Climate Control

TEMPERATURE SELECTION



Set the required interior temperature with the red or blue arrowed buttons.

Press the red buttons to increase temperature and the blue buttons to decrease temperature.




The selected temperatures will appear on the LCD screen below the touch-screen.

Pressing the driver's buttons to select the maximum or minimum temperature settings causes the LCD screen to change to HI or LO respectively and cancels AUTO mode.

To quickly jump from HI or LO to a convenient mid-range temperature of 23°C (73°F), press and hold **AUTO** for a few seconds.

DUAL TEMPERATURE ZONES




With the **Dual** button illuminated, the system provides separate

temperature control of the driver and passenger zones.

Touch **Dual** to deselect dual temperature control; the passenger temperature will change to that of the driver's side. Using the driver's side temperature control buttons will now change both zone temperatures together.

To select dual temperature control, either touch **Dual** or press one of the passenger's side temperature control buttons.

EXTERNAL TEMPERATURE



The external (EXT) temperature is displayed on the LCD screen.

CELSIUS/FAHRENHEIT SELECTION




Touch the button to change the scale between degrees Celsius (°C) and degrees

Fahrenheit (°F) for the displayed interior and external temperatures.

Touch-screen Climate Control

TIMED AIR RECIRCULATION



 Press the button briefly to select air recirculation for a timed period only; the pop-up shown above will appear for a few seconds on top of the currently selected touch-screen.


The fresh air intake is opened and the button LED extinguished at the end of the timed period.


Latched fresh air

Pressing the air recirculation button when the button LED is illuminated will cancel recirculation and allow fresh air into the vehicle.

Deselecting air recirculation cancels AUTO mode.

LATCHED AIR RECIRCULATION

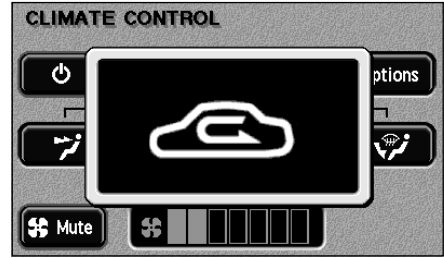

 To latch air recirculation (so that it remains selected), press and hold the air recirculation button until the pop-up changes from the timed to the latched recirculation symbol.

Selection is also indicated by two beeps and the button LED flashing four times then remaining illuminated.

Selecting latched recirculation cancels AUTO mode.

Caution: Prolonged operation with recirculation selected in cold, damp conditions could result in interior condensation.

Touch-screen Climate Control

WINDSHIELD DEFROST/DEMIST

Frost and heavy misting



To remove frost or heavy misting from the windshield, press the **DEF** button.

- The blower switches on automatically at a high speed but the speed can be increased or decreased manually if required.
- Air conditioning switches on automatically and cannot be deselected.
- Recirculation is cancelled and cannot be selected.
- The front screen heater and the rear screen heater/door mirror heaters switch on automatically, provided the engine is running.

To deselect defrost mode, press **DEF** again, or press **AUTO** (recommended operating mode).

Light misting



To prevent or remove light windshield misting, select manual air distribution to windshield and feet (see **MANUAL AIR DISTRIBUTION**, page 199).

HEATED SCREENS AND DOOR MIRRORS



The front screen heater (F) and the rear screen heater (R) may be switched on and off in any mode, including system off, but only operate when the engine is

running. The door mirror heaters are also controlled by the rear screen heater button.

The front screen heater (where fitted) switches off automatically after four minutes. The rear screen and door mirror heaters switch off automatically after ten minutes.

The windshield heaters may be manually deselected during the time-out period using the buttons.

In cold ambient conditions, at the start of a journey, the front and rear screen heaters will switch on automatically for the timed period.

Where a front screen heater is not fitted, the windshield has a wiper park zone heater which operates automatically with no manual control.

Note: *The top three lines of the rear screen pattern are a concealed antenna and do not defrost the rear screen.*

Touch-screen Climate Control

AIR CONDITIONING



Touch the A/C button to switch the air conditioning on or off.

The air conditioning system is controlled automatically in AUTO mode. Deselecting A/C cancels AUTO mode.

The air conditioning system is also switched on automatically in defrost mode (DEF) but cannot be deselected.

BLOWER SPEED



Set the blower speed as required using the rocker button. Blower speed is shown as a series of bars on the touch-screen.

If the blower speed is changed while a non-climate control touch-screen is displayed, a pop-up display showing the blower speed bars will appear for a short period.

When operating in AUTO mode, blower speed is controlled automatically (but not displayed) and any adjustment of the button will cancel AUTO mode.

Note: In AUTO mode, the blower will only operate at low speed until the engine is warm, if heating is required in the vehicle.

BLOWER MUTE



To reduce the interior noise level, the blower speed may be quickly reduced to a preset level by touching the Mute button.

Selecting Mute will cancel AUTO mode, but touching the Mute button again will return operation to the previous state.

When JaguarVoice is fitted, the climate control system will automatically prevent any increase in blower speed while speech commands are given.

Note: The Mute function should only be used for short periods, as it reduces the efficiency of the climate control system.

MANUAL AIR DISTRIBUTION

Air distribution is automatically controlled in AUTO and defrost modes.

Touch one of the four air distribution buttons on the screen to cancel the current mode and select manual operation.

The air distribution options are:



Airflow directed at face level only; select to cool the interior.



Airflow distributed to the face and feet.



Airflow directed to feet level; select to heat the interior.



Airflow distributed to the windshield and feet; select to prevent or remove light misting and when heating the interior.

Touch-screen Climate Control

SWITCHING CLIMATE CONTROL OFF



JOL2068




To switch the system off, touch the system **ON/OFF** button on the climate control screen. The touch-screen will change to the system off/ram air climate control screen above.

Pressing the system On/Off button will return the system to the previous state.

It is recommended that **AUTO** is selected to switch the system on again.

RAM AIR

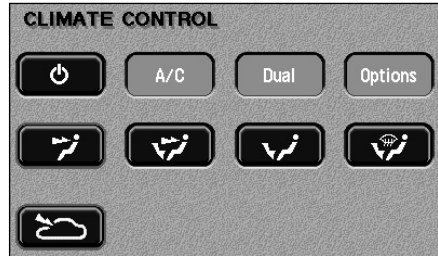

JOL2069

With the climate control system switched off, air recirculation is automatically selected (intake flap closed).


To select fresh air with the system off, touch the ram air button (bottom left on illustration). The intake flap will open with air distribution to face level automatically selected.


Any of the other air distribution modes may be selected manually using the touch-screen.

With the blower switched off, the fresh airflow results from the forward motion of the vehicle (ram air mode).

Touch-screen Climate Control

CLIMATE OPTIONS

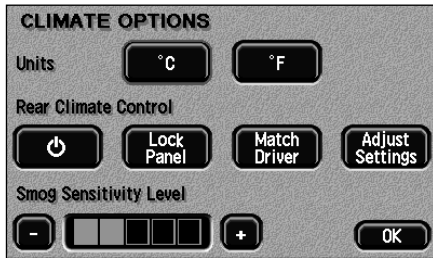

 The Options button is displayed in place of the °C/°F button if the optional smog sensor and/or rear climate control panel (4-zone system) are fitted.

Touching Options displays the Celsius (°C) and Fahrenheit (°F) selection buttons. The display also shows either the rear control panel buttons or the smog sensor setting or both.

SMOG SENSING

Where fitted, the smog sensor detects road traffic pollutants and automatically selects air recirculation when the level of pollution outside the vehicle reaches a certain level. The level of pollution at which the smog sensor will respond can be adjusted on the Options screen.

Once the level of pollutants decreases, air recirculation will switch off (subject to the normal operation of the automatic climate control system).

To adjust smog sensitivity: Touch the + button to increase sensitivity to low smog levels. Touch the – button to decrease sensitivity.

Caution: Don't set the smog sensor to a needlessly high level in cold and damp conditions: this could result in interior condensation.

REAR CLIMATE PANEL

Controlling the rear climate panel from the touch-screen

On the 'Climate Options' screen (see page 201) the 'Rear Climate Control' buttons provide control of the rear system:

- Touch the left-hand button to switch the rear control panel on or off.
- Touch **Lock Panel** to lock the rear climate control panel. This prevents rear passengers from altering the rear climate settings, until the next time the ignition is switched on.
- Touching **Match Driver** causes the rear zones to adopt the same settings as the driver's zone. Any adjustments made directly on the rear panel will override these settings.
- Touch **Adjust Settings** to alter the settings of the rear zones. A simulation of the rear control panel will be displayed on the touch-screen.

Touch-screen Climate Control

Simulated rear control panel




The simulation of the rear climate control panel allows all of the rear climate functions to be controlled via the touch-screen.

Operation of these touch-screen buttons is as described for the rear panel itself in the owner's handbook.

Note: *It is not possible to make adjustments on the actual rear panel while the touch-screen simulation of the panel is displayed. The touch-screen display will revert to the main climate screen 30 seconds after the last touch.*

Inertia Switch

INERTIA SWITCH OPERATION

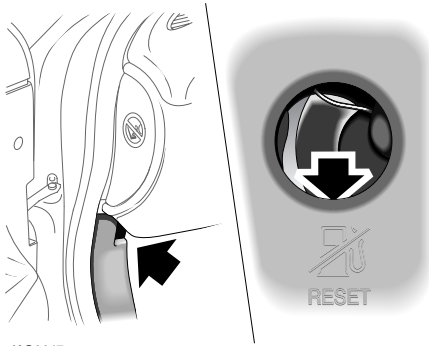

In the event of an accident, the inertia switch may trip (depending on the severity and type of impact), isolating operation of the fuel pump. Once the switch has tripped it must be reset before attempting to restart the engine.

The inertia switch is located behind the trim on the left-hand side of the vehicle, forward of the front door post, below the fascia. A finger access hole in the trim allows the driver to reset the switch.

To Reset the Switch



WARNING:

To avoid the possibility of fire or personal injury, do not reset the inertia switch if you see or smell fuel.

If no fuel leak is apparent, reset the inertia switch as follows:

1. Turn the ignition switch to position **0**.
2. Press down the red reset button on the top of the inertia switch.
3. Turn the ignition switch to position **II**, pause for a few seconds, then return the key to position **0**.
4. Make a further check for fuel leaks.

Emergency Starting

ROLLING START

This vehicle is fitted with automatic transmission. In the event of a discharged battery preventing a normal engine start, the vehicle **cannot** be started by pushing or towing. Either use jump leads connected to a booster battery (e.g. on another vehicle) or fit a fully charged battery.

USING JUMP LEADS

Both the booster and discharged battery should be treated with great care when using jump leads. Always use high quality leads capable of carrying the starter current of the vehicle to be started.



WARNING:

To avoid serious injury use extreme caution when removing the booster cables as the engine will be running on the previously disabled vehicle. This means that you will be working close to components which are moving at high speed, carry high voltage, or may be hot.

Before commencing, the following precautions must be taken:

- When the battery of another vehicle is being used, ensure that the vehicles do not touch. Alternatively, remove the charged battery and place near to, not on, the vehicle with the discharged battery.
- Ensure that both vehicles have all electrical services OFF, the parking brakes applied and the transmission in the **P** (park) position.


- Where the jump leads are of a different colour, e.g. red and black, use red for positive (+). This aids identification and helps to avoid crossing positive (+) to negative (-). Take extra care to avoid crossing the polarity when using cables of the same colour.

Caution: If using a jump start vehicle, under no circumstances should the vehicles come into contact with each other. This could establish an earth connection, which may cause sparks and damage.

Caution: Do not run the engine of the jump start vehicle when boost starting a Jaguar vehicle. If the jump start vehicle's engine is running and the jump leads are disconnected, damage to the Jaguar vehicle's electrical system will result.

Note: *The booster battery must be of the 12 volt type.*

Emergency Starting

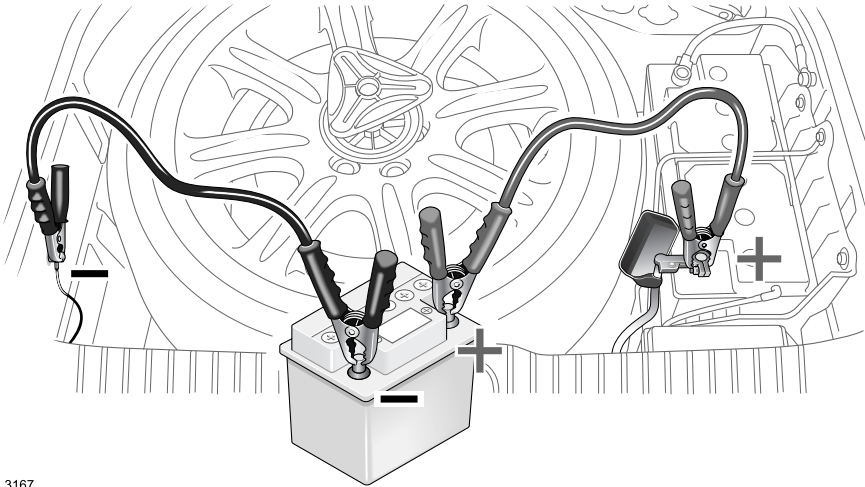

JOL3167

The procedure must be followed exactly, being careful not to cause sparks:

1. Gain access to the battery which is under the luggage compartment floor (see page 206) and unclip the battery positive (+) terminal cover.
2. Attach one end of the red jump lead to the positive (+) terminal of the booster battery and the other end to the positive (+) terminal of the discharged battery. Make sure that a good connection is made.

Caution: Do not connect the negative jump lead directly to the negative (-) terminal of the discharged vehicle.

3. Attach one end of the black jump lead to the negative (-) terminal of the booster battery and the other end to the earth stud on the left-hand side of the spare wheel well.
4. Start the engine of the vehicle with the discharged battery.


5. When started, allow the engine to idle for five minutes before disconnecting the cables.
6. Disconnect the black jump lead from the earth point and the booster battery negative (-) terminal.
7. Disconnect the red jump lead from the positive (+) terminals of both batteries.
8. Refit the cover to the positive (+) terminal.
9. Close the luggage compartment floor panel.

After starting the engine, it may be necessary to reset the Electric Parking Brake.

Also, see **After battery reconnection** on page 246.

Wheel Changing

LUGGAGE COMPARTMENT UNDERFLOOR ACCESS

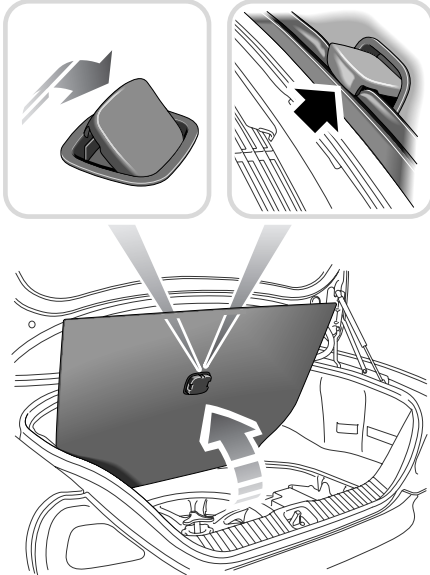

E86403

The space under the luggage compartment floor houses the spare wheel, battery, jack and rear fuse box.

To raise the floor panel, press down the rear of the handle then, holding the handle at the front, swing the floor panel upwards. Hook the handle over the top edge of the luggage compartment opening.

Be prepared for a flat tire. Know where equipment is stowed and read the wheel changing and jacking instructions carefully. Keep the jack screw threads clean and greased to ensure it is always ready for an emergency.

Park off the road, clear of all traffic and on as level, solid ground as possible. Switch on hazard warning lamps and, where legally required, display the warning triangle.

Caution: Ultra high performance tires.

This vehicle is equipped with Ultra High Performance (UHP) tire and wheel combinations designed to provide maximum dry road performance with consideration for hydroplaning resistance. These low profile high speed rated tires may be more susceptible to damage from road hazards. UHP tires have performance enhancing soft rubber tread compounds, which when driven aggressively experience rapid tread wear and shorter life than less performance oriented tires.

These tires are not recommended for driving on snow or ice, and should be replaced with winter tires when weather conditions dictate.

Tires with all season and M + S icon have a level of winter performance and need not be replaced.



WARNING:

It can be dangerous to change a wheel when the vehicle is on a slope or soft, uneven ground.

Wheel Changing

TEMPORARY-USE SPARE WHEEL

Note: Maintenance information for the temporary-use spare wheel is the same as given for normal tires.

Observe the following warnings before using the wheel:



WARNING:

Please note the temporary-use spare wheel warning label on the wheel. Adhere to instructions on the label. Failure to comply can be dangerous.



WARNING:

Temporary-use spare wheel maximum speed is 80 km/h (50 mph).



WARNING:

When a temporary spare wheel is fitted, drive with caution and replace with the specified wheel and tire as soon as possible.



WARNING:

Do not fit more than one temporary-use spare wheel and tire assembly at a time.



WARNING:

The temporary-use spare wheel must be inflated to the correct pressure of 4.1 bar (60 lb/in²).



WARNING:



If the vehicle is fitted with a Tire Pressure Monitoring (TPM) System, please refer to page 253.



WARNING:

DSC must be ON when the temporary use spare wheel is in use.

LOCKING WHEEL NUTS

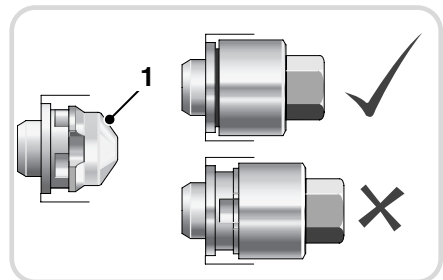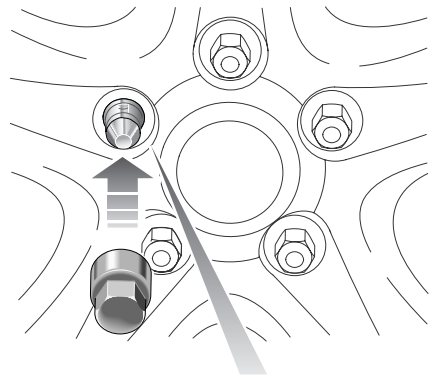

E86405

Where Jaguar locking wheel nuts are fitted (one on each wheel), they can only be removed using the correct key socket.

Wheel Changing

The locking wheel nut comprises two grooved parts, front and rear, which must be turned together to allow the nut to be fitted or removed.


To remove the nut, the front and rear grooves must be aligned. Locate the key socket in the grooves and push it fully over both parts of the nut. Fit the wheel nut wrench over the key socket and loosen the locking wheel nut (turn counter-clockwise).

Attempting to remove the nut without the correct key socket (such as attempted theft) or with the socket not located over the rear part of the nut, will cause the front part only (see item **1**) to turn.

If this has happened, rotate the front part with the key socket until the grooves are re-aligned and then push the socket fully over the nut.

Should a new key socket be required, contact your Jaguar Dealer. Proof of vehicle ownership will be required.

SPARE WHEEL AND JACK REMOVAL

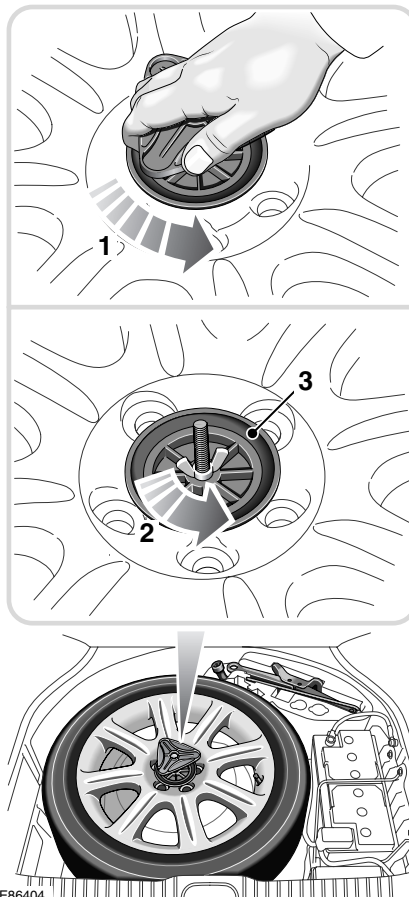

WARNING:

The spare wheel is heavy and if handled incorrectly may cause injury. Use extreme caution when lifting or manoeuvring the wheels.

Wheel Changing



WARNING:

Always secure the spare wheel, or the removed wheel, in the correct position using the retaining bolt. Failure to do so may cause the spare wheel to move in the event of a sudden manoeuvre or accident, leading to death or serious injury.



WARNING:

Ensure that the floor panel is placed where it cannot fall and cause injury when it is removed from the vehicle.



WARNING:

When removing or replacing the floor panel ensure that fingers and hands are kept clear. Failure to do so may result in crush injuries.

The spare wheel and jacking equipment are stored under the trunk floor panel.

To remove the spare wheel, fully unscrew and remove the locking ring (1). Unscrew and remove the wing nut (2) below the locking ring. This allows wheel retainer (3) to be lifted and removed. The wheel can now be lifted out.

WHEEL CHANGING PROCEDURE

Before raising the vehicle, or changing a wheel ensure that you read, and comply with the following warnings.



WARNING:

Always find a safe place to stop, off of the highway and away from traffic.



WARNING:

Ensure that the vehicle is on firm level ground.



WARNING:

Disconnect trailer/caravan from the vehicle.



WARNING:

Switch on the hazard warning lamps.



WARNING:

Ensure that all passengers and animals are out of the vehicle, and in a safe place away from the highway.



WARNING:

Place a warning triangle at a suitable distance behind the vehicle, facing towards oncoming traffic.



WARNING:

Ensure that the front wheels are in the straight ahead position, and engage the steering lock.

Wheel Changing



WARNING:

Apply the Electric Parking Brake (EPB), and engage Park in vehicles fitted with an automatic transmission.



WARNING:

Apply the EPB and engage 1st or reverse gear in vehicles fitted with a manual transmission.



WARNING:

Ensure that the jack is on firm, level ground.



WARNING:

Never place anything between the jack and the ground, or the jack and the vehicle.



WARNING:

Always chock the wheels using suitable wheel chocks. Place the chocks on both sides of the wheel, diagonally opposite the wheel to be changed.



WARNING:

If jacking the vehicle on a slight slope is unavoidable, place the chocks on the downhill side of the two opposite wheels.



WARNING:

Take care when lifting the spare wheel, and removing the punctured wheel. The wheels are heavy, and can cause injuries if not handled correctly.



WARNING:

Remove the spare wheel prior to jacking the vehicle. To avoid destabilising the vehicle when raised.



WARNING:

Take care when loosening the wheel nuts. The wheel brace may slip off if not properly attached, and the wheel nuts may give way suddenly. Either unexpected movement may cause an injury.

Ensure that all passengers are in a safe place, clear of the vehicle.




Apply the EPB and select gear position **P** (Park).

Ensure that the jack is placed on firm and level ground.

Note:

*When one rear wheel is lifted off the ground, the selection of gear position **P** (Park) will not prevent the vehicle from moving and possibly slipping off the jack.*

Wheel Changing

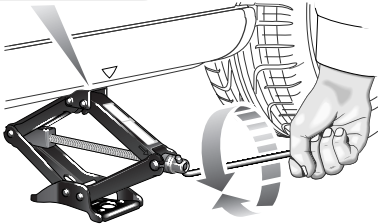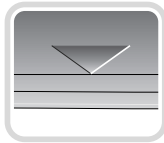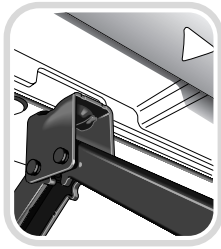

E86406



WARNING:

Ensure that the jack is correctly located onto the jacking point.

Observe the instructions printed on the jack.

Use the jack only for lifting the vehicle during wheel changing, and only use the jack which is stored in the vehicle.

Do not start or run the engine while the vehicle is only supported by a jack.



WARNING:

Never work beneath the vehicle, or place any part of your body beneath the vehicle with the jack as the only means of support. Always use suitable vehicle support stands which are approved for the weight of the vehicle.

Removing the wheel

Before raising the vehicle slacken, but do not remove, the wheel nuts.

There are four jacking points, two each side of the vehicle on the underside of the floor. These provide positive location for the jack.

To locate the jacking point, feel along the sill panel to the cut-away portion and then fit the jack to the body, as shown, not to the sill panel.

Caution:

Ensure before raising the vehicle that the jack is correctly positioned to avoid any damage to the vehicle sills or sill panels. Use only the correct jacking points, never use bumpers or any other part of the body to lift the vehicle.



WARNING:

Do not attempt to lift the vehicle unless the jack head is fully engaged in the jacking point.



WARNING:

Ensure that the EPB is applied.

Wheel Changing

Place the jack squarely beneath the appropriate jacking point. Ensure that the jack head is fully engaged. Carefully raise the vehicle by turning the jack handle and continue jacking until the tire just clears the ground. Minimum tire lift gives maximum vehicle stability.

Remove the wheel nuts and the wheel.


Centre badge

When changing the alloy road wheels, transfer the centre badge to the replacement wheel. Using the plastic tipped end of the wheel nut wrench handle, push the centre badge from its housing.

Push the centre badge into the replacement wheel.

Fitting the spare wheel

Fit the spare wheel and loosely secure with the wheel nuts.

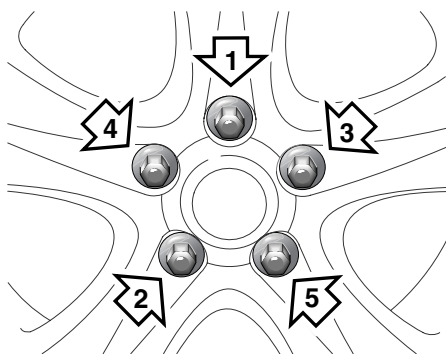

E86407

Using the wheel nut wrench, lightly tighten the wheel nuts alternately using the sequence shown in the illustration.

Lower the jack and tighten the wheel nuts alternately, DO NOT OVER TIGHTEN.

At the earliest opportunity have the wheel nuts tightened with a torque wrench to 125 Nm (92 lbf.ft).

This torque must not be exceeded.

Stowing the equipment

Stow the replaced road wheel in the trunk.

Check that the wing nut is unscrewed fully so that it is as close as possible to the handle of the wheel retainer. This is to ensure that the wheel retainer can be fitted correctly.

Locate the wheel retainer into its mating thread in the trunk floor, tighten it fully, then tighten the wing nut clockwise to secure the wheel.

Stow the jacking equipment.

Close the trunk floor panel.



WARNING:

When a temporary spare wheel is fitted, drive with caution and replace with the specified wheel and tire as soon as possible.

Note:

If your vehicle is fitted with a TPMS, it may take a few minutes for the system to recognise the replaced wheel. Please see page 253 for further information on the TPMS.

Vehicle Recovery

The preferred vehicle recovery method is by using a flat-bed transporter or rear suspended tow.

Caution:

If the vehicle has defective transmission, to prevent further damage, it must be towed with the rear wheels clear of the ground.

Caution:

Ensure that the recovery team do not tow with sling-type equipment since damage to the bodywork may result.

Caution:

Do not tow the vehicle by suspending the front end.

TRANSPORTING

If the vehicle is being transported on a trailer or flat-bed transporter, the Electric Parking Brake (EPB) must be applied, the wheels chocked and the gear selector lever moved to position **N** or **D** but NEVER to **P**.

The vehicle must be securely tied down to the transporter or trailer.

Transporter tie-down procedure



WARNING:

Avoid body contact with a hot exhaust pipe when securing the vehicle to the transporter.

IMPORTANT: Use straps over the wheels/tires only, to secure the vehicle to the transporter.

Caution:

Do not use the tie-down brackets on the vehicle rear underbody; these are for Jaguar factory use only. Do not lash the body to the transporter. In time, with the engine switched off, the vehicle body will drop due to settling of the air suspension system and cause the tie down chains/straps to become slack if connected to the tie-down brackets or to any part of the body.

The towing eye is not designed for securing the vehicle during transportation.

Vehicle failure

The removable towing eye is primarily for emergency use when towing for SHORT DISTANCES, e.g. removing the vehicle if it is causing an obstruction or for winching the vehicle onto a recovery transporter.

To prevent damage to the automatic transmission whilst the vehicle is being towed with the rear wheels on the ground, towing distance must be restricted to 0.8 kilometres (0.5 miles). Towing speed must not exceed 48 km/h (30 mph).

Always obey towing regulations. In certain countries the registration number of the towing vehicle and an **ON TOW** sign or warning triangle must be displayed in a prominent position at the rear of the vehicle being towed.

When being towed, the gear selector lever must be in neutral (position **N**) with the ignition key turned to position **II** to release the steering lock and render the indicators, horn and brake lamps operational.

Vehicle Recovery



WARNING:

When the engine is not running the steering and brakes will no longer be power-assisted. Therefore be prepared for relatively heavy steering and the need for greatly increased brake pedal pressure.

TOWING EYE



WARNING:

The towing eyes at the front and rear of the vehicle are designed for on-road recovery only. If they are used for any other purpose it may result in vehicle damage and serious injury.



WARNING:

Never use the towing eyes to tow a trailer, caravan etc. Doing so may result in vehicle damage and serious injury.

A screw-in towing eye is provided in the luggage compartment with the jack and can be fitted to the front or rear of the vehicle. The towing eye has a left-hand thread and must be turned in an counter-clockwise direction when fitting.




Caution:

The towing eye is not suitable for solid bar towing.

Caution:

Care must be taken to avoid damaging the bumpers and front apron.

Front tow point

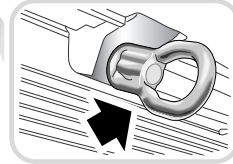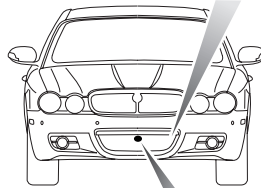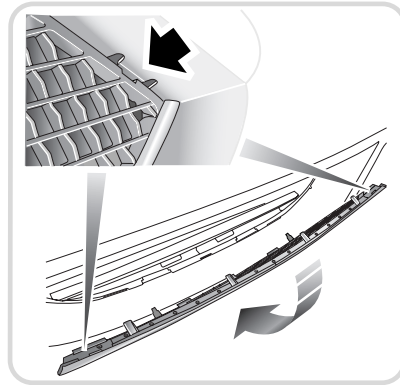

JAG0648

The front tow point is located behind the lower central grille of the vehicle's front bumper.

To remove the grille, unclip the top edge, pivot down and unclip the bottom edge. Screw the towing eye into the vehicle, right up to the shoulder, turning counter-clockwise (it has a left-hand thread).

To refit the grille (towing eye removed) first clip the lower edge to the bumper aperture, pivot up and press the top edge into position.



Vehicle Recovery

Rear tow point



WARNING:

Avoid body contact with a hot exhaust pipe when fitting the eye to the rear towing point.

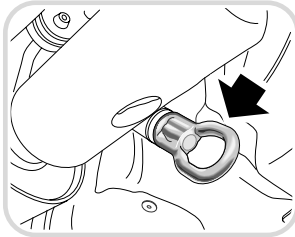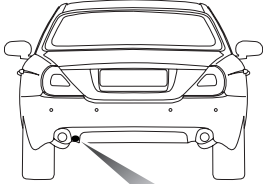


JAG0649

The rear tow point is alongside the left-hand exhaust pipe.

Screw the towing eye into the vehicle, right up to the shoulder, turning counter-clockwise (it has a left-hand thread).

Bulb Renewal

TOP ACCESS COVER

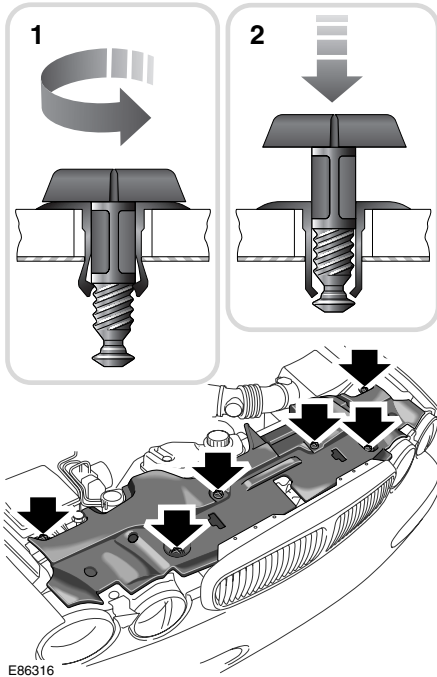

To gain access to the headlamp units, the top cover must be removed.

Unscrew and remove the six fasteners **1**. Remove the top cover.

After changing the defective bulb, refit the cover, push the fasteners **2** into place and then screw the fasteners fully in to retain the top cover.

When renewing bulbs, use only the specified type and always switch off the ignition and lamps.

HEADLAMPS

The headlamp system fitted has halogen bulbs in the inner, high beam positions and High Intensity Discharge (HID) Xenon lamps in the outer positions. The HID system provides both low and high beam lamps.

Where HID lighting is fitted, refer to your Jaguar Dealer if the headlamp fails to operate.



WARNING:

Replacement or maintenance of Xenon lamps should only be carried out by suitably qualified personnel.



WARNING:

High voltage is required to ignite the gas and metal vapour which are used to power Xenon lamps. Contact with this voltage can cause serious injuries.



WARNING:

Bi-Xenon lamp units operate at a very high temperature. Ensure that the lamp units have cooled before attempting to touch them.



WARNING:

Xenon lamp units contain Mercury which is highly toxic, and can be extremely harmful.


Bulb Renewal

Low beam (outer) headlamps

Open the hood and remove the top access cover, see page 216.

Pull the retaining clip **1** upwards. Move the top of headlamp assembly outer bulb cover rearwards to gain access to the bulbs.

Caution: Halogen bulbs will be damaged if touched by hand or contaminated with oil or grease. It is important to use clean gloves or clean cloth when handling a bulb which is to be used again. A contaminated bulb may be cleaned with methylated spirit before refitting.

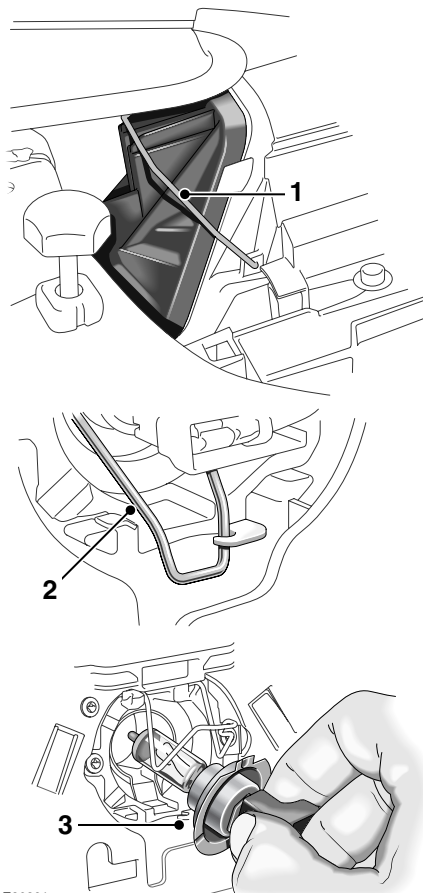

E86321

Pull off the bulb connector. Release the bulb spring clip **2** from below the bulb and lift it clear of the bulb. Pull out the bulb from the headlamp assembly.

Locate the new bulb (type H7) into the headlamp with the bulb tab uppermost **3**. The bulb will only fit correctly in one position.

Engage the spring clip **2** to secure the bulb. Fit the bulb connector.

Bulb Renewal

Refit the bulb cover to the headlamp assembly and secure with the retaining clip.

Refit the top cover and close the hood.

Note: *It is advisable to have the headlamp aim checked by a Jaguar Dealer after bulb renewal.*

High beam (inner) headlamp

Open the hood and remove the top cover, see page 216.

Caution: Halogen bulbs will be damaged if touched by hand or contaminated with oil or grease. It is important to use clean gloves or clean cloth when handling a bulb which is to be used again. A contaminated bulb may be cleaned with methylated spirit before refitting.

On the headlamp assembly, turn the rear inner cover (1) counter-clockwise as shown and remove.

Pull off the bulb connector. Release the bulb spring clip (2) from below the bulb and lift it clear of the bulb. Pull out the bulb from the headlamp assembly.


Locate the new bulb (type H7) into the headlamp with the bulb tab uppermost (3). The bulb will only fit correctly in one position.

Engage the spring clip (2) to secure the bulb. Fit the bulb connector.

Fit the rear cover and turn it clockwise to secure.

Refit the top cover and close the hood.

FRONT DIRECTION INDICATORS

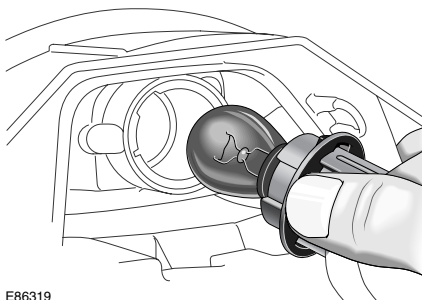

E86319

Open the hood and remove the top access cover, see page 216.

The front direction indicator bulb is located above the outer headlamp bulb (halogen or HID type) and is accessed via the outer bulb cover.

Turn the bulb holder a quarter turn counter-clockwise and pull out.


Remove the bulb and fit a new one of the correct type, PY21W.

Fit the bulb holder to the lamp unit, it will only fit in one position. Turn clockwise to secure. Refit the headlamp assembly outer bulb cover and secure with the retaining clip.

Refit the top cover and close the hood.

Bulb Renewal

FRONT PARKING (SIDE) LAMP

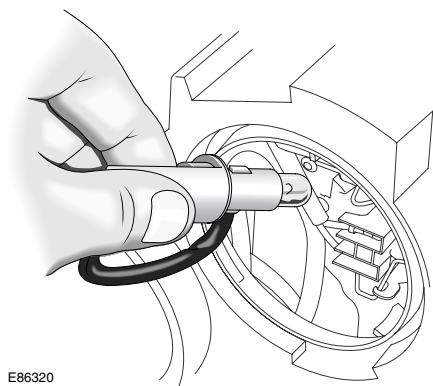

E86320

Open the hood and remove the top access cover, see page 216.

On the high beam inner headlamp assembly, turn the rear inner cover counter-clockwise (see page 218) and remove.

Turn the bulb holder counter-clockwise to remove it from the headlamp assembly.


Remove the bulb from the holder and fit a new one of the correct type, W5W.

Reposition the bulb holder in the headlamp unit and turn it clockwise.

Fit the rear cover and turn it clockwise to secure.

Refit the top cover and close the hood.

SIDE REPEATER INDICATOR

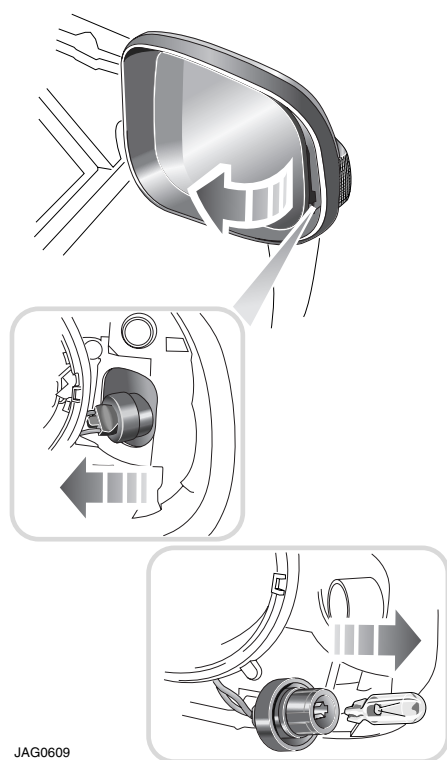

JAG0609




To remove the lamp unit from the external mirror, firstly pull the glass from the mirror unit to reveal the side repeater lamp holder. Gently release the rubber grommet and pull the lamp holder from its housing.

Remove the bulb and fit a new one of the correct type, WY5W.

Refit the bulb holder, ensuring the rubber grommet is firmly in place. Gently push the mirror glass back into place until a click is heard.

Bulb Renewal

SIDE MARKER LAMPS

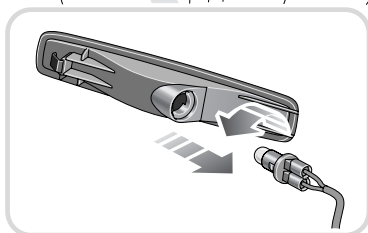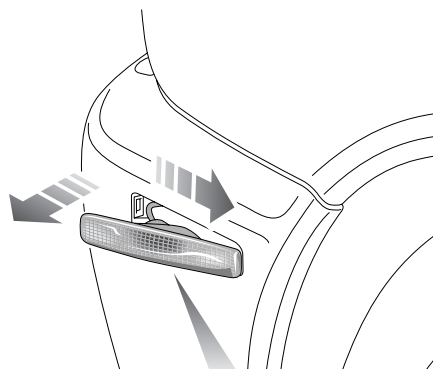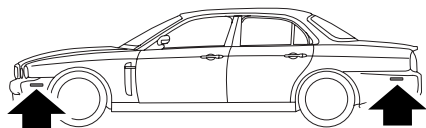

JAG0812


To remove the lamp unit, push the lens towards the middle of the vehicle to compress the spring clip and pull the rear edge of the holder outwards to remove the complete lamp unit.

Twist the bulb holder counter-clockwise and pull it from the lamp unit.

Pull the capless bulb from the holder and fit a new one of the correct type, W5W. Fit the bulb holder to the lamp unit and twist clockwise to secure.

To refit the lamp unit, locate the plastic lug into the recess on the bumper and push the unit into place until the spring clip latches.

LICENSE PLATE LAMP

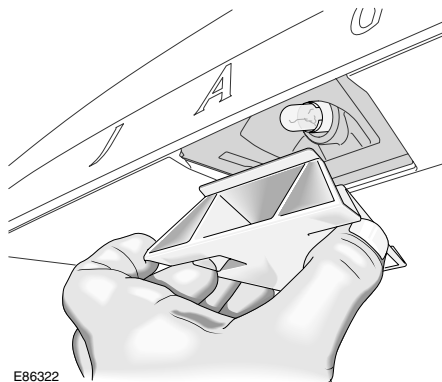

E86322

Press the two lens clips inwards and remove the lens from the vehicle.

Remove the bulb and fit a new one of the correct type, W5W.

Refit the lens by pressing it firmly into the recess until it clicks into place.

FRONT FOG LAMP

It is recommended that the front fog lamp bulb, type H3, is renewed by a Jaguar Dealer.


REAR LAMP ASSEMBLY

On the rear lamp assemblies, only the direction indicator, reverse and fog bulbs are replaceable. The stop/tail lamps consist of arrays of LED lamps which can only be renewed by a Jaguar Dealer if they fail to operate.

Ensure that the lamps and ignition switch are OFF before removing any bulbs.

Open the luggage compartment and secure the floor panel in the open position see page 206.

Bulb Renewal

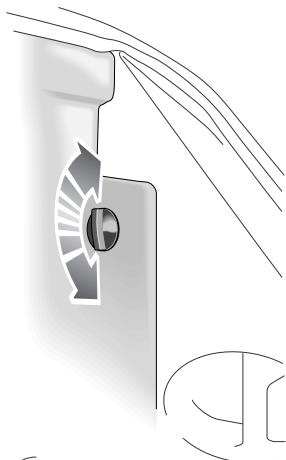


Rotate the bulb/connector and withdraw it from the assembly. Remove the faulty bulb and fit a new one of the correct type, as illustrated on the bulb holder. It is essential to fit the correct type.

Reposition the bulb/connector and turn it to secure.

Carefully refit the side carpet trim. Fit fastener and rotate a quarter turn.

Close the luggage compartment floor panel.

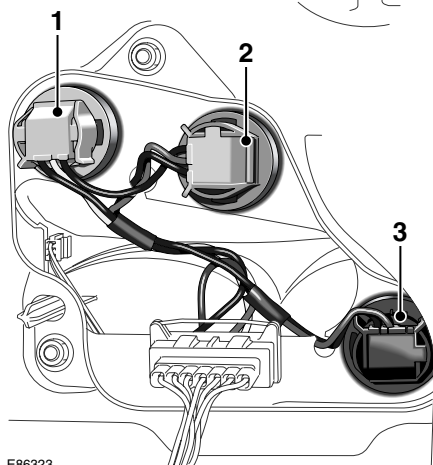

E86323

Rotate the side carpet trim fastener a quarter turn and remove. Pull back the side carpet trim to access the rear of the lamp assembly.

The bulb positions are:

1. Reverse lamp, type P21W.
2. Direction indicator, type PY21W.
3. Fog lamp, type P21W.

Fuses

FUSES AND FUSE BOXES

Do not fit a new fuse if the wiring is damaged; contact a Jaguar Dealer. After renewing a fuse have the circuit checked by a Jaguar Dealer.

Two types of fuses are fitted in the fuse boxes, ATO-type and Midi type.

Spare fuses and a special tool for removing and replacing fuses are located on a removable panel clipped to the rear of the luggage compartment (A).

RENEWING A BLOWN FUSE

Caution: Always turn off the starter switch, and the affected electrical circuit, before replacing a fuse.

Caution: Fit Jaguar approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse may result in damage to the vehicle's electrical system, and can result in a fire.


Caution: If the replacement fuse blows after installation, the system should be checked by your Jaguar Dealer.

Caution: No attempt should be made to repair a fuse that has blown.

Make sure the new fuse is the correct rating (amperage).

Fuses are colour coded according to the amperage and the rating is also marked on each fuse.

Caution: When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.

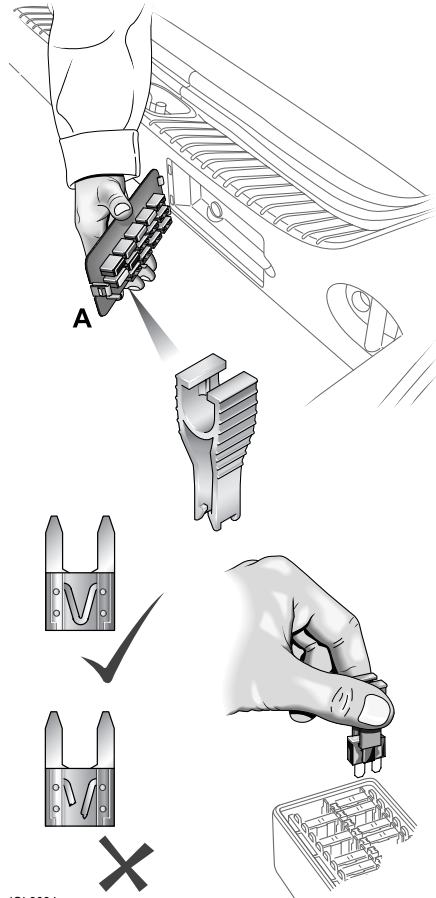

JOL3094

ATO-fuse replacement

Push the tool onto the suspect ATO-fuse and withdraw the fuse. If the wire in the fuse is broken, the fuse has blown.

Fit a new fuse using the tool.

Fuses

Midi-fuse replacement (not shown)


Unscrew the two nuts and remove the fuse. Note that the fuse is supplied directly from the battery positive; take care not to short a spanner or other metal tool to the chassis when removing the nuts.

FUSE BOX LOCATIONS

There are three separate fuse boxes fitted to the vehicle, each one containing fuses protecting a different group of circuits:

- Engine compartment fuse box.
- Cabin fuse box.
- Luggage compartment fuse box.

Engine compartment fuse box

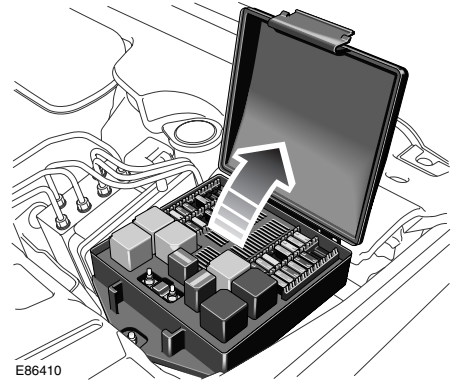


The fuse box is located in the engine compartment on the right-hand side, adjacent to the windshield wash reservoir.

Remove the fuse box lid by pressing the spring catch and lifting.

When refitting, press the fuse box lid in the area of the retaining lugs until the lid engages.

Fuses


Cabin fuse box

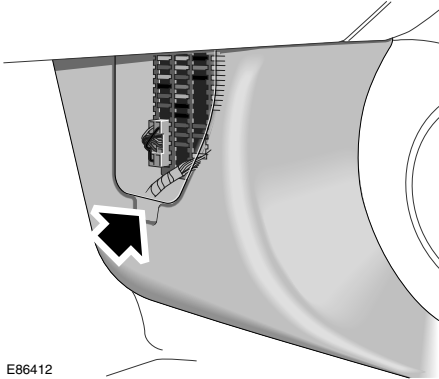

E86412

The cabin fuse box is located behind the right-hand side trim panel in the footwell. To access the fuse box, pull out the bottom of the trim panel (arrowed), slide the panel down slightly and remove.

Luggage compartment fuse box

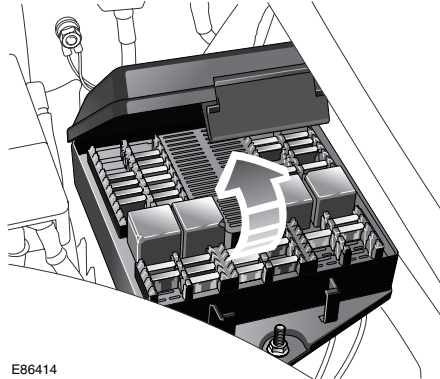

E86414

This fuse box is located in the luggage compartment, situated behind the battery.

Open the luggage compartment floor panel to gain access to the fuse box.


Remove the fuse box lid by pulling the retaining clips and pulling the lid upwards.

Reposition the lid and press down until the retaining clips engage.

Replace the floor panel.


Fuses

FUSE POSITIONS

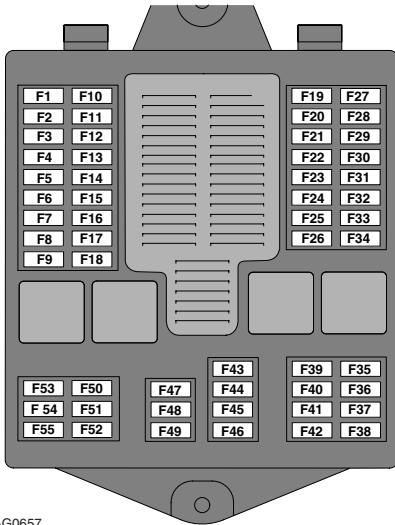

JAG0657

Luggage compartment fuse box.

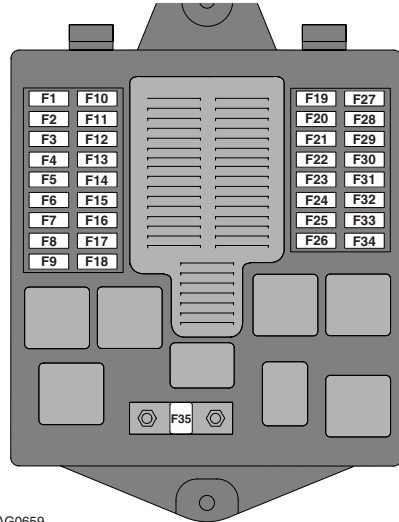


JAG0659

Engine compartment fuse box

Fuse ratings and colour

Rating (amps)	Colour
5A	TAN
10A	RED
15A	BLUE
20A	YELLOW
25A	NATURAL
30A	GREEN
40A	ORANGE

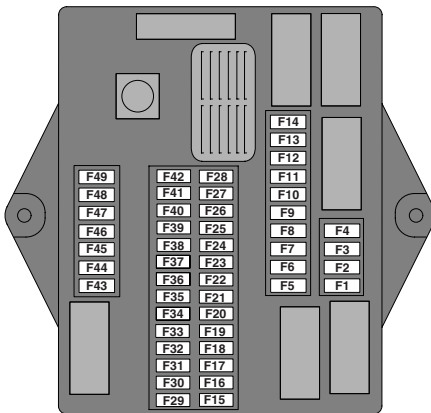

JAG0658

Cabin fuse box.

Fuses

Engine compartment fuse box

Fuse No.	Rating (amps)	Circuit
F1	5A	Front ignition, UHEGO, fuel pump, rear ignition relay coils
F2	10A	Throttle
F3	5A	DSC ECU
F4	30A	Powerwash pump
F5		Not used
F6	40A	Air suspension compressor
F7	40A	Right-hand front screen heater or wiper park zone heater
F8	20A	Right-hand low beam
F9	20A	Left-hand low beam
F10	15A	Horns
F11		Not used
F12	10A	Engine control module, VVT solenoids
F13	10A	Fuel injectors
F14	10A	Purge valve, EGR valve, DMTL, MAFS, air filter solenoid, radiator fan controller
F15		Not used
F16	20A	Right-hand high beam, left-hand high beam
F17	10A	Engine control module, transmission control module
F18	15A	Front fog lamps, instrument panel front fog status
F19	25A	Starter solenoid
F20	40A	ABS module (pump)
F21		Not used
F22	20A	ABS module
F23		Not used
F24	20A	Intercooler water pump (supercharged engines)
F25		Not used
F26	40A	Wiper system, front electronics module (FEM)
F27	5A	Secondary air injection
F28-F29		Not used
F30	15A	Ignition coils
F31		Not used
F32	40A	Left-hand front screen heater
F33	30A	A bank heated oxygen sensors
F34	30A	B bank heated oxygen sensors
F35	80A	Radiator cooling fan

Fuses

Cabin fuse box

Fuse No.	Rating (amps)	Circuit
F1	10A	Climate control unit, fan, screen heaters and wiper relay coils, smog sensor
F2	5A	Cruise control switch, adaptive cruise control
F3	5A	Rear outer seat, electrochromic mirror, driver seat heater, electric parkbrake, left-hand and right-hand HID lamps levelling, left-hand and right-hand seat belt switches, passenger seat heater switch, rear seat heater switchpack
F4	5A	Instrument panel
F5, F6		Not used
F7	5A	Cigar lighter, sunroof module, sunblind motor, electric parkbrake switch illumination, accessory relays (luggage compartment fuse box)
F8	5A	Instrument panel
F9	10A	Left-hand direction indicator and door mirror repeater
F10	10A	Glove compartment door motor and lamps
F11	5A	Radio muting (engine start), ignition feed
F12	10A	Front electronic module (FEM), passenger mirror
F13	20A	Rear electronic module (REM), door locks
F14	10A	Climate control, footwell lamps, FEM, autolamp module
F15	5A	ECM, FEM, instrument panel air bag fault lamp, instrument panel ignition (run/start)
F16	5A	Diagnostic connector
F17	5A	ABS module
F18		Not used
F19	5A	Ignition relay, ECM, REM, fuel pump relay, start relay
F20	5A	Telephone transceiver, TV module, VICS (Japan), voice module, rear telematics
F21	20A	Passenger's ventilated seat
F22- F23		Not used
F24	5A	PATS transponder
F25	10A	Right-hand direction indicator and door mirror repeater, right-hand front lamp, left-hand and right-hand sunvisor lamps, left-hand and right-hand sidemarkers
F26	15A	Screenwash pump
F27	10A	ACC module
F28	10A	Climate control modules (front and rear), driver's door module (DDM)

Fuses

Fuse No.	Rating (amps)	Circuit
F29	10A	Air bag module, occupancy sensing module, passenger weight sensor, PAD lamp
F30	20A	Driver's ventilated seat
F31	15A	Sunroof, phone transceiver
F32	5A	Front/rear parking aid, trailer tow module, battery-backed sounder, voice module, telephone receiver
F33	5A	Transmission control, J-gate, generator
F34	5A	Navigation system, remote power amp
F35	10A	Passenger seat movement
F36	40A	Passenger seat movement, DSM
F37	25A	Driver window
F38	15A	Radio head unit
F39	5A	Transit relay (removed before customer delivery)
F40	10A	Security LED, yaw rate sensor
F41	20A	Ignition switch
F42	10A	FEM, REM, DDM, EPB logic
F43	5A	Diagnostic connector
F44	5A	Brake switch
F45	10A	Passenger seat movement
F46	25A	Passenger window
F47	5A	Instrument pack
F48	20A	Instrument pack (steering column tilt and reach)
F49	40A	Driver seat movement

Fuses

Luggage compartment fuse box

Fuse No.	Rating (amps)	Circuit
F1-F4		Not used
F5	40A	Passenger seat switchpack
F6	10A	Accessory connector
F7	40A	Front blower motor
F8	10A	Heater circuit water pump
F9	25A	Rear seat motors
F10		Not used
F11	5A	Rear footwell lamps, grab handle lamps, overhead console map lamps
F12	10A	Air suspension
F13	20A	Rear seat entertainment
F14		Not used
F15	5A	Right-hand stop and tail lamps
F16	10A	Luggage compartment lamps, driver seat switch pack, rear switch seat pack, blower motor relay coil
F17	10A	Left-hand rear fog, direction indicator and reversing lamps
F18	10A	License plate lamps, side marker lamps
F19	30A	Heated rear window
F20	10A	Heated door mirrors
F21	25A	Rear seat motors
F22	10A	Accessory connector
F23		Not used
F24	25A	Fuel pump driver module
F25	15A	Front accessory socket
F26	15A	Rear accessory socket
F27	10A	Rear CD
F28	25A	Left-hand rear window
F29	5A	VICS (Vehicle Information and Communication System) - Japan only
F30	10A	Generator, battery-backed sounder, transit relay
F31	40A	Passenger front seat
F32	30A	Electric parkbrake actuator
F33	20A	Rear electronic module (fuel pump)
F34	30A	Power amplifier
F35-F36		Not used
F37	10A	TPMS Battery +

Fuses

Fuse No.	Rating (amps)	Circuit
F38		Not used
F39	15A	Gateway module
F40	25A	Right-hand rear window
F41, F42		Not used
F43	15A	Rear cigar lighter
F44	15A	Front cigar lighter
F45		Not used
F46	10A	Right-hand rear reverse, direction indicator and fog lamps
F47	20A	FEM, front seat heater
F48	5A	High mounted stop lamps
F49	5A	Left-hand stop and tail lamps
F50		Not used
F51	10A	Navigation system
F52	20A	Air suspension
F53	20A	Rear fan motor
F54	15A	Heated steering wheel
F55	5A	TPMS

Fire Extinguisher

DEALER FITTED FIRE EXTINGUISHER

Many countries make it compulsory to carry a fire extinguisher. Your Jaguar Dealer can supply and fit one.

FACTORY FITTED FIRE EXTINGUISHER

(Where fitted)

Some countries have a factory fitted fire extinguisher which contains powder pressurised with nitrogen.

This extinguisher can be used on liquid fires, electrical equipment fires and, if no explosion risk, gaseous fires.



WARNING:


Do not test the fire extinguisher prior to use. Partial discharge will render the extinguisher inoperative.



WARNING:

Do not use the fire extinguisher closer than 2.4m (8 feet) to the base of a liquid fire as the force may splatter the burning liquid to the surrounding area.

Operating the Fire Extinguisher

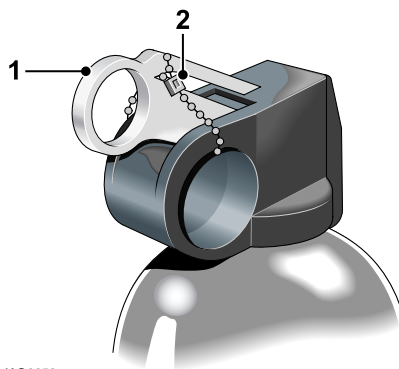

JAG0650

1. Unclip and remove the extinguisher from the bracket.
2. Put your finger through the yellow safety wedge ring (1) and pull hard to remove the wedge. The operating lever will be exposed.
3. Hold the extinguisher upright and aim at the base of the fire.
4. Press the lever down firmly.
5. Release the lever to stop the flow of powder.

Maintenance

Every six months:

- Remove the extinguisher from its bracket and check that the nozzle is clear.
- Check that the safety wedge strap (2) is secure.

Check the pressure gauge on the base of the extinguisher. If the gauge is in the red area report it to your Jaguar Dealer immediately as the extinguisher may not work in an emergency.

General Maintenance

REGULAR CHECKS

In the interests of safety and reliability, it is advisable to carry out the following checks at the recommended intervals, and always before starting on a long journey.

DAILY

Check that there is sufficient fuel for the journey intended, particularly at night and before joining highways.

WEEKLY

Tires

Check the tires, including the spare, for condition and pressure. Tire pressures are explained on page, and shown on a label inside the fuel filler flap.

Lamps

Check that all exterior lamps and direction indicators function correctly and that the lenses are clean.

Engine oil

With the vehicle standing on level ground, check the oil level and top up if necessary with oil of the correct grade.

Engine coolant

With the engine cold, check the level of the coolant in the coolant reservoir header tank. Any loss of fluid must be checked by a Jaguar Dealer.

Brake fluid

Check the level of the fluid in the brake fluid reservoir. Top-up if necessary with new, unused Jaguar approved brake fluid.

The reservoir is initially nearly full, but the level will drop as the brake pads wear. If the level appears unusually low, location of the fluid leakage must be checked by a Jaguar Dealer.

Power steering fluid

With the engine cold, check the level of the fluid in the power steering fluid reservoir. Top up if necessary with fluid of the correct specification. Any loss of fluid should be checked by a Jaguar Dealer.

MONTHLY

Windshield washer fluid


Top up with recommended windshield washer fluid and clean soft water. Check the operation of the washers. Use Jaguar Windshield Washer Fluid to keep the glass clean and also to prevent the fluid from freezing during cold weather.

Wiper blades

Check the quality of the wipe. If smearing or juddering is evident, clean the windshield and wiper blades.

Hood Release

HOOD OPENING AND CLOSING

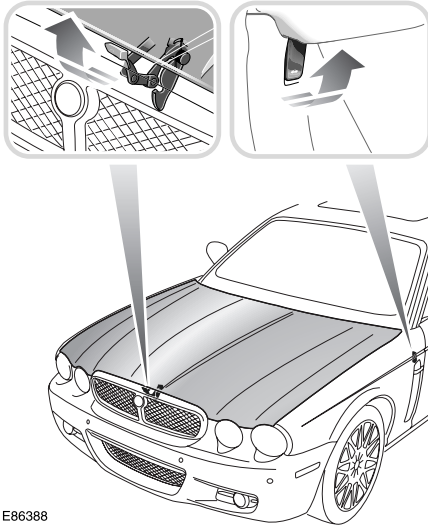

E86388

Close the hood to within a distance of 300 to 350 mm (12 to 14 inches) of the fully closed position, then let go to allow the hood to shut. Check by pulling the hood that both the right-hand and left-hand latches are engaged.



WARNING:

Do not drive with the hood retained by the safety catch alone.



WARNING:

Take care to keep away from rotating components if the engine is running when you open the hood.

Release the hood lock by pulling the lever below the fascia on the left-hand side of the vehicle.

Lift the hood slightly and push the safety catch, located under the centre of the front edge of the hood. The gas filled struts will assist raising the hood, and retain it in the fully open position.




WARNING:

Before closing the hood ensure that nobody is obstructing the closing area and that hands and clothes are clear. Remove tools, cleaning cloths, etc., from the engine compartment.

Regular Checks

DIPSTICK AND RESERVOIR LOCATIONS

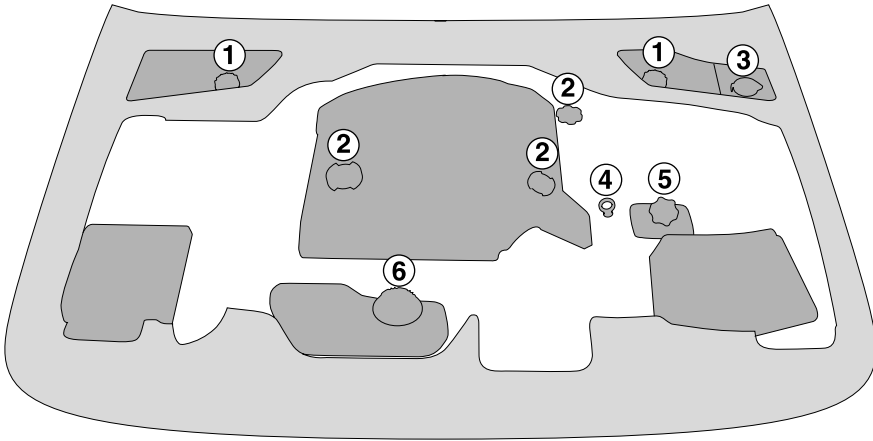


E86389

1. Brake reservoir.
2. Engine oil filler.
3. Windshield wash reservoir.
4. Engine oil dipstick.
5. Power steering reservoir.
6. Coolant reservoir.

Checking and Top-up

ENGINE OIL LEVEL

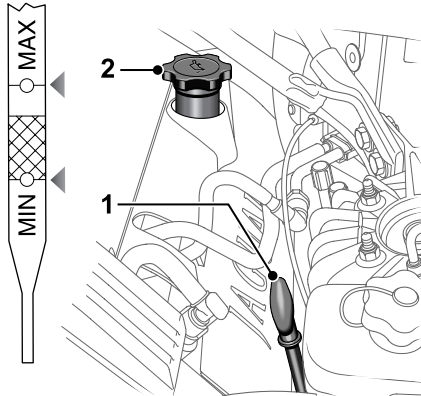

JAG0827

Check the oil level regularly with the vehicle on flat, level ground, see pages 234 for dipstick and oil filler locations.

It is preferable to check the oil level after the vehicle has been standing, that is, with the engine completely cold.

If the engine has been started do not check the oil level until the engine has reached normal operating temperature. Stop the engine and wait for a minimum of five minutes to allow the oil to drain back into the sump.

Remove the dipstick (1) and wipe clean with a non-fluffy cloth. Replace fully, then withdraw the dipstick. If the oil level is above the lower of the two dots on the dipstick then no additional oil is required.

If the oil level reaches the lower of the two dots, remove the oil filler cap (2) and add 1.0 litre (1.76 Imperial pints) of oil, to the specification shown on page 236.

Refit the filler cap and hand tighten securely.


Caution: Your vehicle warranty may be invalidated if damage is caused by using oil that does not meet the required specification.

Caution: Failure to use an oil that meets the required specification could cause excessive engine wear, a build up of sludge and deposits, and increase pollution. It could also lead to engine failure.

Caution: Overfilling with oil could result in severe engine damage. Oil should be added in small quantities and the level re-checked to ensure that the engine is not overfilled.

Checking and Top-up

Recommended engine oil

Jaguar recommends 

Oil specification

An oil of 5W-30 viscosity to Jaguar specification WSS M2C913 - B must be used in all vehicles.

For top up purposes only, where the WSS M2C913 - B specification cannot be found, ACEA A3/B3 or ACEA A1/B1 specification oils may be used.

SAE viscosity rating

For climates ranging from -30°C (-22°F) and $+50^{\circ}\text{C}$ ($+122^{\circ}\text{F}$), the following oil viscosities may be used:

0W-30

5W-30 (preferred)

0W-40

5W-40

Note: *It is recommended that the oil level is topped up using oil of the same viscosity. If you are unsure which oil viscosity is used in your car, your Jaguar Dealer will be able to advise.*

If you are operating this vehicle in climates outside the above temperature range, contact your Jaguar Dealer for advice.

Checking and Top-up

Engine Oil Consumption

A certain amount of oil consumption is normal. The rate of consumption will depend on the following:

- The quality and viscosity of the oil.
- The amount of oxidation and dilution of the oil.
- Climatic conditions.
- The speed at which the engine is being operated.
- Road conditions.

Drivers should expect above normal consumption when the engine is new, and after running-in if high speeds are sustained.

Used Engine Oil



WARNING:

Prolonged and repeated contact may cause serious skin disorders, including dermatitis and cancer.


Always use a hand cream to protect the skin from oil contamination. Avoid contact with the skin as far as possible and wash thoroughly after any contact. Keep oils out of reach of children.

PROTECT THE ENVIRONMENT: It is illegal to pollute drains, watercourses and soil. Use authorised waste collection facilities, including civic amenity sites and garages providing facilities for the disposal of used oil, oil filters and batteries. If in doubt, contact your Local Authority for advice on disposal.

Engine oil capacity	Litres
V8 engine, naturally aspirated, including oil filter	6.0
V8 engine, supercharged, including oil filter	6.8
Transmission	
The rear axle (final drive unit) and automatic transmission unit will not normally require to be checked or topped up.	

Checking and Top-up

POWER STEERING FLUID

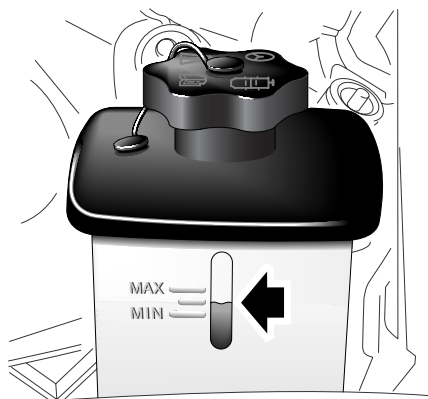

E86399

Caution: It is imperative that the power steering system does not become contaminated in any way. Always dispense fluid from a fresh sealed container and clean the area around the reservoir neck both before and after topping up. Never return drained fluid to the system.

Refer to page 234 for the power steering fluid reservoir location.

Check the fluid level when the engine is **COLD** and the vehicle is on a flat, level surface.

The fluid is visible through the translucent casing of the reservoir. Check that the fluid level is between the MIN and MAX marks on the side of the reservoir.

If necessary, top up with power steering fluid as specified by your Jaguar Dealer. Wipe clean and remove the filler cap from the reservoir; take great care to prevent any foreign matter from entering.

DO NOT OVERFILL.

Refit the filler cap.

Should the level be very low, report the loss of fluid to the nearest Jaguar Dealer.



WARNING:

Do not allow power steering fluid to make contact with skin or eyes. If this happens, rinse the affected area immediately with plenty of water.



WARNING:

Power steering fluid is toxic and flammable. Be sure to observe all warnings indicated on the power steering fluid container.



WARNING:

Power steering fluid is highly toxic. Keep containers sealed and out of reach of children. If accidental consumption of fluid is suspected, seek medical attention immediately.



WARNING:

If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.

Caution: The engine must not be started if the fluid level has dropped below the MIN mark. Severe damage to the steering pump could result.



Caution: Seek qualified assistance immediately if there is a noticeable drop in the fluid level. Severe damage to the steering pump could result.

Checking and Top-up

Caution: Power steering fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.

Caution: Do not fill the reservoir above the MAX mark.

BRAKE FLUID RESERVOIR

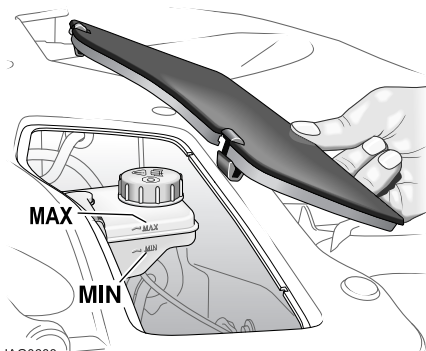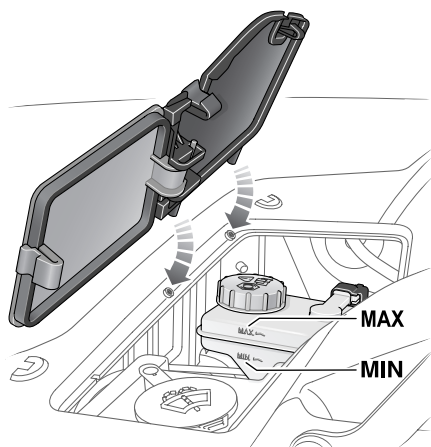

JAG0608

! WARNING:

Brake fluid is highly toxic - keep containers sealed and out of the reach of children. If accidental consumption of fluid is suspected, seek medical attention immediately.

! WARNING:

If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.

! WARNING:

Take care not to spill the fluid onto a hot engine - a fire may result.

! WARNING:

Do not drive the vehicle with the fluid level below the MIN mark.

Refer to pages 234 for the brake fluid reservoir location. The reservoir is concealed by a lift-out cover.

To remove the lift-out cover, pull the two clips on the rear edge of the cover towards the front of the car, and lift the cover out.

Caution:

- While handling brake fluid, take extreme care; brake fluid must not contact the vehicle paintwork.
- Always use fresh, clean fluid from a new container. Never introduce used brake fluid into the system.

The fluid is visible through the translucent casing of the reservoir and must be maintained at the **MAX** mark.

Checking and Top-up



WARNING:

The fluid level will drop as the brake pads wear. If the level is very low report the loss of fluid to the nearest Jaguar Dealer. Do not drive the vehicle until the cause is rectified.

If necessary, top-up as follows:

Before removing the cap, clean the reservoir and cap thoroughly with a non-fluffy cloth to ensure that no foreign matter enters the reservoir.

Unscrew the filler cap and top up to the **MAX** level. Use brake fluid to specification **Shell DOT4 ESL** or a low viscosity DOT4 brake fluid that meets ISO 4925 class 6 requirements.

Refit the filler cap securely.

To avoid contamination should any brake fluid be spilt, replace the cap on the reservoir before cleaning the spilt fluid from the vehicle.

Caution: Seek qualified assistance immediately if brake pedal travel is unusually long or if there is any significant loss of brake fluid. Driving under such conditions could result in extended stopping distances or complete brake failure.

Note: The brake pedal free travel = 16.06mm (0.63 inch).

Caution: Brake fluid will damage painted surfaces. Soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.

Caution: Only use new fluid from an airtight container (fluid from opened containers or fluid previously bled from the system will have absorbed moisture, which will adversely affect performance, and must not be used).

Hydraulic fluid




WARNING:

- **Contamination of the brake system fluid by as little as 1 per cent will cause rapid deterioration of the system seals. Ensure that the brake fluid reservoir cap is securely fitted.**
- **Do not allow brake fluid to make contact with skin or eyes. If this happens, rinse the affected area immediately with plenty of water.**
- **Brake fluid is toxic and flammable. Be sure to observe all warnings indicated on the brake fluid container.**

The brake hydraulic fluid in the master cylinder and brake operating system uses non-mineral polyglycol based brake fluid with a minimum standard of JAGUAR SUPER DOT 4. ONLY FLUID OF THIS TYPE AND STANDARD MAY BE USED.

Checking and Top-up

WINDSHIELD AND HEADLAMP WASHER RESERVOIR

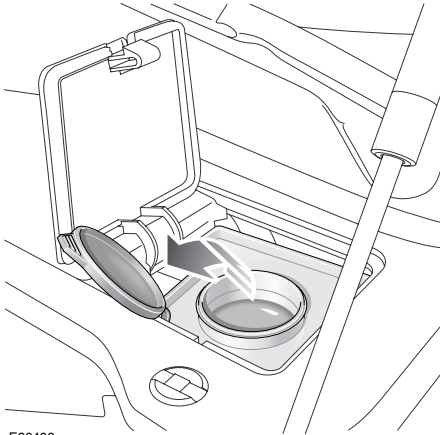

Refer to pages 234 for the washer reservoir location.



WARNING:

Some screen washer products are inflammable, particularly if high or undiluted concentrations are exposed to sparking. Do not allow screen washer fluid to come into contact with naked flames or sources of ignition.



WARNING:

If the vehicle is operated in temperatures below 4°C (40°F), use a washer fluid with frost protection. In cold weather, failure to use a washer fluid with frost protection, could result in impaired vision and increase the risk of a vehicle crash.

Caution: Do not use an antifreeze or vinegar/water solution in the washer reservoir - antifreeze will damage painted surfaces, while vinegar can damage the windshield washer pump.

Caution: Body panels may suffer discolouration as a result of screen washer fluid spillage. Take care to avoid spillage, particularly if an undiluted or high concentration is being used. If spillage occurs, wash the affected area immediately with water.

The washer reservoir contains the fluid for the windshield washers and the headlamp powerwash system (where fitted).

Fill to just below the neck with Jaguar Windshield Washer Fluid diluted with clean, preferably soft water as specified in the instructions on the bottle.

Do not over-fill.

Note: Using a non-approved fluid may adversely affect the wiper blade rubber, resulting in ineffectual and noisy wiping.

Capacity

The windshield washer reservoir capacity:


- without headlamp wash is 4.5 litres (7.9 Imperial pints).
- with headlamp wash is 7.1 litres (12.3 Imperial pints).

Cold weather precautions

To prevent damage to the pump during freezing conditions, use Jaguar Windshield Washer Fluid at the strength shown on the bottle, for the anticipated ambient temperature.

Checking and Top-up

ENGINE COOLANT RESERVOIR

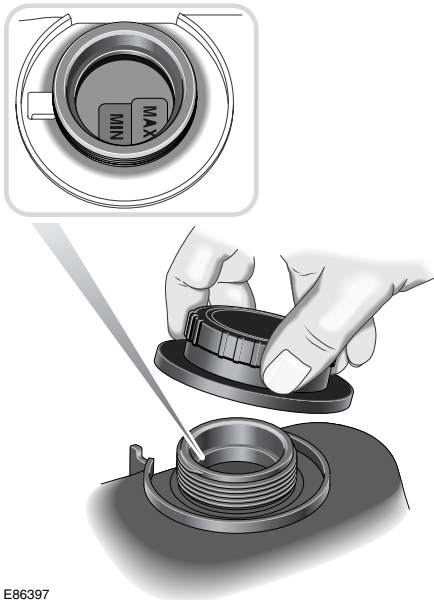

E86397

Refer to pages 234 for the engine coolant reservoir location.

The coolant level MAX and MIN indicators are located inside the reservoir and are only visible when looking into the filler neck with the cap removed. Check the level only when the engine is cold.

The coolant level should be between the MAX and MIN indicators. If persistent coolant loss is noticed, have a Jaguar Dealer investigate the cause immediately.

Caution: Running the engine without coolant will cause serious engine damage.

Topping up

! WARNING:

Never remove the filler cap when the engine is hot - escaping steam or scalding water could cause serious personal injury.

! WARNING:

Avoid spilling antifreeze onto a hot engine - a fire may result.

! WARNING:

Unscrew the filler cap slowly, allowing the pressure to escape before removing completely.

! WARNING:

Do not allow anti-freeze to make contact with skin or eyes. If this happens, rinse the affected area immediately with plenty of water.

Caution: When travelling in territories where the water supply contains salt, always ensure you carry a supply of fresh (rain or distilled) water. Topping up with salt water will cause serious engine damage.

Caution: Anti-freeze will damage paintwork. Avoid spillage.

Top up with a mixture of 50% water and 50% antifreeze until the coolant is between the MAX and MIN indicators inside the header tank. Use anti-freeze to specification WSS M97B44, coloured orange, Extended Life Coolant. This 50/50% mixture gives frost protection for temperatures down to -40°C (-40°F).

Checking and Top-up

Do not mix any other antifreeze with that specified; inferior quality antifreeze may be ineffective in maintaining adequate frost and corrosion protection to the cooling system.

Refit the filler cap and hand-tighten securely until the ratchet operates.

Engine antifreeze



WARNING:

Antifreeze is poisonous and can be fatal if swallowed - keep containers sealed and out of the reach of children. If accidental consumption is suspected, seek medical attention immediately.



WARNING:

If the fluid comes into contact with the skin or eyes, rinse immediately with plenty of water.

Caution: The use of non-approved antifreeze will have an adverse effect on the engine cooling system and therefore engine durability.


Caution: Antifreeze will damage painted surfaces; soak up any spillage with an absorbent cloth immediately and wash the area with a mixture of car shampoo and water.

When used at the correct concentration, antifreeze not only protects the engine from frost damage in winter, it also provides all year round protection against internal corrosion.

The coolant solution may remain in the cooling system for five years or 250,000 km (156,000 miles) after which the system should be drained, flushed and refilled.

Battery

BATTERY WARNING SYMBOLS

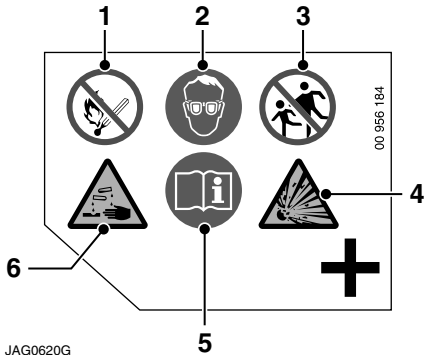

There is a label on the battery (see illustration above) depicting a number of warning signs. The warning signs are as follows:

1. No smoking, no naked flames, no sparks (Red).
2. Shield eyes (Blue).
3. Keep away from children (Red).
4. Explosive gas (Yellow).
5. Note operating instructions (Blue).
6. Battery acid (Yellow).

BATTERY CARE

A low maintenance battery specifically designed for use with this vehicle is fitted below the luggage compartment floor.

In hot climates more frequent checks of the battery electrolyte level are required. If necessary, the battery cells can be topped up with distilled water.



WARNING:

Do not allow the battery electrolyte (fluid) come into contact with your skin or eyes. It is both corrosive and toxic, and the resulting injuries can be severe. If any electrolyte does come into contact with your skin or eyes, immediately rinse the affected area with clean, cold water. Immediate medical advice will be required.



WARNING:

If battery electrolyte comes into contact with your skin and/or clothes you should remove the affected clothing and flush the skin with copious amounts of water. Seek medical assistance immediately.



WARNING:

If battery electrolyte comes into contact with your eyes, flush with copious amounts of clean cold water. Seek medical assistance immediately, and continue to flush with water.



WARNING:

If swallowed, battery electrolyte can be fatal. If electrolyte is swallowed seek medical assistance immediately.



WARNING:

Do not connect any 12 volt equipment directly to the battery terminals. Doing so may cause a spark, which can result in an explosion.

Battery



WARNING:

The cell plugs and vent pipe must be in place at all times when the battery is connected to the vehicle. Ensure that the vent pipe is clear of obstructions and not kinked. Failure to do so may cause a pressure build up in the battery, resulting in an explosion.



WARNING:

Do not expose the battery to a naked flame or spark as the battery produces explosive, flammable gas.



WARNING:

Never jump start (boost) or charge, a frozen battery. Doing so can result in an explosion.



WARNING:

Remove all metal jewellery before working on, or near, the battery, and never allow metal tools or vehicle components to come into contact with the battery terminals. Metal objects can cause sparks, and/or short circuits, resulting in an explosion.



WARNING:

Do not allow the battery posts or terminals to come into contact with your skin. They contain lead, and lead compounds which are toxic. Always wash your hands thoroughly after handling the battery.

Caution: Do not allow battery electrolyte to come into contact with fabrics or painted surfaces. If battery electrolyte comes into contact with any surface, the surface should be washed down immediately with copious amounts of clean water. Battery electrolyte is both corrosive and toxic, and can damage a wide range of materials if left.

The exterior of the battery should be occasionally wiped clean to remove any dirt or grease.

If a new battery is to be fitted, it must be the same type as the original.

The use of unapproved batteries is not recommended and could invalidate the vehicle warranty.

Note:

The service life of the battery is dependent on its condition of charge. It must always be sufficiently charged for the battery to last an optimum length of time.

GENERATOR


To prevent damage to the generator, do not run the engine while the battery or any of the charging circuit cables are disconnected.

The generator has polarity-sensitive components that will be irreparably damaged if subjected to incorrect polarity. Ensure that the battery earth lead is always connected to the battery negative terminal.

Battery

BATTERY LEAD DISCONNECTION AND RECONNECTION

Battery lead disconnection

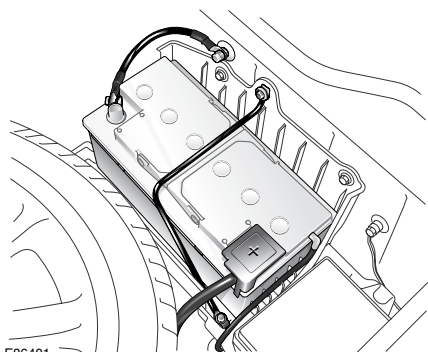

Caution: Under no circumstances should a battery be disconnected whilst the ignition circuit is live, as permanent damage to the instrument panel may occur.

Caution: Disconnect the negative lead (earth terminal) first.

Fold the luggage compartment floor panel forwards.

Slacken the negative lead pinch bolt and disconnect the negative (-) battery lead. Slacken the positive lead pinch bolt and disconnect the positive (+) battery lead.

Battery lead connection

Note: Upon battery reconnection the security system will be armed. Opening any protected entry will sound the alarm. Make sure that a key or key transmitter is available.

Caution: Do not over-tighten the pinch bolts.

Clean the battery posts and coat the post bases with petroleum jelly.

Ensure the vent tube is connected and free from kink or damage.

Connect the positive (+) lead, tighten the pinch bolt and clip the positive terminal cover on the battery. Connect the negative (-) lead and tighten the pinch bolt.

After the battery has been reconnected and the ignition switch is turned to position II, the message centre display will initially show an erroneous reading i.e. -----. This will remain until after the bulb check sequence, when the correct recorded distance will be displayed. This is a normal function of the instrument panel.

After battery reconnection

After reconnecting the battery:

- Reset the Electric Parking Brake (EPB); see page 148.
- Reset the electrically operated windows anti-trap function; see page 102.
- The trip computer will lose all recorded trip data and all trip functions will be reset to zero. The vehicle total odometer reading is retained.
- The radio will not operate until the correct security code has been re-entered. Refer to the audio systems handbook or the touch-screen display handbook.
- If the battery is disconnected for more than 72 hours the radio preset channels will need to be reset.

Battery

- Where fitted, the TV preset channels may need to be reset. Refer to the touch-screen display handbook.
- Reset the clock to the correct time.

The engine electronic control system adapts to certain characteristics of the vehicle. These adaptations are lost if the battery is disconnected.

On reconnection, therefore, some slightly abnormal drive symptoms may occur and the vehicle may need to be driven 16 kilometres (10 miles) or more while the control system re-adapts.

BATTERY CHARGING



WARNING:

Ensure that the charger used is of the correct type and rating for the battery. Using an unsuitable charger may damage the battery, and could cause the battery to explode.



WARNING:

Batteries produce combustible gas (hydrogen) when being charged. The battery must be removed from the vehicle before charging commences.



WARNING:

Never charge or boost a frozen battery.



WARNING:

Always charge the battery in a well ventilated area away from any naked flames, sparks or other ignition sources. During charging the battery can produce a highly explosive and flammable gas.

Caution: The battery must be disconnected and removed from the vehicle before charging. Failure to do so could result in damage to the vehicle's electrical system.

Caution: Always follow the instructions supplied with the battery charger. Failure to do so may result in damage to the battery.

To disconnect the battery, refer to Battery lead disconnection on page 246.

When charging the battery ensure that the charge voltage is the same as the nominal voltage of the battery.

Switch off the charger before connecting or disconnecting terminal connections to avoid sparks and short circuits.

Ensure that the charger positive (+) lead is connected to the positive (+) terminal of the battery and the negative (-) lead is connected to the negative (-) terminal of the battery.

Do not remove or loosen any of the cell plugs when charging the battery.

Wiper Blades

WINDSHIELD WIPER BLADES

Inspect and clean

Lift the wiper blades clear of the windshield and wipe the blades with a clean, soft cloth moistened with water to which a mild liquid detergent has been added.

Use Jaguar Screen Clean Paste to remove contamination from the windshield to ensure effective wiping or if smearing or juddering becomes evident.

A more aggressive cleaning agent may be required to remove stubborn contamination. Contact a Jaguar Dealer for advice.

To ensure that the windshield remains smear-free, the washer system should be operated whenever the wipers are used, even when it is raining.

BLADE REPLACEMENT

As the windshield washer jets are mounted on the wiper arms, it is recommended that the wiper blades are changed by a Jaguar Dealer.

Caution: Only fit the correct length and type of wiper blade. Failure to do so may cause damage to the wiper system, it may also affect the operation of the rain sensor.

Note: *The windshield washer jets and headlamp washer jets are not adjustable.*

Wheels and Tires

TIRE PRESSURES



WARNING:

Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control.

Caution: Never exceed the maximum pressure stated on the sidewall. Over-inflation could cause the tire to fail suddenly.

Note: *It is an offence in certain countries to drive a vehicle with tires that are not inflated in accordance with the vehicle's proper use.*

The recommended tire pressures are displayed on the tire pressure label. These tire pressures provide optimum ride and handling characteristics for all normal operating conditions.

In the interest of safety, reliability and fuel efficiency, check the tires, including the spare, for condition and pressure on a weekly basis.


Pressure checks must be carried out when the tires are cold and the vehicle has been standing in ambient local conditions for at least one hour.

Do not check tire pressures immediately after the tires have travelled a distance of one mile or more. Tire temperatures and pressures increase when running. Deflating a warm tire to the recommended pressure will result in under-inflation. This could be dangerous.

If tire pressures are checked while the vehicle is inside a protected covered area, e.g. a garage, and subsequently driven in lower outdoor temperatures, tire under-inflation could occur.

A slight pressure loss occurs naturally with time. If this exceeds 14 kPa (2 psi, 0.14 bar) per week, have the cause investigated and rectified by a qualified technician.

Tire pressure label (Canada and Mexico only)


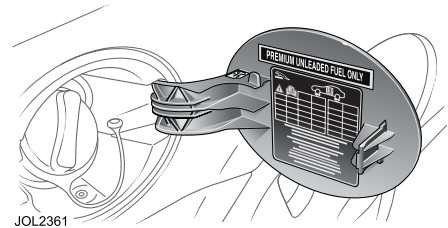


JOL2361

A label giving the tire pressure information is visible on the fuel filler flap.

Wheels and Tires

Tire pressure label/placard (USA only)

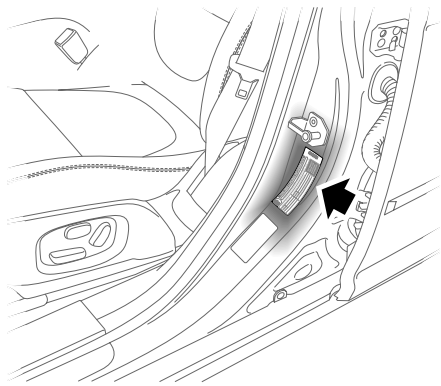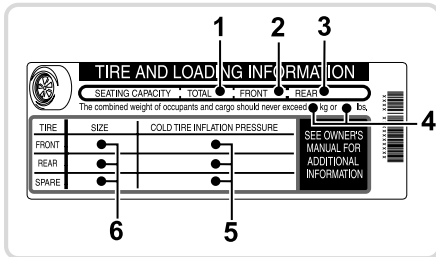

JAG0761

A tire information label is visible on the pillar behind the driver's door (also known as the B pillar), giving information specific to the wheel and tire equipment fitted to the vehicle when it was built. The label contains the following information:


- The maximum number of occupants (1), divided between the front (2) and rear (3) of the vehicle.
- The vehicle capacity weight (4), which includes the weight of the driver, passengers and cargo.
- Cold inflation pressures for the spare tire and the front and rear tires (5).

- The size of the tires (6) with which the vehicle was originally equipped.

Note: The label must not be changed, even if different wheels are fitted at a later stage.

Ambient temperature pressure compensation

If the intended journey will take the vehicle into an area where the ambient local temperature is known to be lower than the journey start point, tire pressure under inflation could occur.

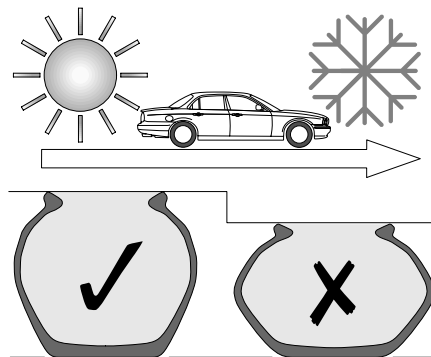

E86402

A colder ambient local temperature will reduce pressure within the tire. An effect is to decrease sidewall height and to increase tire shoulder wear with the potential for tire failure. Vehicle dynamics could also be adversely affected.

In order to minimise this effect, tire pressures can be adjusted to compensate before the start of the journey. Alternatively, tire pressures can be adjusted when the area of lower ambient temperature is reached.

In this situation the vehicle must be left in the ambient local temperature for a least one hour before tire pressure is adjusted.

Wheels and Tires

To compensate for colder ambient temperatures, tire pressures should be increased by 2 psi (0.14 bar / 14 kPa) for each 10°C (20°F) decrease.

Note: *Ensure that correct tire pressures are maintained when moving to areas of differing ambient temperature.*

The Tire Pressure Monitoring System (TPMS) may issue a warning if the under-inflation becomes significant. When driving through variable climatic conditions the TPMS warnings may be intermittent.

In areas of extended high ambient temperature, vehicle tires can be affected by a softening of the tire sidewall. If the vehicle is stationary for long periods, the effect is to slightly deform the tire at the point where the tire meets the standing surface. This is known as a flat spot.

This is normal tire behaviour, however, when the vehicle is subsequently driven, vibration may be experienced from the deformed tire. The condition will steadily improve with additional mileage.

In order to minimise this effect, tire pressures can be adjusted before the start of the journey to compensate.

For each 10°C (20°F) increase in temperature above 20°C (68°F), tire pressure should be increased by 2 psi (0.14 bar / 14 kPa).

Tire pressure compensation chart - high ambient temperatures

Tire Pressure Temperature Compensation	
Ambient Temperature °C (°F)	Pressure Compensation psi (bar/kPa)
20 (68)	use placard label
30 (86)	+2 (0.14 / 14)
40 (104)	+4 (0.28 / 28)
50 (122)	+6 (0.41 / 41)

Wheels and Tires

Recommended Tire Pressures

The following table gives the tire pressures for all recommended tire sizes.

Tire Size	Tire Pressure	
	Front	Rear
235/50 R 18	30 psi, 210 kPa	32 psi, 220 kPa
255/40 R 19	32 psi, 220 kPa	34 psi, 230 kPa
255/35 R 20	34 psi, 230 kPa	36 psi, 250 kPa

Checking tire pressures

The following procedure should be used to check and adjust the tire pressures:

1. Remove the valve cover.
2. Firmly attach a tire pressure gauge/inflator to the valve.
3. Read the tire pressure from the gauge. If required, add air to the tire.
4. If air is added to the tire, remove the gauge from the valve and reattach it before checking that the pressure is correct. Failure to remove and reattach the gauge from the valve could cause the gauge to show an incorrect reading.
5. If too much air is added, remove the gauge from the valve and allow air out of the tire by pressing the centre of the valve. Reconnect the gauge to the valve, and check that the air pressure is correct.
6. Refit the valve cover.



A slight natural pressure loss occurs with time. If this exceeds 2 psi (14 kPa, 0.14 bar, 0.14 kg/cm²) per week, the cause should be investigated and rectified.

Note: *It is an offence in certain countries to drive a vehicle with tires that are not inflated in accordance with the vehicle's proper use.*

Wheels and Tires

Tire pressures during long term vehicle storage

To minimise the possibility and effects of flat spots during storage, the tires may be inflated to the maximum pressure indicated on the tire wall.

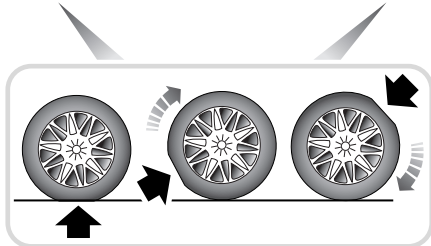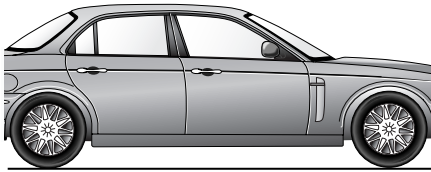

JAG0653

Note: Before using the stored vehicle on the road again, ensure that correct tire pressures are restored.

TIRE PRESSURE MONITORING SYSTEM (TPMS)



WARNING:

The Tire Pressure Monitoring System (TPMS) is **NOT** a substitute for manually checking tire pressures. Tire pressures, including the spare wheel, should be checked regularly, when cold, using an accurate pressure gauge and inflated to the correct pressure. Failure to properly maintain your pressures could increase the risk of tire failure, with consequential loss of vehicle control and personal injury.




WARNING:

The TPMS cannot register damage to a tire. Regularly check the condition of your tires.

Note:

1. Non-approved accessories may interfere with the system. If this occurs, **TIRE PRESSURE SYSTEM FAULT** is displayed in the message centre.
2. Certain tires may affect the performance of the TPMS. Always replace tires in accordance with recommendations, see page 249.

Wheels and Tires

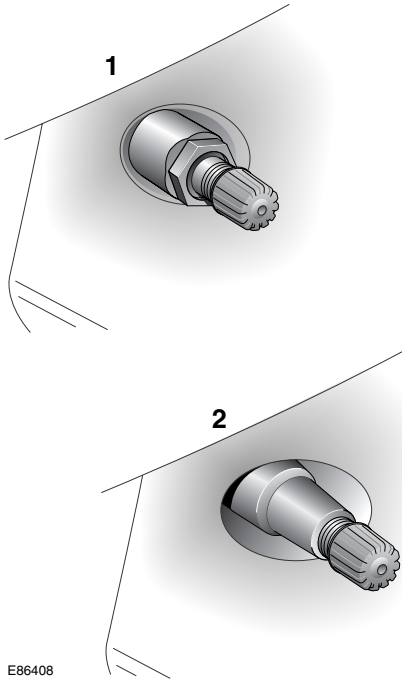

E86408

Wheels fitted with TPMS can be easily visually identified by the external metal lock nut and valve (1). All Jaguar non-TPMS wheels have a rubber valve fitted (2).

The TPMS monitors pressure in each tire including the full size spare tire (temporary-use spare wheels are not fitted with sensors and are consequently not monitored).

TPMS operation

The TPMS monitors pressure of the tires via sensors located in each wheel and a receiver located within the vehicle. Communication between sensor and receiver is via Radio Frequency (RF) signals. The tire pressure warning comprises a yellow telltale indicator within the instrument pack and an associated message within the message centre.

Each tire, including the spare (if provided), should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated.

Accordingly, when the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure.

Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability.

Wheels and Tires

Note: Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.



The warning comprises the TPMS telltale and the amber priority warning indicator within the instrument pack and an associated message within the message centre, see page 123.

Caution: When inflating tires, care should be taken to avoid bending or damaging the TPMS valves. Always ensure correct alignment of the inflation head to the valve stem.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly.

The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists. When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended.

TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly. Always check the TPMS malfunction telltale after replacing one or more tires or wheels on your vehicle to ensure that the replacement or alternate tires and wheels allow the TPMS to continue to function properly.

A text message will accompany the system malfunction and will display TIRE PRESSURE SYSTEM FAULT.

Tire pressures

To correctly set the tire pressures, see page 249.

Spare tire pressure: The full size spare tire should be inflated to the highest pressure for the specified tire size.

Full size spare wheel and tire change

Should it be necessary to change a wheel and tire with the spare then the system will automatically recognise the change in wheel positions. The vehicle needs to be stationary for 15 minutes during the wheel and tire change before the system is ready to detect the change in positions. The vehicle must be driven for a minimum of fifteen minutes after a tire change, and then remain stationary for fifteen minutes to activate full TPMS operation. After driving above 25kph (18mph) any deflation warning will clear typically within 5 minutes.

Wheels and Tires

If a wheel and tire needs changing

If the temporary-use spare wheel is fitted the system will automatically recognise the change in wheel positions. Then after approximately ten minutes of driving above 25 km/h (18 mph), a message **TIRE PRESSURE SENSOR FAULT** will be displayed accompanied by illumination of the warning tell-tale and the amber priority warning indicator.

The warning telltale will initially flash and will subsequently revert to continuous illumination. Extended use of the temporary-use spare wheel will produce an additional text message **TIRE PRESSURE SYSTEM FAULT**.

This TPMS display sequence will be activated at every ignition cycle until the temporary-use spare wheel is replaced by a fully operational full size wheel and tire assembly.

Always replace the temporary-use wheel before having TPMS faults investigated. The fault may well be rectified with the fitment of a fully operational full size running tire in lieu of the temporary-use spare wheel assembly.

Tire changing

Always have your tires serviced or changed by a qualified engineer.

Care must be taken to avoid contact between the bead of the tire and the sensor during removal and refitting of the tire, otherwise the sensor may become damaged and or inoperable.

Caution: Valve stem seal, washer, nut, valve core and cap should be replaced at every tire change. Valve stem seal, washer and nut must be replaced if valve retention nut is loosened. Sensor units and nuts must be refitted using correct torque figures and associated profile. Damage to the vehicle may result if these precautions are not taken.

Sensors can be removed from the wheel by the unscrewing of the valve retention nut.

Replacement sensor

Should the sensor require replacing, it should be carried out by a Jaguar Dealer.

A replacement sensor must be fitted to a running wheel in order to be recognised by the TPMS. The vehicle needs to be stationary for 15 minutes during the sensor fitment before the system is ready to detect the new sensor. The vehicle must be driven for a minimum of fifteen minutes after the sensor change, and then remain stationary for fifteen minutes to activate full TPMS operation.

If the TPMS warning for any wheel does not clear, even after ensuring correct inflation and driving for more than ten minutes above 25 km/h (18 mph), you should seek qualified assistance as soon as possible.

Wheels and Tires

Radio Frequency Approval

The TPMS transmitters and receivers comply with Part 15 of the FCC rules and RSS-210 of the industry Canada.

Operation is subject to the two following conditions:

1. The device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: *Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.*


The TPMS radio frequency approval numbers for the USA and Canada are:

USA FCCID: KR5S120123,
TX-KR55WK45057B RX-5WK4887.

Canada IC: 267T-S120123,
267T-5WK47594, CAN2671032336A.

Wheels and Tires

TIRE MARKINGS

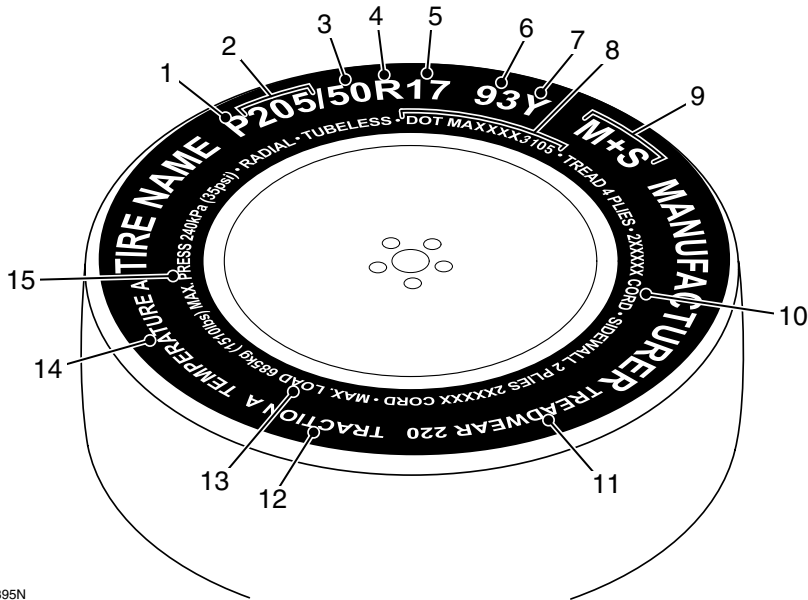

JAG0395N

P (1)

The P indicates the tire is for passenger vehicles.

Tire width (2)

This three-digit number gives the width in millimetres of the tire from sidewall edge to sidewall edge. In general, the larger the number, the wider the tire.

Aspect ratio (3)

This two-digit number, known as the aspect ratio, gives the tire's ratio of height to width (this is also known as the tire profile). The lower the number, the shorter the tire's sidewall.

R (4)

The R stands for radial. Radial ply construction of tires has been the industry standard for the past 20 years.

Wheel diameter (5)

This two-digit number is the wheel or rim diameter in inches. If you change your wheel size, you will have to purchase new tires to match the new wheel diameter.

Load index (6)

This two- or three-digit number is the tire's load index. It is a measurement of how much weight each tire can support.

Note: You may not find this information on all tires because it is not required by law.

Wheels and Tires

Speed rating (7)

The speed rating denotes the speed at which a tire is designed to be driven for extended periods of time. The ratings range from 99 miles per hour (mph) to 186 mph. These ratings are listed in the following table.

Note: You may not find this information on all tires because it is not required by law.

Letter Rating	Speed Rating
Q	99 mph
R	106 mph
S	112 mph
T	118 mph
U	124 mph
H	130 mph
V	149 mph
W	168 mph
Y	186 mph*

* For tires with a maximum speed capability over 149 mph, tire manufacturers sometimes use the letters ZR. For those with a maximum speed capability over 186 mph, tire manufacturers always use the letters ZR.

U.S DOT tire identification number (8)

This begins with the letters DOT and indicates that the tire meets all Federal standards. The next two numbers or letters are the plant code where it was manufactured, and the last four numbers represent the week and year the tire was built. For example, the numbers 3197 means the 31st week of 1997. The other numbers are marketing codes used at the manufacturer's discretion. This information can be used to contact consumers if a tire defect requires a recall.

M+S (9)

The M+S or M/S indicates that the tire has some mud and snow capability. Most radial tires have these markings: they have some mud and snow capability.

Tire ply composition and materials used (10)

The number of plies indicates the number of layers of rubber-coated fabric in the tire. In general, the greater the number of plies, the more weight a tire can support. Tire manufacturers also must indicate the materials in the tire, which include steel, nylon, polyester, and others.

Treadwear number (11)

This number indicates the tire's wear rate. The higher the treadwear number is, the longer it should take for the tread to wear down. For example, a tire graded 400 should last twice as long as a tire graded 200.

For more information, refer to page 263.

Wheels and Tires

Traction letter (12)

This letter indicates a tire's ability to stop on wet pavement. A higher graded tire should allow you to stop your car on wet roads in a shorter distance than a tire with a lower grade. Traction is graded from highest to lowest as **AA**, **A**, **B**, and **C**. For more information, refer to page 263.

Maximum load rating (13)

This number indicates the maximum load in kilograms and pounds that can be carried by the tire.

Temperature letter (14)

This letter indicates a tire's resistance to heat. The temperature grade is for a tire that is inflated properly and not overloaded. Excessive speed, under-inflation or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure. From highest to lowest, a tire's resistance to heat is graded as **A**, **B**, or **C**. For more information, refer to page 263.

Maximum permissible inflation pressure (15)

This number is the greatest amount of air pressure that should ever be put in the tire under normal driving conditions.

TIRE CARE

Tires of the correct type, manufacture and dimensions, with correct cold inflation pressures are an integral part of every vehicle's design. Regular maintenance of tires contributes not only to safety, but to the designed function of the vehicle. Road-holding, steering and braking are especially vulnerable to incorrectly pressurised, badly fitted or worn tires.

Tires of the correct size and type, but of different make have widely varying characteristics. It is therefore recommended that only Jaguar approved tires are fitted to all wheels.



WARNING:

Always ensure replacement tires have the correct rating and specifications (e.g. load index, size, speed rating) for your vehicle. Contact your Jaguar Dealer for more information.



WARNING:

When using tires other than those recommended by Jaguar, do not exceed the speed capacity recommended by the manufacturer.

Wheels and Tires

Wear



JAG0393G

All tires fitted as original equipment include Tread Wear Indicators (TWI) in their tread pattern. When the tread has worn to a remaining depth of 1.6 mm the indicators appear at the surface as bars which connect the tread pattern across the full width of the tire.

It is illegal, in certain countries, to continue to use tires after the tread has worn to less than 1.6 mm over three quarters of the width and the entire circumference of the tire.

It should be noted that the properties of many tires alter progressively with wear. In particular, the wet grip and aquaplaning resistance are gradually but substantially reduced. Extra care and speed restriction should therefore be exercised on wet roads as the effective tread depth diminishes.

Incorrect wheel alignment will accelerate tire wear. If there is wear on the inner or outer edges of the tread pattern it will be advantageous to have the cause detected by having the wheel alignment checked.

Do not interchange tires from side to side, front to rear or vice versa.

Damage

Excessive local distortion can cause the casing of a tire to fracture and may lead to premature failure. Tires should be examined especially for cracked walls, exposed cords, etc. Flints and other sharp objects must be removed from the tire tread; if left in they may work through the cover. Clean off any oil or grease contamination by using a suitable cleaner.

Caution: Do not use paraffin (kerosene), because this has a detrimental effect on rubber.

Tire repair

Damaged tires should be replaced with new tires fitted. They must not be repaired in view of the high performance capability of the vehicle.

Tire replacement

When replacing tires, it is preferable to fit a complete vehicle set. If either front or rear tires only need to be renewed, new tires must be fitted as axle sets.

After new tires have been fitted the wheels need to be dynamically balanced.

Do not fit tires with a different tread pattern, size or speed rating.

The installation of replacement tires with steel cord body plies in the tire sidewall may cause malfunction of the TPMS and is not recommended (cord material information is moulded on the tire sidewall).

Additionally, if your vehicle was equipped with run-flat tires, replacing them with tires that are not identical to those originally fitted may cause malfunction of the TPMS, and is not recommended.

Wheels and Tires

Always check your TPMS indicator after replacing one or more tires on your vehicle.

Tire ageing

Tires degrade over time, even when they are not being used. It is recommended that tires generally be replaced after six years of normal service. Heat caused by hot climates or frequent high loading conditions can accelerate the ageing process.

You should replace the spare tire when you replace the other road tires due to the ageing of the spare tire.

Wheels and Tires

TIRE QUALITY GRADES

United States Department of Transportation/Uniform Tire Quality Grades

The following information relates to the tire grading system developed by the National Highway Traffic Safety Administration which will grade tires by tread wear, traction and temperature performance.

Tread wear

The tread wear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and a half (1.5) times as well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction - A, B, C

The traction grades, from the highest to the lowest are **AA**, **A**, **B** and **C**. The grades represent the tire's ability to stop on wet pavements as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked **C** may have poor traction performance.



WARNING:

The traction grade assigned to this tire is based on braking (straight ahead) traction tests and does not include acceleration, cornering hydroplaning or peak traction characteristics.

Temperature - A, B, C

The temperature grades **A** (the highest), **B** and **C** represents the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel.

Sustained high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure.

The grade **C** corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Vehicle Safety Standard No. 109.

Grades **B** and **A** represent higher levels of performance on the laboratory test wheel than the minimum required by law.



WARNING:

The temperature grade for these tires is established for a tire that is properly inflated and not overloaded. Excessive speed, under-inflation or excessive loading, either separately or in combination, can cause heat build-up and possible tire failure.

Wheels and Tires

WINTER (SNOW) TIRES

The tires fitted as original equipment are designed with a rubber compound, tread pattern and width specially suited for high speeds in normal road conditions, but they are less suitable during extremes of low temperatures, snow and ice. The use of winter tires will considerably improve the vehicle's handling during these conditions.

It is recommended that only Jaguar approved winter tires are used (see page 274).

Tire directional indicators must be rotating in a clockwise direction when viewed from the right-hand side of the vehicle, and counter-clockwise when viewed from the left-hand side of the vehicle.

Do not exceed the tire speed rating when using winter tires.

Winter tires must be used in vehicle sets, that is, fitted on all four wheels.

SNOW CHAINS

Snow chains, of the recommended type, may only be fitted to rear wheels.

Contact your Jaguar Dealer for details and availability of approved snow chains.

The maximum speed when using snow chains is 48 km/h (30 mph).

Remove the snow chains immediately the roads are clear of snow.

Ensure the fitting instructions supplied with the snow chains are kept in a safe place, for example, with this literature pack.

Note: *Dynamic Stability Control MUST be switched OFF when using snow chains.*

Tire Glossary

GLOSSARY

Cold tire pressure:

Pressure in a tire that has been driven for less than one mile or has been standing for three hours or more.

Maximum inflation pressure:

Maximum air pressure, to which a cold tire may be inflated, this figure (in psi and kPa) is moulded onto the sidewall of a tire.

Curb weight:

The weight of a motor vehicle with standard equipment including the maximum capacity of fuel, oil, coolant and if so equipped, air conditioning and additional weight optional engine.

Accessory weight:

The combined weight (in excess of those standard items which may be replaced) of automatic transmission, power steering, power brakes, power windows, power seats, radio and heater, to the extent that these items are available as factory-installed equipment (whether installed or not).

Production options weight:

The combined weight of those installed production options weighing over 3 lb (1.4 kg) in excess of those standard items which they replace, not previously considered in curb weight or accessory weight, including heavy duty brakes, ride levellers, roof rack, heavy duty battery and special trim.

Vehicle capacity weight:

The rated cargo and luggage load plus 68.0 kg (150.0 lb) times the vehicle's designated seating capacity.

Maximum loaded vehicle weight:

This is the sum of:

- Curb weight.
- Accessory weight.
- Vehicle capacity weight.
- Production options weight.

Rim:

A metal support for a tire or a tire and tube assembly upon which the tire beads are seated.

Bead:

The part of the tire that is made of steel wires, wrapped or reinforced by ply cords and that is shaped to fit the rim.

Vehicle Care

VALET KIT

A valet kit containing a selection of Car Care products is available from the Jaguar accessory range.

INTERIOR CARE



WARNING:

Do not use chemical solvents or strong detergents when cleaning the steering wheel or instrument panel to avoid contamination of the air bag system.

Do not use chemical solvents or strong detergents when cleaning the seat-mounted side air bags. Such products could contaminate the side air bag system and affect performance of the side air bag in a collision.

Brush and clean the interior regularly. Use a vacuum cleaner where possible to remove all dust from the interior and trim.

Carpets

Marks or stains can be removed by gentle scrubbing with a weak solution of soap and warm water.

For more stubborn stains a commercially available carpet cleaner should be used. See your Jaguar Dealer for advice.

Headlining

Remove dust in the headlining with a vacuum cleaner. To remove stains, dab gently without pressing, using a fluff-free white cloth, moistened with Jaguar Upholstery Cleaner.

Do not use methylated spirit or solvents as this may cause damage or discoloration to the headlining.

EXTERIOR CARE

Note: *All the cleaning materials mentioned in this section are available from the Jaguar Accessory Range.*

Vehicle washing

For best results, do not wash the vehicle under strong sunlight. Always allow the vehicle to cool down before washing.

Do not use a dry cloth to wipe dirty paintwork. Dust and gritty substances are abrasive and will scratch the paintwork. Remove dirt using a cellulose sponge and plenty of warm (never hot) water. Rinse off with clean water and dry using a clean, damp chamois leather.

Do not use household soaps or detergents. The use of Jaguar Vehicle Shampoo is recommended.

Do not direct hoses at full force around door and luggage compartment seals. Using high pressure water jets on the paintwork is not recommended.

Do not allow bird droppings or tree sap to harden. Remove from paintwork immediately with a lukewarm soap and water solution.

In winter, when salt is used on the roads, wash the vehicle frequently, and immediately after encountering such conditions. Clean undersides and wheel arches using a high pressure jet.

Automatic car wash

Note: *Regular use of automatic car washes tends to dull the lustre of the paintwork.*

Vehicle Care

After leaving the car wash, switch on the windshield wipers immediately to remove water and prevent a build up of wax. Jaguar Screen Clean Paste can be used to clean any residual wax from the glass.

Caution: Ensure the rain sensitive windshield wipers are switched OFF before entering an automatic car wash, to prevent damage to the wiper blades/arms.

Removing grease or tar

Remove grease or tar with Jaguar Tar Remover or methylated spirit (alcohol). White spirit is also effective, but must not be applied to rubber, particularly the windshield wiper blades.

Glass surfaces

To avoid scratching glass surfaces, do not clean dirty glass with dry paper or cloth. Use clean, warm water and a chamois leather which is reserved for glass only.

The following products will ensure glass surfaces and windshield wipers are kept in good condition:

Jaguar Screen Clean Paste – Apply to the exterior of the windshield only to ensure effective operation of the windshield wipers.

Jaguar Glass Cleaner – Interior and exterior of all other glass surfaces.

Jaguar Screen Wash – Washer reservoir additive.

Jaguar Winter Care Kit comprising de-icer, ice scraper, anti-mist wipe cloth and aerial cleaner – for use in adverse weather conditions.

Note:

- *Renew the wiper blades when worn to prevent scratching. Clean the rubber wiper blades regularly with a mild detergent solution.*
- *It is advisable to clean the windshield with Jaguar Screen Clean Paste at regular intervals.*

Cleaning the rear screen

To avoid damaging the heating and radio elements when cleaning the inside of the rear screen use only a soft, damp cloth or chamois leather. Do not use solvents or sharp objects to clean the glass.

Polishing paintwork and brightwork

For maximum protection against road dust, salts, industrial fall-out etc., it is recommended that the vehicle is polished regularly using Jaguar Polish and a Polishing Cloth.

Note: *The vehicle's brightwork should be cleaned in the same way as the paintwork: Chrome polish or other abrasive cleaners must not be used.*

Paint chips

Scratches and chips should be touched in before weathering action begins. Inspect the paintwork immediately after the vehicle has been washed.

Underhood cleaning

Underhood cleaning using high pressure hoses or steam cleaners should be done by a Jaguar Dealer.

Indiscriminate use of cleaning equipment could damage or contaminate the electronic control modules and fuse boxes.

Vehicle Care

CARE OF ALLOY ROAD WHEELS

The alloy road wheels are covered with a protective anti-corrosion coating. To prevent corrosion it is essential that this coating is not damaged.

When removing or fitting tires always advise the tire fitter to treat the alloy wheels with great care and to only use equipment with spigot or stud hole clamping. The equipment must not have any moving parts which contact the wheel, and tire levers must not be used.

Wash the wheels with soap and water at two week intervals to avoid an accumulation of particles which could become embedded in the wheel surface. In salty conditions the wheels should be cleaned weekly.

In compliance with German Road Traffic Law, the size of the wheel rims is stamped or cast on all wheels.

Electrical Accessories

PRECAUTIONS



WARNING:

Alterations to the electrical system, including the fitting of accessories not designed for this Jaguar, will cause damage to the electrical circuits and systems. In some circumstances this could result in a malfunction or fire. All accessory work should be entrusted to a Jaguar Dealer.

Caution: Under no circumstances must the power supply be obtained directly from either battery terminal.

Caution: The use of non-approved accessories can reduce the battery capacity and charge period to an unacceptable level, therefore, Jaguar cannot accept any liability for the fitment of any such item.

EARTH POINTS

If an accessory needs to be connected to an earth point, consult a Jaguar Dealer.

Under no circumstances must holes be drilled in the bodywork to accept earth terminals.

Engine Data

ENGINE DETAILS

Engine Type	4.2 Litre NA* V8, dual overhead camshafts, 4 valves/cylinder, naturally aspirated	4.2 Litre SC* V8, dual overhead camshafts, 4 valves/cylinder, supercharged
Capacity	255 inch ³ (4196 cm ³)	255 inch ³ (4196 cm ³)
Bore	3.385 inch (86 mm)	3.385 inch (86 mm)
Stroke	3.555 inch (90.3 mm)	3.555 inch (90.3 mm)
Compression ratio	11.0:1	9.1:1

*NA = Naturally Aspirated engine

*SC = SuperCharged engine

Dimensions

DIMENSIONS

	SWB		LWB	
	inch	cm	inch	cm
Overall length	200.4	509.1	205.4	521.6
Overall width including mirrors	82.8	210.4	82.8	210.4
Overall width without mirrors	74.7	189.8	74.7	189.8
Overall height (at gross vehicle weight)	57.6	146.2	57.6	146.3
Wheelbase	119.5	303.4	124.4	315.9
Track:				
Front	61.2	155.6	61.2	155.6
Rear	60.9	154.6	60.9	154.6

SWB = short wheelbase

LWB = long wheelbase

Weights

WEIGHTS (AVERAGE/APPROXIMATE)

Gross combination weight is the gross vehicle weight plus the recommended trailer weight.

	XJ8 (NA) LWB		VDP LWB	
	lb	kg	lb	kg
Curb weight, no options fitted	3814	1730	3871	1756
Front axle curb weight	2006	910	204	909
Rear axle curb weight	1808	820	1867	847
Gross vehicle weight rating (G.V.W.R.) (non-towing)	4828	2190	4894	2220
Gross front axle weight rating	2425	1100	2425	1100
Gross rear axle weight rating	2756	1250	2756	1250
Gross combination weight	9072	4115	9138	4145

	SUPER LWB		XJR (SC) SWB	
	lb	kg	lb	kg
Curb weight, no options fitted	4006	1817	3946	1790
Front axle curb weight	2083	945	2099	952
Rear axle curb weight	1922	872	1847	838
Gross vehicle weight rating (G.V.W.) (non towing)	4905	2225	4905	2225
Gross front axle weight	2425	1100	2425	1100
Gross rear axle weight	2756	1250	2756	1250
Gross combination weight	9149	4150	9149	4150

Note: Gross combination weight is G.V.W.R. (Non-towing) plus tow-bar plus trailer weight.

SWB = Short Wheelbase

LWB = Long Wheelbase

Load Weights

ROOF RACK CAPACITY AND TRAILER WEIGHTS

	lb	kg
Roof-rack capacity including weight of rack	165	75
Maximum permitted luggage compartment load with four passengers and driver	132	60
Trailer weight:		
Braked	2205	1000
Unbraked (maximum recommended)	1655	750
Trailer nose load (vertical)	168	75

Note:

- 1. Loads greater than 60 kg (132 lb) may be carried in the luggage compartment provided the maximum permissible axle weights shown on the Vehicle Identification Plate are not exceeded and that tires are inflated to the normal pressures.*
- 2. The roof rack capacity shown above is included in the total vehicle carrying capacity.*
- 3. The Gross Axle Weight Rating (maximum permitted axle rating) shown above must not be exceeded.*

Wheels and Tires

RECOMMENDED TIRE FITMENT

The following chart details the tires recommended for use in the markets listed below:

A. USA, Canada, Mexico.

B. Dominican Republic.

Tire Size	Pattern	A	B
235/50 ZR 18 97H	Continental Pro Contact	Yes	Yes
255/40 ZR 19 100V	Pirelli P6 4Seasons	Yes	Yes
255/35 ZR 20 97Y	Dunlop SP Sport 01	Yes	No

For all other markets, refer to your local Jaguar Dealer/Authorised Repairer for specific tire fitment.

WINTER TIRES

Recommended winter tires are:

Tire Size	Pattern
235/50 R 18 101V	Continental Conti Winter Contact TS790
235/50 R 18 101V	Pirelli Snowsport 240
235/50 R 18 101V	Pirelli Sottozero W240
245/45 R 19 102V	Pirelli Snowsport 240
255/45 R 19 102V	Pirelli Sottozero W240

TIRE PRESSURES

The tire pressures recommended by Jaguar Cars to maintain optimum ride and handling characteristics for all normal operating conditions are shown on a label affixed to the inside of the fuel filler flap.

For your convenience, you may wish to record the tire pressures in the boxes provided in the Quick Overview (see page 27). If you are unsure of the correct pressures please contact your Jaguar Dealer/Authorised Repairer.

TIRES NOT APPROVED BY JAGUAR



WARNING:

When using tires other than those recommended by Jaguar do not exceed the speed capacity recommended by the manufacturer.

Touch-screen

GENERAL INFORMATION

The touch-screen provides touch-control of vehicle climate, audio, navigation, television and telephone systems, as fitted. A small Liquid Crystal Display (LCD) screen below the touch-screen provides a digital display of the ambient temperature and vehicle cabin set temperature.

The touch-screen setup and user menus, clock setting, headlamp setting, door locking mode and auto-fold door mirrors information is described within this chapter of this handbook

Note: *Remember to pass on the vehicle handbooks when reselling the vehicle. Handbooks are integral parts of the vehicle.*

The buttons surrounding the touch-screen display are referred to as 'hard buttons' and should be pressed not touched. The screen buttons are 'soft buttons' and only require to be touched to function.

Throughout this section, the expression 'Select an item' (or similar wording), means 'Touch the on-screen button adjacent to the item required'.

Pop-up messages

The operation of certain functions will cause a small message to appear overlaying the touch-screen display. This 'pop-up' is for information only and will disappear automatically after a few seconds.

SCREEN CLEANING

Caution: **Care must be taken to avoid spilling or splashing drinks onto the touch-screen. In the event of such an occurrence advise your Jaguar Dealer.**

Do not use any abrasive cleaners to clean your touch-screen. For approved screen cleaners, see your Jaguar Dealer.

AUTOMATIC CLIMATE CONTROL

The climate control system can be controlled from the touch-screen buttons (accessed via the CLIMATE button to the left of the touch-screen) and is described in the **Touch-screen Climate Control** chapter of this handbook (starting on page 193).

AUDIO SYSTEMS

The vehicle audio system interacts with the JaguarVoice, Navigation, In-car Telephone and Climate Control systems via data on the multiplex communications vehicle network.

The audio system can be controlled from the radio front panel buttons, the touch-screen buttons accessed via the AUDIO button on the left of the touch-screen and from multi-function controls on the left-hand side of the steering wheel, where fitted. These controls are described in the **Audio System** chapter of this handbook (starting on page 282).

The sound system antenna is an integral part of the vehicle rear screen and serves both FM and AM radio wavebands.

Touch-screen

NAVIGATION SYSTEM

This Jaguar navigation system assists the driver by providing a route to a selected destination. Guidance is given by means of audible instructions (voice guidance), complemented by map and turn information, which is displayed on the touch-screen. Digital map information is held on the Navigation System Digital Versatile Disc (DVD), which is loaded into the navigation control unit housed in the luggage compartment.

The system has an extremely comprehensive range of features, yet is easy to use. Some time spent reading the separate navigation system handbook will ensure that the best results are obtained.

The touch-screen is used to control the system by means of menus, text screens and map displays.



WARNING:

The navigation Database reflects reality as existing before you received the Database and it comprises data and information from government and other sources, which may contain errors and omissions. Accordingly, the Database may contain inaccurate or incomplete information due to the passage of time, changing circumstances, and due to the nature of the sources used. The Database does not include or reflect information on – amongst other things – neighbourhood safety; law enforcement; emergency assistance; construction work; road or lane closures; vehicle or speed restrictions; road slope or grade; bridge height, weight or other limits; road or traffic conditions; special events; traffic congestion; or travel time.



WARNING:

Only operate, adjust or view the system when it is safe to do so.

Touch-screen

IN-CAR TELEPHONE

The telephone is described in the separate in-car telephone handbook.

JAGUARVOICE

JaguarVoice provides a safe and convenient way for the driver and/or rear occupants to control the following vehicle systems (where fitted):

- Sound system (radio, CD player and CD changer – as applicable).
- In-car telephone.
- Climate control system (front user only unless 4-zone climate control is fitted).
- Television and Teletext.
- Display screen (front user only).
- Navigation (front user only).

The system is controlled in the front of the vehicle by the steering wheel voice button, and, when fitted in the rear of the vehicle by the rear multimedia switchpack voice buttons, see the **Voice Control** chapter of this handbook (starting on page 331).

REAR MULTIMEDIA

For details of this system, see the separate rear multimedia handbook.

WINDOW TINTING



WARNING:

Do not have your vehicle windows tinted with a metal oxide tinting (for maximum heat reduction from sun load) if you have a Navigation system fitted to your vehicle.

Metal oxide tinting prevents the reception of the Global Positioning Satellite (GPS) signals by the antenna causing the navigation system to stop functioning.

A non-metal tinting should be used if you require window tinting and if in doubt, contact your Jaguar Dealer for advice.

Touch-screen Display

TOUCH-SCREEN DISPLAY



JOL4764

TOUCH-SCREEN USE AND CARE

When the ignition switch is initially turned to position **I** or **II**, the touch-screen will display the Jaguar logo screen followed by activation and display of the mode previously used. Display of buttons for other systems can be obtained by pressing the appropriate perimeter button. Functions of the **MENU** button are described on the following pages.



WARNING:

In the interests of road safety, only operate, adjust or view the system when it is safe to do so.

Caution: Care must be taken to avoid spilling or splashing drinks onto the screen. In the event of such an occurrence advise your Jaguar Dealer.

Note: *When operating touch-screen buttons, always extend the tip of one finger, and withhold the thumb and remaining fingers from the screen.*

Touching the screen with more than one finger at a time may cause false inputs.

The touch-screen and inner bezel must be kept clean to maintain optimum performance. Finger marks and attracted dust should be regularly removed using a soft cloth and a Jaguar approved cleaning agent.

Touch-screen Display

MENU




JOL3498

Pressing the **MENU** perimeter button will display the system menu screen.

The screen display can be blanked out by touching the **Screen Off** button.

Touch the screen, or press any of the perimeter buttons, to restore the display.

VOLUME PRESET

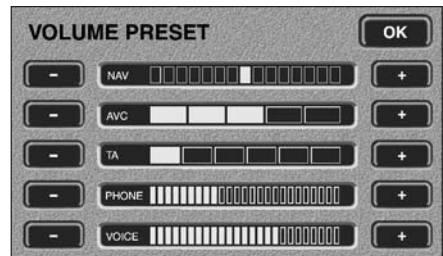

JOL1640

After touching the **Volume Preset** button, the screen displays the buttons for adjustment of volume associated with the navigation system, JaguarVoice, telephone, Traffic Announcements (TA) and Automatic Volume Control (AVC). Adjustment of AVC varies the rate at which volume is increased or decreased relative to vehicle speed.

Touch or hold the + or – button to adjust the volume of the selected function.

Note: *If any of the volume slides are adjusted to the fully – position, then the volume is turned fully off.*

Confirm your selection by touching OK and the system menu screen will once again be displayed.

Touch-screen Display

BRIGHTNESS/CONTRAST



After touching the **Brightness/Contrast** button, the screen displays the buttons for adjustment of the screen display characteristics. The centre window shows the currently selected navigation view.

Touch the + or - button to adjust the selected function.

Screen brightness and contrast can also be dimmed for night driving. This is achieved either manually via the **Day**, **Night** or **Twilight** buttons (independent of the exterior light master switch position), or automatically via the **Auto** button (controlled by the exterior light master switch position).

Touch the **Default** button to restore the default settings.

Confirm your selection by touching **OK**.

SYSTEM SETUP




After touching the **System Setup** button, the screen displays the buttons for selecting user settings or vehicle settings.

Note: Vehicles which have the JaguarVoice system fitted will have an additional button on the system setup screen for voice training.

Touch-screen Display

User settings

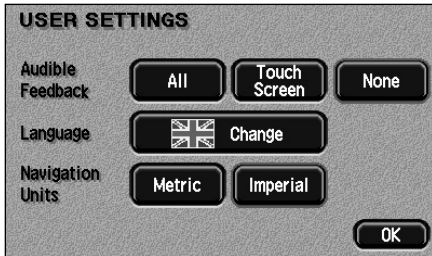

After touching the **User Settings** button, the screen displays the buttons for the selection of audible feedback, language, and units of measurement.


All selects audible feedback on the perimeter buttons and touch-screen buttons. **Touch Screen** selects audible feedback on the touch-screen buttons only. **None** selects no audible feedback.

To select another language, touch the **Change** button and, if the language is not shown, scroll the screen as required. To select a language, touch the flag of the country required.

Navigation Units provides either imperial or metric units for use with the navigation system.

Confirm your selection by touching **OK**.

Vehicle settings

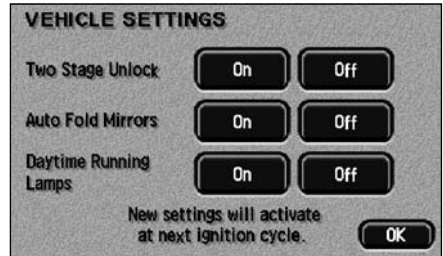

After touching the **Vehicle Settings** button, the screen displays the buttons that switch certain functions on or off.

Two-stage unlock

If this function is switched on, the first press of the key transmitter 'unlock' button will only unlock the driver's door. Press the unlock button a second time to unlock the remaining doors.

If the function is switched off, pressing the unlock button once will unlock all of the doors.

Auto fold door mirrors

When this function is switched on, the door mirrors will automatically fold flat when global closing is performed (refer to **Security and Locks** chapter of the Owner's Handbook).

Daytime running lamps

Where fitted, daytime running lamps will be activated. It is particularly useful when visiting countries where daytime running lamps are compulsory.

Audio System

GENERAL INFORMATION

The audio system can be controlled from either the radio panel or multi-function controls on the left-hand side of the steering wheel.

The sound system antenna is an integral part of the vehicle backlight and serves both FM and AM radio wavebands.

Caution: Care must be taken to avoid spilling or splashing drinks onto the audio system. In the event of such an occurrence advise your Jaguar Dealer.

If the unit is to be removed or the battery disconnected, ensure that the radio code is recorded. The number will be required for re-insertion following radio installation.

SECURITY CODE NUMBER

For the United Kingdom and European countries, the audio head unit is protected by an anti-theft security code. If power to the radio drops to 5 volts or less (dead battery), or there is a power interruption/disconnection, the radio display will indicate **CODE**. At this point the radio will not operate until the correct security code is re-entered.

The four-digit code which is listed on an audio security card supplied with the vehicle, is entered by pressing preset buttons **1** to **9**. A beep indicates that the code has been entered correctly.

If the code is entered incorrectly, two further attempts at code entry will be permitted. If, after three successive attempts, the code has not been properly entered, the display will indicate **PLEASE WAIT**. In this condition the radio will not accept further entries until it has been left on for at least 30 minutes. After 30 minutes in the On position the radio will accept three further entries.

Note: *In the event of loss of your radio security card, contact your Jaguar Dealer who, for security reasons, will require proof of vehicle ownership.*

Audio System

COPYRIGHT LAWS

Caution: Copyright laws vary in different countries; please check the laws in your country if you want to record from copyright source material.

Caution: Due to technical incompatibility, recordable (CD-R) discs and re-writable (CD-RW) discs may not function correctly.

Caution: These CD units will play compact discs that conform to the international Red Book standard audio specification. Copy protected CDs from some manufacturers do not conform to this standard and playback cannot be guaranteed.

Caution: Dual format, dual sided discs (DVD Plus, CD-DVD format), now being adopted by the music industry, are thicker than normal CDs and consequently playback cannot be guaranteed in Jaguar audio units, and jamming could occur. Warranty claims, where this type of disc is found to be inside an audio unit returned for repair, will not be accepted.

Caution: Irregular shaped CDs and CDs with a scratch protection film or self adhesive labels attached should not be used.

DUAL AND DVDPLUS DISCS

Please be aware that a new generation of DVDs is being adopted by the music industry. They are known as **Dual Discs** or **DVDPlus** discs. They have digital music on one side and video content on the other. Current in-car audio systems with a front loading CD player may load and play this type of disc. However, it is possible that the disc will not eject. Such damage to a CD player will not be covered under warranty.

AUDIO SYSTEM CARE

Do not use gasoline, solvents or abrasive cleaners on the radio. Wipe the surface of the radio with a lint-free cloth to remove dust. Slightly moisten the cloth with clean water to remove any finger marks.

If the radio is to be removed or the battery disconnected ensure that the radio code is recorded. The number will be required for re-insertion following radio installation or battery reconnection.


Compact Discs (CDs)

When handling CDs, do not touch the playing surface. CDs should be stored in their cases away from direct sunlight, heat and dust. Scratches, fingermarks or dust on the surface of a disc can cause the optical pick-up to skip tracks. If the surface of a CD is dirty, use an appropriate CD cleaner.

Do not attempt to play discs that are damaged, warped, cracked or of incorrect size. They can seriously damage the playback mechanism.

Steering Wheel Controls

STEERING WHEEL CONTROLS

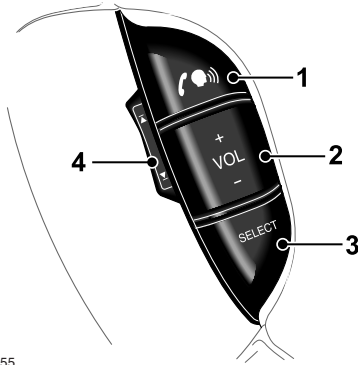

JAG0655

Four audio system control switches are situated on the left-hand side of the steering wheel. Duplicating the functions of buttons on the audio panel, these provide fingertip control of audio and telephone systems whilst driving.

- 1.** Press to start a voice session, or mute when JaguarVoice is not fitted.
Answer phone call when ringing.
Send/End when in phone mode.
- 2.** Press as required to increase or decrease volume.
- 3.** Press and release to cycle through Radio bands, CD and CD Changer, or press and hold for at least two seconds to select Phone Ready mode.
- 4.** Press as required and release to cycle through preset radio stations, the next CD track.
Press and hold for at least two seconds to cycle to next strong station or next CD.

Radio

GENERAL INFORMATION

Reception

FM reception offers the advantages of low noise interference, minimal distortion, wide dynamic range, extended frequency response, and is usually broadcast in stereo. FM frequency waves are however relatively short and travel in a straight line and can therefore be impeded by obstructions, which may adversely affect reception in certain parts of the country. This is a condition known as Multipath Interference.

Whilst FM reception generally provides better quality sound, AM reception or Medium Waveband (MW) may prove superior in remote areas not covered by the shorter range FM transmitters.

When experiencing poor FM reception, background noise can be reduced by pressing the **MODE** button, selecting **TREBLE** and reducing the treble setting.

Radio Broadcast Data Systems (RBDS) and Traffic Announcements (TA)

Jaguar sound systems are equipped with Radio Broadcast Data System (RBDS) which assists in locating and remaining tuned to a selected radio station. When tuned to certain stations on the FM waveband, the radio decodes signals transmitted, to provide the following functions (dependent upon the service available):

- When **RBDS** is selected the station name is displayed in eight characters.
- Automatic retuning to follow network stations:

RBDS provides fully automatic radio tuning for network stations. It tunes to a signal not a frequency. RBDS will locate the strongest signal available for a given station.

- RBDS will automatically switch frequencies (AF Switching) as necessary. This function can be toggled off and on by pressing and holding the **BAND** button.

- RBDS Station/Programme type display and search:

RBDS displays information on the type of material broadcast by the station or programme that is on e.g. **News, Classical, Rock** etc. In addition to this function, the radio can search for a selected programme type.

Radio

- **RBDS Priority Programme Type auto retuning (where broadcast):**
Similar to Traffic Announcement this can be selected to interrupt and switch to the selected programme type e.g. **News**, for its duration.
- **Local radio station Traffic Information (where broadcast):**
RBDS provides travel information relevant to the vehicle location. On learning of a traffic problem, the authorities inform the nearest local radio station.
The traffic announcement (TA) is then broadcast by transmitters in the relevant area.

Provided **TA** has been selected, traffic announcements will interrupt radio or CD play, on all equipment with the RBDS feature. If the volume control is set at minimum it will automatically increase to an audible level for the duration of the traffic news flash.

When the traffic announcement has been completed, the system reverts to the driver's original listening choice and volume setting.

RBDS operation



To activate RBDS, press the **TA** button and hold for at least two seconds until **RBDS ON** is displayed.

To deactivate RBDS, press the **TA** button and hold until **RBDS OFF** is displayed.

With the radio tuned to an RBDS station and RBDS activated, the radio gathers RBDS information and displays the service name/data.

If the radio is not tuned to an RBDS station, it will remain on that station and display the frequency, and RBDS will remain on in readiness for a signal.

When listening to a national network station, or a station that broadcasts on more than one frequency, the radio will retune to the strongest available signal (AF Switching). This 'network following' will continue throughout the journey. (Unselected presets will also receive new frequency information, if appropriate.)

When RBDS data is lost and no alternative frequency signal is available, the radio will stay on station, the display shows the frequency only and RBDS remains on in readiness for the signal to recover.

If the **RBDS** function does not respond correctly, see **RBDS troubleshooting guide** on page 289.

Radio

TA operation

To activate TA: Press the **TA** button momentarily (less than two seconds).

TA will appear in the display. The radio then checks that the station has RBDS TP (Traffic Programme); indicated by **TP** at the top of the display. If **TP** is not available on the current station, the display will show **TP SEEK** while it searches for a station that does have it.

If a **TA** station is not available, a beep is sounded and **TA** is removed from the display.

With **TA** activated, traffic announcements will interrupt radio or CD play. If set at a minimum, the volume will increase for the announcement, returning to normal setting afterwards. When receiving, the display will show **TRAFFIC INFO**.

To deactivate TA: Momentarily press **TA**.

Preset TA volume

When the radio is set to minimum volume and a traffic announcement occurs, the volume is raised to a preset level. This level can be adjusted by pressing and holding the **MODE** button for more than two seconds, then setting the volume level (which is displayed) between **1** (min.) and **6** (max.) by turning the volume control knob.

Programme Type (PTY)

(Where broadcast)



This has two functions: To display current station programme type and to select a programme type and retune to it.

Momentarily press the **PTY** button to display the current station programme type. Use the tuning buttons to cycle through the available programme types, press the **PTY** button again to activate a search for the selected programme type. If there is a station with the correct **PTY** then the radio will retune to it. If not, the radio will indicate **NO PTY** and return to the current station.

Priority Programme Type (PPTY)

Functions as an interrupt or as a '**PTY Following**'.

Press and hold the **PTY** button to activate the selected priority programme type, **PPTY**. The radio will now wait for RBDS information to indicate that a station has changed its programme type, e.g. to **NEWS**. The radio will now retune to the new station for the duration that it remains on that programme type.

If the current station is already on the selected priority programme type, then when this station is lost, the radio will attempt to find another with the correct programme type.

To cancel Priority Programme Type, press and hold the **PTY** button, the **PTY** indicator will clear from the display.

Note: **TA** and **PPTY** interrupt feature is also available in CD and audio modes.

Radio

TA and priority PTY interrupt skip

Interruptions for traffic announcements, news or other selected priority programme types, can be skipped by pressing **TA** during the interrupt. The radio returns to the previously selected audio source.

Note:

- *Interrupt skip will not cancel activation of **TA** or **PPTY** and it will remain ready for the next interrupt.*
- ***TA**, **PTY** and **PPTY** features are reliant upon the broadcast information from radio stations, and may be much better in some areas than others.*

PTY31-alarm (where broadcast)

When using the radio with **RBDS** selected, a **PTY31-ALARM** service will operate, to alert on any crises of major national importance. When such a broadcast is made, **ALARM** will appear in the audio display.

Radio


RBDS troubleshooting guide

Incorrect response from RBDS	Reason and rectification
Radio does not display programme name.	Check that RBDS is turned on by pressing and holding the TA button until the display confirms RBDS ON . If the radio does not display a programme service name, it is not broadcasting RBDS data, or you are in a poor reception area. Try retuning to another station with RBDS.
Station name is lost and displays frequency only.	Radio has lost reception of the RBDS data due to vehicle moving out of transmitter range, loss of signal in a tunnel, under a garage forecourt canopy, or similar screening. If the latter is the case, when the vehicle is clear of the screening, the station name will return after a short delay.
Upon operating A MEM , NO FM is displayed when most or all of the preset positions are selected.	The radio cannot locate nine FM, RBDS FM or TP stations dependent upon the mode selected. If this occurs, switch off RBDS or TA and reselect A MEM .
Upon pressing the TA button the radio re-tunes to another station and displays TP SEEK .	The station selected does not have TP/TA facility, the radio will retune to one that does.
Radio sound goes off and the display shows PI SEEK .	The RBDS radio station selected is unable to confirm that the frequency tuned to has the correct RBDS data – Programme Identification (PI). It will then seek for a frequency that has the correct data.
Radio ‘beeps’ and the display shows NO TA/TP and turns off TA .	The vehicle is in an area where TA broadcasts cannot be received from any FM stations. The radio will automatically de-select the TA feature.

Radio

RADIO - STANDARD AUDIO

Audio System Display Panel

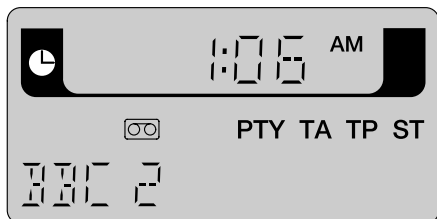

JOL.1245

Shown in BAND mode

On/Off and volume control



Press the control knob to switch the radio on, press again to switch off. Turn the control knob clockwise to increase or counter clockwise to decrease volume.

Any volume setting made whilst in audio, phone, or voice activation mode, will be memorised for that system.

Automatic Volume Control (AVC)

This maintains radio volume at a level sufficient to overcome road noise as vehicle speed increases or decreases. To activate AVC, press and hold the volume control knob until **AVC** is displayed. To deactivate AVC, momentarily press the volume control knob again. The level of AVC control can be adjusted by turning the volume control knob whilst in **AVC ON** mode. When AVC is ON, manual adjustment of volume will override the AVC setting.

MODE button



The MODE button functions at two levels. Mode level 1 is used to adjust sound performance. Mode level 2 can be used to adjust the audio display clock, to adjust Traffic Announcement (TA) and Voice Activation volume and to select Voice Activation Training. It can also inhibit the rear multimedia system controls.

Mode level 1

A short press and release of the **MODE** button will access the mode level 1 menu. Subsequent short presses of the **MODE** button will scroll through the available modes. When the desired mode is displayed, use the rotary volume control to adjust the setting.

Available modes

BASS	Increase/decrease
TREBLE	Increase/decrease
BALANCE	Left to right
FADE	Front to rear
SUB LEVEL	<i>Premium audio only.</i> Increase/decrease subwoofers
DSP POSITION	See detailed DSP text
ADVANCED MODE	Allows access to mode level 2. When ADV MODE N/Y is displayed, turn the rotary volume control to select ADV MODE YES . Subsequent short presses of the MODE button will scroll through the mode level 2 menu.

Radio

Digital Signal Processing (DSP) (Premium audio system only)

DSP can optimise sound performance for specific seating positions. To adjust the setting:

- In Mode level 1, scroll to **DSP POSITION**.
- Use the rotary volume control to cycle through **POS F-LEFT** (front left), **POS F-RIGHT** (front right), **POS REAR** and **POS FRONT** until the desired setting is achieved.

After approximately five seconds with no further actions or adjustments, the audio system will return to the previous display.

Note: *To improve the comfort of passengers in the rear of the vehicle, the bass performance of the subwoofer is reduced when DSP mode is set to **POS ALL** or **POS REAR**.*

For optimum bass performance, do not select **POSS ALL** or **POS REAR**

Mode level 2 - ADVANCED MODE

When **ADV MODE YES** is selected subsequent short presses of the **MODE** button will scroll through the available modes. When the desired mode is displayed, use the rotary volume control to adjust the setting.

Note: *Mode level 2 can also be accessed via a long press of the **MODE** button.*

Available modes

CLOCK FORMAT SET	Select 12HR or 24 HR clock display. Press the MODE button to move to the next clock setting.
CLOCK HOUR SET	Adjust then press the MODE button to move to the next clock setting.
CLOCK MINUTE SET	Adjust then press the MODE button to save the clock settings and move to the next mode.
TA VOLUME	Increase/decrease.
VOICE VOLUME	Increase/decrease.
VOICE A	Press the 'seek up' button to adjust.
VOICE B	Press the 'seek up' button to adjust.

Press and hold the **MODE** button to exit. The display will now revert to the screen in use before entering **CLOCK SET**.

Rear Seat Entertainment (RSE) controls

To inhibit the RSE controls, press and hold the **MODE** button until the current **RMS MODE** is displayed.

Radio

Rotate the volume control to select:

- **RMS ON** - This enables the RSE controls.
- **RMS H/PHONE** - The RSE control of the cabin speakers is inhibited. Control using headphones is still available.
- **RMS OFF** - This disables the RSE controls.

Change audio system source



Press the desired audio system source button.

Source tone memory

Bass and Treble positions are automatically memorised for AM radio, FM radio and CD, allowing individual settings for each mode.

BAND button

Pressing **BAND** repeatedly will cycle the radio through FM and Long wavebands. Band selection will be shown in the display panel. When a CD is being played, pressing the band switch will select radio operation.

Presetting memorised radio stations



WARNING:

In the interests of road safety, do not attempt to preset a station while driving.

On each waveband, nine stations can be memorised using keypad buttons **1** to **9**. After tuning to a station, press and hold the selected button until the unit 'beeps'. A station can be recalled from the preset memory by pressing and immediately releasing the button.

Pressing the steering wheel preset selector button will cycle through the preset stations.

Seek and manual tuning



In **BAND** mode, pressing and releasing the left or right button will activate the radio in seek mode, tuning through the frequency range to the next available station. Pressing either button for more than two seconds will enter manual tuning mode.

Radio

Auto Memory (A MEM)



The automatic memory function programmes the nine strongest stations on a selected waveband to presets **1** to **9**.

Note: *These are additional to the preset stations described earlier.*

To activate this function, press and hold **A MEM** button for at least two seconds.

The radio will be briefly muted while it searches the waveband for the nine strongest stations. When programming is complete the radio will default to preset number **1** and audio volume is restored.

If stations cannot be located for all preset positions, those that are found will be allocated positions commencing with number **1**, leaving the remainder not programmed. The display will show **NO FM** or **NO AM** if a selected preset are is not programmed.

To switch between the A MEM preset stations and your own presets, press and immediately release the **A MEM** button.

A MEM with Radio Broadcast Data System (RBDS) selected

If the **A MEM** function is operated while in **RBDS** mode, the radio will be muted briefly, while a search is made for the nine strongest RBDS stations.

Radio Set Up

This function enables the radio to be set to user operating preferences. By selecting **SET UP** and using the preset buttons, the owner or Jaguar Dealer can adjust certain radio functions.

When in **SET UP**, pressing the relevant preset button, as detailed below, will display the facility selected and its state. The state of that facility can be changed by pressing the preset button again.

To enter SET UP: Press **CD Eject** and **BAND** buttons simultaneously.

The display will show **SET UP**. The following preferences can be selected or changed in any order, within a 15 second period. After 15 seconds the display will clear and exit **SET UP**.

- | | |
|-----------------|--|
| Preset 1 | Press Preset 1 to enable or disable RBDS availability in the user's country. |
| Preset 2 | Blank |
| Preset 3 | Blank. |
| Preset 4 | Blank. |
| Preset 5 | Blank |
| Preset 6 | FM volume high (compensate for poor signal strength). |
| | Note: <i>This feature is not available in North America, Australia and Japan.</i> |
| Preset 7 | Blank. |
| Preset 8 | Blank. |
| Preset 9 | Blank. |

Radio

Preset 10 During initial factory installation, this is used to set the radio to one of the following regions: Europe, USA, Australia or Japan. Regional settings determine the correct frequency increments required for seeking stations, automatic tuning etc.

Note: *The regions are preset at the factory. Should you require a regional change, consult your Jaguar Dealer.*

Radio

RADIO WITH TOUCH-SCREEN

On/Off control



Press the control knob to switch the radio on, press again to switch off.



Pressing the **AUDIO** button can also turn on the radio. When using the touch-screen in other operating modes, such as Navigation, Television

(where fitted), Climate Control or any of the setup screens, pressing the **AUDIO** button will revert to the relevant audio screen.

Volume control




JOL1627

Turn the control knob clockwise to increase or counter-clockwise to decrease volume, across a range of settings (0 – 35) to be displayed during and momentarily after adjustment.

When using the rotary control knob to adjust volume the touch-screen will show the above display to assist setting. The pop-up volume control slide will disappear from the display after five seconds or can be removed by touching it.

Any volume setting made whilst in audio, telephone or navigation mode or JaguarVoice, will be memorised for that system.

Automatic Volume Control

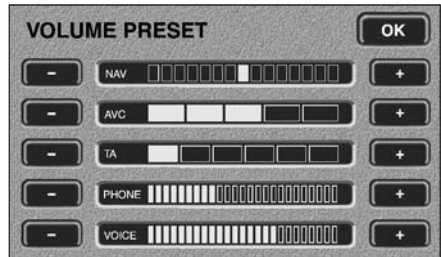

JOL1640

This maintains radio volume at a level sufficient to overcome road noise as vehicle speed increases or decreases. To activate AVC, press the **MENU** button, followed by the **VOLUME PRESET** button on the touch-screen. Once in the volume preset screen, AVC level can be adjusted (from OFF to 5) by repeatedly pressing the + or – buttons adjacent to the AVC volume indicator.


When AVC is ON, manual adjustment of volume will override the AVC setting.

Volume preset adjustments

Volume for Telephone, JaguarVoice, TA and Navigation can also be adjusted by using the **MENU** button on the right of the screen and selecting the volume preset button as appropriate.

Radio

Audio setup

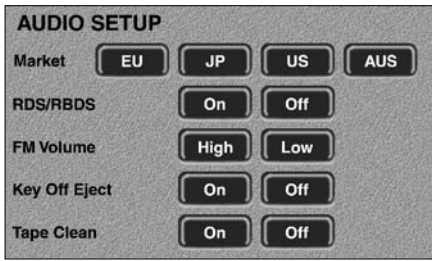

This function enables the radio to be set to user operating preferences. By selecting **SETUP** and using the buttons on the touch-screen, the owner or Jaguar Dealer can adjust certain radio functions.

When in **SETUP**, pressing the relevant button will display the facility selected and its state. The state of that facility can be changed by pressing the button again.

To enter SETUP: Press **Eject** and **BAND** buttons simultaneously.

The display will show **AUDIO SETUP**. The preferences shown on the next page can then be selected or changed in any order. After 15 seconds the display will clear and exit **SETUP**.

Market

During initial factory installation, this is used to set the radio to one of the following regions: Europe, Australia or Japan. Regional settings determine the correct frequency increments required for seeking stations, automatic tuning etc.

Note: *The regions are preset at the factory. Should you require a regional change, consult your Jaguar Dealer.*

RBDS/ RBDS

Press ON/OFF buttons to enable or disable RBDS, depending upon RBDS availability in the user's country.

FM Volume

FM volume high or low (compensate for poor signal strength).

Note: *This feature is not available in Australia and Japan.*

Radio

Digital Signal Processing (DSP)

DSP (premium audio system only) facilitates optimisation of sound for specific seating positions and is accessed via the **DSP** button shown on the touch-screen (audio screens only). The chosen setting can then be selected by touching the appropriate zone.

Options available are:

- Front left.
- Front right.
- Front centre.
- Rear seats.
- All seats.

Change audio system source



Press the desired audio system source button.

BAND mode



In BAND mode, touch-screen buttons provide for radio station selection and retuning. In addition, the upper panel displays waveband, **TA** and **PTY** as selected using the buttons on the radio panel.

BAND button

Pressing **BAND** repeatedly will cycle the radio through FM and Medium wavebands. When a CD is being played, pressing the band switch will select radio operation.

Presetting memorised radio stations



WARNING:

In the interests of road safety, do not attempt to preset a radio station while driving.

On each waveband, nine stations can be stored in the bank of nine buttons displayed on the touch-screen. To store a radio station as a preset, touch the selected button until a beep sounds to acknowledge the station has been stored.

A station can be recalled from the preset memory by momentarily pressing any of the preset buttons. The selected preset is highlighted by a red halo around the appropriate button.

Pressing the steering wheel preset selector button will cycle through the preset stations.

Seek and manual tuning



In BAND mode, touch and release **⏪** **⏩** to activate the radio in seek

mode, tuning through the frequency range to the next available station.

Pressing either button for more than two seconds will enter manual tuning mode.

Radio

Auto Memory (A MEM)



The automatic memory function programmes the nine strongest stations on a selected waveband to presets **1** to **9**.

Note: *These are additional to the preset stations described earlier.*

To activate this function, press and hold **A MEM** button for at least two seconds.

The radio will be briefly muted while it searches the waveband for the nine strongest stations. When programming is complete the radio will default to preset number **1** and audio volume is restored.


If stations cannot be located for all preset positions, those that are found will be allocated positions commencing with number **1**, leaving the remainder not programmed. The display will show **NO FM** or **NO AM** as appropriate.

To switch between the A MEM preset stations and your own presets, press and immediately release the **A MEM** button.

A MEM with Radio Data System (RBDS) selected

If the **A MEM** function is operated while in **RBDS** mode, the radio will be muted briefly, while a search is made for the nine strongest RBDS stations.

Satellite Radio (SDARS)

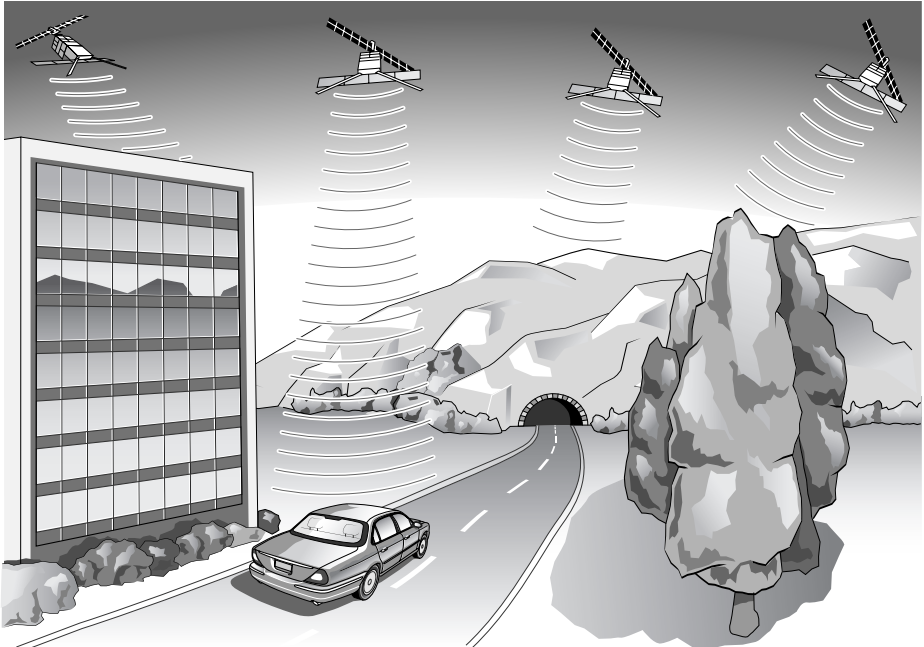

JAG0796

SATELLITE RADIO SERVICE

Satellite radio is a direct broadcast radio service, which provides digitally encoded audio signals. The signals can be received directly by a suitable receiver or relayed to a receiver via a repeater station, when the receiver is shielded from the satellites signal (e.g. when driving under large road intersections or when surrounded by many tall buildings).

As a digital signal is used, the system is able to provide audio output of radio broadcasts, with the sound quality and clarity of CD playback.

Note: As the signals are encoded, a subscription to the Broadcast operator (SIRIUS) is required to receive Satellite radio broadcasts.

Satellite Radio (SDARS)


Receiving Satellite Broadcasts

To access satellite broadcasts, select radio; either by pressing the **Audio** button.



JAG0771

Once radio has been selected as the audio source, the satellite broadcasts are available from the selection of wavebands. To access, press the **BAND** button repeatedly until **SAT1** or **SAT2** has been selected.

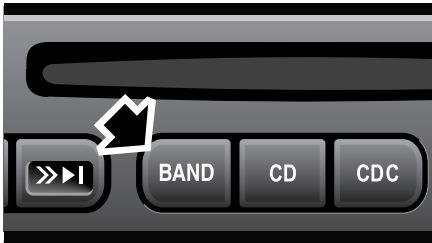

JAG0772

Once the SAT band has been selected, **SAT1** or **SAT2** is displayed along with the current playing channel.

Note: If the Satellite band has been selected, but a subscription to the provider has not been made, a message will appear on one of the alternative screens, showing the telephone number for the provider.

Satellite radio display screen




JAG0774

The information panel displays the satellite preset group, the channel number, the station name, and the channel category.

When satellite broadcasts are being received, an additional information panel is displayed. Where the information is available, the second information panel will display the artists name and the song/program name. Touch the icon indicated to cycle between the two.

Selecting a station by channel number

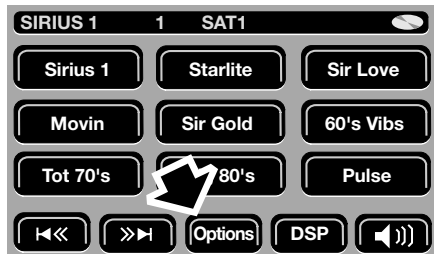

JAG0776


To select a channel by entering the channel number, touch the **Options** icon.

Satellite Radio (SDARS)




JAG0777

Touch the **Keypad** icon.

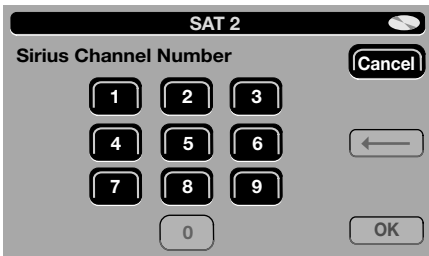

JAG0778

A numeric keypad is displayed, enabling the manual entry of the channel number. Press the appropriate number keys.

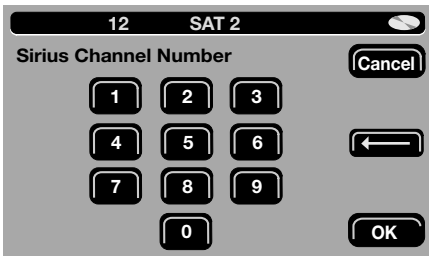

JAG0779

Only numbers that make up a valid channel number are highlighted and available for selection.

Note: In the event that the selected channel has been removed by the Broadcast operator, then an **INVALID COMMAND** message is shown and the previous playing channel is reverted to. This may occur if the broadcast operator changes the active channel whilst the vehicle is powered. The valid playlist is updated each time the system is powered up, therefore the next time the system is powered up, the playlist will be updated thereby preventing the invalid channel from being selected.

No Service is displayed if no signal is received. It means that no satellite or ground signal is being received and is not the same as No Subscription, which directs the user to call SIRIUS. Ensure that the vehicle is not in an enclosed space (such as a garage).

Selecting a station by category



JAG0781

Satellite Radio (SDARS)




JAG0782

To select station by category touch the **CAT** icon, and then touch the icon for the desired category. The system will then go back to the previous screen but with the category displayed in square brackets i.e. [ROCK]. The brackets are removed after 30 seconds if no further changes are made.

If a different category is selected from that currently being played, then the playing channel will become the first active channel in that category.

Station presets - setting.

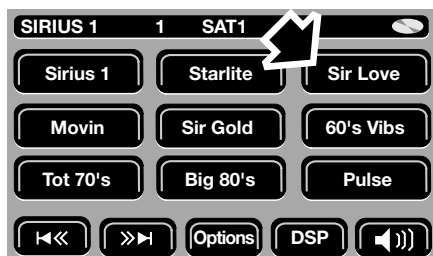

JAG0783

There are 2 screens (SAT1 and SAT2) each with 9 icons giving a total of 18 available presets.

To save a station as a preset, press and hold the selected icon until the preset is stored and highlighted.

To change a preset, touch the chosen icon and select the desired station either via category or manually. Then press and hold the selected icon until the new preset is stored.

Note: If manual tuning is used and a channel is selected that is an existing preset, the preset will highlight. If the same channel is stored in more than one preset (on different screens for example) and manual tuning is performed, the first preset will highlight.

Selecting a station by preset



JAG0775

Press the preset icon representing the desired station. The radio tunes to the selected station and the station information is displayed.

When a preset is successfully selected, it is highlighted in orange

Note: There are 2 preset screens (SAT1 and SAT2), with 9 presets on each. The icon (arrowed) identifies the next preset screen for selection and not the screen currently being displayed.

Tuning information

It must be noted that Satellite Radio differs from FM in that tuning is NOT instantaneous.

Satellite Radio (SDARS)

The information is sent in digital form in packets which must be decoded. This process can take several seconds to set up. Therefore when a new channel is tuned to, the audio will mute until the information has been decoded into music/speech. Normally this takes less than 1 second but can take up to 5 seconds.

It should also be noted that the additional information (artist, album etc.) is broadcast at a different rate to the audio. Therefore there will be a delay after the audio starting and the display screen updating. This delay is normally 3 to 4 seconds but can be up to 20 seconds. This is a function of the way the radio channels are broadcast.

Note: *The screen information is updated only when a change takes place. When a new channel, or a new track on a current channel, starts playing then the previous artist/song title etc. will continue to be displayed until an update is received. This is a function of the way the radio channels are broadcast*

Digital Radio

HD (High Definition) radio

HD radio provides digital audio signals to improve sound quality.

Note: *HD radio is also known as IBOC (In Band On Channel).*

The HD signal is carried by an existing AM/FM signal. This means that if the HD signal is unavailable the analogue (AM/FM) signal is automatically selected.

When the audio unit is tuned to a HD signal the station name shown in the display will be prefixed by **HD**.


HD radio operation

Using the HD radio system is no different than using the standard radio. So for storing stations, manual tuning etc. see **RADIO WITH TOUCH-SCREEN, 295**.

Note: *Secondary services can be received on digital channels. Their availability is controlled by the channel provider. If a HD channel features secondary services, they will be displayed as HD1, HD2, HD3 etc. depending on how many are available.*

Single CD Player

SINGLE CD PLAYER - STANDARD AUDIO

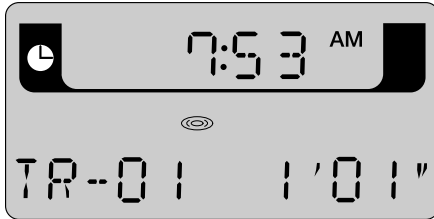

JOL1634

The audio display will indicate which function has been selected. Messages include; **LOADING, EJECTING, MIX TRACKS, REPEAT TRACK, PAUSED** and **CUE/REVIEW**.

Inserting a CD into the CD aperture will start immediate play. The display will show **LOADING**, followed by **TR-01 00' 00"**. The CD symbol will also be displayed until the CD is ejected, regardless of the selected audio source.

Eject and CD-in indicator



When a CD is inserted, the CD icon is displayed. Press to eject the CD. The display will show **DISC EJECT** and the CD icon will be turned off.

MIX



To play random tracks from the disc, press and release the **MIX** button. **MIX** will be displayed. To cancel, press the **MIX** button again.

CD button



If you are playing the radio or CD changer, pressing the **CD** button will resume playing any CD installed in the player mechanism.

The audio display will show **TR-NN MM' SS"**, where **NN** is the current track number and **MM SS** is the track time in minutes and seconds.

Pressing the **CD** button while in CD play mode will pause the current track, the display will show **TR-NN PAUSE** where **NN** is the current track number. A subsequent press of the **CD** button will resume play mode.

This function can also be controlled by a switch on the steering wheel.

REPEAT



Press and release **REPEAT** button to repeat the current CD track being played. To cancel, press the **REPEAT** button again.

Seek up and down



This control selects seeking of tracks up or down.

Momentarily press the right-hand button to skip to the next track. Repeated pressing will select further tracks.

The left-hand button returns to the beginning of the current track. Repeated pressing selects previous tracks.

Pushing and holding either button selects cue and review of the CD.

Note: *Sound level is reduced when cueing and reviewing a CD.*

Single CD Player

SINGLE CD PLAYER WITH TOUCH-SCREEN



JAG0814

- 1. AUDIO.** Press to turn audio system ON, or to display relevant audio screen and associated touch-screen buttons.
- 2.** Touch-screen display.
- 3. MENU.** Press to access touch-screen options.
- 4. MIX.** Mix CDs or CD tracks playing order.
- 5. PTY.** Priority Programme Type (where broadcast).
- 6. TA.** Traffic Announcement and Radio Data System (where broadcast).
- 7. A MEM.** Automatically set station presets.
- 8. CDC.** Select CD changer.
- 9. CD.** Select compact disc play when in other audio mode, or CD pause (when a CD is inserted and playing).
- 10. BAND.** Radio waveband select.
- 11.** Seek radio station, cue/review CD.
- 12. MODE.** Scroll to select sound settings.
- 13.** ON/OFF and volume control.
- 14.** Eject CD.

Single CD Player



In **CD** mode, touch-screen buttons (shown above) provide selection of CD tracks.

The display will show the CD screen. The CD symbol will be displayed until the CD is ejected, regardless of the selected audio source.

Inserting a CD into the aperture will start it playing.

Eject



Press to eject the CD.

Mix



To play random tracks from the disc, press and release the **Mix** button. **MIX** will be displayed. To cancel, press the **Mix** button again.

Repeat



Press and release **Repeat** button to repeat the current CD track being played. To cancel, press the **Repeat** button again.

Pause



Touch the pause button to pause CD play.

Note: Pause button function changes to a play button, a subsequent press will resume CD play.

CD button



If you are playing the radio or CD changer, pressing **CD** will play the CD in the player. This function can also be controlled from the appropriate button on the steering wheel (see page 284).

Seek up and down



Touch and release to seek tracks up or down.

Momentarily press the right-hand button to skip to the next track. Repeated pressing will select further tracks.

The left-hand button returns to the beginning of the current track. Repeated pressing selects previous tracks.

Pushing and holding either button selects cue and review of the CD.

Note: Sound level is reduced when cueing and reviewing a CD.

Compact Disc Changer

COMPACT DISC (CD) CHANGER OPERATION

A CD changer (where fitted) is installed in the luggage compartment and will accommodate up to six discs, each mounted in a tray.

Caution: The 8 cm diameter discs and associated adaptors available in some countries must not be installed in the CD changer magazine. Any attempt to install these items can result in permanent damage to the CD changer mechanism.

CD check sequence


When the CD Player is switched on, a check is performed on each disc tray in the CD changer magazine. When the six trays have been checked the player returns to the first disc in the magazine.

Loading discs and inserting magazine

Loading a disc into a magazine tray:

Slide the magazine door to the right (1). Press the eject button (2), the magazine will then partly eject from the CD changer. Pull the disc tray from the magazine (3). Ensuring the playing surface is not touched, load a selected disc into the tray with the label facing upwards (4). Push the tray back into the magazine until it clicks. Tray slots are numbered 1 (bottom) to 6 (top).

Inserting the magazine: With the arrow mark facing upwards and pointing towards the CD changer, insert the loaded magazine into the CD changer (5) ensuring that it clicks into position. Close the sliding door. Keep the sliding door closed to prevent dust entering the playing mechanism.

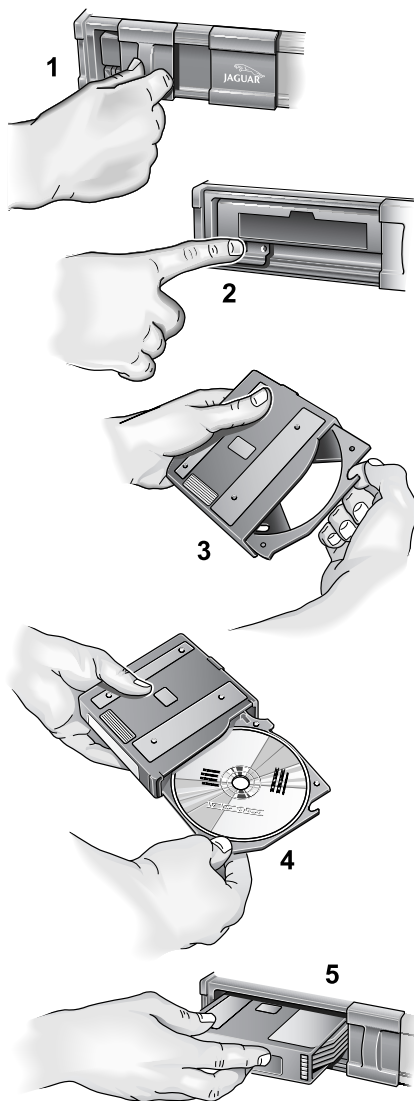


Compact Disc Changer

CD CHANGER - STANDARD AUDIO

CD changer mode

The audio display indicates the CD and track being played, and CD status.

Below is an example of the display when playing track 1 from CD4.

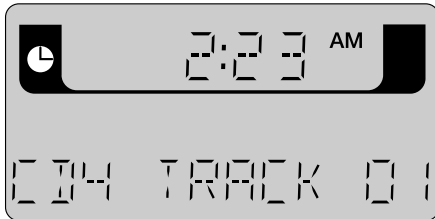

JOL.1244

Other messages:

- CD1 LOADING** CD1 is being loaded.
- NO DISC** In the selected position.
- NO MAGAZINE** In the CD autochanger.
- CD1 MIX 10** The player is playing CD1 in MIX mode (track 10).
- D MIX** All CDs are in MIX mode.
- MAG EJECT** Magazine is being ejected.
- PAUSED** The CD changer is paused and ready to play.

CDC button



Press **CDC** to select CD changer mode.

This function can also be controlled from the appropriate switch on the steering wheel.

CD selection



Preset buttons **1** to **6** select the compact discs in those positions in the magazine. If there is no disc in the selected position, **NO DISC** will be displayed. If there is no magazine in the CD changer, **NO MAGAZINE** will be displayed.

MIX



To play random tracks from the disc, press and release the **MIX** button. **MIX** will be displayed. To cancel, press the **MIX** button again.

To play random tracks from all discs present in the magazine, press the **MIX** button for two seconds. **DISC MIX** will be momentarily displayed, followed by **D MIX**. To cancel, press and hold the **MIX** button.

Seek up and down



This control selects seeking of tracks up or down.

Momentarily press the right-hand button to skip to the next track. Repeated pressing will select further tracks.

The left-hand button returns to the beginning of the current track. Repeated pressing selects previous tracks.

Pushing and holding either button selects cue and review of the CD.

Compact Disc Changer

Note: Sound level is reduced when cueing and reviewing a CD.

REPEAT



Momentarily press the **REPEAT** button to repeat the current CD track being played,

R-ONE will be displayed. To cancel, momentarily press the **REPEAT** button again.

Press and hold the **REPEAT** button for two seconds to repeat the current CD, **R-ALL** will be displayed. To cancel, press and hold the **REPEAT** button again for two seconds.

Pause



When playing a CD, press **CDC** button to pause play. Press again to continue play.

CD CHANGER WITH TOUCH-SCREEN

CD changer mode



In CD changer mode, touch-screen buttons (shown above) provide for track and disc selection. Discs present in the magazine are highlighted in the display.

A disc is selected by touching the appropriate disc button which, when playing, has a red active surround.

The track and track duration are displayed during play.

CDC button



Press **CDC** to select CD changer mode.

Note: This function can also be controlled from the appropriate button on the steering wheel (see page 284).

Mix and CD mix



To play random tracks from a selected disc, press and release the **Mix** button. **MIX TRACKS** will be displayed. To cancel, touch the **Mix** button again.

Compact Disc Changer

To play random tracks from all discs present in the magazine, touch and hold the **Mix** button for more than two seconds. **MIX ALL** will be displayed. To cancel, touch and hold the **Mix** button.

Seek up and down



Touch and release to seek tracks up or down.

Momentarily press the right-hand button to skip to the next track. Repeated pressing will select further tracks.

The left-hand button returns to the beginning of the current track. Repeated pressing selects previous tracks.

Pushing and holding either button selects cue and review of the CD.

Note: *Sound level is reduced when cueing and reviewing a CD.*

Repeat



Momentarily press the **Repeat** button to repeat the current CD track being played. **REPEAT TRACK** will be displayed. To cancel, momentarily press the **Repeat** button again.

Press and hold the **Repeat** button for two seconds to repeat the current CD. **REPEAT DISC** will be displayed. To cancel, press and hold the **Repeat** button again for two seconds.

Pause



Touch the pause button to pause CD play.

Note: *Pause button function changes to a play button, a subsequent press will resume CD play.*

Telephone Introduction

INTRODUCTION

What is Bluetooth?

Bluetooth is an international standard that allows electronic components to communicate with each other, using a short-range radio link. Bluetooth eliminates the need for wires or cables: typically, devices can communicate at a range of up to 10 metres (33 feet).

The Bluetooth in-car telephone system allows certain mobile phones to be used hands-free in your vehicle: there is no need to connect the mobile phone to a cradle or cable.

Bluetooth is a registered trademark of Bluetooth SIG, Inc.

SYSTEM OVERVIEW

The vehicle's Bluetooth telephone system can be used with an appropriate, Bluetooth-equipped mobile phone.

The mobile phone must be paired with the vehicle system before use. See page 316 for more information.

Once paired, the mobile phone can be operated via the steering wheel switches or the keypad and phone buttons on the audio panel or touch-screen. The mobile phone doesn't need to be physically connected to the vehicle: it can be left in a jacket pocket, for instance. Calls are routed through the vehicle's audio speakers, and a dedicated microphone is fitted to the roof lining, near the driver's head.

You can use the system to answer or reject incoming calls, make outgoing calls or alter the call volume. The system does not support SMS text messages.

Note: *The vehicle ignition must be set to position I or II in order to use the phone.*

Call volume

The volume of telephone calls can be adjusted for hands-free phone operation. To adjust the volume, operate the audio system's ON/OFF volume control during a phone call.

If the audio system is in use when the phone becomes active, the audio system source is suppressed for the duration of the call.

The Jaguar telephone system is designed to function with a wide variety of Bluetooth-equipped mobile phones. The audio and echo characteristics vary between models of mobile phones: as a result, it may take a few seconds for the vehicle system to adapt to provide optimal audio performance.

In order to achieve the best possible audio performance, it may be necessary to reduce the system volume slightly when using certain mobile phones.

Audio panel display

Phone related messages are shown on the audio panel display or touch-screen (where fitted) when the phone system is active.

Telephone Introduction

VOICE ACTIVATION

(Where fitted)

The Bluetooth telephone system can be used in conjunction with the voice activation system to provide the driver with completely hands-free communication. Voice commands are picked up by the system microphone.

For information about using voice activation, refer to the **Voice Control** section, starting on page 331.



WARNING:

The voice activation system must not be used to call emergency numbers, as voice patterns can change under stress, resulting in commands becoming unrecognisable.

SAFETY



WARNING:

Read this information before using your in-car telephone system.

Driving

Check local regulations on the use of telephones in the areas where you drive and always obey them. Observe the following guidelines when using your phone whilst driving:

- Give full attention to driving - safe driving is your first responsibility.
- Always use hands-free operation when driving.
- When receiving a call, if driving conditions demand, pull off the road and park.

Electronic devices

Most modern electronic equipment is shielded from radio Frequency (RF) signals.

However, certain equipment may not be shielded against RF signals from your telephone.

Pacemakers

The Health Industry Manufacturers Association recommends that a minimum separation of 15 centimetres (6 inches) is maintained between a wireless phone antenna and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research.

Telephone Introduction

Persons with pacemakers should:

- Preferably use the vehicle hands-free system.
- ALWAYS keep the phone more than 15 centimetres (6 inches) from their pacemaker when the phone is switched ON.
- Turn the phone OFF immediately if there is any reason to suspect that interference is taking place.

Other medical devices

If you use any other personal medical device, consult the manufacturer of your device, or your doctor, to determine that it is adequately shielded from external RF energy.

Turn your phone OFF in health care facilities when any regulations posted in such areas instruct you to do so.

Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Vehicles

RF signals may affect non-Jaguar or improperly installed equipment. Always consult the manufacturer of any equipment that has been retro-fitted to your vehicle.

Posted facilities

Turn your phone OFF in any facility where posted notices so require.

Blasting areas

To avoid interfering with blasting operations, turn your phone OFF when in a blasting area or in areas posted: Turn off two-way radios. Obey all signs and instructions.

Potentially explosive atmospheres

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. Turn your phone OFF when you are in such an area, as the use of unapproved electrical equipment can cause an explosion or fire resulting in bodily injury or death.

Air bags

Air bags inflate with great force.




WARNING:

Do NOT place objects, including both installed or portable wireless equipment, in the area over an air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Telephone System

STEERING WHEEL CONTROLS

Four system control switches are situated on the left-hand side of the steering wheel, duplicating the functions of buttons on the audio panel. These switches provide finger-tip control of audio, telephone and voice activation systems whilst driving.

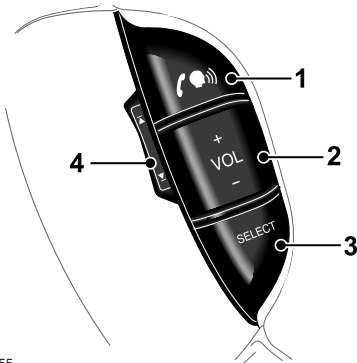

JAG0655

Switch	Function
1	Start voice function, or mute where voice not fitted. Answer phone call when ringing. Send/End when in Phone mode.
2	Increase/decrease volume.
3	Hold for two seconds to select Phone Ready mode. Press and release to cycle through FM, AM, CD and CD Changer.
4	In Phone mode, scroll through stored numbers. In Audio mode, scroll through radio stations or CD tracks. Press and hold to select next strong radio station or next CD.

Note: Switches 2 and 4 are rocker switches.


Telephone System

PAIRING YOUR PHONE

Before use, your mobile phone must be connected or paired with the vehicle's Bluetooth system.

Vehicles with touch-screen

Follow these steps to pair your phone with the vehicle:

- Switch the vehicle's ignition ON (position **II**).
- Press the  button, to the left of the touch-screen.
- Ensure that no phone is currently connected to the car.
- The message **Discover Me** will be displayed, to confirm that the system is ready to pair with a mobile phone.
- Switch on your mobile phone's Bluetooth connection, using the phone's menu. (See your phone's manual for more information).
- Select search for other Bluetooth devices or Audio Accessories from your mobile phone's menu.
- Select Jaguar in your phone's paired device list, in order to connect to the vehicle's Bluetooth system.
- Enter the Passkey on your mobile phone (the Passkey is 1313).
- After a short delay, the messages **Registered** followed by **Phone Connected** will confirm that the phone and vehicle are paired.


Note:

- *When a mobile phone is paired to the vehicle and the Bluetooth connection is established, at least one bar will be displayed next to the antenna icon (depending on the type of mobile phone used and whether or not it supports the Bluetooth signal strength feature). However, you will need to refer to your mobile phone's display to determine the strength of the network signal.*
- *If an incorrect Passkey is entered, your mobile phone should prompt you to enter the correct Passkey.*

Telephone System

Vehicles without touch-screen

Follow these steps to pair your phone with the vehicle:

- Switch the vehicle's ignition ON (position **II**).
- Press the  button on the audio panel.
- Ensure that no phone is currently connected to the car.
- **SIG****** will be displayed followed by **SIG*******.
- Switch on your mobile phone's Bluetooth connection, using the phone's menu. (Refer to the manual for of your specific phone).
- Select search for other Bluetooth devices or Audio Accessories from your mobile phone's menu.
- Select Jaguar in your phone's paired device list, in order to connect to the vehicle's Bluetooth system.
- Enter the Passkey on your mobile phone (the Passkey is 1313). **SIG** will be displayed initially.
- Once the vehicle and phone are paired, **SIG *** will appear on the audio panel.

Note: *If your mobile phone supports the signal strength feature, the Bluetooth signal strength (or number of *s) will be displayed.*

Once a mobile phone is paired with the vehicle, **SIG** will be displayed initially when the ignition is switched ON. **SIG*** will then be displayed, once the phone is detected.

If the phone is not detected within two minutes (after switching ON the ignition), the audio system will exit phone mode and revert to its previous audio mode.

Note:

- *Once a mobile phone is paired with the vehicle, **SIG*** (or if the mobile phone supports the signal strength feature, the signal strength according to the phone) will be displayed initially when the ignition is switched ON. If no phone is detected, the message **SIG****** or ********* will confirm that no phone is connected.*
- *If an incorrect Passkey is entered, your mobile phone should prompt you to enter the correct Passkey.*

Once a mobile phone is paired with the vehicle, the vehicle will look for this specific phone every time the ignition is switched ON, followed by the previously four paired phones.

Pairing other phones

Five mobile phones can be paired with the vehicle at a time. Once paired, the vehicle will look for the same phone each time the ignition is switched ON (position **II**): you do not need to manually pair the phone with the vehicle every time you switch the ignition ON.

The Bluetooth function of your mobile phone must be switched on when the ignition is switched ON in order for it to pair with the vehicle automatically.

If a different Bluetooth mobile phone is to be used with the vehicle, it must be paired manually, as described previously. This phone will then become the highest priority phone, which the system will look for each time the ignition is switched ON.

Telephone System

Disconnecting (unpair) a phone

To disconnect a mobile phone from the system, use the mobile phone's keypad. Refer to your phone's manual for more details.

RECONNECTING A PHONE

Once a mobile phone has been paired with the vehicle, Jaguar may be shown in the phone's list of Bluetooth devices (see your mobile phone manual for more information). If you intend to pair your mobile phone to multiple vehicles, it is advised that you change the name of your car from the default (e.g. Jaguar to your registration number).

If you manually unpair the phone, it is advisable to delete Jaguar from the list of Bluetooth devices before pairing it with the vehicle again.

PAIRING STRATEGY

It is possible to pair up to five mobiles with the Jaguar Bluetooth telephone facility. When an attempt is made to add a new mobile phone with five phones already paired, the system will delete the oldest connected mobile phone. All associated phonebook records will also be deleted prior to pairing the new mobile phone.

CONNECTION STRATEGY

Whilst the vehicle has the capability to pair up to five mobile phones, only one phone can be connected at any one time. Once the ignition is switched on, the vehicle will attempt to connect to the previously connected phone. If it is not available, it will attempt to connect to the next previously connected phone. The system will continue to search until a paired phone is connected.

***Note:** Searching for connection to the mobile phone will cease once a phone has been detected and connected to the system. If a new phone is paired and connected to the system, this will also cease the search as it will become the most recently connected phone.*


SILENT MODE

Certain mobile phones have a silent mode or profile, which prevents the handset from ringing when a call is received.

If the mobile phone is set to silent, it will also prevent the vehicle phone system from ringing.

Telephone Operation - Standard

AUDIO PANEL OVERVIEW

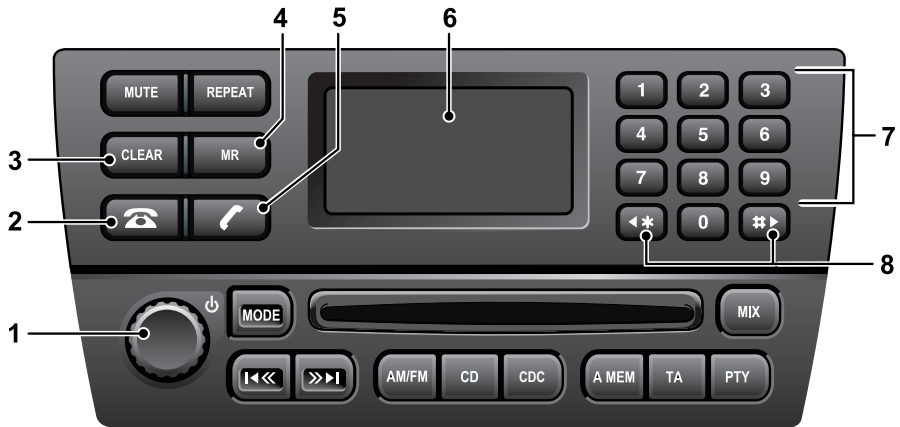

JAG0606

1. ON/OFF switch and volume control.
2. Phone mode button.
3. Clear/correct telephone numbers.
4. Phone memory recall button.
5. Phone send/end calls
6. Display.
7. Phone keypad - buttons **0** to **9** (except where touch-screen is fitted).
8. Scroll memory location.

Audio panel control functions

The audio panel controls are described below.

Volume control

During a call, the phone volume can be adjusted with the audio panel volume control or the steering wheel switches.

The volume will be memorised for future calls (this will not alter other audio volume settings).

Phone mode



This button will activate the phone mode, ready to make a call. The display will indicate that phone mode has been selected.

This function can also be controlled from the steering wheel: press and hold button **3**, see page 315.

Telephone Operation - Standard

Keypad



Press the digits to enter the required telephone number. Each key press will beep and the digits will be displayed on the audio panel.

The keypad can also be used in Memory Recall (**MR**), to enter a location number, or to scroll up/down the memory locations.

Clear



Press and release **CLEAR** to clear the last digit of a telephone number.

Press and hold **CLEAR** to clear all digits entered.

Send/end



Press this button to dial the entered telephone number. It is also used to end a call that is in progress.

Memory recall



Press to access the phone memory location number.

Either a memory location number can be entered from the keypad, or memory locations can be scrolled up and down from the keypad scroll keys.

This function can also be controlled using steering wheel button **4**, see page 315.

Press the upper or lower part of the control to seek up or down through the numbers in the phone memory.

Display messages

The following messages may be displayed:

- **CALL** - There is an incoming call.
- **CALLING** - A call is being established.
- **EMPTY** - Memory location is empty.
- **LOCATION** - Memory location number or prompt for memory location number.
- **NO SERVICE** - No cellular or Bluetooth service is available.
- **PHONE** - System entering phone mode.
- **Please Wait - phone book information loading** - A short delay will be experienced whilst information is transferred from your mobile phone.
- **SIG** - System Indicator Gauge: this indicates the current status of the Bluetooth telephone system. If your phone supports the signal strength feature, this information will be displayed.



Telephone Operation - Standard

RECEIVING A CALL



An incoming call automatically switches the sound system into the phone mode. The audio panel display will show **CALL** and the phone will ring through the vehicle's audio system.

If automatic answer has been set in your phone, the call will be automatically answered by your mobile telephone.

To answer:

Press  on the steering wheel or; press  on the audio panel.

To end:

Press  on the steering wheel or; press  on the audio panel.

Call line Ident

If the caller has the Call Line Ident (CLI) feature, **CALL** is shown on the audio panel display, followed by the caller's phone number and name (when available). The display may truncate lengthy names.

REJECTING A CALL

CLEAR

Press **CLEAR** on the audio panel to reject an incoming call.


MAKING A CALL

When making a call, there are two methods of dialling: keypad and memory search.

Keypad dialling

To dial:


Press and hold  on the steering wheel or;


press  on the audio panel.

PHONE will be displayed.

Key in the phone number on the audio panel keypad. The number will be displayed.


To connect:


Press  on the steering wheel or;

press  on the audio panel.

The display will show **CALLING**.

To end:

Press  on the steering wheel or;


press  on the audio panel.

Speed dialling

Note: Speed dialling selects the first nine locations stored in your phone's address book.

To dial:

Press and hold  on the steering wheel or;

press  on the audio panel.



PHONE will be displayed.

On the audio panel keypad, press and hold the required speed dialling memory location number **1** to **9**, which corresponds with locations 1 to 9 in your mobile phone's address book.

After three seconds, **CALLING** will be displayed.

Telephone Operation - Standard


To end:

Press  on the steering wheel or;
press  on the audio panel.

Note: *Speed dialling can only be used once your mobile phone's address book has been transferred to the vehicle's phone system. For more information, refer to page 328.*

MEMORY RECALL DIALLING

Using audio panel

Press  on the audio panel.

Phone will be displayed.



Press the **MR** button.

LOCATION will be displayed.

On the audio panel keypad, press required memory number **1** to **499**.



Note: *The location number of phone book entries stored on your mobile phone may vary from those stored in the vehicle phone book.*

To connect:

Press  on the steering wheel or;
press  on the audio panel.

The display will show **CALLING**.

To end:

Press  on the steering wheel or;
press  on the audio panel.



Using steering wheel controls

Press and hold button **3**, see page 315.

PHONE will be displayed.



On the audio panel keypad, press required memory number **1** to **749**.

To connect:

Press  on the steering wheel or;
press  on the audio panel.

The display will show **CALLING**.

To end:

Press  on the steering wheel or;
press  on the audio panel.

LAST NUMBER REDIAL


Note: *Last number redial is only supported on systems fitted with the touch-screen.*

Telephone Operation - Touch-Screen

OVERVIEW

On vehicles fitted with the navigation system, the audio panel keyboard is replaced with touch-screen controls.

Control of the system via the steering wheel controls is unchanged, as described in the previous section.

With the ignition switch in position **I** or **II**, pressing the  button to the left of the screen will display the following screen controls.




JOL3513


The message window to the right of the screen will provide information on the telephone system's status. If the phone is connected correctly then the display will show **Phone Connected**, or if the phone is not connected to the vehicle, **Discover Me** will be displayed.

MAKING A CALL





JOL3513

Calls are made by using the digit and  touch-controls, or the memory functions described on page 324.

Erroneous digits can be deleted by touching .

The number called is displayed at the top of the screen.

The screen will display **Calling** when establishing a call. On connection, **Connected** is displayed and  is illuminated.

If the ignition is switched off, the call will be maintained and the touch-screen can be manually turned off. Touch  to terminate the call.

Telephone Operation - Touch-Screen

RECEIVING A CALL



JOL1781

On receipt of a call, the screen will display **Incoming Call** regardless of the audio system operating mode.

This is accompanied by **Accept** and **Cancel** touch-controls, enabling the user to answer the call or cancel it.

END CALL FUNCTION

A telephone icon is displayed whenever a telephone call is in progress.

The icon is displayed during an incoming call and during an outgoing call.


The telephone call may be ended by touching the icon.



Telephone call is in progress. Call may be ended by touching this icon.

OTHER FUNCTIONS

Using the menu

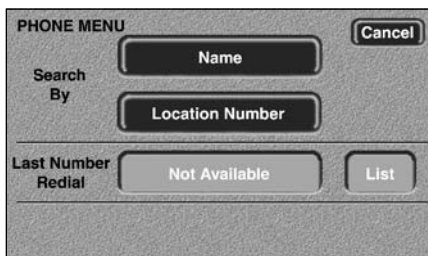


JOL3495

Touch **Menu** to display the above screen. This screen provides access to memory functions and last number redial.

When the vehicle is in motion, it will not be possible to use the **Name** touch-control.

Last number redial

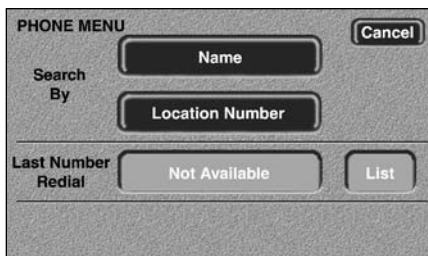

JOL3495

The **Last Number Redial** memory function enables the user to quickly recall the previously used number.

Use of the **List** touch-control will display the last ten numbers dialed.

Note: *Last Number Redial recalls the last ten numbers called from your mobile phone, if your phone supports this feature.*

With certain mobile phones, the last number redial may work in reverse order. This is the way the phone sends the call stack to the vehicle's system.

Telephone Operation - Touch-Screen

Searching by Name


It is possible to list names stored in the vehicle phone book, whilst the vehicle is in motion.



WARNING:

Jaguar recommends that the driver does not use this feature whilst the vehicle is in motion. Give full attention to driving - safe driving is your first responsibility.

Location number

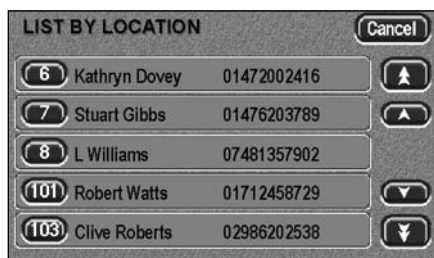

The **Location Number** screen enables the user to search the phone memory by location.

Upon pressing the location number touch-control, a location number is requested. A list of locations is then displayed as above (dependent upon those stored in the memory). The desired location may then be dialled by touching the location number.

When the vehicle is in motion, the scroll touch-controls at the right-hand side of the touch-screen will be inhibited for safety.

Note:

The location number of phone book entries stored on your mobile phone may vary from those stored in the vehicle phone book.

Telephone Operation - Touch-Screen

Name entry



JOL1782


On the phone menu, select **Name**. The screen above will be displayed. Touch the required alphabetical group to narrow your search, then scroll through the list.

List by name



JOL2719

With the memory list displayed above, scroll through the list of names using the arrowed buttons. Touch the desired list number to make the call.

Use  to terminate the call.

ADDITIONAL INFORMATION



Continuity of calls

Whilst in a call in hands-free mode, the call remains connected if the vehicle ignition is turned OFF (position 0). When the call ends, another call cannot be made or received through the vehicle system unless the ignition switch is turned to position I or II.

DTMF tones

Whilst in a call you can transmit a DTMF (Dual Tone Multi-Frequency) tone, to remotely control equipment such as an answering machine. Key in the appropriate numbers on the audio panel keypad. The numbers entered will be displayed on the audio panel.

Scratch pad

During a call, the audio panel keypad may be used to store a number to be dialled once the current call is terminated. The number entered will be displayed on the audio panel: once the current call is terminated, the number can be dialled by pressing  on the steering wheel, or  on the audio panel.

Note: DTMF tones may be heard when entering a number.

Changing a phone number

When making a call, you can change the phone number shown on the audio display using the CANCEL button (audio panel) or C (touch-screen).

A momentary press erases any single digit, a long press erases the complete number.

Telephone Operation - Touch-Screen

PIN feature

The PIN feature is not supported by the Bluetooth telephone system.

Therefore, please ensure that your mobile phone is not locked by a PIN whilst it is connected to the Bluetooth telephone system.


Phone Book

PHONE BOOK TRANSFERS

Any phone numbers stored in your mobile phone book can be copied to the vehicle's phone system.

In most cases, this will happen automatically when you pair the phone with the vehicle. Refer to www.jaguar.com to check compatibility.

However, with some mobile phones, you may need to manually transfer the phone book.

- Make sure the vehicle ignition is ON and the vehicle and phone are paired.
- Press the  button on the audio panel or touch-screen surround.
- Switch OFF the ignition and wait for your phone to disconnect from the vehicle, to allow the vehicle Bluetooth system to complete the download process.

Updating the phone book

Once the phone book has been copied to the vehicle, it will be updated automatically if your phone supports automatic phone book download.

Certain phones allow single or multiple phone book entries to be transferred to the vehicle (refer to the manual of your specific mobile phone for more information). These entries will be added to the end of the vehicle phone book.

Note: *The location number of phone book entries stored on your mobile phone may change once they are transferred to the vehicle phone book: location numbers are not preserved when phone books are copied via Bluetooth.*

If you wish to pair a new phone with the vehicle and replace the current vehicle phone book, follow the relevant pairing procedure on page 316.

Phone Book

Phone book capacity

Mobile Phone Configuration	Vehicle Phone Book Capacity
Phone supports phone memory and SIM card downloads.	750 (phone memory takes priority over the SIM card).
Phone only supports phone memory downloads.	750 (from phone memory).
Phone only supports SIM card downloads.	750 (from SIM card).
Phone doesn't support phone memory or SIM card downloads.	0.

The system can store a maximum of 750 entries, but this figure varies, depending on the type of mobile phone used.

Certain mobile phones store the phone book in two different areas: the SIM card and the phone memory. With some mobile phones, it is not possible to transfer addresses stored in one or both of these areas. The table above explains how this affects the number of entries that can be stored in the vehicle phone book.

Note: *Certain mobile phones do not allow phone book entries stored on the SIM card to be transferred via Bluetooth. However, it may be possible to transfer the SIM phone book to the mobile phone's memory, before copying it to the vehicle phone book. Refer to your mobile phone manual for more information.*

Phone book suffixes

With some mobile phones, it is possible to store phone numbers in different categories:

- Work/Office
- Mobile
- Home.

If numbers are stored in your mobile phone in these categories, the vehicle phone book will add a suffix to each entry: WK (work/office), MN (mobile) or HM (home).

This enables the system to handle contacts who have several different phone numbers.

Declaration of Conformity

EUROPEAN UNION DIRECTIVES CONFORMANCE STATEMENT



Hereby, Jaguar Cars Limited declares that this product is in compliance with:

- The essential requirements and other relevant provisions of Directive 1999/5/EC.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Jaguar Cars Limited is under licence. Other trademarks and trade names are those of their respective owners.

EXPORT CONTROLS

This product contains commodities, technology or software exported from the United States in accordance with the Export Administration regulations. Diversion contrary to U.S. or Canadian law is prohibited.

FCC/INDUSTRY CANADA NOTICE

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: LHJ ***

IC: 2807E ***

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.*

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Re-orient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

JaguarVoice

Introduction

JaguarVoice provides a safe and convenient way of controlling the following vehicle systems (where fitted):

- Sound system (radio, single CD player and CD changer – as applicable)
- In-car telephone
- Climate control system (front user only unless - zone climate control is fitted)

The system is controlled by the Voice button on the left-hand side of the steering wheel and also in the rear multimedia switchpack (if fitted).

See the illustrations on the following pages.



WARNING:


Concentrate on the current road conditions and driving the vehicle at all times. If the voice system does prompt you for a response it will repeat that prompt twice giving you up to 15 seconds to respond. If driving conditions mean that you are unable to respond, the voice system will timeout, cancel the task and will not make any changes to the vehicle settings.

Language and accent

Commands are given in English using a natural speaking voice, without pausing between words. Most accents are understood without difficulty, but the system also allows you to train the voice system with your voice if required, see **Voice Training** on page 345.

JaguarVoice

Steering wheel voice switches

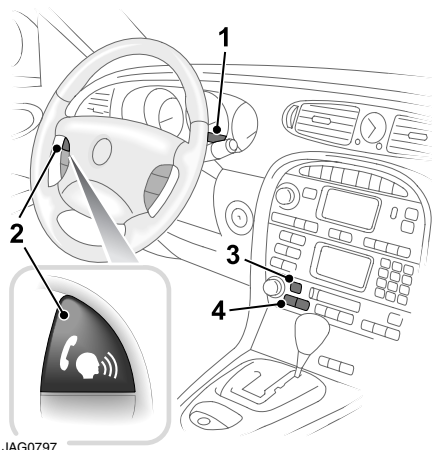

1. Message centre display.
2. Voice button.
3. Mode button, on radio.
4. Seek/tuning control, on radio (used to commence voice training).

The rear switchpack (where fitted) located in armrest



1. Volume – left.
2. Headphone mode – left.
3. Cabin mode.
4. Voice text.
5. Headphone mode – right.
6. Volume – right.
7. Voice button – right.
8. Voice button – left.

JaguarVoice

Using the System

Initialisation

JaguarVoice is ready to operate ten seconds after the ignition switch is turned to position **II**, the system is enabled.

Driver voice controls

The voice button is on the left-hand side of the steering wheel, see **Steering wheel voice switches** on page 332.

Some examples of using the system are provided on the following pages for you to try.

Note: *The system will not operate until the radio security code has been entered.*

Rear occupant voice controls

There are two voice buttons on the rear multimedia switchpack, for example see **Voice button – left** on previous illustration.

These can be operated in two different modes:

Cabin mode – When the cabin mode button is pressed, or when the light on the button is illuminated, then the rear occupants can control the audio playing through the cabin speakers. Simply press the voice button and give a command.

Headphone mode – When the LEFT button is pressed, or when the light on the button is illuminated, then the left occupant is in headphone mode (the control of the right-hand headphones is identical).

In headphone mode, each occupant can control the audio in their own headphones by using their respective voice button, and issuing a voice command.

JaguarVoice

First try some of these commands:

Tuning the radio

Your instructions to the system	System response
Press and release the voice button	'Beep'
After the beep say 'Radio tune 98.9 FM'	The system responds with: 'Radio tune 98.9 FM' and tunes the radio to this frequency

Now try entering a frequency of your own preference, see **How to Say Numbers** on page 339.

Storing a nametag to this station

Your instructions to the system	System response
Press and release the voice button	'Beep'
After the beep say 'Radio store name'	The system responds with: 'Radio store name, Name Please'
Press and release the voice button	'Beep'
After the beep say 'My favourite station'	The system responds with: 'My favourite station, please say yes or no'
Press and release the voice button	'Beep'
After the beep say 'Yes'	After a few seconds the system responds with: 'My favourite station stored'

Recalling the nametag you have just stored

Your instructions to the system	System response
Press and release the voice button	'Beep'
After the beep say 'Radio tune my favourite station'	The system responds with: 'Radio tune my favourite station' and tunes the radio to the frequency stored with this name

Now try storing a nametag of your choice, and then recalling it.

JaguarVoice

Entering a phone number

Your instructions to the system	System response
Press and release the voice button	'Beep'
After the beep say ' Phone enter zero one six one four '	The system responds with: 'Phone enter oh one six one four, Continue entering digits or say dial, store, correction or cancel'
Press and release the voice button	'Beep'
After the beep say ' nine six oh nine nine eight '	The system responds with: nine six oh nine nine eight, Continue entering digits or say dial, store, correction or cancel'
Press and release the voice button	'Beep'
After the beep say ' Cancel '	The system responds with: 'Enter cancel'

Now try entering a phone number of your choice and try some of the following commands:

1. **DIAL**, dials the number entered.
2. **STORE**, stores a nametag of your choice (as in the above example with **RADIO STORE NAME**).
3. **CORRECTION**, deletes the last string of digits entered, and allows you to re-enter them.
4. **CANCEL**, cancels the command.


Note: When entering a number of your choice, remember numbers can only be given as single digits, but you can enter the digits in as many groups as you like.

Also, when the system has read out the numbers you have entered, you do not have to wait for the 'Continue entering digits' prompt. Simply press the voice button and continue with your dialogue.

JaguarVoice

Operating tips

- After pressing the voice button, wait for the end of the single listening beep before giving the command.* 'LISTENING' will be displayed on the instrument pack or on the rear multimedia switchpack.
- Face forward and speak naturally, as if you were talking to a passenger or on the phone.
- Note the structure of the commands; remember this rather than trying to remember all the commands.

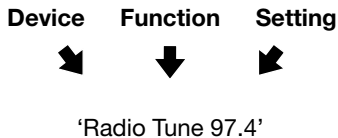

- If you forget any of the commands, try saying 'VOICE HELP'. The system will then give you a list of help menus available, from which you can choose the appropriate one for the command you need.
- The Voice system will repeat the command back to you and display it on the message centre or rear multimedia switchpack. The command will then be performed.
- If you hear a double beep when you give a command, press the voice button and try again.*

* A single beep denotes when the voice system is listening for a command. A double beep denotes when the system has stopped listening, due to an error or when an incorrect command has been given.

Command confirmation

After a command has been given, the system will give feedback of what it understood. The verbal feedback can be switched on or off by saying 'VOICE FEEDBACK ON' or 'VOICE FEEDBACK OFF'. Verbal feedback for help commands, directory listings, prompts, error messages and nametags cannot be switched off.

For the 'PHONE DIAL' commands, the system will prompt for confirmation before making the call. This confirmation can be switched on or off by saying 'PHONE CONFIRMATION ON' or 'PHONE CONFIRMATION OFF.'

For each voice command there is an associated visual confirmation, which is shown on the front instrument pack or on the rear multimedia switchpack.

Voice system prompts

During some commands and for voice training, you will be asked by the system for a reply. In such cases you must press and release the voice button then speak after the beep. The system will remind you twice so don't worry about having to respond to the system immediately.

JaguarVoice

Nametags

Nametags are a unique name or phrase of your choice which can be used to recall a radio station or dial a phone number.

For radio commands, 'PHONE DIAL <nametag>' is used to select a station that has been previously stored using the 'RADIO STORE NAME' command.

For phone commands, 'RADIO TUNE <nametag>' is used to dial a phone number that has been previously stored using the 'PHONE ENTER' or 'PHONE STORE' command. Phone numbers held in the voice system memory are quite separate from numbers held in the phone system memory (To call a number held in the phone memory, use the 'PHONE DIAL MEMORY <number>' command).

A spoken list of current nametags can be heard by giving the appropriate directory command.

- 'RADIO DIRECTORY'
- 'PHONE DIRECTORY'

There are also commands for deleting either individual names in a directory, or a complete directory, see **Voice Command List** on page 340.

Hints on storing nametags

- You will have greater success of recalling, and remembering, nametags of two, three, or four words in length. Although nametags of one word in length are also acceptable.
- For best results, store nametags in a quiet environment, i.e. with the windows and sunroof closed, try not to be travelling at speeds above 100 km/h (60 mph), and ask other occupants to be quiet.
- Try not to store a nametag that sounds similar to a nametag already stored, or to any of the commands recognized by the system.

In addition, for phone nametags, do not use numbers, and for radio nametags, try not to use radio frequencies.

Volume level adjustment

The verbal feedback volume level can be adjusted independently for the JaguarVoice system. To adjust, operate the sound system volume control or the steering wheel volume control whilst the voice system is being used. The speaker volume level can also be adjusted within the volume preset menu of the audio system.

JaguarVoice

Some useful notes:

- Only one person at a time can use the voice system.
- Excessive noise, for example while driving with windows open or in demist mode, may cause voice command misrecognition. If it is too noisy to use the phone, it is likely that voice commands will not be recognised.
- Voice commands cannot be given while hands-free phone call or radio traffic announcement is in progress.
- If the voice button is pressed whilst a radio traffic announcement is in progress, the announcement will be cancelled. Press the voice button again to start a voice session.
- While 'LISTENING' is displayed on the message centre, the command can be cancelled by pressing the same voice button (could be a rear voice button) that was used to start the voice session, except when using the 'PHONE ENTER' command. To cancel a 'PHONE ENTER' voice session either say 'CANCEL' when 'LISTENING' is displayed or press the voice button and after the end of the beep say 'CANCEL'. During a store nametag session, if the voice button is pressed and released during 'LISTENING', the system will cancel after up to two seconds.
- Voice feedback can be interrupted by pressing the voice button that was used to start the voice session, whilst the feedback is playing.
- After starting to speak, the command must be completed within ten seconds.
- During a voice command the audio system and direction indicator ticking will be muted.
- The voice session will be cancelled if an alternative message requires the display/speaker (e.g. incoming phone call or radio traffic announcement).

JaguarVoice

How to Say Numbers

Numbers in voice commands must be given as shown below. Either 'zero' or 'oh' can be used for '0', most users will find that 'zero' gives better results. For information about specific commands, see **Voice Command List** on page 340.

Radio stations

Frequencies are said as in the following examples:

- 'Tune five thirty one AM', or 'Tune five thirty one' (531).
- 'Tune nine hundred' (900).
- 'Tune fourteen forty' (1440).
- 'Tune fifteen oh three AM' (1503).
- 'Tune ten eighty' (1080).
- 'Tune eighty nine point nine FM' or 'Tune eighty nine point nine' (89.9).
- 'Tune ninety point zero' or 'Tune ninety' (90.0).
- 'Tune one hundred point five' (100.5)
- 'Tune one oh one point one FM' (101.1).
- 'Tune one oh eight point oh', 'Tune one oh eight point zero', or 'Tune one oh eight' (108.0).

Disc and track numbers

For CD commands, say disc and track numbers as in the following examples:

- 'Disc one' (1).
- 'Disc six track ten' (6, 10).
- 'Track twenty five' (25).
- 'Track forty seven' (47).

Phone numbers

All phone numbers are said as single digits, as in the following example.

Double, Triple and Treble are also acceptable commands if preceding a single digit. Plus (+), Star (*) and Hash (#) are acceptable as the first digit of a number.

- 'Dial zero one two zero three four zero two one double four' (01203 402144).

When using the Phone Enter command, the first entry must be between 2 – 16 digits, then, 1 – 16 digits to a maximum of 32 in total.

Temperatures

In climate control commands, say temperatures as in the following examples:

- 'Temperature seventy two' (72).
- 'Temperature eighty' (80).
- 'Temperature twenty one point five' (21.5).
- 'Temperature nineteen point zero', 'Temperature nineteen point oh' or 'Temperature nineteen' (19.0).

JaguarVoice

Voice Command List

Certain commands are only available to the driver, these are indicated in the following list.

Key

() denotes an option, i.e. (ON/OFF) use either ON or OFF with this command.

< > indicates where to say a number or stored nametag.

[] denotes an optional word, e.g. 'VOICE [PLAY] DIRECTORY' can be given as 'VOICE DIRECTORY', or 'VOICE PLAY DIRECTORY'.

(front use only) – indicates this command is not available to rear occupants.

General commands

- HELP
- VOICE HELP
Lists all voice command help messages available.
- VOICE MEMORY HELP (front use only)
- VOICE FEEDBACK (ON/OFF)
- PHONE CONFIRMATION (ON/OFF)
Switches on or off the system confirmation prompt before making a call when using the PHONE DIAL or PHONE MEMORY DIAL command.
- VOICE [PLAY] DIRECTORY (front use only)
- VOICE DELETE MEMORY (A/B) (front use only)
- VOICE DELETE DIRECTORY (front use only)

JaguarVoice

Radio commands

- RADIO PLAY or RADIO ON
Turns the sound system on.
- RADIO OFF
Turns the sound system off. Use this command to turn off the CD or CD changer.
- RADIO SEEK [UP]
- RADIO SEEK DOWN
- RADIO TUNE <frequency> [MEDIUM WAVE/LONG WAVE/FM]
Tunes to the frequency given in the command.
See **How to Say Numbers** on page 339.
(The radio will not respond to Long Wave commands in Australia and New Zealand.)
- RADIO TUNE <nametag>
- [RADIO] [TUNE] PRESET <preset number>
Selects the stored station corresponding to the preset number (1 to 9) given in the command.
- [RADIO] [TUNE] [BAND] (MEDIUM WAVE/LONG WAVE/FM)
- RADIO TRAFFIC INFO (ON/OFF)
Turns on or off the Traffic Announcement (TA) feature.
- RADIO STORE NAME
Stores the currently selected station, with a nametag of your choice. See **Storing a nametag to this station** on page 334. A total of 20 nametags can be stored.

- [RADIO] STORE PRESET <preset number>
Stores the currently selected station to the preset given in the command.
Note: The sound system must be in radio mode before giving the 'RADIO STORE NAME' or 'RADIO STORE PRESET' command.
- RADIO AUTOSTORE
- RADIO DELETE <nametag>
- RADIO DELETE DIRECTORY
Deletes all currently stored radio nametags.
- RADIO [PLAY] DIRECTORY
- RADIO HELP
- RADIO MEMORY HELP

Single CD commands (where fitted)

- CD PLAY or CD ON
- CD [PLAY] TRACK <track number>
See **How to Say Numbers** on page 339.
- CD MIX TRACKS
This will play the tracks of the current disc in a random order.
- CD MIX OFF
- CD HELP

CD changer commands (where fitted)

- CHANGER PLAY or CHANGER ON
- [CHANGER] [PLAY] DISC <disc number>
- [CHANGER] [PLAY] TRACK <track number>
See **How to Say Numbers** on page 339.
- [CHANGER] [PLAY] DISC <disc number> TRACK <track number>

JaguarVoice

- CHANGER MIX TRACKS
This will play the tracks of the current disc in a random order.
- CHANGER MIX ALL
This will play all the tracks and discs within the CD changer in a random order.
- CHANGER MIX OFF
- CHANGER HELP

Generic track commands

These commands play the current or previous CD, MD or Changer.

- [PLAY] TRACK <track number>
- MIX TRACKS
- MIX OFF

Phone commands (where fitted)

Note: *In noisy conditions, for example, in heavy rain or driving at high speed on a rough road surface, use the PHONE ENTER command, entering the number in several groups for improved recognition.*

- PHONE (ON/OFF)
- [PHONE] ENTER <2 – 16 phone digits>

See **How to Say Numbers** on page 339.

The system responds to this command by repeating the phone number back to you and then giving you the options below.

Remember to press the voice button to continue with one of the options.

- <more digits>
- DIAL
- STORE (give a *nametag* when prompted as in RADIO STORE NAME, see **Storing a nametag to this station** on page 334.
- CORRECTION
- CANCEL

For help, see **Entering a phone number** on page 335.

A total of 40 nametags can be stored.

- (PHONE DIAL/DIAL) <phone number>
- See **How to Say Numbers** on page 339.
- [PHONE] REDIAL
 - [PHONE] DIAL <nametag>

Calls the phone number stored with the nametag given.

JaguarVoice

- [PHONE] DIAL MEMORY <memory location number>
Calls the phone number stored in the phone memory location given.
See **How to Say Numbers** on page 339.
Memory numbers 1 – 100 refer to numbers stored in the phone memory and numbers 101 – 249 are numbers stored in the SIM card.
- PHONE STORE <phone number>
Allows you to store a nametag to the number given in the command.
The system will prompt you with 'NAME PLEASE', press and release the voice button and give a nametag of your choice, as in the RADIO STORE NAME. See **Storing a nametag to this station** on page 334.
A total of 40 phone nametags can be stored.
See **How to Say Numbers** on page 339.
See **Nametags** on page 337.
- PHONE [PLAY] DIRECTORY
- PHONE DELETE <nametag>
- PHONE DELETE DIRECTORY
Deletes all currently stored phone nametags.
This does not affect numbers stored in the phone memory.
- PHONE CONFIRMATION (ON/OFF)
- PHONE HELP
- PHONE MEMORY HELP

Note:

- When an outgoing phone call is terminated, the sound system will remain in phone mode. To change to another mode, give the appropriate voice command.
- The voice system is inactive while a phone call is in progress.

Automatic climate control commands (where fitted)

- CLIMATE CONTROL ON
- CLIMATE CONTROL OFF
- [CLIMATE CONTROL] AUTOMATIC [ON]
- [CLIMATE CONTROL] TEMPERATURE <temperature> [DEGREES]
The temperature can be given in Celsius or Fahrenheit, in the range 17 to 89 degrees Celsius (61 to 89 degrees Fahrenheit), in increments of 0.5 degree Celsius (1.0 degree Fahrenheit).
See **How to Say Numbers** on page 339.
Note: Do not say the word 'Celsius' or 'Fahrenheit'.
- [CLIMATE CONTROL] TEMPERATURE (HIGH/LOW) (front use only)
- [CLIMATE CONTROL] RECIRC [ON] (front use only)
Recirculation mode, see the owner's handbook for help.
This command will not be executed if the climate control system is in defrost mode.

JaguarVoice

Automatic climate control commands (continued)

- [CLIMATE CONTROL] BALANCE [ON]
When the driver gives this command the temperature of all zones are set to the same as the driver's side temperature. When a rear occupant gives this command the temperature of both rear zones will be set to the same.
- [CLIMATE CONTROL] DEFROST [ON]
(front use only)
- CLIMATE CONTROL HELP
- REAR CLIMATE CONTROL OFF

Manual climate control commands (where fitted)

- [CLIMATE CONTROL] RECIRC [ON]
Switches the climate control system to recirc mode (see the owner's handbook for details). This command will be disabled if the climate control system is in defrost mode.
- CLIMATE CONTROL HELP
Gives spoken information about the climate control voice commands.

JaguarVoice

Voice Training

The voice system is able to interpret most English speakers without difficulty. If, however, you find that commands are sometimes not being recognised, you can train the voice system to recognize your voice. The voice system can be trained for two people using voice memories A and B.

After Voice Training, the system will automatically recognise the users whose voices are held in the voice memory. The system can still be used by other users, with no loss of recognition.

Training procedure

Training can only be carried out whilst sitting in the driver's seat.

Give the command 'VOICE DIRECTORY', this will list the memories used and tell you if they are stored with a nametag.

If no memories are in use, either memory can be used.

If both memories are in use and you wish to overwrite one of the memories, select the memory you wish to overwrite.

- First, select which voice memory to train.
- Position the vehicle, with the sunroof and windows closed, in a reasonably quiet outdoor location.
- Sit in the driving seat with the engine running, the handbrake or Electric parking Brake (EPB) on and the transmission in Park or Neutral.

- Press and release the MODE button on the radio (adjacent to the volume control). Mode level 1 will display. Press the MODE button repeatedly until 'ADV MODE N/Y' is displayed. Turn the volume control to select 'ADV MODE YES' Press the MODE button repeatedly until 'VOICE A' is displayed. To select 'VOICE B' press the MODE button again.
- With 'VOICE A' or 'VOICE B' displayed on the radio press the seek up control to start Voice Training. Once you have selected which memory to use, the system gives verbal instructions about the training procedure.
- Follow the instructions given by the system. See **Training Command List** on page 346.
- To cancel Voice Training at any time press and hold the voice button for five seconds.

Note:

- *Some of the phrases which the voice system asks you to repeat during Voice Training are not valid voice commands, these are used to collect specific phonetic phrases required by the system.*
- *If the user does not speak after a phrase prompt, the voice system will provide two reminder prompts then cancel Voice Training.*
- *The voice system turns off the phone whilst in training mode, so it will need to be turned on manually after Voice Training has finished.*

JaguarVoice

Training Command List

The 'sounds' of the following training commands are required for the voice system to 'learn', although some of the equipment (TV, navigation, telephone etc.) stated in the commands may not be fitted to a particular vehicle.

1. display select twilight colours
2. prefer toll roads
3. radio ten oh eight AM
4. store preset five
5. tune one oh five point two FM
6. telephone enter eight four six three seven
7. select one zero four point nine
8. CD changer play disc one track seventy six
9. climate temperature twenty five point oh degrees
10. radio one oh eight point zero
11. phone enter triple three treble zero
12. map traffic information off
13. voice guidance on
14. dial memory two hundred
15. teletext page eight four seven
16. radio tune thirteen ninety five AM
17. select fifteen eighty four medium wave
18. changer play CD six track sixty nine
19. navigation select zoom level eleven
20. telephone dial memory fifty two
21. climate control balance on
22. avoid major roads
23. map show complete route
24. navigation clear next waypoint
25. radio tune one oh seven point one FM
26. screen select automatic colours
27. repeat last instruction
28. phone enter gate double three one oh
29. TV channel down
30. television seek up
31. radio tune two sixteen long wave
32. select twelve thirty three medium wave
33. voice delete memory A
34. climate control seventeen point zero degrees
35. navigation show current position
36. CD changer play CD two track nineteen
37. map zoom out maximum

JaguarVoice

Trouble-shooting Error Messages

In addition to the voice command prompts given by the system, the following error messages may be displayed on the instrument panel display. Most of these messages are accompanied by an advisory double beep.

Voice Command Group	Message	Meaning
General	VOICE NOT READY	The voice system is initialising (when ignition is first turned on). It takes the voice system approximately ten seconds to initialise.
	NO SPEECH DETECTED	<p>The voice system has not heard any speech.</p> <ul style="list-style-type: none">• Ensure that the command is given after the end of the beep.• Ensure that the command is given within a maximum of five seconds from the end of the beep. <p>Note: <i>Be sure you know what to say before pressing the Voice button.</i></p> <p>If this error is displayed for all commands given this may indicate a fault with the microphone or microphone wiring, consult your Jaguar Dealer for assistance.</p>
	COMMAND CANCELLED	Displayed if the user cancels a voice session during the LISTENING period or another system interrupts the voice session (i.e. incoming phone call or radio traffic announcement).

JaguarVoice

Voice Command Group	Message	Meaning
General (continued)	COMMAND NOT RECOGNISED	<p>The voice system has failed to recognise your command.</p> <ul style="list-style-type: none"> • Ensure that the command format is valid, see Voice Command List on page 340. • Ensure that the command is given after the end of the beep. • Look forward and speak clearly without pausing between words and at a level appropriate to the ambient noise level; imagine you are making a hands-free phone call. • Ensure that the ambient noise level is not excessive, for example, windows open or demist on. <p>Note: <i>If it is too noisy to use the phone, it is likely that voice commands will not be recognised.</i></p> <ul style="list-style-type: none"> • If optional words of the command have been omitted, then the command should be tried with these in place. • If a number of commands have been given in rapid succession resulting in the message 'COMMAND NOT RECOGNISED' to be displayed, then allow the system to recover (approximately one minute) before trying the command again. • If the system consistently fails to recognise commands, the voice training procedure should be carried out to improve the recognition response for the speaker.

JaguarVoice

Voice Command Group	Message	Meaning
Nametags (continued)	STORE FAILED	<p>Displayed when the voice system fails to store a nametag.</p> <p>Possible reasons could be that the nametag is too long or there is too much noise. Try the command again. If the error persists, try storing the nametag under quiet conditions such as with the vehicle parked and the windows closed.</p>
Phone	CONNECT PHONE TRY AGAIN	<p>If the GSM phone is in its cradle but voice system keeps saying 'dial not accepted, please connect phone and try again', then the phone handset may not be correctly attached to its storage cradle. Try re-attaching the phone handset. If the problem persists, the phone may be incorrectly reporting its cradle status. Try powering the phone handset off and on to resolve the issue.</p>
Voice Training	SET HANDBRAKE TO CONTINUE	<p>This text message is displayed with its associated verbal feedback when the electronic EPB is released during Voice Training. To continue voice training the brake must be re-applied.</p>
	VOICE TRAINING UNSUCCESSFUL	<p>This text message is displayed with its associated verbal feedback if the voice system could not save the training model recorded. If this problem occurs, please turn the ignition off, wait five seconds, and turn the ignition back on. Please check that there is no abnormal/excessive noise entering the vehicle interior and try running the Voice training procedure again. If the voice system continues to exhibit this error, consult your Jaguar Dealer for assistance.</p>

JaguarVoice

Voice Command Group	Message	Meaning
Nametags	RADIO NOT IN TUNER MODE	Displayed when the user tries to store a radio nametag and the radio has not been placed in tuner mode, for example playing a CD.
	NAMES TOO MUCH ALIKE	<ul style="list-style-type: none"> This response will be received when storing a nametag if the nametag being given has already been stored. This can be confirmed by giving the RADIO DIRECTORY or PHONE DIRECTORY command. If this response is received and the nametag has not been used already, then it is too similar to an existing nametag or voice grammar and an alternative should be used.
	SPOKE DURING LISTENING TONE	Displayed when user utters a radio or phone nametag while the beep is playing. Please wait for the end of the beep then say the nametag.
	DIRECTORY FULL	The user has tried to add a nametag to a directory that is full. The voice system can store up to 40 phone and 20 radio nametags.
	DIRECTORY EMPTY	Displayed when a RADIO DIRECTORY, PHONE DIRECTORY or VOICE DIRECTORY command is given and no nametags have been stored in the associated directory.
	NAMETAG TOO LONG	The nametag given is too short (so as not to mistake the nametag for inadvertent noise). If you experience this error please provide a longer nametag.
	STORE CANCELLED	Displayed and associated verbal response is provided when a nametag storage session is cancelled by the user.

Index

Adaptive cruise control	162	Audio system	
ACC failure	167	audio setup	296
automatic switch off	165	CD changer	308
changing the gap	164	CD control	305
changing the set speed	163	change audio source	297
detection issues	166	digital signal processing	297
driving with ACC active	165	radio broadcast data systems (RBDS). 285	
entering the follow mode	164	radio operation	295
forward alert	167	single CD player operation	305
low speed automatic switch off	165	steering wheel controls	284
overriding the set speed/follow mode. 165		Autolamps	133
resuming the set speed/follow mode . 165		Automatic car wash	266
setting the vehicle speed	163	Automatic speed limiter	168
Address book	328	Automatic transmission	157
Airbag		Battery	244
deactivation warning light	78	care	244
deployment	73	charging	247
disposal	81	leads disconnection/reconnection	246
driving position	78	reconnection alarm state	58
fault warning light	72	warning signs	244
front protection	74	Bluetooth description	312
occupancy sensing	76	Bulb renewal	216
side protection	75	access cover	216
Airbags	70	front direction indicators	218
Alarms and audible signals	56	front fog lamps	220
audible signals	56	headlamps	216
error audible signals	57	license plate	220
error flash signals	57	rear lamps	220
full alarm	56	side marker lamps	220
Anti-lock braking system (ABS)	171	side repeaters	219
Audible warnings	119	sidelamps	219
		Call volume	312
		Catalytic converters	183
		Changing a phone number	326
		Child and infant safety	82
		Child safety	82
		child restraints securing	86
		door locks	53
		ISOFIX restraint system	88

Index

Climate control	184	Cruise (speed) control	160
air distribution	186	changing the set speed	160
air recirculation	190	resuming the set speed	160
front controls	187	setting the vehicle speed	160
general points	185	Declaration of conformity	330
rear controls	191	Digital Radio	304
recommended operation	184	Dimmer switch	138
touch-screen	193	Disability modifications	72
air conditioning	199	Driving position	78
AUTO mode	195	DTMF tones	326
blower mute	199	Dynamic stability control	170
blower speed	199	Electric Parking Brake (EPB)	148
Celsius/Fahrenheit selection	196	Electrical accessories	269
climate options	201	Emergency starting	204
controls	194	Engine oil	235
displays	195	Entry/exit mode	98
dual temperature zones	196	EPB	148
external temperature	196	Fire extinguisher	231
heated screens and mirrors	198	First aid kit	175
latched air recirculation	197	Floor mat retention	34
manual air distribution	199	Foreign travel	175
ram air	200	Fuel and refuelling	178
rear climate panel	201	filling the tank	178
smog sensing	201	fuel capacity	179
switching off	200	fuel flap manual release	182
temperature selection	196	fuel gauge	113
timed air recirculation	197	Fuses	222
windscreen defrost/demist	198	checking and renewing	222
Clock setting	97, 290	fuse box locations	223
Compact disc changer		fuse positions	225
CD check sequence	308	Garage door opener	60
CD selection	309	before programming	61
CDC button	309	erase all programming	61
display panel	309	programming the vehicle	61
loading discs into the magazine	308	rolling code programming	62
mix	309	Gearshift interlock	41, 157
operation	308	General driving information	174
pause	310	General information	29, 282
repeat	310	Generator	245
seek up and down	309	Hazard warning	136
		Headlight convenience	57
		Health and safety	39

Index

Hood release	233	JaguarVoice	
Ignition switch	41	command confirmation	336
gearshift interlock	41	command list	340
to remove the key	41	how to say numbers	339
Immobilisation system	42	introduction	331
Inertia switch	203	language and accent	331
Instruments	111	nametags	337
warning indicators	114	operating tips	336
Interior features	149	rear switchpack	332
accessory power points	149	steering wheel voice switch	332
centre console	151	training	
horn	142	training command list	346
lighter and ashtray	149	training procedure	345
picnic tray	154	trouble-shooting error messages	347
rear armrest	152	useful notes	338
sun visors and mirrors	150	using the system	333
sunblinds	153	voice system prompts	336
sunglasses stowage	150	volume level adjustment	337
Introduction		Key transmitter	44
audio systems	275	battery renewal	45
automatic climate control	275	Keys	43
in-car telephone	277	additional keys	43
JaguarVoice	277	black-headed key	43
navigation system	276	green-headed valet key	43
rear multimedia	277	integrated key transmitter	43
screen cleaning	275	Lamp	
window tinting	277	bulb failure	135
Jaguar Dealers	30		
Jaguar diagnostic system	32		
data recording	36		

Index

Lamps		
approach	135	
battery saver	138	
daylight running	134	
dimmer switch	138	
direction indicators	135	
door guard/puddle	135	
entry/exit	137	
exit delay	133	
fog lamps	134	
hazard warning	136	
headlamp convenience	133	
headlamp levelling	134	
interior	137	
master switch	132	
reading/map	137	
rear interior	137	
Leather care	35	
Locking and unlocking	47	
alarms and audible signals	56	
auto-relocking	50	
central locking	48	
drive-away door locking	47	
global closing	49	
global opening	50	
luggage compartment	54	
single or two-stage	50	
smart locking	48	
Luggage compartment	110	
underfloor access	206	
Maintenance		
battery	244	
brake fluid	239	
check and top-up	235	
engine coolant	242	
engine oil	235	
power steering	238	
regular checks	232	
reservoir and dipstick locations	234	
tires	249	
windscreen wash fluid	241	
Memory setting	108	
recalling	108	
setting procedure	108	
Message centre	121	
messages	121	
Message list	123	
Mirrors	104	
door mirrors	104	
interior rear view mirror	105	
Mobile/portable telephones	33	
Modifications for the disabled	38	
Occupancy sensing	76	
Occupant protection	64	
Pairing	316	
Panic alarm	58	
Parkbrake	148	
Parking assist	139	
Parking brake	148	
Parts and accessories	30	
Passive arming	58	
Pedal adjustment	100	
Phone book	328	
Radio		
auto memory	293, 298	
automatic volume control	290	
band switch	292	
change audio source	292	
digital signal processing	291	
display panel	290	
mode level 1	290	
ON/OFF and volume	290	
presetting memorised stations	292	
priority programme type (PPTY)	287	
programme type (PTY)	287	
RBDS operation	286	
RBDS trouble-shooting guide	289	
reception	285	
seek and manual tuning	292	
source tone memory	292	
TA operation	287	
Radio frequency approval	46	
Radio set up	293	

Index

Rear impact protection	75	Sunroof	143
Rear Seat Entertainment (RSE) controls . 291		to open the sunroof	143
Regular servicing	32	Telephone	312
Reporting safety defects	37	PIN	327
Restraints system	70	Safety	313
Roof rack	175	Standard	319
Satellite radio	299	Making a call	321
receiving	300	Memory recall dialling	322
selecting stations	302	Receiving a call	321
subscribing	300	Rejecting a call	321
tuning information	302	System overview	312
Satellite Radio (SDARS)	299	Touch-screen	323
Seat belts	64	Making a call	323
Beltminder	66	Receiving a call	324
fitting	67	Tire pressure monitoring system	253
height adjustment	68	Tires	249
pregnant women	69	damage	261
Seats	92	renewal	261
adjustment	92	repair	261
front seat adjustment	92	snow chains	264
head restraint adjustment	93	uniform tire quality grades	263
rear seat adjustment	94	wear	261
seat heaters	95	winter/snow	264
Security code number	282	Touch-screen	275
Security features	58	Touch-screen controls	
battery reconnection	58	Last number redial	324
panic alarm	58	List by name	326
passive arming	58	Location number	325
Single CD player		Name entry	326
CD button	305	Touch-screen display	278
display panel	305	brightness/contrast	280
eject and CD-in indicator	305	menu	279
mix	305	system setup	280
repeat	305	volume preset	279
seek up and down	305	Touring	175
Sport mode	159	Towing a caravan or trailer	176
Starting/stopping the vehicle	155		
before starting	155		
starting the engine	155		
Steering column adjustment	98		
Steering wheel controls	315		

Index

Trip computer	129	Wheel changing and jacking	206
average fuel consumption	129	equipment	208
average speed	129	jacking	209
clearing messages	131	locking wheel nuts	207
current fuel consumption	129	spare wheel	207
display	129	wheel changing	209
odometer	129	Wheels and tires	
range	129	care	260
setting	130	tire pressures	249
switchpack	130	Whiplash protection	75
trip distance	129	Wind resonance	102
Valet key	51	Window	
Vehicle care	266	operation	101
alloy road wheels	268	Window operation	101
carpets	266	anti-trap feature	102
exterior	266	anti-trap feature, resetting	102
glass surfaces	267	raising/lowering	101
grease and tar	267	Window tinting	34
interior	266	Winter driving	175
leather	35	Wipers and washers	145
paintwork	267		
underhood cleaning	267		
washing	266		
Vehicle data	270		
dimensions	271		
engine details	270		
roof rack and trailer	273		
tow-bar fixings	177		
weights	272		
Vehicle identification	31		
Vehicle immobilisation system	42		
Vehicle locking	47		
Vehicle recovery	213		
Vehicle security	42		
Vehicle suspension	173		
Vehicle unlocking	49		
Voice activation	313		
Volume	312		
Warning indicators	114		
Warning triangle	175		
Warnings, cautions and notes	29		